


2016 PARTS CATALOG

 **TOHATSU**

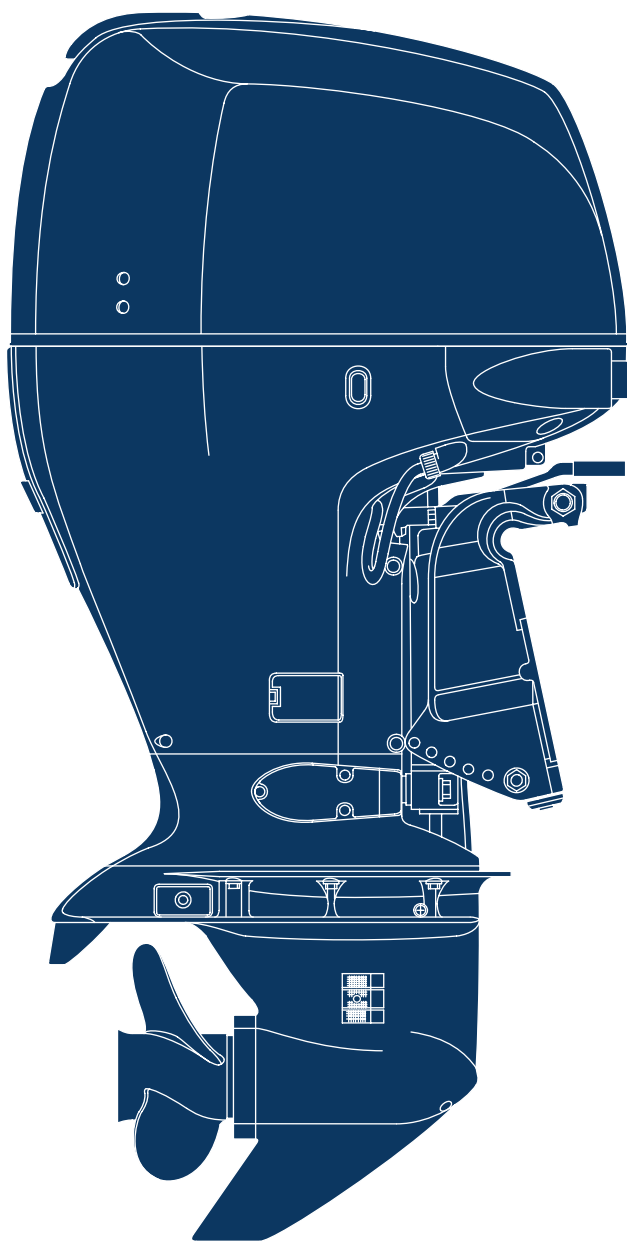

BFT 115A

**OB NO.002-14ZX1-0AF
1510US**

Instruction for use of parts catalogue

- **This parts catalogue was prepared based on the latest information available as of October 1, 2015.**
- See the Service Bulletin for any revision that is made after October 1, 2015.
- **Always specify the part number when ordering a part.**
 - Check the model, type, serial numbers, color, maker, and the size as needed before ordering a part.
 - Note that the illustrations (part drawings) can differ from the actual parts in shape.
Illustrations are given just to help you to refer to the parts.
- **When modifications or additions to this parts catalogue are made, a revised edition will be issued at an appropriate time, with successively progressing revision numbers on the cover. We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times.**



Initial version issue date October 1, 2015

CONTENTS

E-1	CYLINDER HEAD COVER	1
E-3	CYLINDER BLOCK	3
E-4	EXHAUST PIPE	7
E-4-10	WATER HOSE	9
E-5	OIL PUMP/FLYWHEEL	11
E-6	OIL PAN	13
E-7	CRANKSHAFT/PISTON	15
E-9	CAMSHAFT/VALVE	19
E-9-10	CHAIN CASE/THERMOSTAT	23
E-9-20	CYLINDER HEAD	25
E-10	BALANCER SHAFT	29
E-13	A.C.G BELT/SILENCER DUCT	31
E-14	INTAKE MANIFOLD/INJECTOR	33
E-15	THROTTLE BODY	37
E-18	FUEL PUMP/FUEL HOSE	39
E-18-1	WATER SEPARATOR	43
E-18-10	VAPOR SEPARATOR ASSY	45
E-19	A.C.GENERATOR	49
E-20	IGNITION COIL/SPARK PLUG	53
E-20-10	ELECTRONIC CONTROL UNIT	55
E-21	STARTER MOTOR	57
F-2	SHIFT SHAFT	61
F-3	GEAR CASE	65
F-3-10	GEAR CASE ASSY	67
F-3-20	EXTENSION CASE	69
F-4	WATER PUMP/VERTICAL SHAFT	71
F-5	PROPELLER SHAFT/PROPELLER (LA/XA)	75
F-5-1	PROPELLER SHAFT/PROPELLER (XCA)	79
F-6	FUEL TUBE	83
F-7	WIRE HARNESS	85
F-7-10	STARTER CABLE	87
F-7-20	FUSE BOX/RELAY	89
F-7-30	CLAMP	91
F-8	ENGINE COVER ASSY	93
F-8-10	FR.COVER BRACKET/FR.LOCK	95
F-8-20	UNDER COVER	99
F-9	MOUNT CASE	101
F-10	STERN BRACKET/SWIVEL CASE	105
F-11	POWER TRIM-TILT	111
F-12	LABELS	115
F-13	TOOLS	117
FOP-1	RIGGING HOSE KIT	119
FOP-2	METER	121
FOP-6	CONTROL PANEL (1)	123
FOP-6-1	CONTROL PANEL (2)	125
FOP-7	TRIM ADJUST PLATE SET	127
FOP-8	REMOTE CONTROL (TOP MOUNT SINGLE TYPE) (RIGHT)	129
FOP-8-2	REMOTE CONTROL (TOP MOUNT DUAL TYPE) (RIGHT)	133
FOP-8-4	REMOTE CONTROL (FLUSH MOUNT TYPE) (RIGHT)	137
FOP-8-6	REMOTE CONTROL	141
FOP-9	BOLT KIT	147
FOP-10	WATER PUMP IMPELLER KIT (1)	149
FOP-10-1	WATER PUMP IMPELLER KIT (2)	151
FOP-11	INTERFACE CABLE KIT	153
FOP-12	TROLLING CONTROL SWITCH	155
FOP-13	SPEED SENSOR TUBE KIT	157
INDEX		159
INDEX (Parts Number)		165

How to refer to the part information

A. Reference with “Illustrated index”

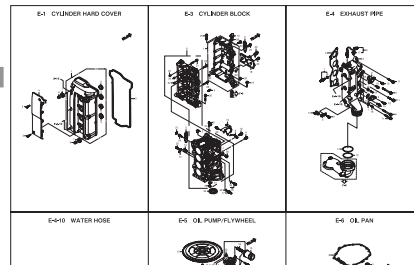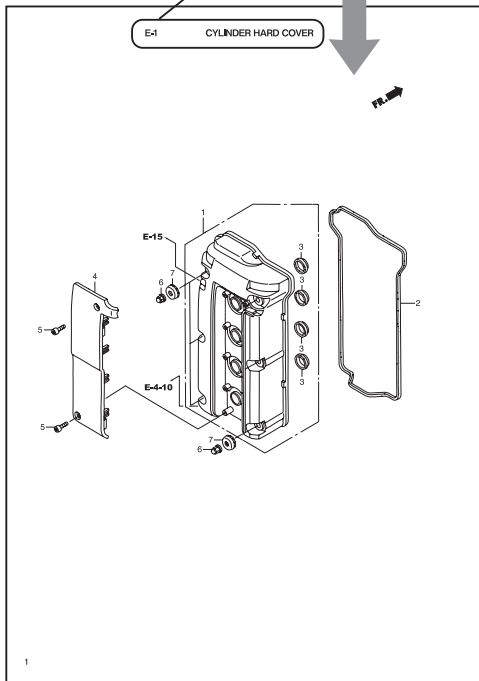**Fig. Number****Ref. Number/Part Number/Parts Name**[illegible]


B. Reference with “Parts number index”

INDEX (Parts Number)			
100015154	15-15	100048854	118-100
100015155	15-15	100048855	118-100
100000015	5-10	100048856	118-101
100000016	5-10	100048857	118-101
100000017	5-10	100048858	118-102
100000018	5-10	100048859	118-102
100000019	5-10	100048860	118-103
100000020	5-10	100048861	118-103
100000021	5-10	100048862	118-104
100000022	5-10	100048863	118-104
100000023	5-10	100048864	118-105
100000024	5-10	100048865	118-105
100000025	5-10	100048866	118-106
100000026	5-10	100048867	118-106
100000027	5-10	100048868	118-107
100000028	5-10	100048869	118-107
100000029	5-10	100048870	118-108
100000030	5-10	100048871	118-108
100000031	5-10	100048872	118-109
100000032	5-10	100048873	118-109
100000033	5-10	100048874	118-110
100000034	5-10	100048875	118-110
100000035	5-10	100048876	118-111
100000036	5-10	100048877	118-111
100000037	5-10	100048878	118-112
100000038	5-10	100048879	118-112
100000039	5-10	100048880	118-113
100000040	5-10	100048881	118-113
100000041	5-10	100048882	118-114
100000042	5-10	100048883	118-114
100000043	5-10	100048884	118-115
100000044	5-10	100048885	118-115
100000045	5-10	100048886	118-116
100000046	5-10	100048887	118-116
100000047	5-10	100048888	118-117
100000048	5-10	100048889	118-117
100000049	5-10	100048890	118-118
100000050	5-10	100048891	118-118
100000051	5-10	100048892	118-119
100000052	5-10	100048893	118-119
100000053	5-10	100048894	118-120
100000054	5-10	100048895	118-120
100000055	5-10	100048896	118-121
100000056	5-10	100048897	118-121
100000057	5-10	100048898	118-122
100000058	5-10	100048899	118-122
100000059	5-10	100048900	118-123
100000060	5-10	100048901	118-123
100000061	5-10	100048902	118-124
100000062	5-10	100048903	118-124
100000063	5-10	100048904	118-125
100000064	5-10	100048905	118-125
100000065	5-10	100048906	118-126
100000066	5-10	100048907	118-126
100000067	5-10	100048908	118-127
100000068	5-10	100048909	118-127
100000069	5-10	100048910	118-128
100000070	5-10	100048911	118-128
100000071	5-10	100048912	118-129
100000072	5-10	100048913	118-129
100000073	5-10	100048914	118-130
100000074	5-10	100048915	118-130
100000075	5-10	100048916	118-131
100000076	5-10	100048917	118-131
100000077	5-10	100048918	118-132
100000078	5-10	100048919	118-132
100000079	5-10	100048920	118-133
100000080	5-10	10004892	

C. Reference with “Parts name index”


[illegible]

Part catalogue structure

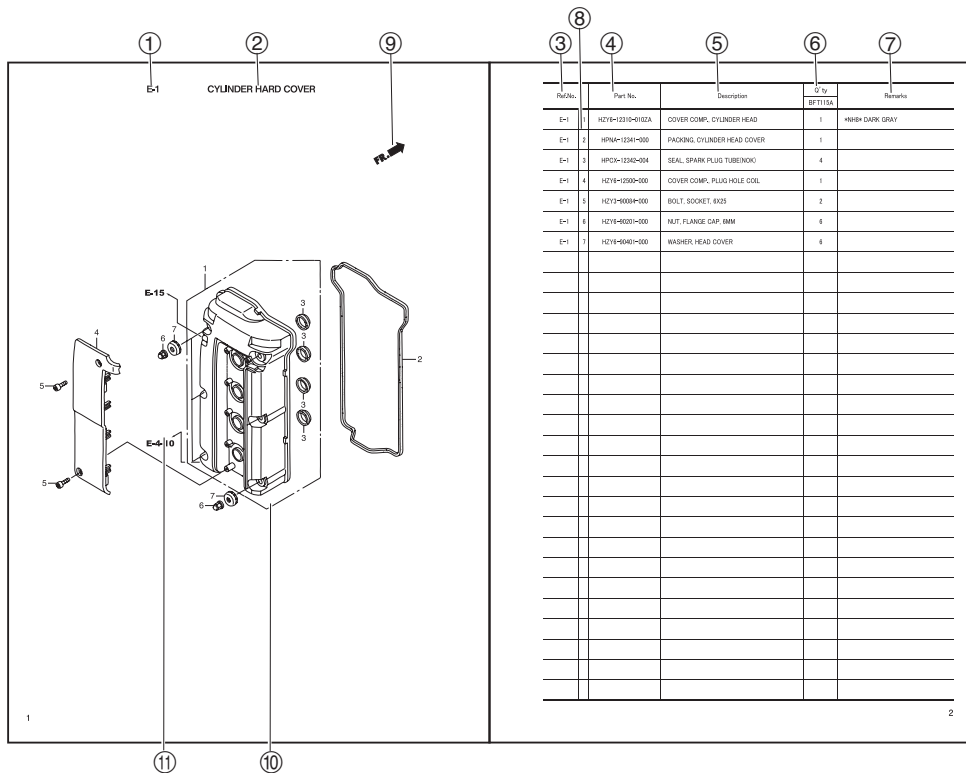

- ① Fig. Number
- ② Fig. Title
- ③ Ref. Number
- ④ Parts Number
- ⑤ Parts Name
- ⑥ Q.ty
- ⑦ Remarks
- ⑧ Defferent specification
- ⑨ Direction Arrow
- ⑩ Parts enclosed within a dotted line are sub assembly parts.
- ⑪ A solid arrow indicates the block No. the part in question is connected to.

How to check the part block and serial numbers

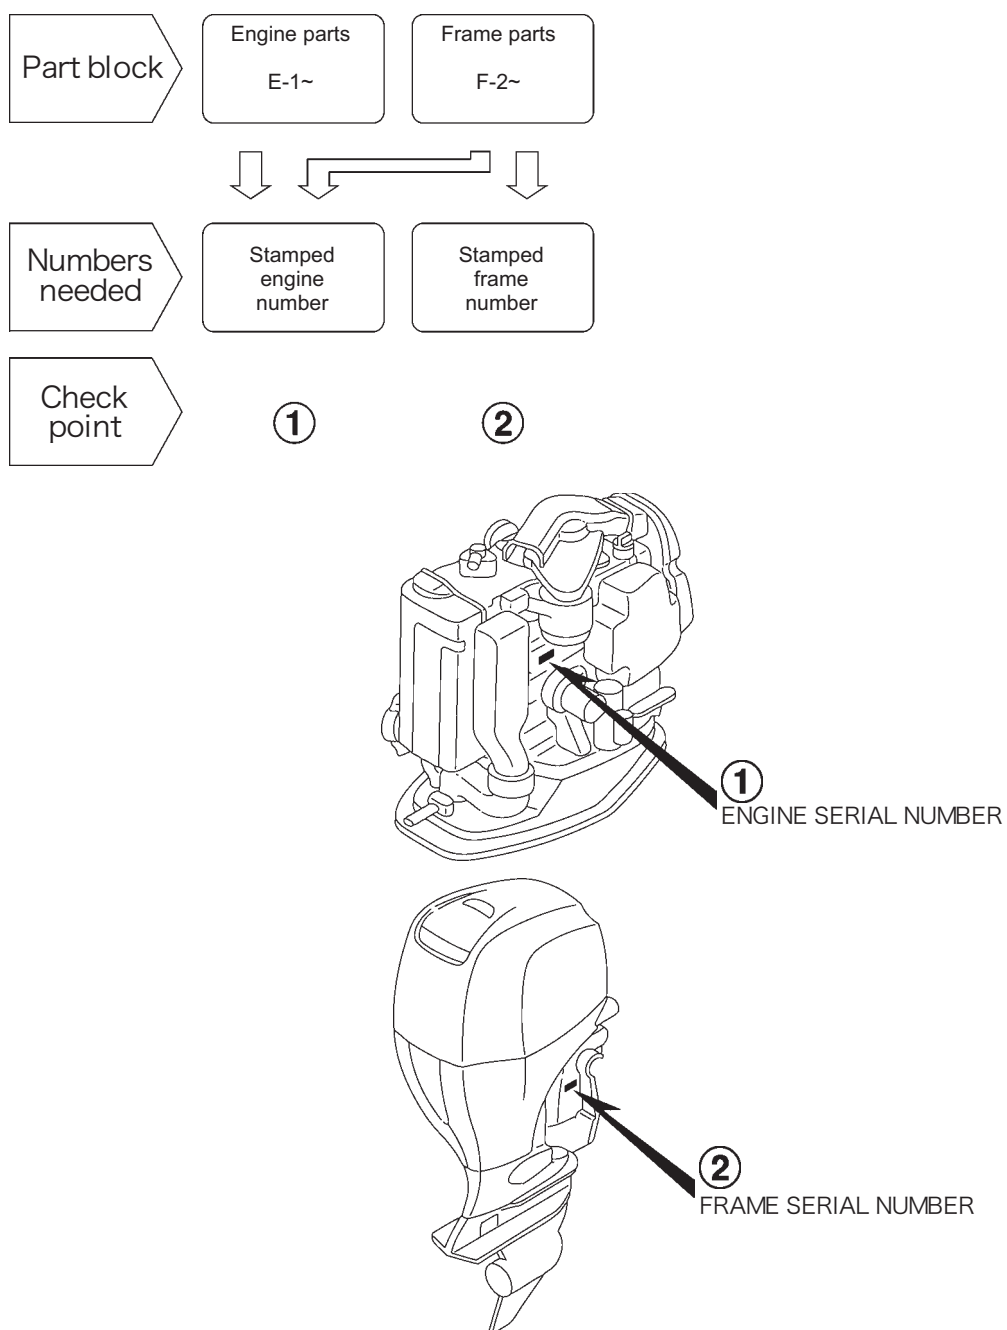

Models, parts catalogue codes and applicable serial numbers

- Models, parts catalogue codes and applicable serial Nos. given in this parts catalogue can be identified as follows.

Model	Type	Parts catalogue type	Engine		Applicable engine serial No.	Applicable frame serial No.
			Model	Type		
BFT 115A	LA	LA	BFT 115D	SE1	BEBHJ-1000001~	BBHJ-6000079~
	XA	XA				
	XCA	XCA				BBHJ-7000001~

Features of each type

- See the following table for the features of each type. (Items in brackets are optional)


Specifications		Model	BFT 115A		
		Type	LA	XA	XCA
Transom height	508 mm		●		
	635 mm			●	●
Counter rotation					●
Propeller	14-1/2 x 15		(●)	(●)	(●)
	14-1/4 x 17		(●)	(●)	(●)
	14 x 19		(●)	(●)	(●)
	14 x 21		(●)	(●)	(●)
	14-1/2 x 23		(●)	(●)	(●)
	14 x 25		(●)	(●)	
	15-1/2 x 13		(●)	(●)	
	15-1/4 x 15		(●)	(●)	
	15 x 17		(●)	(●)	
	14-3/4 x 19		(●)	(●)	
	14-1/2 x 21		(●)	(●)	
	14-1/4 x 23		(●)	(●)	

Fuel hose, general purpose hoses and vinyl hose

- The standard part fuel hose, general purpose hose and vinyl hose may be substituted by the coiled bulk part.
- When ordering the standard part fuel hose, general purpose hose and vinyl hose use the bulk part number written in the parts catalog in brackets () underneath the part name.
- When exchanging the hose, cut and use at the specified length as mentioned in the part name. (For the method of cutting the bulk part, and method of filling out orders etc., please refer to the instructions issued with the bulk part.)

Bulk part number of fuel hose, general purpose hose and vinyl hose.


Example: 95001-75001-50M

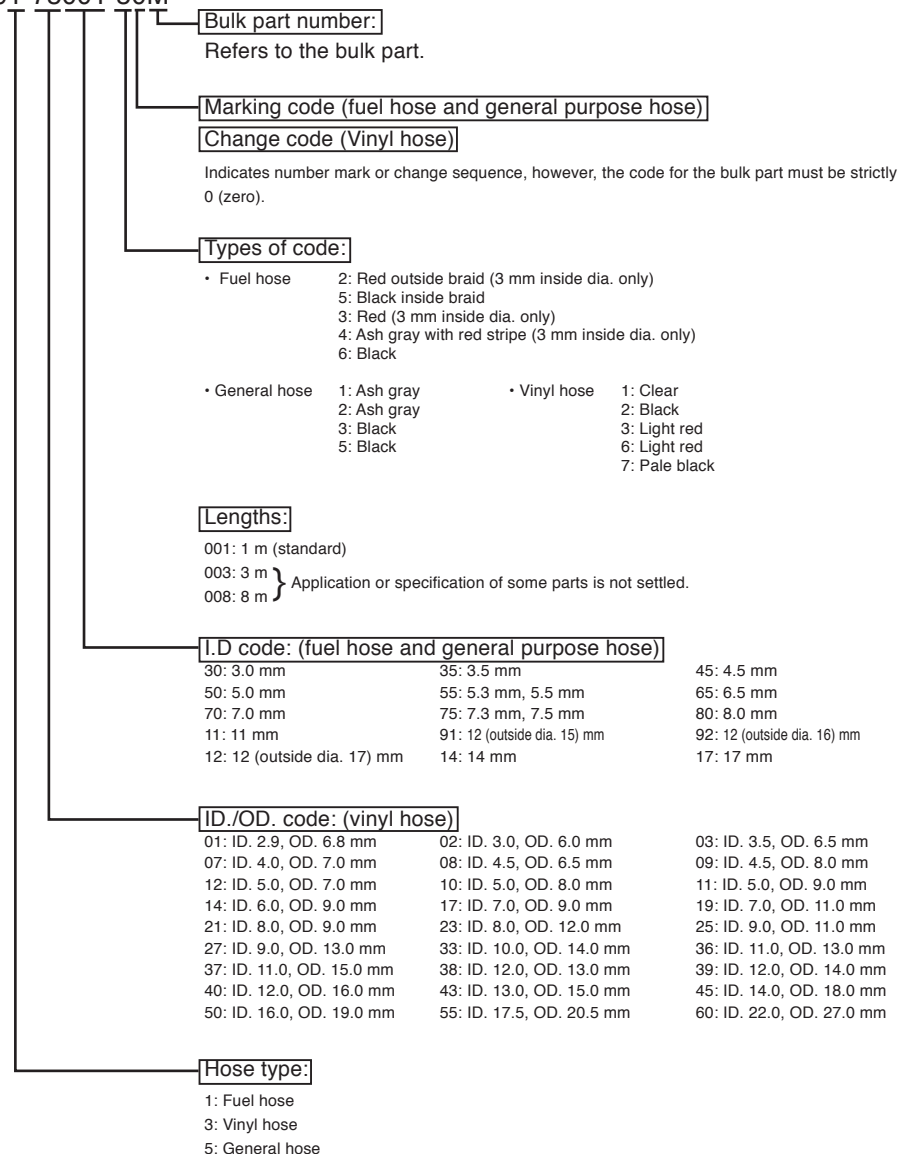


CAUTION: It is DANGEROUS to confuse the fuel hose with the general purpose hose or vinyl hose.

Never use a general purpose hose or vinyl hose in place of a fuel hose or vice versa. Always use the correct bulk part in the parts catalogue, according to the service manual or the instructions issued with the bulk part.


E-1 CYLINDER HEAD COVER

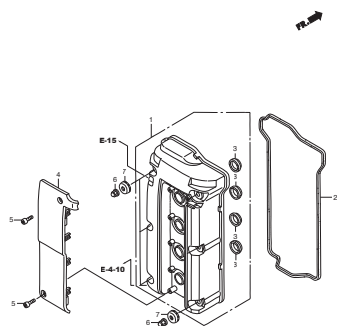


E-3 CYLINDER BLOCK

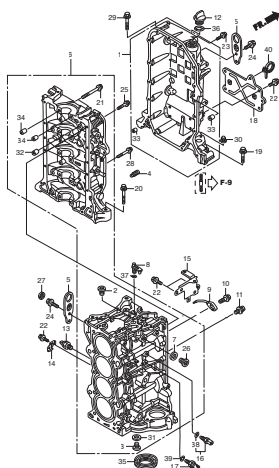


E-4 EXHAUST PIPE

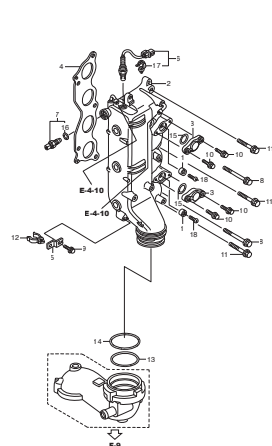


E-4-10 WATER HOSE

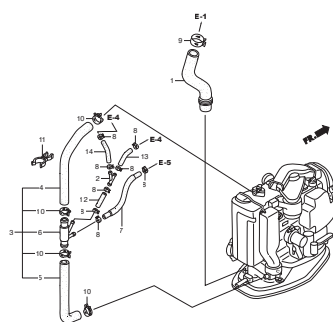


E-5 OIL PUMP/FLYWHEEL

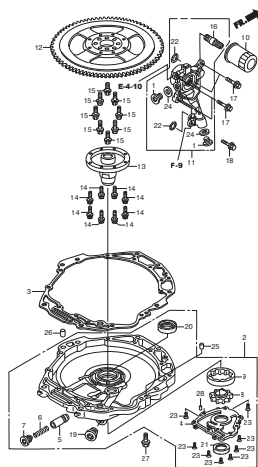


E-6 OIL PAN

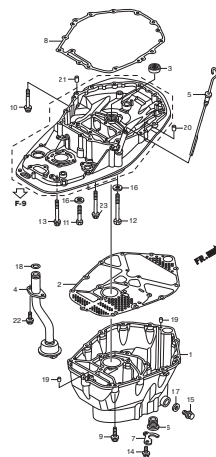


E-7 CRANKSHAFT/PISTON

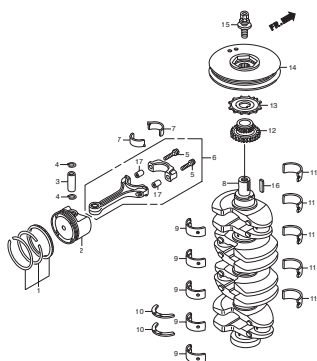


E-9 CAMSHAFT/VALVE

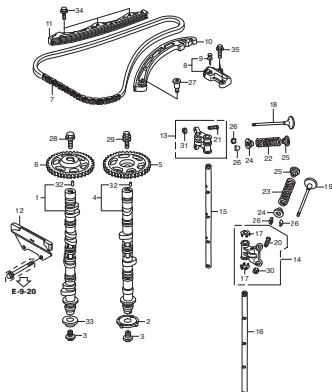


E-9-10 CHAIN CASE/THERMOSTAT

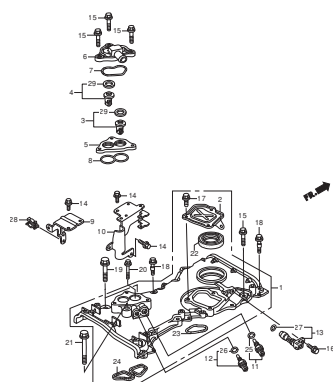


E-9-20 CYLINDER HEAD

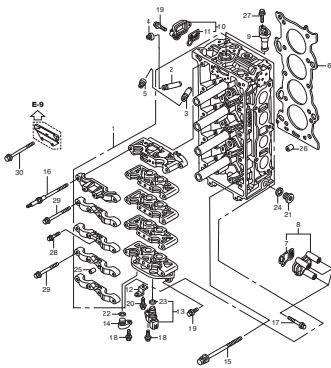


E-10 BALANCER SHAFT

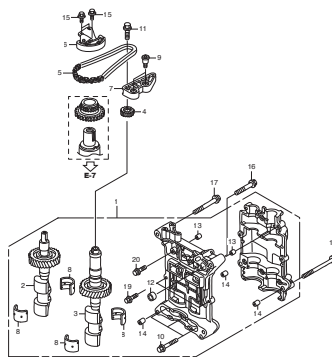


E-13 A.C.G BELT/SILENCER DUCT

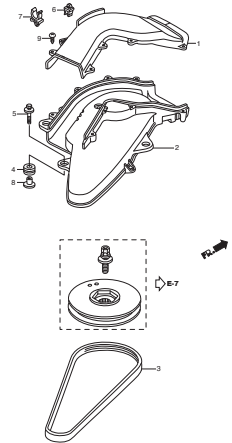


E-14 INTAKE MANIFOLD/INJECTOR

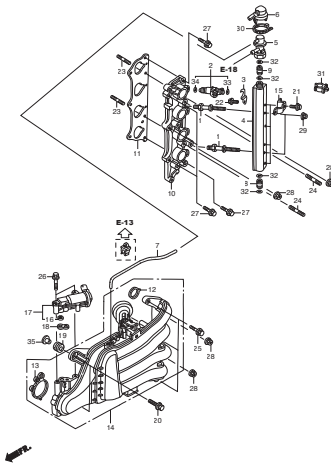


E-15 THROTTLE BODY

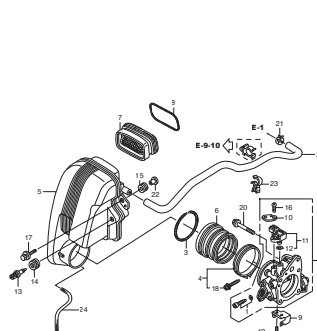


E-18 FUEL PUMP/FUEL HOSE

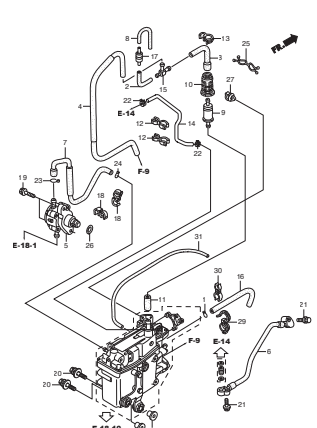


E-18-1 WATER SEPARATOR

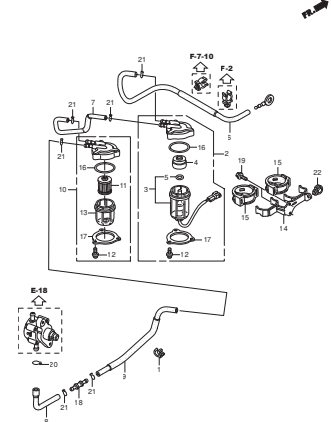


E-18-10 VAPOR SEPARATOR ASSY

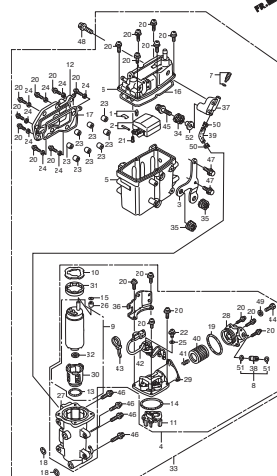


E-19 A.C.GENERATOR

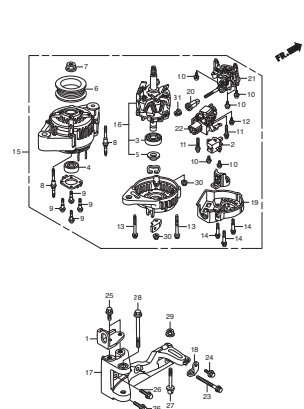


E-20 IGNITION COIL/SPARK PLUG

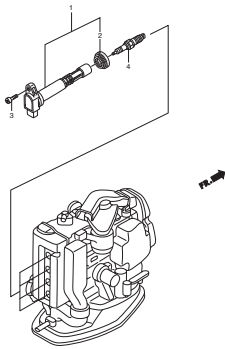


E-20-10 ELECTRONIC CONTROL UNIT

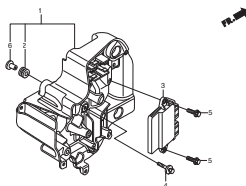


E-21 STARTER MOTOR

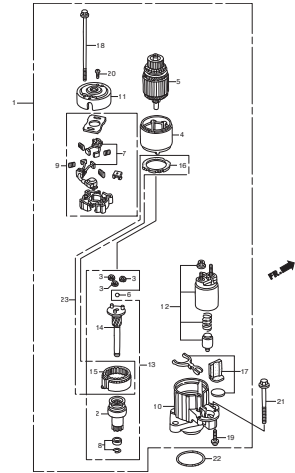


F-2 SHIFT SHAFT

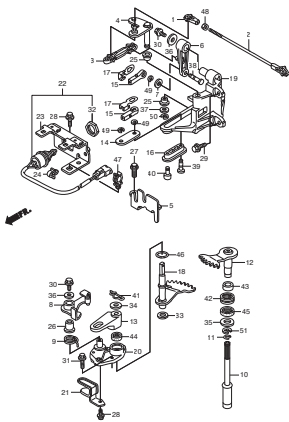


F-3 GEAR CASE

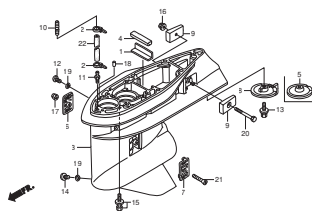


F-3-10 GEAR CASE ASSY

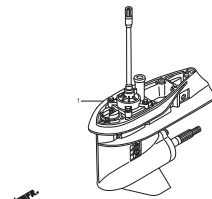


F-3-20 EXTENSION CASE

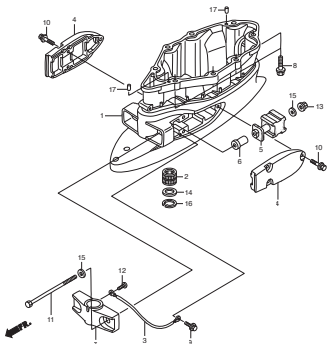


F-4 WATER PUMP/VERTICAL SHAFT

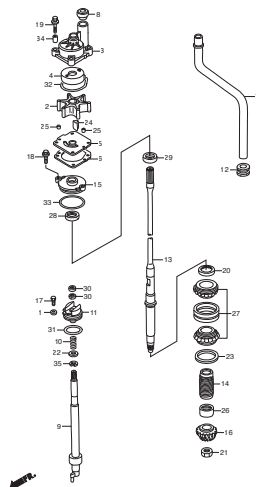


F-5 PROPELLER SHAFT/PROPELLER (LA/XA)

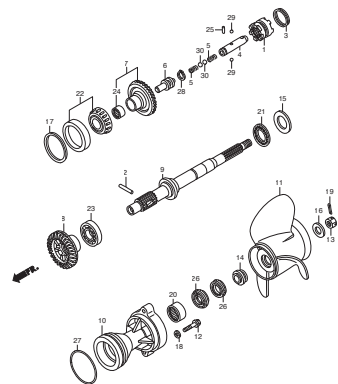


F-5-1 PROPELLER SHAFT/PROPELLER (XCA)

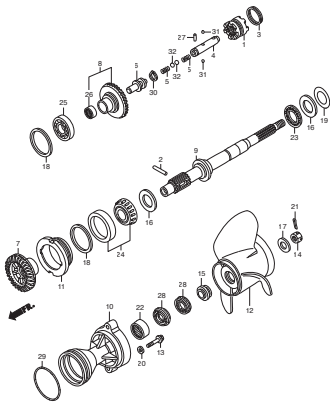


F-6 FUEL TUBE

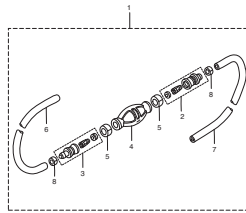


F-7 WIRE HARNESS

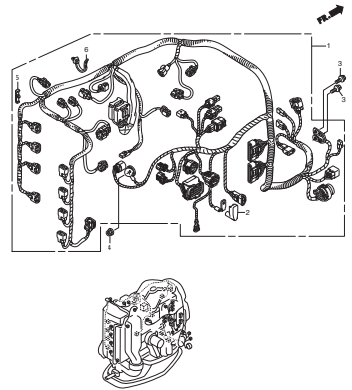


F-7-10 STARTER CABLE

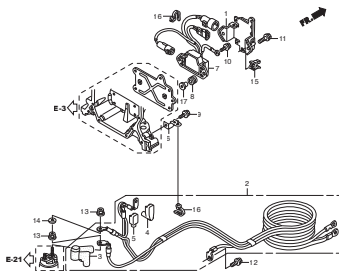


F-7-20 FUSE BOX/RELAY

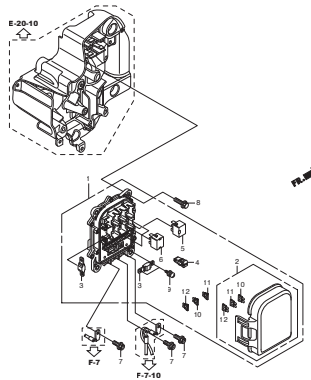


F-7-30 CLAMP

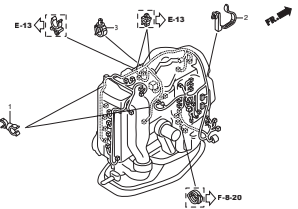


F-8 ENGINE COVER ASSY

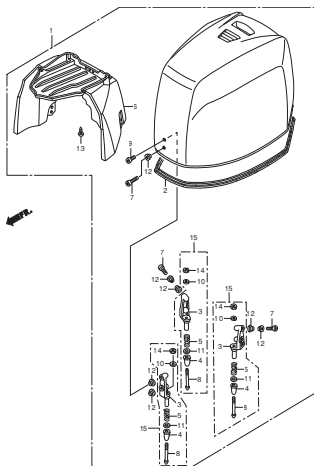


F-8-10 FR.COVER BRACKET/FR.LOCK

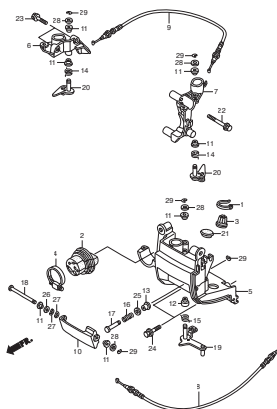


F-8-20 UNDER COVER

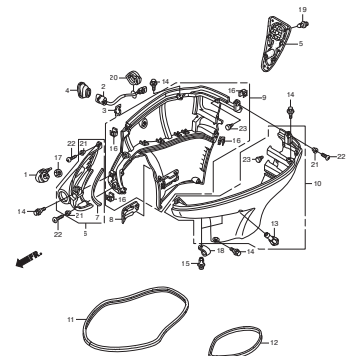


FOP-7 TRIM ADJUST PLATE SET

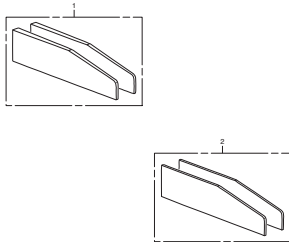


FOP-8 REMOTE CONTROL
(TOP MOUNT SINGLE TYPE) (RIGHT)

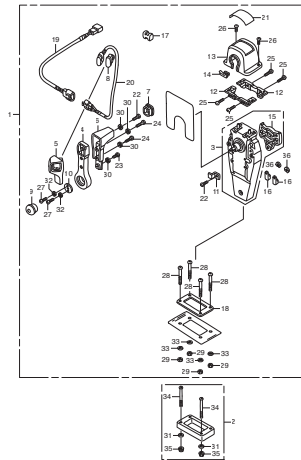


FOP-8-2 REMOTE CONTROL
(TOP MOUNT DUAL TYPE) (RIGHT)

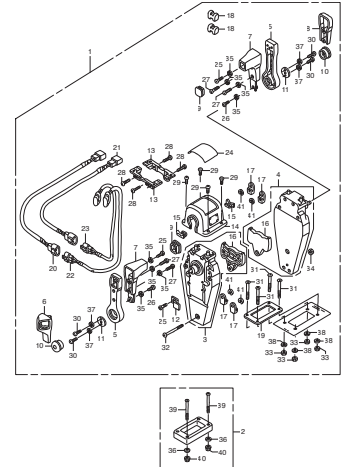


FOP-8-4 REMOTE CONTROL
(FLUSH MOUNT TYPE) (RIGHT)

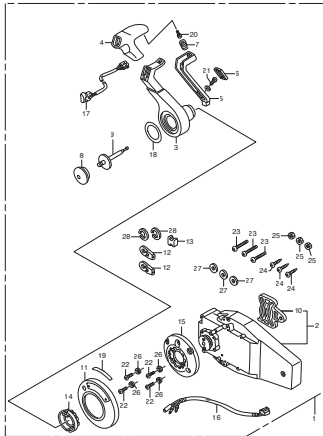


FOP-8-6 REMOTE CONTROL

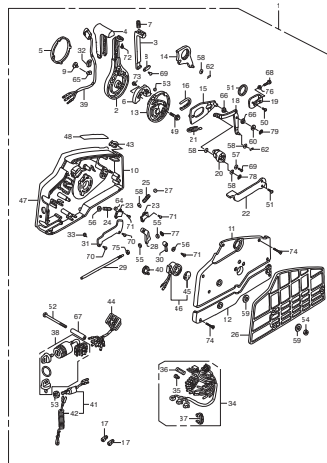


FOP-9 BOLT KIT

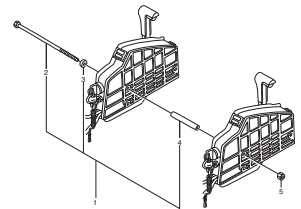


FOP-10 WATER PUMP IMPELLER KIT (1)

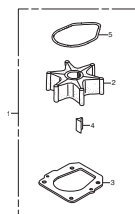


FOP-10-1 WATER PUMP IMPELLER KIT (2)

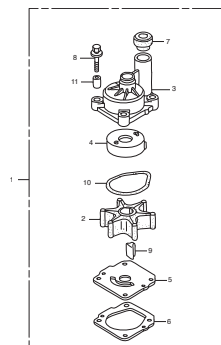


FOP-11 INTERFACE CABLE KIT

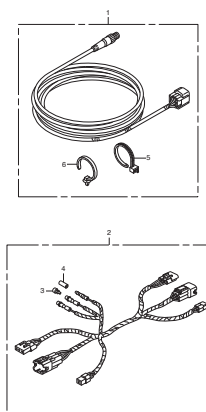


FOP-12 TROLLING CONTROL SWITCH

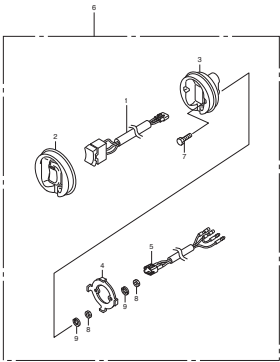


FOP-13 SPEED SENSOR TUBE KIT

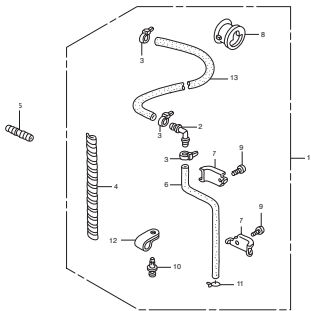


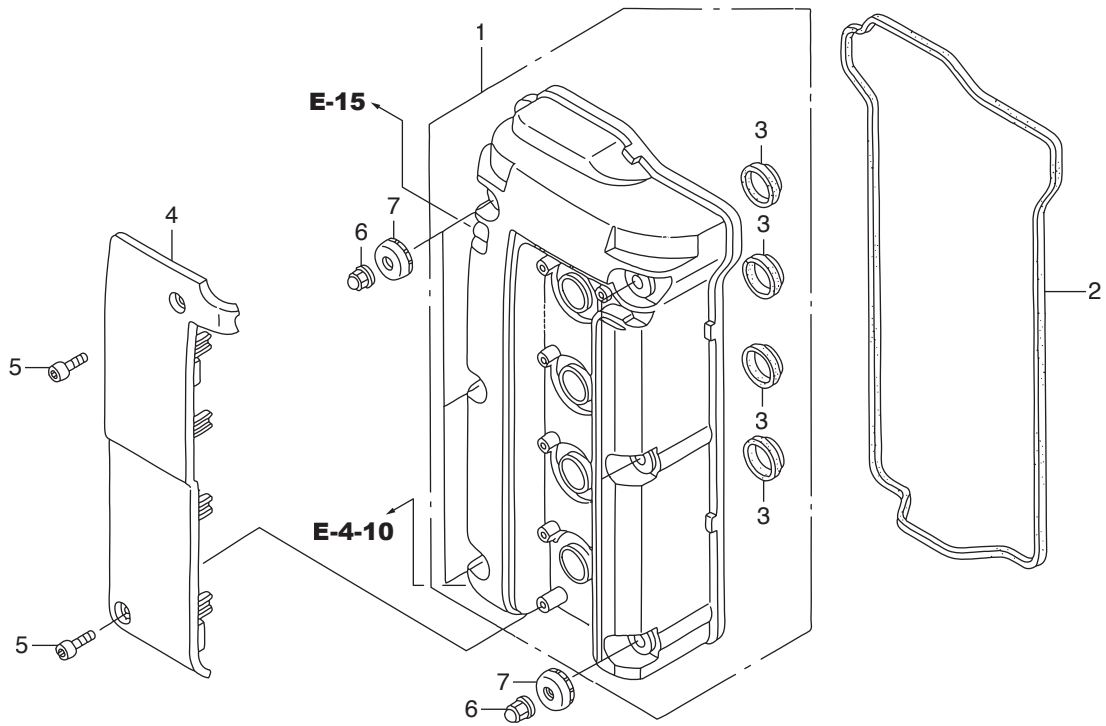FR. 


[illegible]

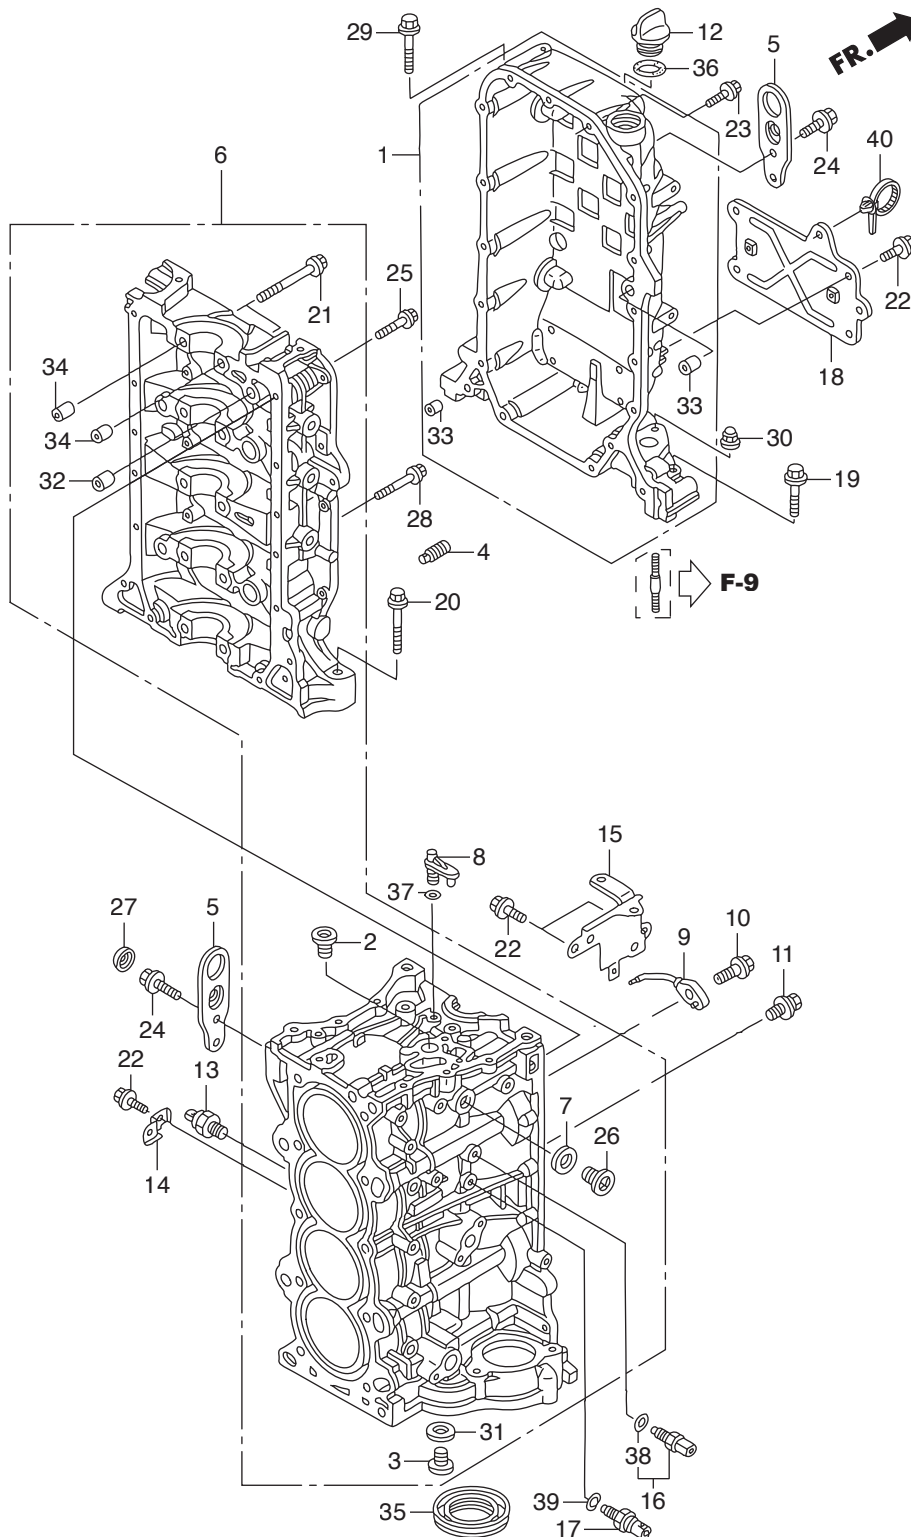


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-3	1	HZY6-11100-405	CRANKCASE COMP.	1	
E-3	2	HPNA-11106-300	BOLT, SEALING, 20MM	1	
E-3	3	HPR4-11106-013	BOLT, SEALING, 28MM	1	
E-3	4	HPNA-11135-000	ORIFICE, LOWER BLOCK	1	
E-3	5	HZY6-11911-000	HANGER, ENGINE	2	
E-3	6	HZY6-12000-415ZA	BLOCK ASSY., CYLINDER	1	*NH8* DARK GRAY
E-3	7	HZV5-12214-000	WASHER, SEALING(22MM)	1	
E-3	8	HZY6-15152-000	ORIFICE, OIL JET	1	
E-3	9	HPRB-15280-A00	BODY COMP., OIL JET	2	
E-3	10	HPRA-15290-000	BOLT COMP., OIL JET	2	
E-3	11	HZY6-15299-000	BOLT-WASHER, 8X10	2	
E-3	12	H921-15611-000	CAP, OIL(YELLOW)	1	
E-3	13	HZY6-30530-003	SENSOR ASSY., KNOCK	1	
E-3	14	HZW9-32114-730	BRACKET, CLIP B	1	
E-3	15	HZY6-32114-010	BRACKET D, HARNESS CLIP	1	
E-3	16	HZY3-35673-003	SENSOR ASSY., WATER	1	TEMPERATURE
E-3	17	HRNA-37260-A01	SENSOR, OIL PRESSURE	1	
E-3	18	HZY6-38552-000	BRACKET, RELAY	1	
E-3	19	HZY6-90001-000	BOLT, FLANGE, 8X55	2	
E-3	20	HZY6-90005-000	BOLT, FLANGE, 12X83	1	
E-3	21	HPNA-90006-003	BOLT-WASHER, 11X95	10	
E-3	22	HZW9-90011-000	BOLT, FLANGE, 6X14(CT200)	7	
E-3	23	HZW9-90016-000	BOLT, FLANGE, 6X25	18	
E-3	24	HZY3-90026-000	BOLT, FLANGE, 8X20	4	
E-3	25	HZY3-90054-000	BOLT, FLANGE, 8X35	10	
E-3	26	HZV5-90081-010	BOLT, SEALING, 22MM	1	
E-3	27	HZY6-90082-003	CAP, BOLT, 8MM	1	
E-3	28	HZW4-90156-000	BOLT, FLANGE, 8X50	4	
E-3	29	HZW4-90162-000	BOLT, FLANGE, 10X70	1	

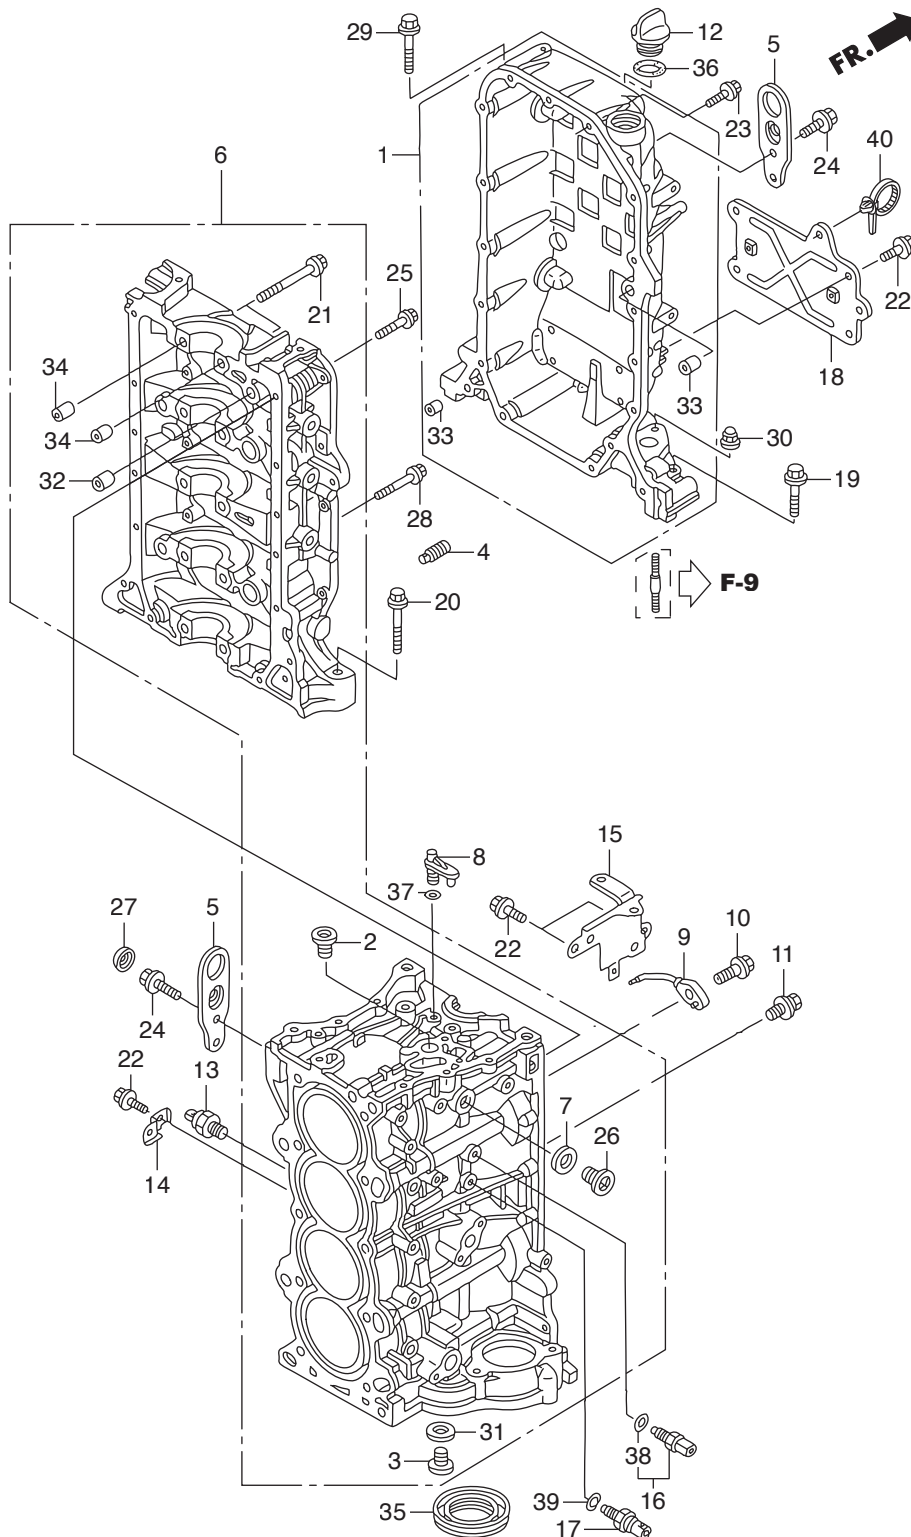


E-4 EXHAUST PIPE

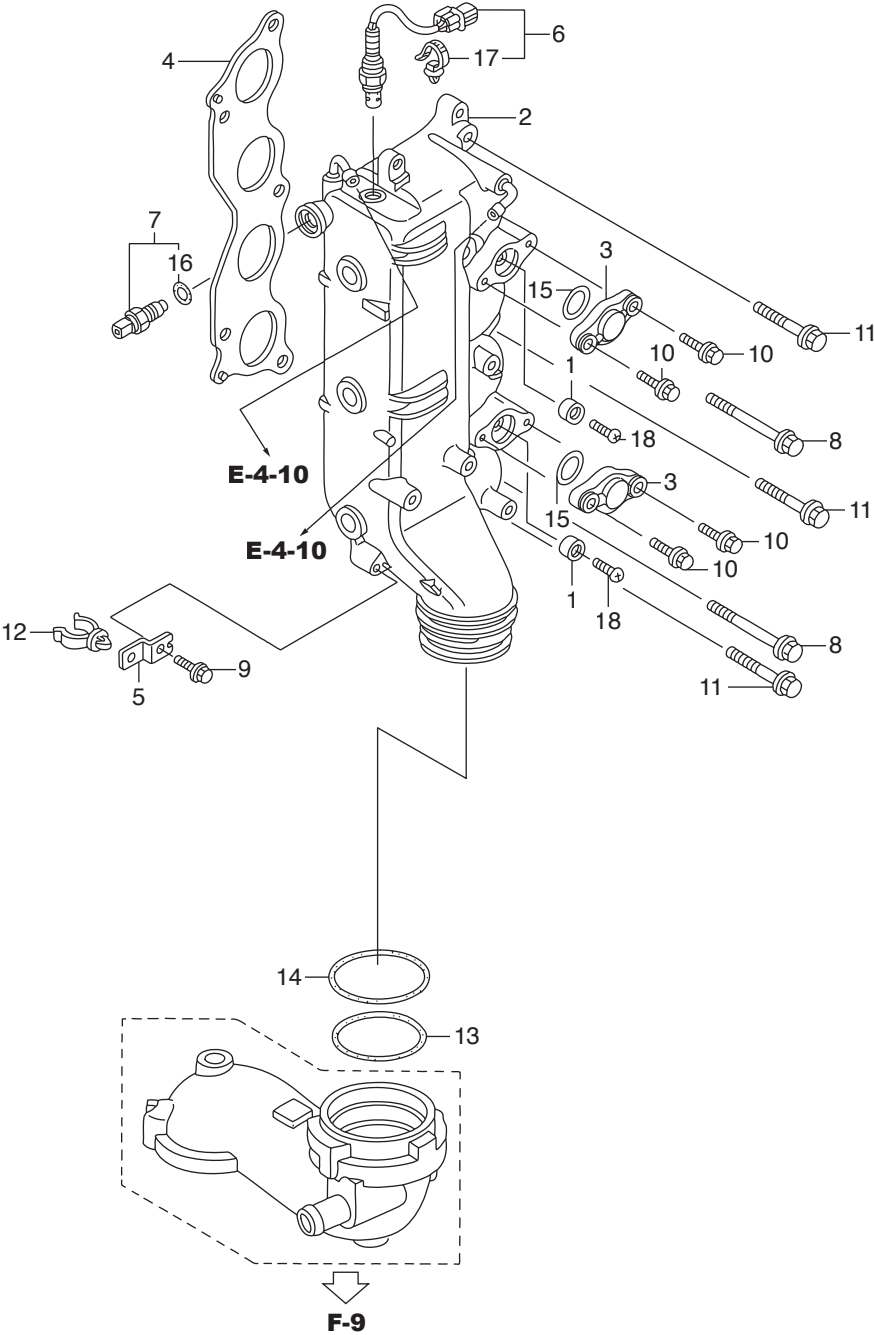


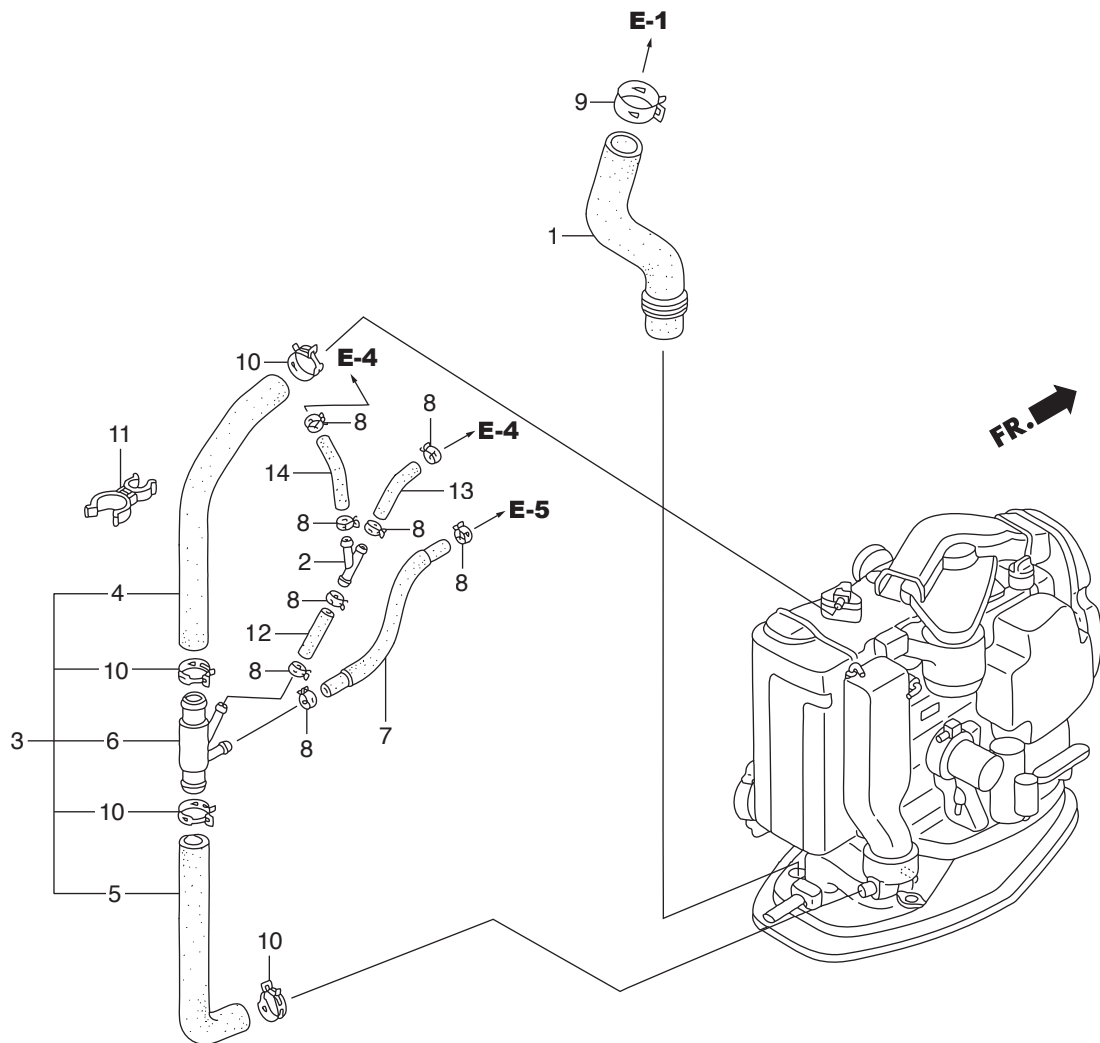


[illegible]

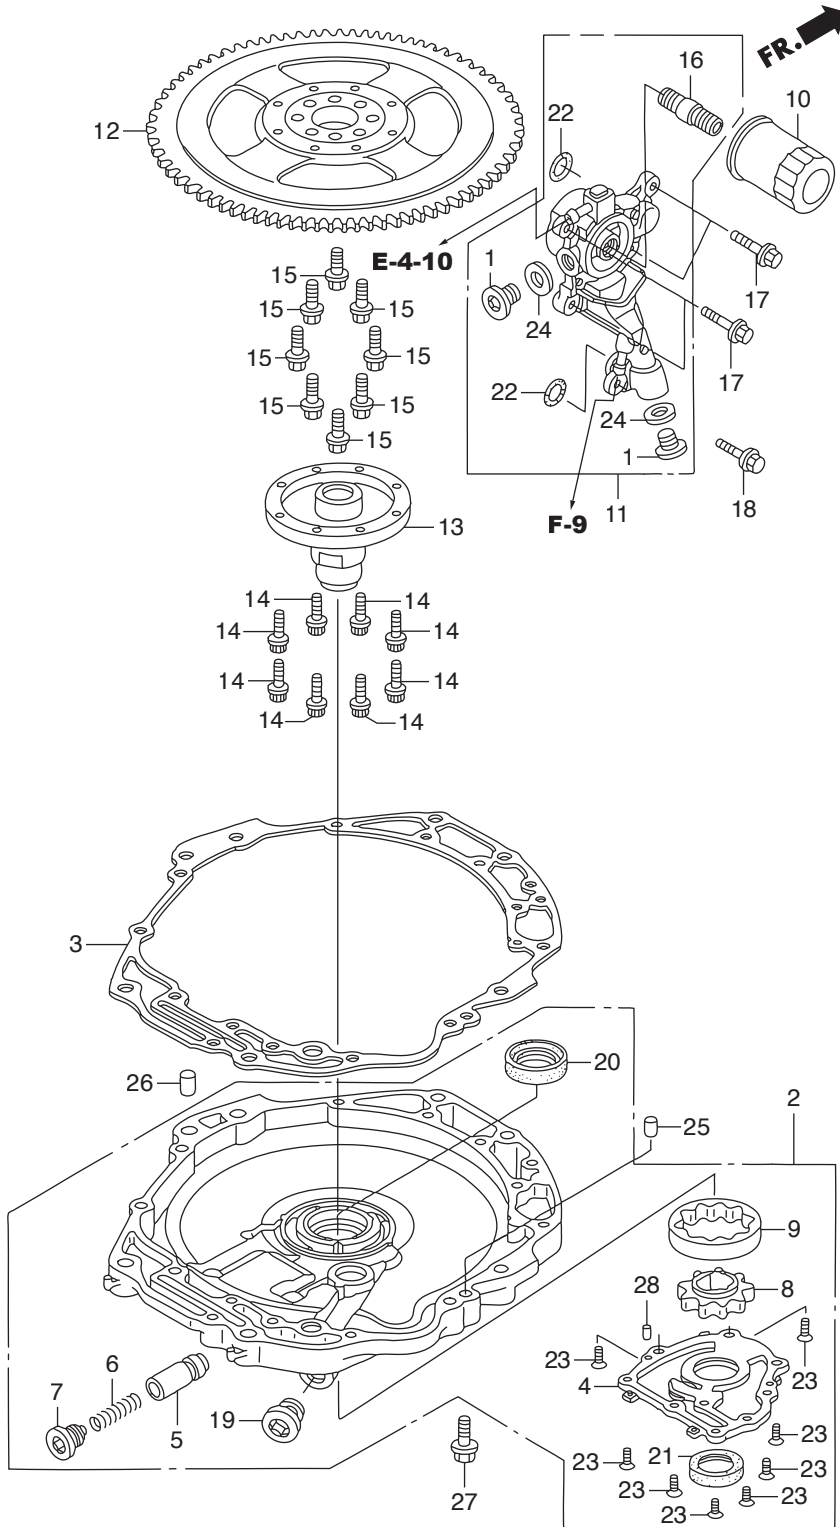


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-5	1	HZW1-12217-010	BOLT, SEALING, 20MM	2	
E-5	2	HZY6-15100-000ZA	PUMP ASSY., OIL	1	*NH8* DARK GRAY
E-5	3	HZY6-15112-000	PACKING, OIL PUMP BODY	1	
E-5	4	HZY6-15121-000	COVER, OIL PUMP	1	
E-5	5	HPE0-15231-000	VALVE, RELIEF	1	
E-5	6	HPG6-15232-000	SPRING, RELIEF VALVE	1	
E-5	7	HPC6-15233-000	BOLT, SEALING, 18MM	1	
E-5	8	HZW5-15331-003	ROTOR, INNER OIL PUMP	1	
E-5	9	HZW5-15341-003	ROTOR, OUTER OIL PUMP	1	
E-5	10	HRTA-15400-004	CARTRIDGE, OIL FILTER	1	(TOYO ROKI)
E-5	11	HZY6-15410-010ZA	FLANGE COMP., OIL FILTER	1	*NH8* DARK GRAY
E-5	12	HZY6-31110-000ZA	FLYWHEEL COMP.	1	*TBLACK* BLACK
E-5	13	HZY3-31116-000	BOSS, FLYWHEEL	1	
E-5	14	HZW5-90002-013	BOLT, SPECIAL, 8MM	8	
E-5	15	HPH3-90011-000	BOLT, FLANGE, 12MM	8	
E-5	16	HPH1-90015-013	HOLDER, OIL FILTER	1	
E-5	17	HZW9-90016-000	BOLT, FLANGE, 6X25	4	
E-5	18	HZW5-90018-000	BOLT, FLANGE, 6X20	1	
E-5	19	HZV5-90081-010	BOLT, SEALING, 22MM	2	
E-5	20	HZW5-91201-003	OIL SEAL, 46X60X9	1	
E-5	21	HP01-91212-003	OIL SEAL, 31X46X7(NOK)	1	
E-5	22	HVD6-91360-003	O-RING, 22.5X2.4	2	
E-5	23	HCO-93600-06016-0A	SCREW, FLAT, 6X16	9	
E-5	24	HCO-94109-20000	WASHER, DRAIN PLUG, 20MM	2	
E-5	25	HCO-94301-10160	DOWEL PIN, 10X16	1	
E-5	26	HCO-94301-14200	DOWEL PIN, 14X20	1	
E-5	27	HCO-95701-08032-08	BOLT, FLANGE, 8X32	5	
E-5	28	HCO-96220-50080	ROLLER, 5X8	2	

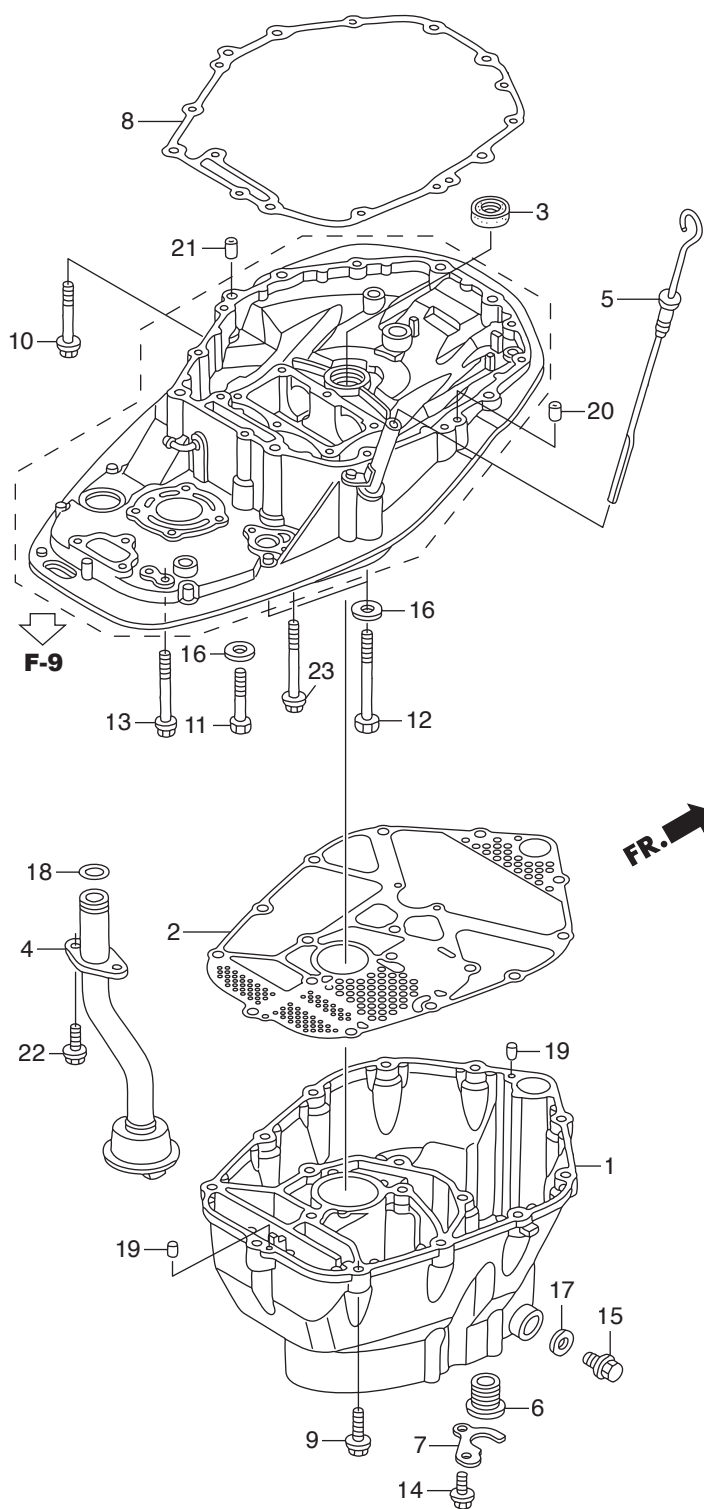

Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-6	1	HZY6-11321-010ZB	CASE, OIL	1	*TGRAY* GRAY
E-6	2	HZY6-11381-010	PACKING, OIL PAN	1	
E-6	3	HZW5-15113-000	RUBBER, OIL PUMP	1	
E-6	4	HZY6-15220-010	STRAINER COMP., OIL	1	
E-6	5	HZY6-15655-000	GAUGE COMP., OIL LEVEL	1	
E-6	6	HZW1-19252-000	GROMMET, WATER TUBE	1	
E-6	7	HZY6-19254-000	PLATE, WATER TUBE	1	
E-6	8	HZY6-23172-000	GASKET, MOUNT CASE	1	
E-6	9	HZY6-90002-000	BOLT, FLANGE, 10X40	16	
E-6	10	HZY6-90017-000	BOLT, FLANGE, 10X80	1	
E-6	11	HZY6-90018-000	BOLT, HEX., 12X70	1	
E-6	12	HZY6-90019-000	BOLT, HEX., 12X130	2	
E-6	13	HZY3-90046-000	BOLT, FLANGE, 8X100	1	
E-6	14	HZW9-90102-000	BOLT, FLANGE, 6X12	1	
E-6	15	HZV5-90131-000	BOLT, DRAIN PLUG	1	
E-6	16	HZV5-90559-000	WASHER, PLAIN, 12MM	3	
E-6	17	HZE2-90601-000	WASHER, DRAIN PLUG, 12MM	1	
E-6	18	HPC6-91324-000	O-RING, 20.6X2.6	1	
E-6	19	HCO-94301-06100	DOWEL PIN, 6X10	2	
E-6	20	HCO-94301-10160	DOWEL PIN, 10X16	1	
E-6	21	HCO-94301-14200	DOWEL PIN, 14X20	1	
E-6	22	HCO-95701-06018-09	BOLT, FLANGE, 6X18	2	
E-6	23	HCO-95701-10110-09	BOLT, FLANGE, 10X110	2	

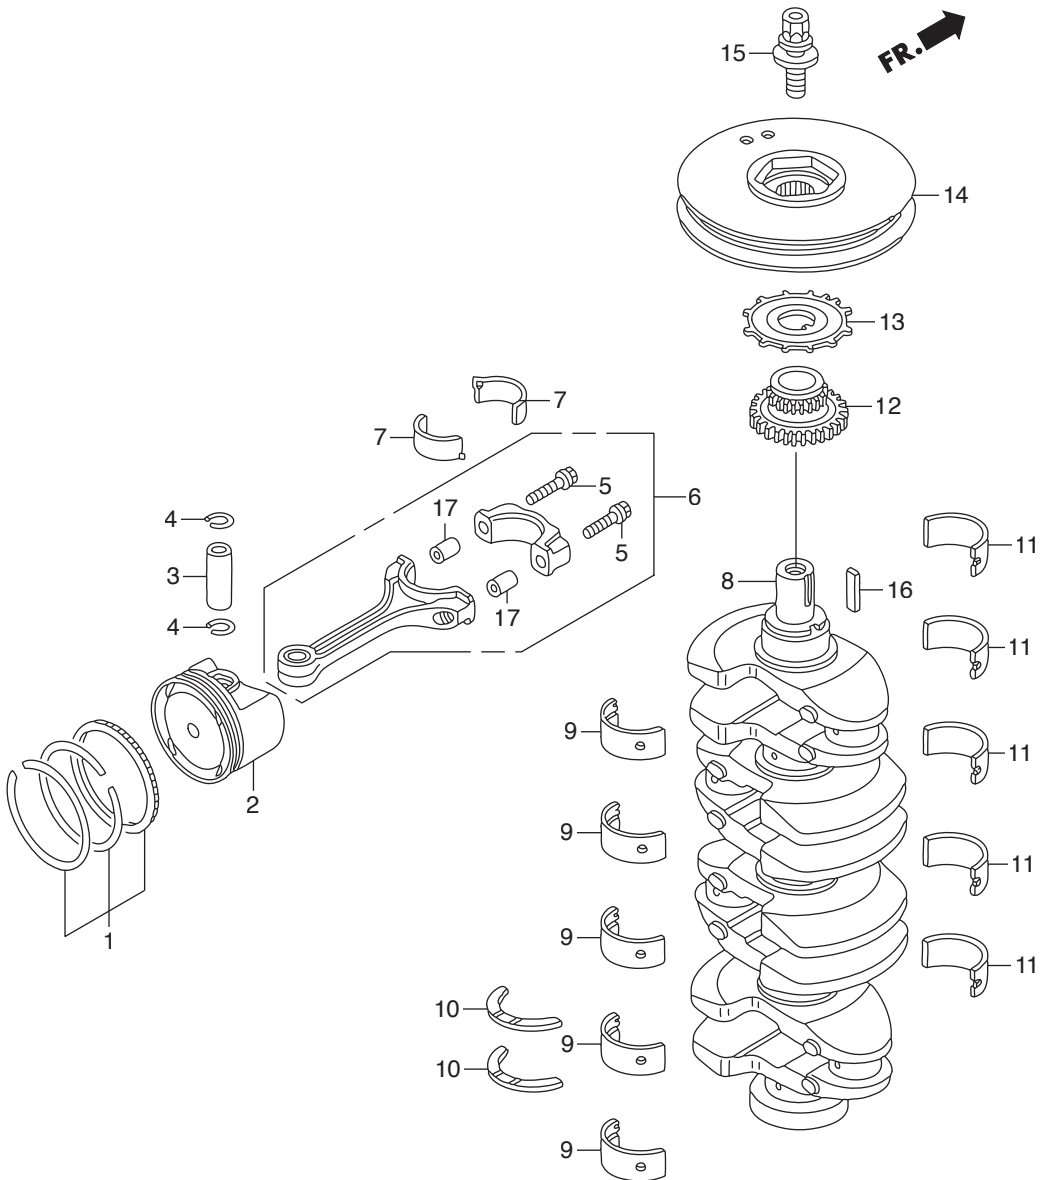


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-7	1	HZY6-13010-000	RING SET, PISTON(STD.)	4	
E-7	2	HZY6-13101-000	PISTON A	4	
E-7	2	HZY6-13102-000	PISTON B	4	
E-7	3	HPNA-13111-010	PIN, PISTON	4	
E-7	4	HP5A-13115-000	CLIP, PISTON PIN	8	
E-7	5	HP8A-13204-A01	BOLT, CONNECTING ROD	8	#~1005879
E-7	5	HRBB-13204-004	BOLT, CONNECTING ROD	8	#1005880~
E-7	6	HPPA-13210-000	ROD COMP., CONNECTING	4	#~1005879
E-7	6	HR40-13210-A00	ROD COMP., CONNECTING	4	#1005880~
E-7	7	HZY6-13211-004	BEARING A, CONNECTING ROD	8	(BLUE)
E-7	7	HZY6-13212-004	BEARING B, CONNECTING ROD	8	(BLACK)
E-7	7	HZY6-13213-004	BEARING C, CONNECTING ROD	8	(BROWN)
E-7	7	HZY6-13214-004	BEARING D, CONNECTING ROD	8	(GREEN)
E-7	7	HZY6-13215-004	BEARING E, CONNECTING ROD	8	(YELLOW)
E-7	7	HZY6-13216-004	BEARING F, CONNECTING ROD	8	(PINK)
E-7	7	HZY6-13217-004	BEARING G, CONNECTING ROD(RED)	8	
E-7	8	HPPA-13310-000	CRANKSHAFT COMP.	1	#~1005879
E-7	8	HR40-13310-A00	CRANKSHAFT COMP.	1	#1005880~
E-7	9	HPNA-13321-003	BEARING A, MAIN UPPER(BLUE)	5	(DAIDO)
E-7	9	HPNA-13322-003	BEARING B, MAIN UPPER(BLACK)	5	(DAIDO)
E-7	9	HPNA-13323-003	BEARING C, MAIN UPPER(BROWN)	5	(DAIDO)
E-7	9	HPNA-13324-003	BEARING D, MAIN UPPER(GREEN)	5	(DAIDO)
E-7	9	HPNA-13325-003	BEARING E, MAIN UPPER(YELLOW)	5	(DAIDO)
E-7	9	HPNA-13326-003	BEARING F, MAIN UPPER(PINK)	5	(DAIDO)
E-7					
E-7	10	HZY6-13331-013	WASHER, THRUST	2	
E-7	11	HPNA-13341-003	BEARING A, MAIN LOWER(BLUE)	5	(DAIDO)
E-7	11	HPNA-13342-003	BEARING B, MAIN LOWER(BLACK)	5	(DAIDO)
E-7	11	HPNA-13343-003	BEARING C, MAIN LOWER(BROWN)	5	(DAIDO)

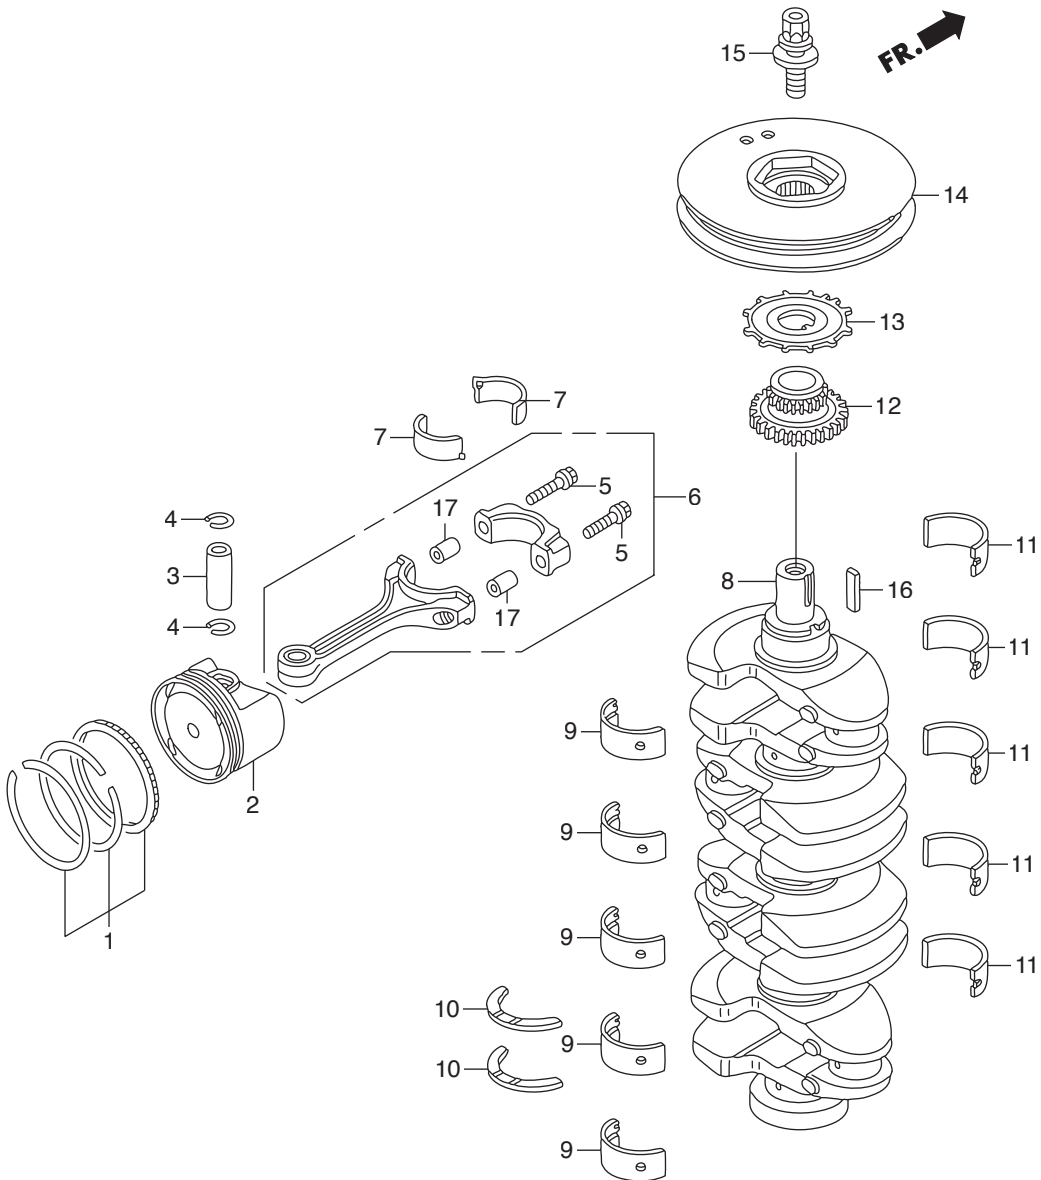


[illegible]

FR. ➔

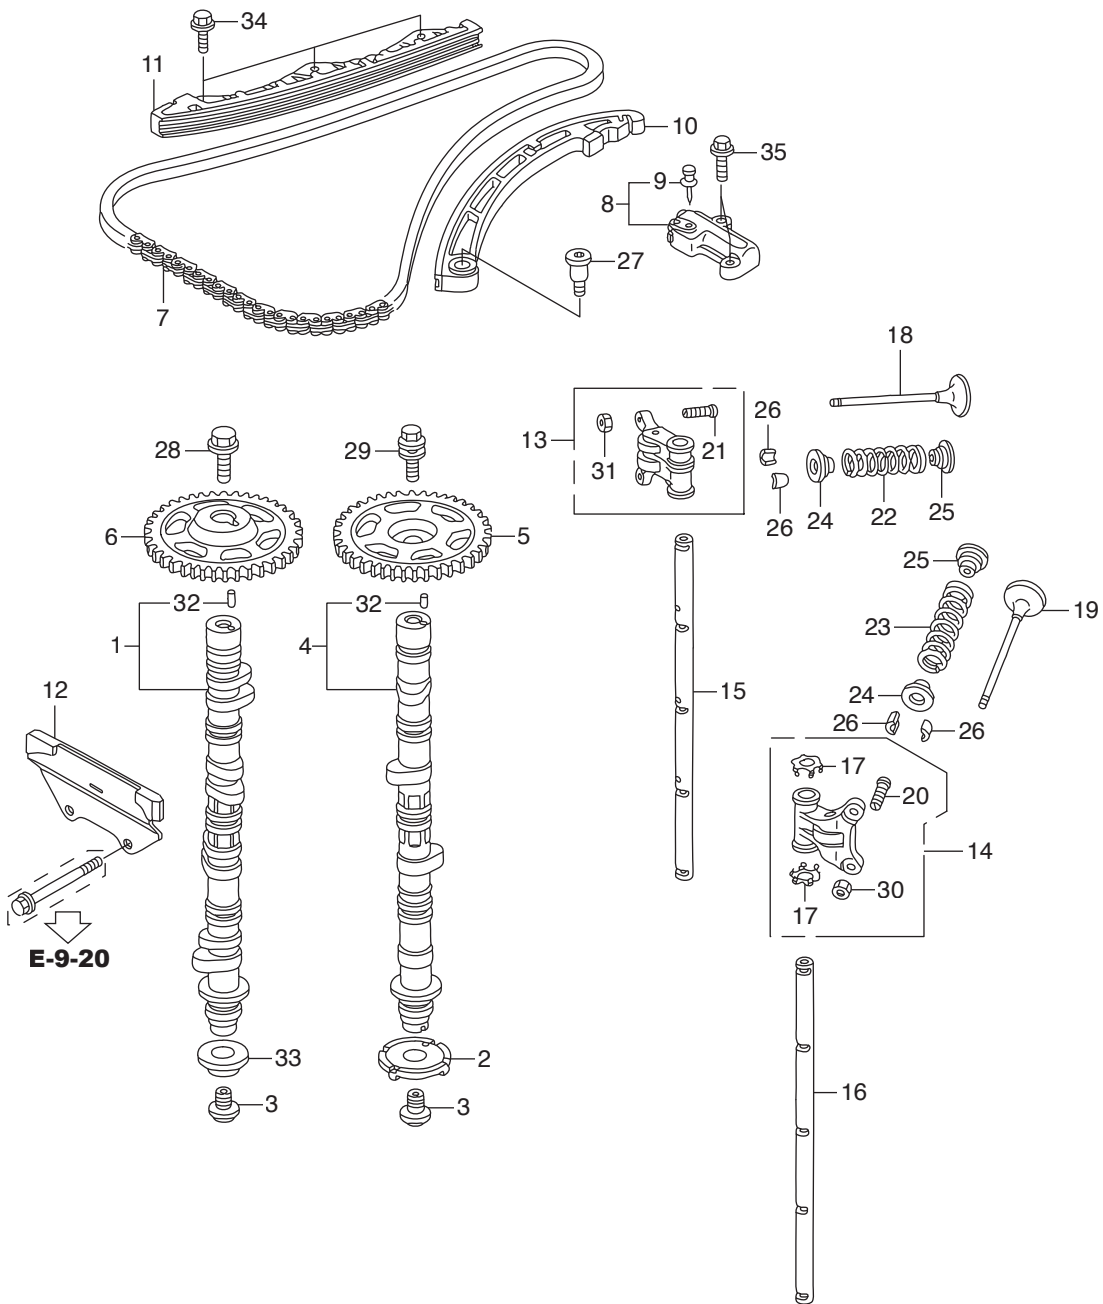


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-9	1	HZY5-14110-000	CAMSHAFT COMP., IN.	1	
E-9	2	HPNA-14114-003	PLATE, TDC PULSE	1	
E-9	3	HPNA-14115-000	BOLT, SEALING, 14MM	2	
E-9	4	HZY6-14120-000	CAMSHAFT COMP., EX.	1	
E-9	5	HPNA-14210-000	SPROCKET, CAM CHAIN DRIVEN	1	(46T)
E-9	6	HZY6-14311-000	SPROCKET, CAM CHAIN DRIVEN IN.	1	(46T)
E-9	7	HR40-14401-A01	CHAIN(176L)(BORG WARNER)	1	
E-9	8	HZY6-14510-003	TENSIONER ASSY., CAM CHAIN	1	
E-9	9	HPNA-14511-003	STOPPER(TOOL)	1	
E-9	10	HPPA-14520-003	ARM COMP., CAM CHAIN TENSIONER	1	
E-9	11	HPPA-14530-003	GUIDE COMP., CAM CHAIN	1	
E-9	12	HRWC-14540-A02	GUIDE COMP. B, CAM CHAIN	1	
E-9	13	HRAA-14620-A00	ARM ASSY., ROCKER	4	
E-9	14	HRAA-14624-A00	ARM ASSY., EX. ROCKER	4	
E-9	15	HPNE-14631-000	SHAFT, IN. ROCKER	1	
E-9	16	HR40-14633-A00	SHAFT, EX. ROCKER	1	
E-9	17	HRAA-14647-A00	WASHER, THRUST	8	
E-9	18	HPNA-14711-000	VALVE, IN.	8	
E-9	19	HPRB-14721-A00	VALVE, EX.	8	
E-9	20	HPNA-14744-004	SCREW, TAPPET ADJUSTING	8	
E-9	21	HPT0-14744-004	SCREW, TAPPET ADJUSTING	8	
E-9	22	HZY6-14751-003	SPRING, IN. VALVE(PINK)	8	(NIPPON HATSUJO)
E-9	23	HPNA-14762-003	SPRING, EX. VALVE(GRAY)	8	(NIPPON HATSUJO)
E-9	24	HRAA-14765-A00	RETAINER, VALVE SPRING	16	
E-9	25	HPT0-14775-000	SEAT, VALVE SPRING	16	
E-9	26	HRGM-14781-A01	COTTER, VALVE(FUJI VALVE)	32	
E-9	27	HPNA-90003-000	BOLT, TENSIONER PIVOT	1	
E-9	28	HPNA-90032-000	BOLT, FLANGE, 12X47	1	
E-9	29	HPNA-90042-003	BOLT, FLANGE, 10X32	1	


[illegible]

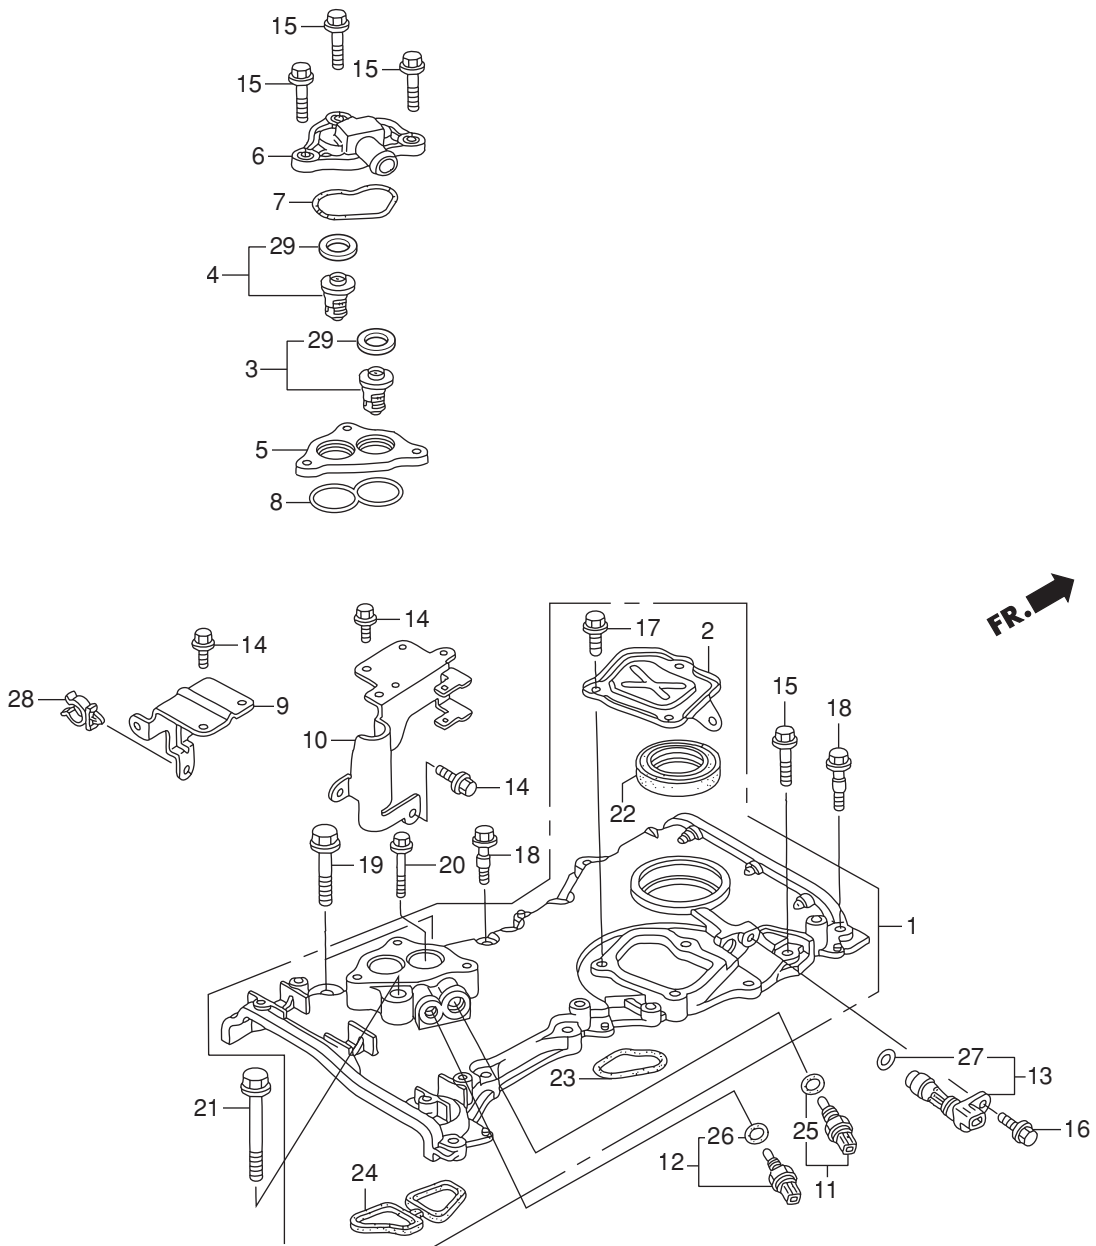


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-9-10	1	HZY6-11410-425ZA	CASE ASSY., CHAIN	1	*NH8* DARK GRAY
E-9-10	2	HZY6-11412-000	COVER, CHAIN CASE	1	
E-9-10	3	HZY3-19300-023	THERMOSTAT ASSY.	1	
E-9-10	4	HZY6-19300-003	THERMOSTAT ASSY.	1	
E-9-10	5	HZY6-19313-000ZB	SPACER, THERMOSTAT COVER	1	*TGRAY* GRAY
E-9-10	6	HZY6-19315-010	COVER, THERMOSTAT	1	
E-9-10	7	HZY6-19318-010	PACKING, THERMOSTAT COVER	1	
E-9-10	8	HZY6-19319-000	PACKING, THERMOSTAT SPACER	1	
E-9-10	9	HZY6-32112-000	BRACKET B, HARNESS CLIP	1	
E-9-10	10	HZY6-32113-000	BRACKET C, HARNESS CLIP	1	
E-9-10	11	HZW5-35673-003	SENSOR ASSY., WATER	1	TEMPERATURE
E-9-10	12	HZY3-35673-003	SENSOR ASSY., WATER	1	TEMPERATURE
E-9-10	13	HPNB-37500-003	SENSOR ASSY., CRANK	1	
E-9-10	14	HZW9-90011-000	BOLT, FLANGE, 6X14(CT200)	5	
E-9-10	15	HZY3-90016-000	BOLT, FLANGE, 6X28	13	
E-9-10	16	HZY3-90017-000	BOLT, FLANGE, 6X16	1	
E-9-10	17	HZY3-90021-000	BOLT, FLANGE, 6X14	3	
E-9-10	18	HZY6-90023-000	BOLT, SPECIAL, 6X31	2	
E-9-10	19	HZY3-90040-000	BOLT, FLANGE, 10X43	2	
E-9-10	20	HZY6-90059-000	BOLT, FLANGE, 6X38	1	
E-9-10	21	HZW4-90162-000	BOLT, FLANGE, 10X70	1	
E-9-10	22	HPNC-91212-004	OIL SEAL, 43X58X7(ARAI)	1	
E-9-10	23	HPNA-91302-004	O-RING, CHAIN CASE	1	
E-9-10	24	HZY6-91304-010	PACKING, CHAIN CASE	1	
E-9-10	25	HPK2-91307-005	O-RING, 9.5X1.5(HONDA KIKAKI)	1	
E-9-10	26	HPNA-91307-003	O-RING, 9.5X1.9	1	
E-9-10	27	HPNA-91333-003	O-RING, 15X1.9	1	
E-9-10	28	HSP0-91546-A01	CLAMP, 18.5MM	1	
E-9-10	29	HZW9-19303-003	RUBBER, RING	2	

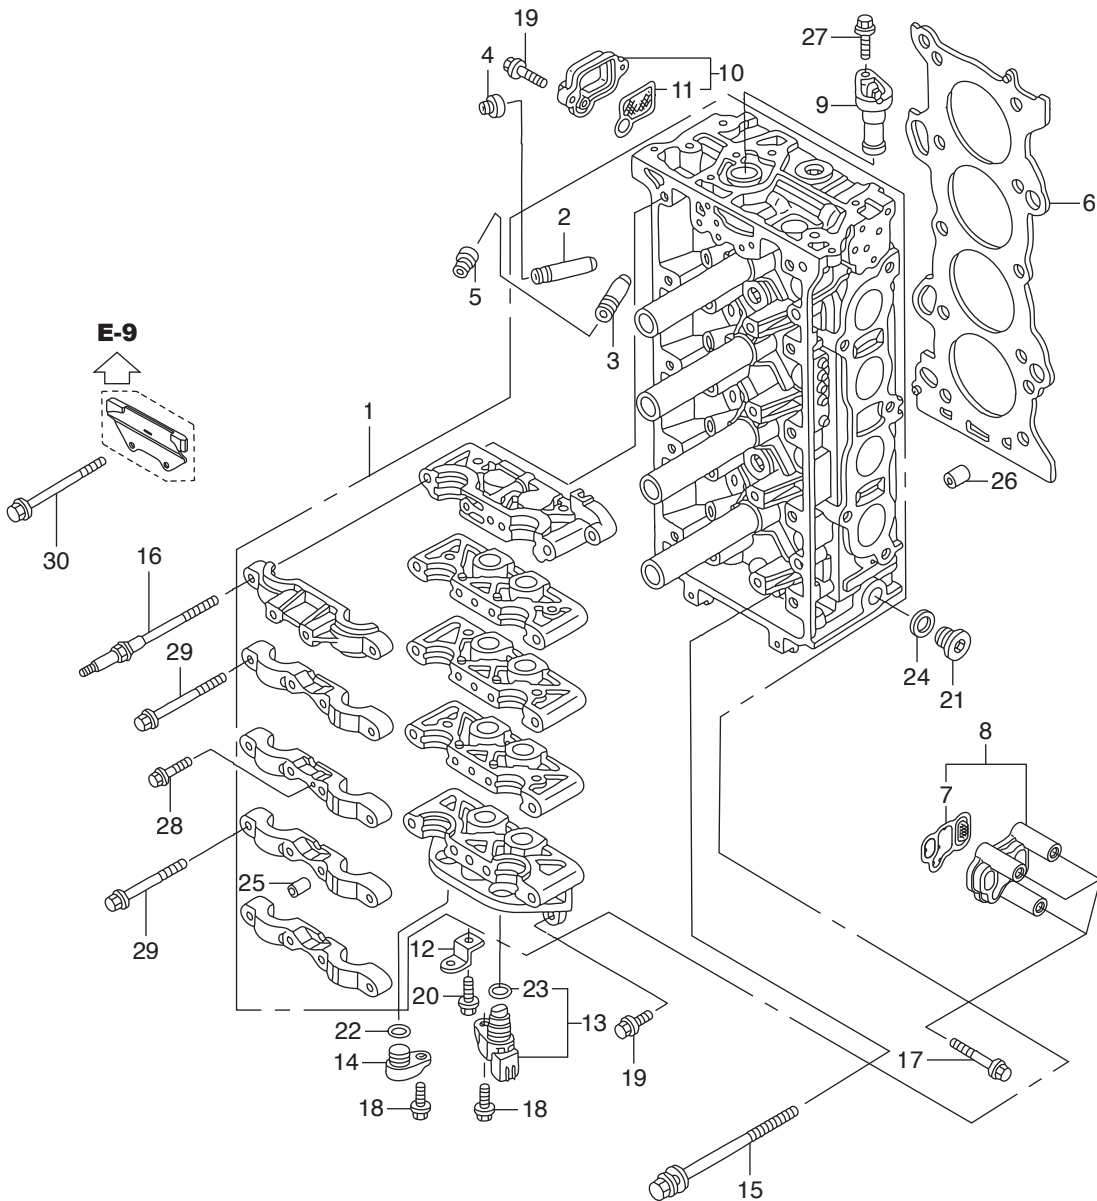FR. 



Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-9-20	1	HZY6-06122-010ZA	HEAD KIT, CYLINDER	1	*NH8* DARK GRAY
E-9-20	2	HPNA-12204-305	GUIDE, IN. VALVE(OS)	8	
E-9-20	3	HPNA-12205-305	GUIDE, EX. VALVE(OS)	8	
E-9-20	4	HPZ1-12210-003	SEAL A, VALVE STEM(ARAI)	8	
E-9-20	4	HPZ1-12210-004	SEAL A, VALVE STEM(NOK)	8	
E-9-20	5	HPZ1-12211-003	SEAL B, VALVE STEM(ARAI)	8	
E-9-20	5	HPZ1-12211-004	SEAL B, VALVE STEM(NOK)	8	
E-9-20	6	HZY6-12251-003	GASKET COMP., CYLINDER HEAD	1	
E-9-20	7	HRAA-15815-A02	FILTER ASSY., SPOOL VALVE	1	
E-9-20	8	HZY9-15815-000	COVER ASSY., OIL PATH	1	
E-9-20	9	HZY6-15834-000	PLUG, VTC HOLE	1	
E-9-20	10	HZY6-15840-000ZA	STRAINER ASSY., VTC	1	*NH8* DARK GRAY
E-9-20	11	HRAA-15845-A01	FILTER ASSY., VTC	1	
E-9-20	12	HZY6-32116-000	BRACKET F, CLIP	1	
E-9-20	13	HPNB-37510-003	SENSOR ASSY., TDC	1	
E-9-20	14	HZY6-37521-000	PLUG, TDC HOLE	1	
E-9-20	15	HPNA-90005-003	BOLT-WASHER, 11X155	10	
E-9-20	16	HPNA-90011-003	BOLT A, HEAD COVER	6	
E-9-20	17	HZY6-90011-000	BOLT, FLANGE, 6X52	3	
E-9-20	18	HZY3-90017-000	BOLT, FLANGE, 6X16	2	
E-9-20	19	HZW5-90018-000	BOLT, FLANGE, 6X20	4	
E-9-20	20	HZY3-90021-000	BOLT, FLANGE, 6X14	1	
E-9-20	21	HZY6-90048-010	BOLT, SEALING, 20MM	1	
E-9-20	22	HZY6-91303-003	O-RING, 15X1.9	1	
E-9-20	23	HPNA-91333-003	O-RING, 15X1.9	1	
E-9-20	24	HCO-94109-20000	WASHER, DRAIN PLUG, 20MM	1	
E-9-20	25	HCO-94301-10160	DOWEL PIN, 10X16	20	
E-9-20	26	HCO-94301-14200	DOWEL PIN, 14X20	2	
E-9-20	27	HCO-95701-06020-08	BOLT, FLANGE, 6X20	1	

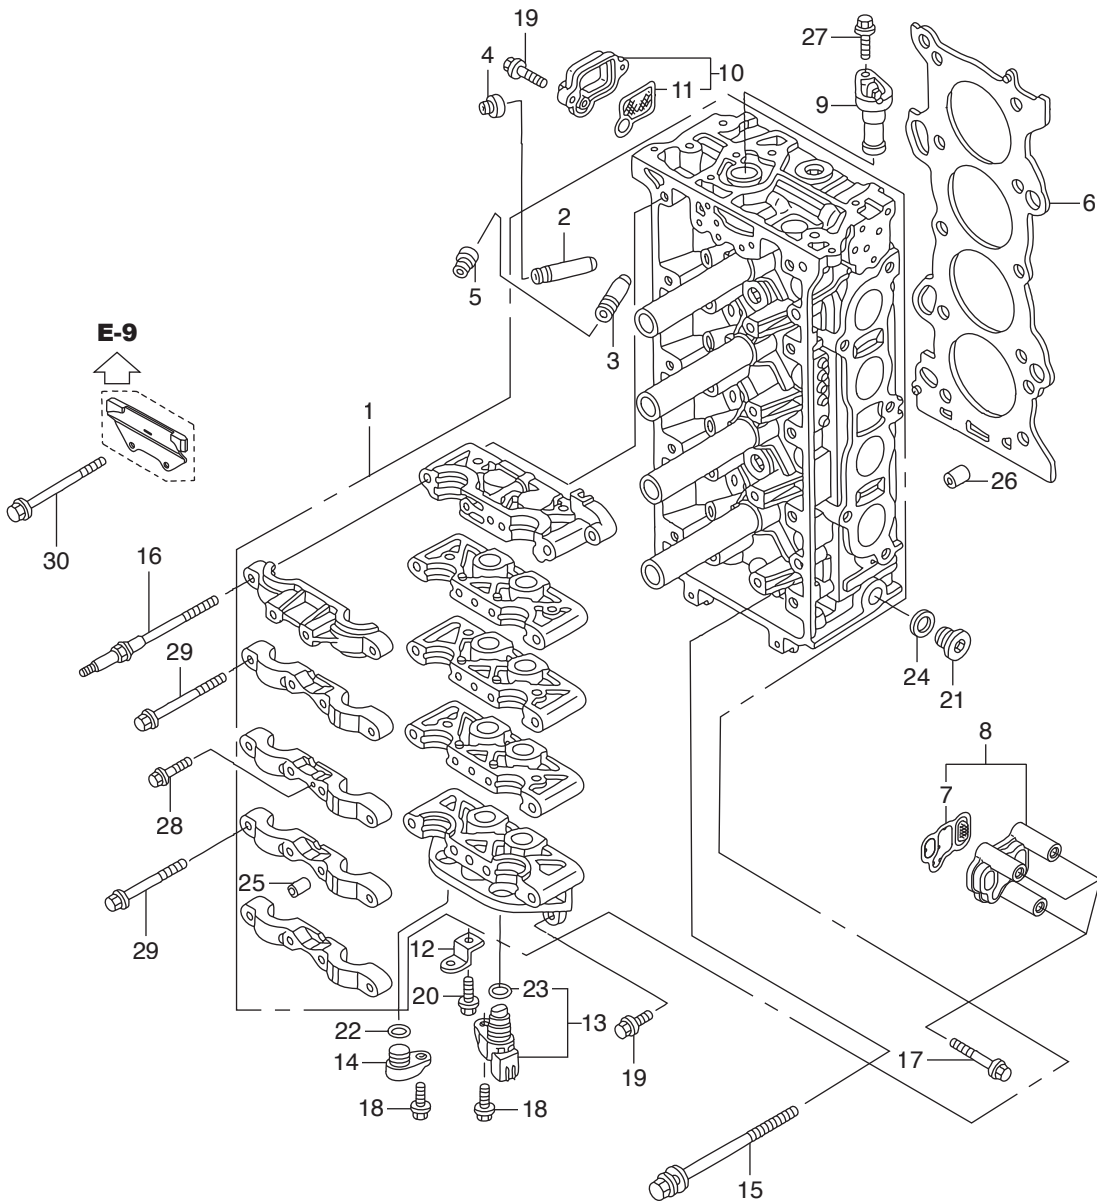FR. 

[illegible]

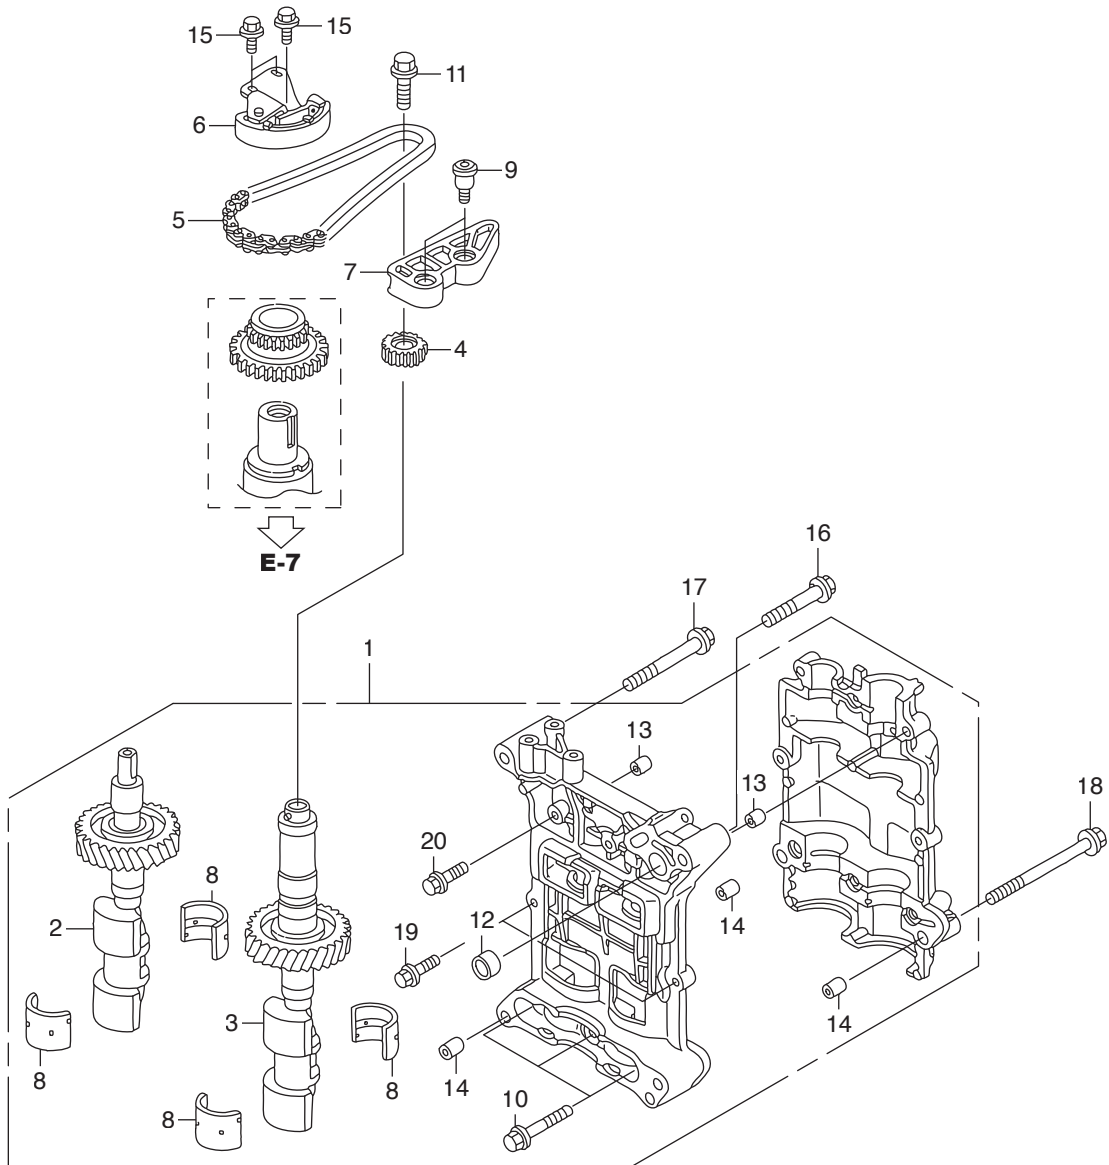
FR. 


[illegible]

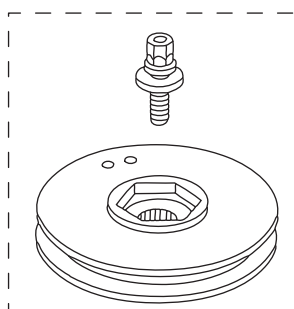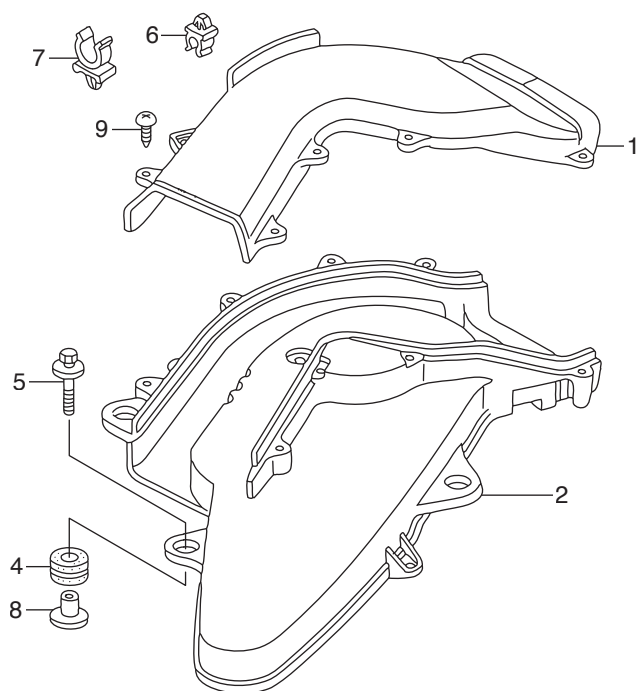


➡ E-7

FR. ➡

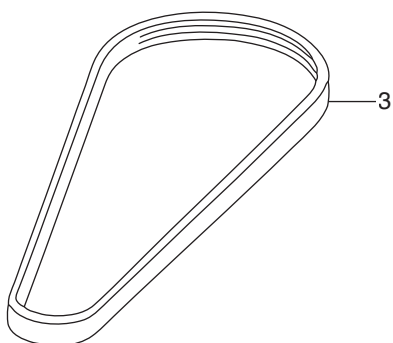


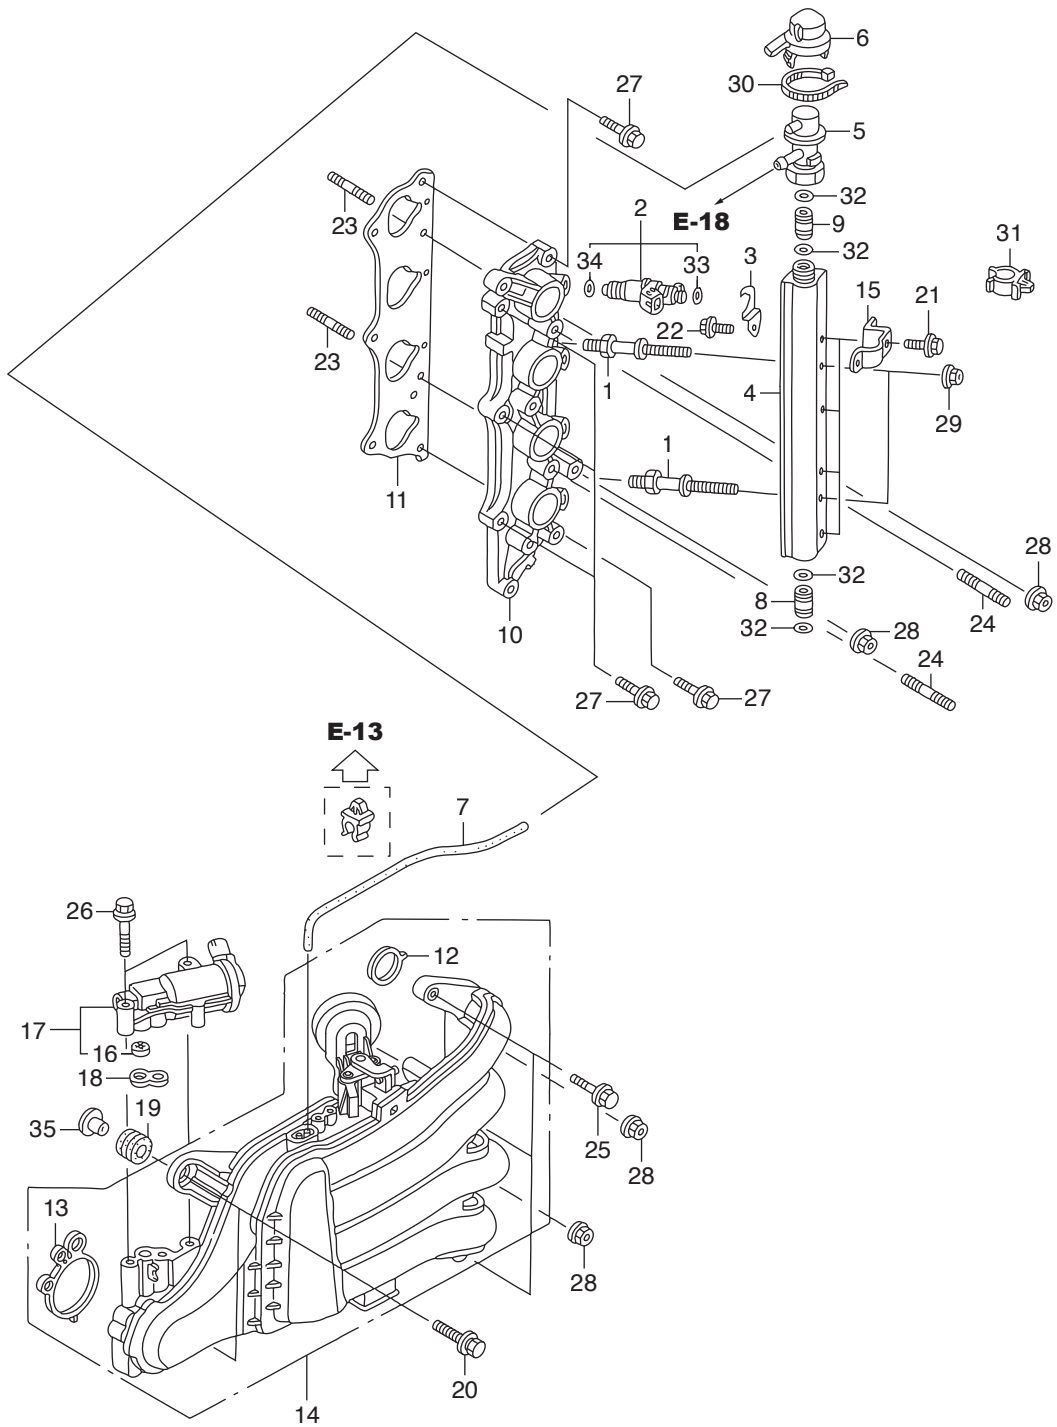


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-14	1	HZY6-16089-000	BOLT, FUEL PIPE	2	
E-14	2	HZY6-16450-003	INJECTOR ASSY., FUEL	4	
E-14	3	HZY6-16451-000	CLIP, INJECTOR	4	
E-14	4	HZY6-16621-000	LINE, FUEL	1	
E-14	5	HZY6-16740-003	REGULATOR ASSY., PRESSURE	1	
E-14	6	HZY6-16744-010	CAP, REGULATOR	1	
E-14	7	HZY6-16748-000	TUBE, PRESSURE REGULATOR	1	CONTROL
E-14	8	HZY3-16752-000	JOINT, FUEL PIPE	1	
E-14	9	HZY6-16752-000	JOINT, FUEL PIPE	1	
E-14	10	HZY6-17051-000ZA	BASE, INJECTOR	1	*NH8* DARK GRAY
E-14	11	HPNA-17055-004	GASKET A, INJECTOR BASE	1	
E-14	12	HZY6-17105-000	PACKING, INTAKE MANIFOLD	4	
E-14	13	HZY6-17109-000	PACKING, THROTTLE BODY	1	
E-14	14	HZX1-17110-003	MANIFOLD COMP., INLET	1	
E-14	15	HZY6-32111-000	BRACKET A, HARNESS CLIP	4	
E-14	16	HPS4-36454-003	FILTER COMP., ELECTRONIC AIR	1	CONTROL VALVE(TOYO ROKI)
E-14	17	HZY6-36550-003	VALVE ASSY., ELECTRONIC AIR	1	CONTROL
E-14	18	HZY6-36551-003	PACKING, ELECTRONIC AIR	1	CONTROL VALVE
E-14	19	H121-51640-730	RUBBER, FR. CARRIER CUSHION	2	
E-14	20	HZW1-90014-000	BOLT-WASHER, 8X35	2	
E-14	21	HZY3-90021-000	BOLT, FLANGE, 6X14	4	
E-14	22	HZY3-90042-000	BOLT, FLANGE, 6X10	4	
E-14	23	HZY6-90043-000	BOLT, STUD 2, 8X25	2	
E-14	24	HZY6-90047-000	BOLT, STUD, 8X32	2	
E-14	25	HZY3-90054-000	BOLT, FLANGE, 8X35	3	
E-14	26	HZW4-90126-000	BOLT, FLANGE, 8X45	2	
E-14	27	HZW4-90151-000	BOLT, FLANGE, 8X25	5	
E-14	28	HZY3-90205-000	NUT, FLANGE, 8MM	4	
E-14	29	HZW2-90301-F00	NUT, FLANGE, 6MM	2	

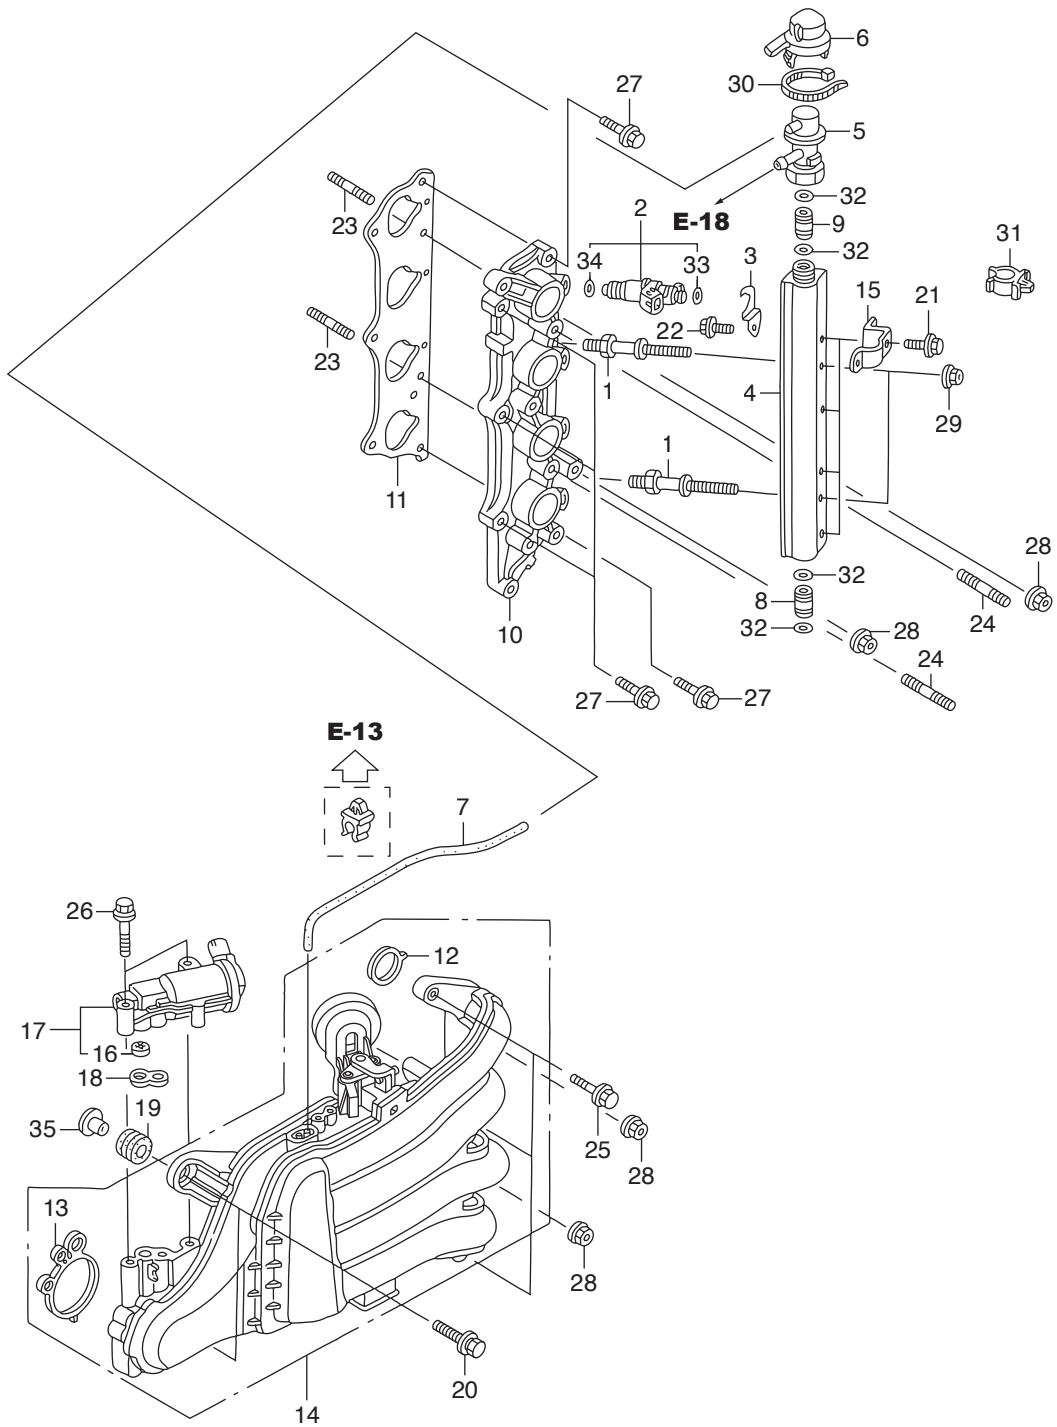


[illegible]

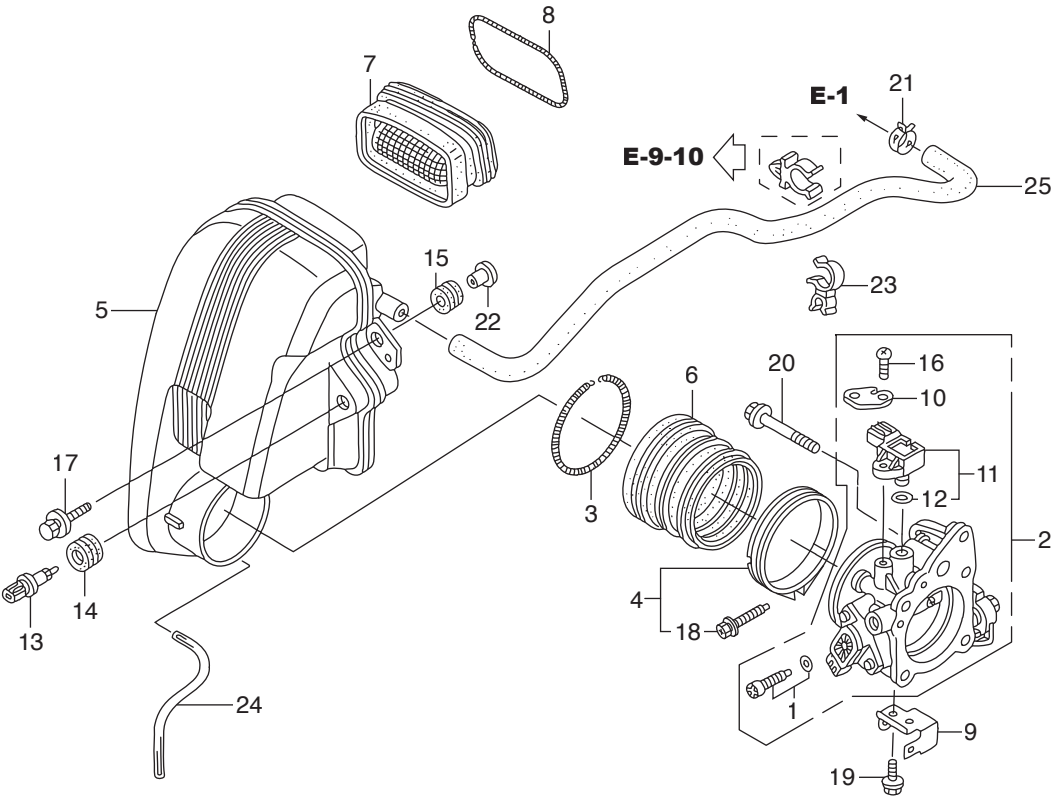


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-15	1	HZY6-16016-003	SCREW SET	1	
E-15	2	HZY6-16400-013	THROTTLE BODY ASSY.	1	
E-15	3	HPY3-17249-000	SPRING, AIR FLOW TUBE	1	
E-15	4	HZY9-17315-000	BAND, AIR FLOW	1	
E-15	5	HZY6-17371-020	CASE COMP., SILENCER	1	
E-15	6	HZY6-17374-000	GROMMET, SILENCER	1	
E-15	7	HZY6-17397-013	GROMMET, SILENCER DUCT	1	
E-15	8	HZY6-17398-000	SPRING, SILENCER DUCT GROMMET	1	
E-15	9	HZY6-32115-000	BRACKET E, HARNESS CLIP	1	
E-15	10	HZY3-32128-000	BRACKET, SENSOR CORD	1	
E-15	11	HRNA-37830-A01	SENSOR ASSY., MAP	1	
E-15	12	HPGK-37835-A01	O-RING	1	
E-15	13	HPLC-37880-004	SENSOR ASSY., AIR TEMP	1	(MATSUSHITA DENSHI)
E-15	14	HP2A-37881-000	GROMMET, TA SENSOR	1	
E-15	15	HZV5-40102-000	GROMMET, UNDER CASE	3	
E-15	16	HZY6-90006-000	SCREW, PAN, 5X18	1	
E-15	17	HZW1-90013-000	BOLT-WASHER, 6X25	3	
E-15	18	HZY9-90017-000	BOLT-WASHER, 5X30	1	
E-15	19	HZY3-90056-000	BOLT, FLANGE, 6X12	1	
E-15	20	HZV1-90127-010	BOLT, FLANGE, 8X60	4	
E-15	21	HZV3-90601-030	CLAMP, TUBE(D17)	1	
E-15	22	HZV5-91553-010	COLLAR, C.D.I. UNIT CASE	3	
E-15	23	HSF1-91595-003	CLAMP, FUEL HOSE	1	
E-15	24	HCO-95003-07016-31	TUBE, VINYL, 4X7X160	1	(HC-95003-07001-60M)
E-15	25	HCO-95005-12740-20	TUBE, 12X740	1	(HC-95005-12001-20M)

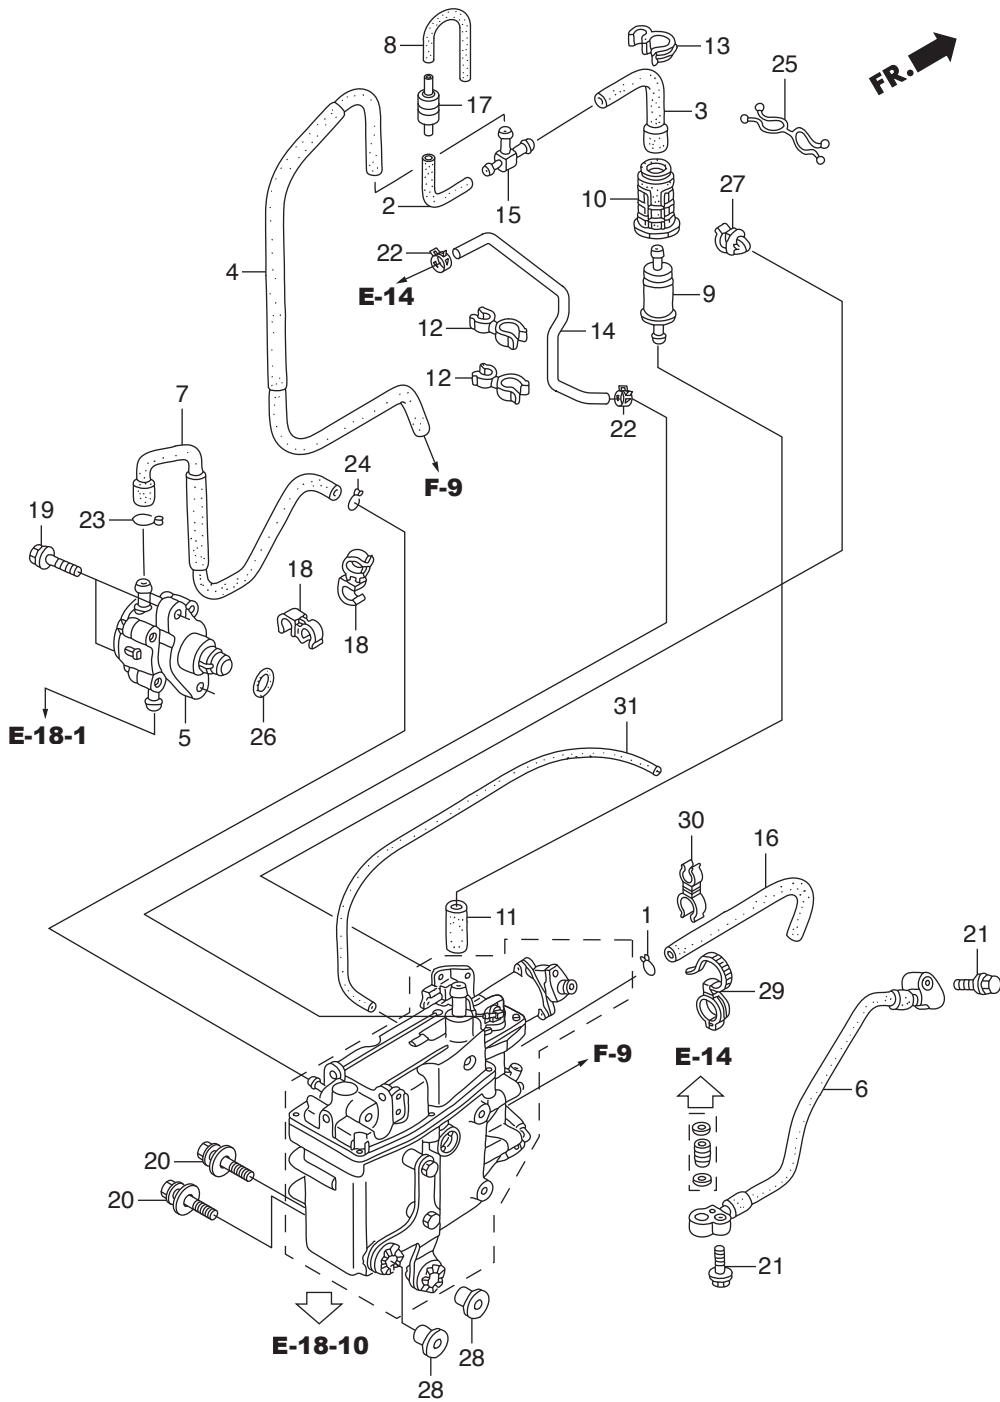


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-18	1	HGHB-16163-610	CLIP, TUBE	1	
E-18	2	HZY6-16196-000	TUBE COMP. C, AIR VENT	1	
E-18	3	HZY6-16198-000	TUBE B, AIR VENT	1	
E-18	4	HZY6-16199-000	TUBE COMP., AIR VENT	1	
E-18	5	HZY6-16700-013	PUMP ASSY., FUEL	1	
E-18	6	HZY6-16755-003	HOSE COMP., FUEL	1	
E-18	7	HZY6-16860-A00	TUBE COMP. B, FUEL	1	
E-18	8	HZV5-16881-000	TUBE D, FUEL	1	
E-18	9	H759-16911-003	STRAINER, FUEL PUMP	1	
E-18	10	HZW5-16915-000	SUSPENSION, STRAINER	1	
E-18	11	HMZ5-16952-000	TUBE B, FUEL	1	
E-18	12	HVM0-16965-771	CLAMP, HOSE	2	
E-18	13	HKV7-17368-671	CLAMP, PIPE	1	
E-18	14	HZY6-17723-020	HOSE, PRESSURE REGULATOR	1	RETURN
E-18	15	HZY6-19269-000	T-JOINT	1	
E-18	16	HZY6-19273-000	TUBE G, WATER	1	
E-18	17	HZY6-36135-003	VALVE, CHECK	1	
E-18	18	HSE0-53740-953	CLIP, SENSOR HOSE	2	
E-18	19	HZY6-90010-000	BOLT, FLANGE, 6X27	2	
E-18	20	HZW1-90014-000	BOLT-WASHER, 8X35	2	
E-18	21	HZW9-90016-000	BOLT, FLANGE, 6X25	2	
E-18	22	HZW5-90601-030	CLAMP, TUBE(D10.7)	2	
E-18	23	HZY6-90601-000	CLIP, TUBE(B1 14.5)	1	
E-18	24	HZV0-90604-000	CLIP, TUBE(B12)	1	
E-18	25	HZY6-90605-003	CLIP, FUEL HOSE	1	
E-18	26	HPA9-91317-003	O-RING, 33.2X2.4(NOK)	1	
E-18	27	HSE0-91547-003	CLIP, HARNESS	1	
E-18	28	HZW1-91554-000	COLLAR, 8.5X14.5	2	
E-18	29	HSM4-91558-003	CLIP, TUBE(BLACK)(135MM)	1	

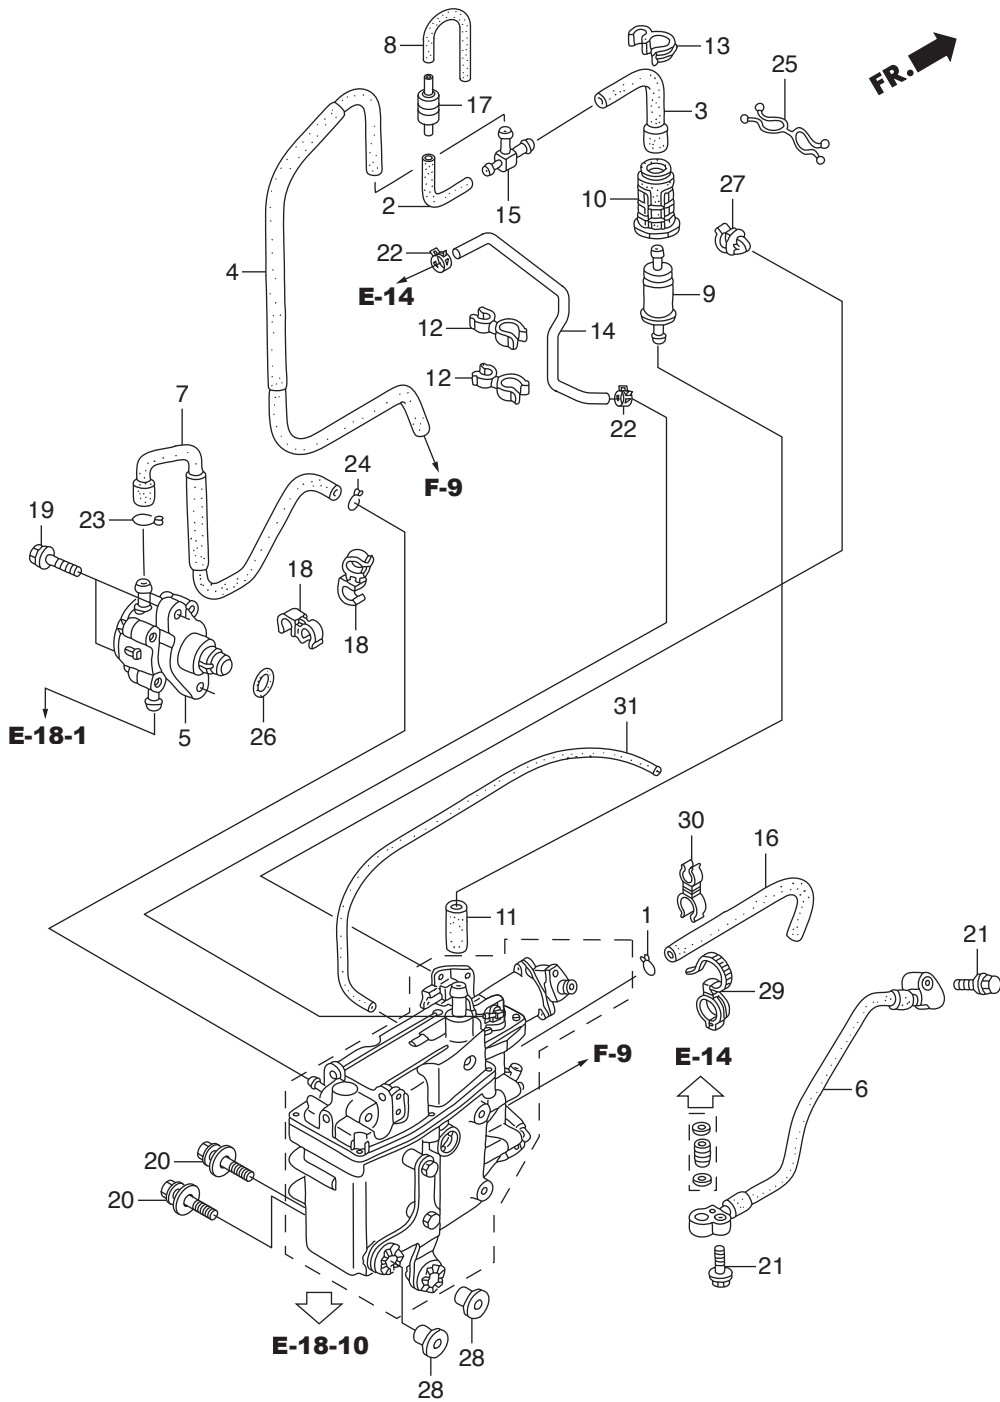

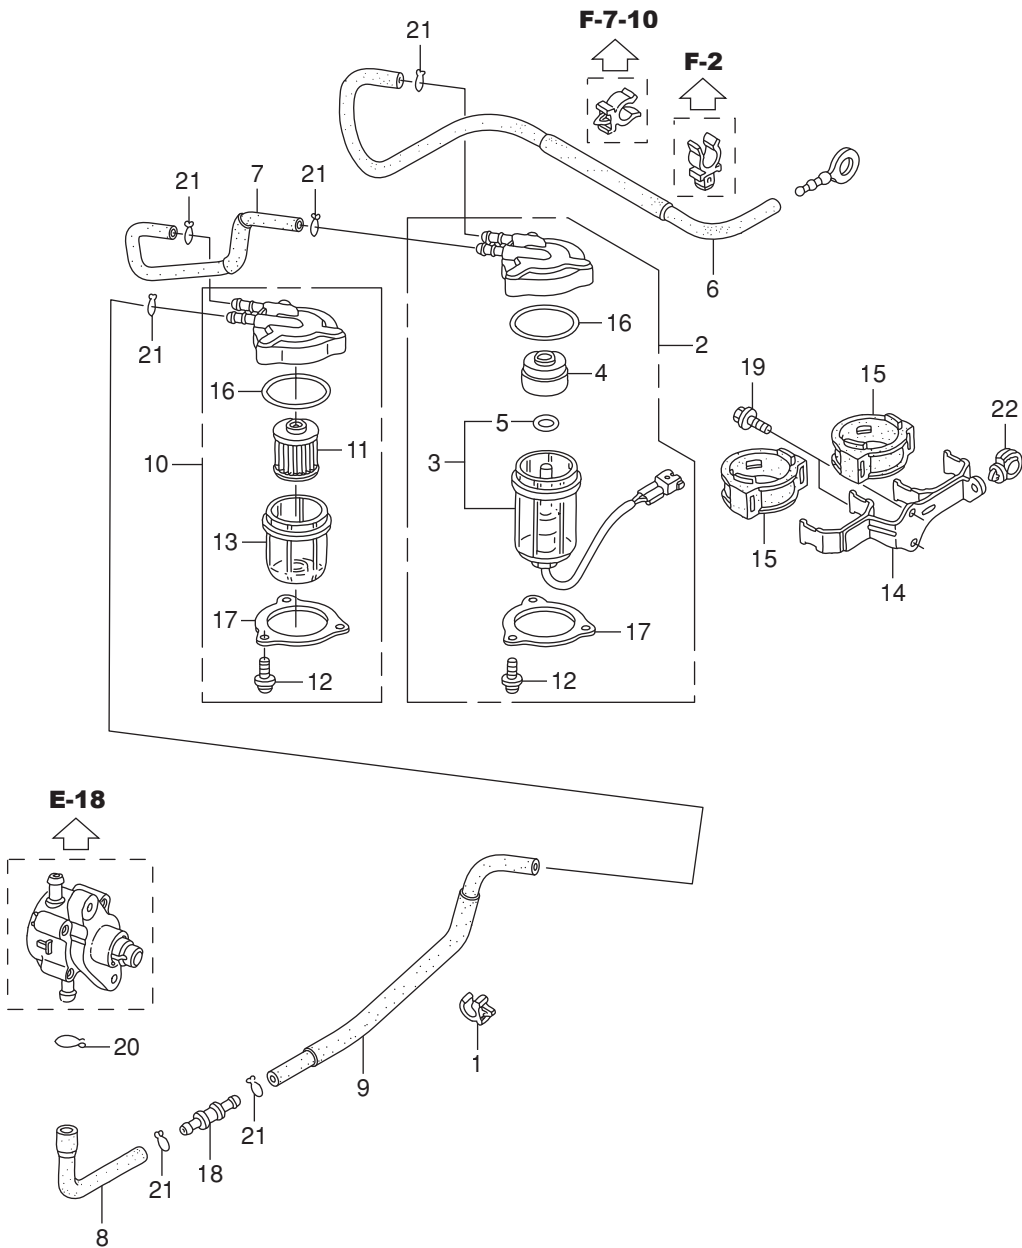FR. 


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-18-1	1	HZE2-16731-003	CLIP, TUBE	1	
E-18-1	2	HZY6-16800-003	SEPARATOR ASSY., WATER	1	
E-18-1	3	HZY6-16805-003	CUP SET, WATER SEPARATOR	1	
E-18-1	4	HZY3-16807-003	BUFFER, PLATE	1	
E-18-1	5	HZY3-16818-003	O-RING	1	
E-18-1	6	HZY6-16850-A01	TUBE COMP. A, FUEL(FKM)	1	
E-18-1	7	HZY6-16871-A00	TUBE COMP. C, FUEL	1	
E-18-1	8	HZY6-16881-A00	TUBE D, FUEL	1	
E-18-1	9	HZY6-16890-A00	TUBE COMP. E, FUEL	1	
E-18-1	10	HZY3-16900-003	STRAINER COMP., FUEL	1	
E-18-1	11	HZY3-16901-003	STRAINER, FUEL	1	
E-18-1	12	HZY3-16904-003	SCREW, PAN, 5X12	6	
E-18-1	13	HZY3-16912-003	CUP, FUEL STRAINER	1	
E-18-1	14	HZY6-16914-010	STAY, FUEL STRAINER	1	
E-18-1	15	HZY3-16915-010	SUSPENSION, STRAINER	2	
E-18-1	16	HZY3-16918-003	O-RING	2	
E-18-1	17	HZY3-16919-003	PLATE	2	
E-18-1	18	HMR5-16966-000	JOINT, FUEL TUBE	1	
E-18-1	19	HZY3-90021-000	BOLT, FLANGE, 6X14	2	
E-18-1	20	HZY6-90601-000	CLIP, TUBE(B1 14.5)	1	
E-18-1	21	HZV0-90604-000	CLIP, TUBE(B12)	6	
E-18-1	22	HSA0-90683-003	CLIP, WIRE HARNESS, 25MM	1	

FR. →


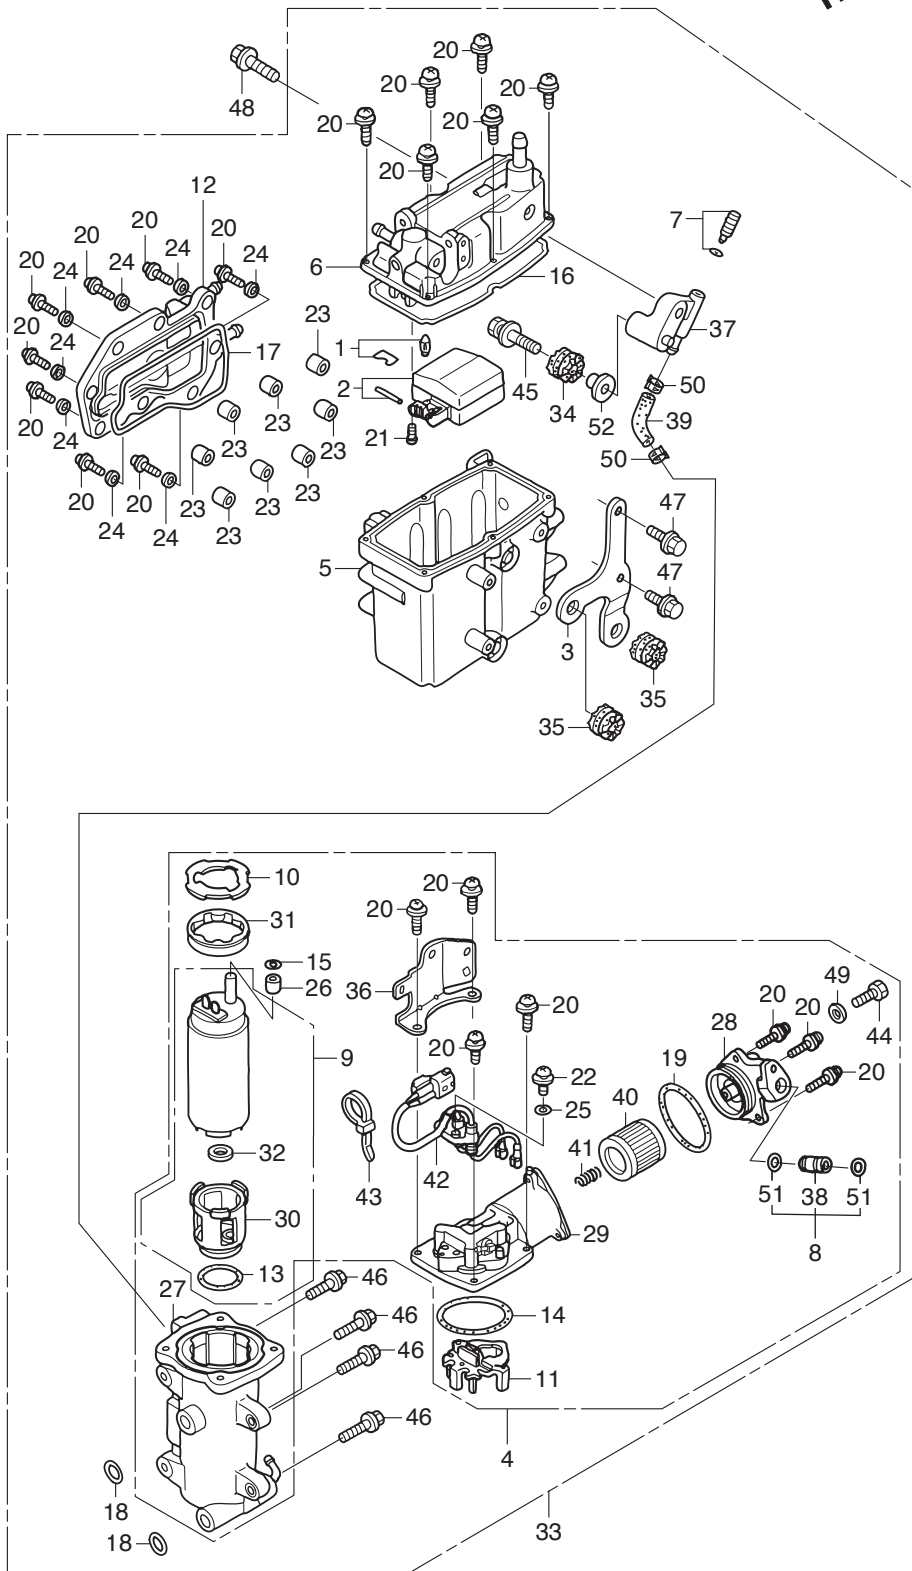


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-18-10	1	HZY3-16011-000	VALVE SET, FLOAT	1	
E-18-10	2	HZY3-16013-000	FLOAT SET	1	
E-18-10	3	HZY6-16014-003	STAY A, PLATE	1	
E-18-10	4	HZY6-16017-043	PUMP UNIT, FUEL	1	
E-18-10	5	HZY6-16019-003	BODY COMP., CHAMBER	1	
E-18-10	6	HZY6-16020-023	COVER COMP.	1	
E-18-10	7	HZY3-16024-000	SCREW SET, DRAIN	1	
E-18-10	8	HZY3-16026-000	JOINT SET	1	
E-18-10	9	HZY6-16036-003	PUMP UNIT, FUEL(B)	1	
E-18-10	10	HZY3-16041-000	PLATE	1	
E-18-10	11	HZY3-16042-000	HOLDER	1	
E-18-10	12	HZY3-16061-000	COVER, WATER JACKET	1	
E-18-10	13	HZY3-16072-000	O-RING	1	
E-18-10	14	HZY3-16073-000	O-RING	1	
E-18-10	15	HZY3-16074-000	O-RING	1	
E-18-10	16	HZY3-16075-000	O-RING	1	
E-18-10	17	HZY3-16076-000	O-RING	1	
E-18-10	18	HZY3-16077-000	O-RING	2	
E-18-10	19	HZY3-16078-000	O-RING	1	
E-18-10	20	HZW5-16081-010	SCREW-WASHER	21	
E-18-10	21	HZY3-16082-000	SCREW, PAN	2	
E-18-10	22	HZY3-16083-000	SCREW, WASHER	1	
E-18-10	23	HZW5-16086-000	COLLAR	8	
E-18-10	24	HZW5-16087-000	WASHER, PLAIN	8	
E-18-10	25	HZY3-16087-000	WASHER, PLAIN	1	
E-18-10	26	HZY3-16088-000	COLLAR	1	
E-18-10	27	HZY6-16701-003	CASE COMP., PUMP	1	
E-18-10	28	HZW5-16708-003	COVER, PUMP(B)	1	
E-18-10	29	HZW5-16715-023	COVER, PUMP(A)	1	



FR. →

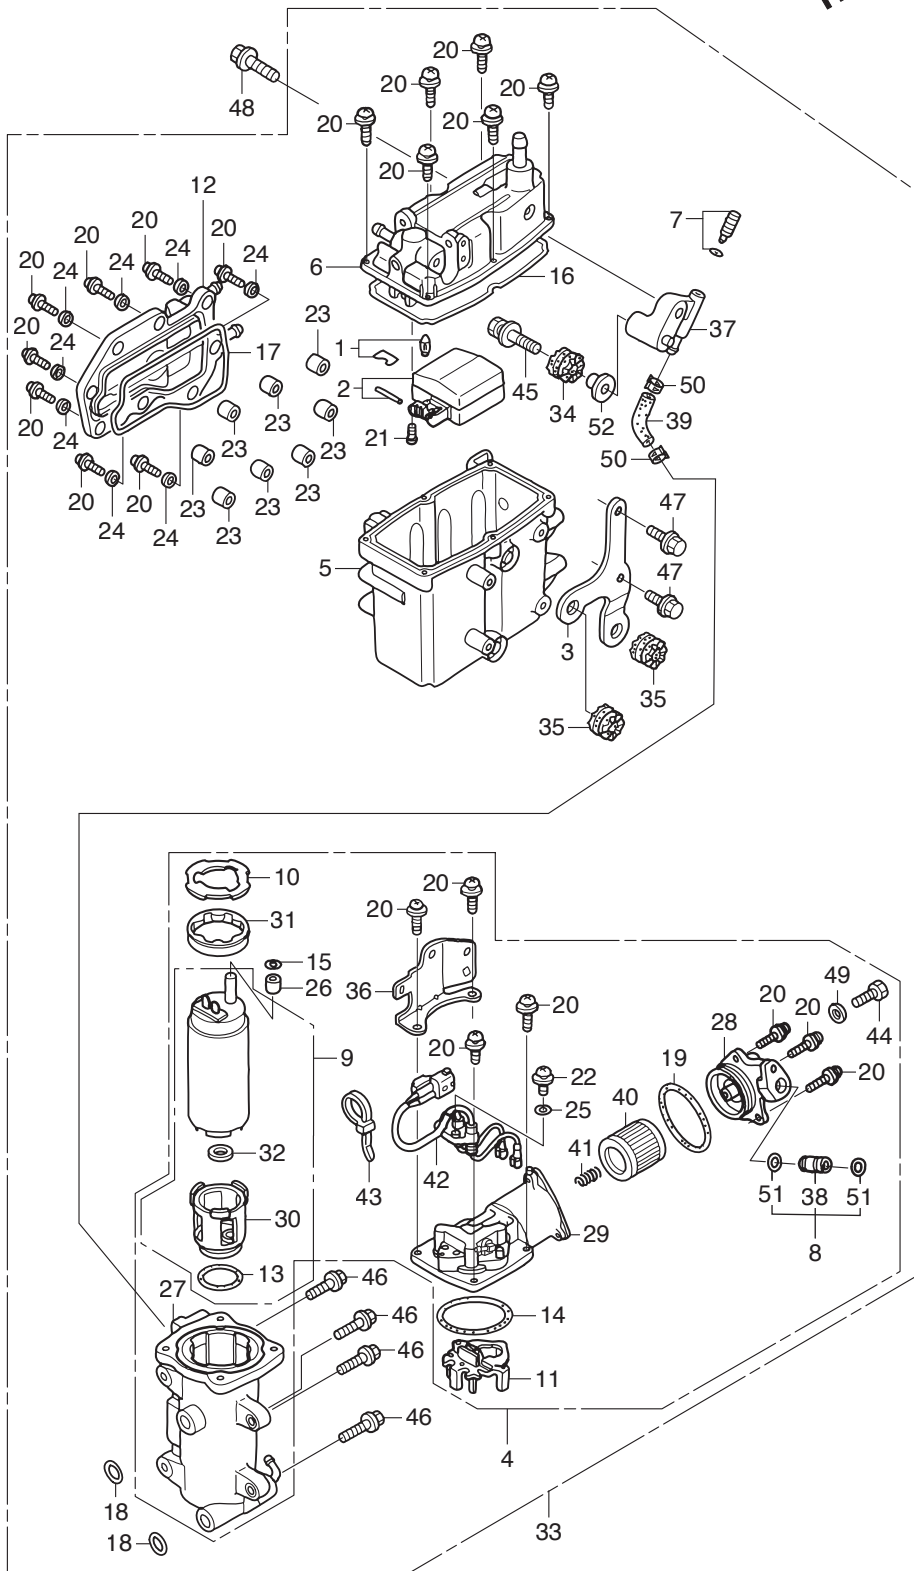


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-18-10	30	HZY6-16718-013	INSULATOR COMP.	1	
E-18-10	31	HZY3-16721-000	INSULATOR	1	
E-18-10	32	HZY6-16723-003	RING	1	
E-18-10	33	HZY6-16730-063	SEPARATOR ASSY., VAPOR	1	
E-18-10	34	HZW5-16733-000	GROMMET, VAPOR SEPARATOR	1	
E-18-10	35	HZY3-16733-000	GROMMET, VAPOR SEPARATOR	2	
E-18-10	36	HZY6-16734-003	STAY, PLATE	1	
E-18-10	37	HZY6-16736-003	STAY, VAPOR SEPARATOR	1	
E-18-10	38	HZY3-16752-000	JOINT, FUEL PIPE	1	
E-18-10	39	HZY6-16840-A00	TUBE F, FUEL	1	
E-18-10	40	HZY3-16911-010	SCREEN COMP., FUEL STRAINER	1	
E-18-10	41	HZY3-16913-000	SPRING, SET	1	
E-18-10	42	HZY6-32166-003	HARNESS COMP.	1	
E-18-10	43	HZW5-32168-003	BAND	1	
E-18-10	44	HPP4-90009-E01	BOLT, SEALING, 6MM	1	
E-18-10	45	HZW1-90014-000	BOLT-WASHER, 8X35	1	
E-18-10	46	HZW9-90016-000	BOLT, FLANGE, 6X25	4	
E-18-10	47	HZY3-90017-000	BOLT, FLANGE, 6X16	2	
E-18-10	48	HZY3-90049-000	BOLT, FLANGE, 8X30	1	
E-18-10	49	HPD6-90430-003	WASHER, SEALING, 6MM	1	
E-18-10	50	HZY6-90607-000	CLAMP, TUBE(8.0)	2	
E-18-10	51	HMJ0-91301-003	O-RING, 7.8X1.9(ARAI)	2	
E-18-10	52	HZW1-91554-000	COLLAR, 8.5X14.5	1	

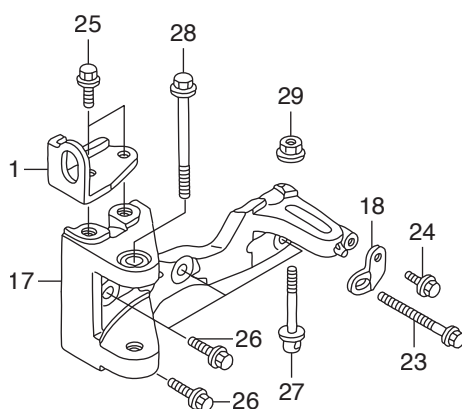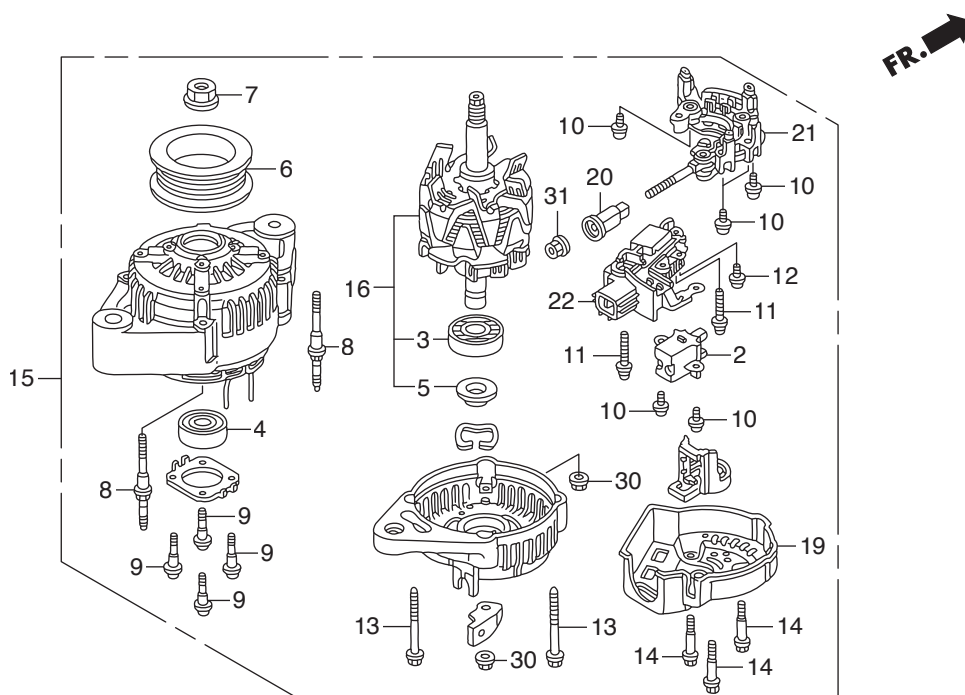


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-19	1	HZY6-11912-000	HANGER B, ENGINE	1	
E-19	2	HPZ1-31105-003	HOLDER ASSY., BRUSH	1	
E-19	3	HPJ7-31111-013	BEARING, RR.	1	
E-19	4	HPJ7-31114-013	BEARING, FR.	1	
E-19	5	HPD1-31138-004	COVER, BEARING	1	
E-19	6	HP64-31141-003	PULLEY	1	
E-19	7	HPD1-31142-004	NUT, PULLEY LOCK	1	
E-19	8	HPE9-31145-941	BOLT, STUD	2	
E-19	9	HPJ7-31146-003	SCREW	4	
E-19	10	HPT0-31147-003	SCREW-WASHER	6	
E-19	11	HPD1-31148-004	SCREW-WASHER, 4X25	2	
E-19	12	HPZ1-31149-003	SCREW	1	
E-19	13	HPE9-31152-942	BOLT-WASHER	2	
E-19	14	HPZ1-31153-003	BOLT	3	
E-19	15	HZY6-31630-003	GENERATOR ASSY., A.C.	1	#~1005765
E-19	15	HZY6-31630-013	GENERATOR ASSY., A.C.	1	#1005766~
E-19	16	HZW5-31631-003	ROTOR ASSY.	1	
E-19	17	HZY6-31636-010	BRACKET COMP., A.C. GENERATOR	1	
E-19	18	HZY6-31637-000	STAY, A.C. GENERATOR	1	
E-19	19	HZW5-31639-003	END COVER, RR.	1	
E-19	20	HZW5-31644-003	BUSH, INSULATION	1	
E-19	21	HZW5-31710-003	RECTIFIER ASSY.	1	
E-19	22	HZY6-31750-003	REGULATOR ASSY.	1	
E-19	23	HZW5-90011-010	BOLT, SPECIAL ADJUSTER	1	
E-19	24	HZY3-90017-000	BOLT, FLANGE, 6X16	1	
E-19	25	HZY3-90026-000	BOLT, FLANGE, 8X20	2	
E-19	26	HZY3-90035-000	BOLT, FLANGE, 8X28	4	
E-19	27	HZY3-90055-000	BOLT, TENSIONER	1	
E-19	28	HZW4-90163-000	BOLT, FLANGE, 10X80	1	

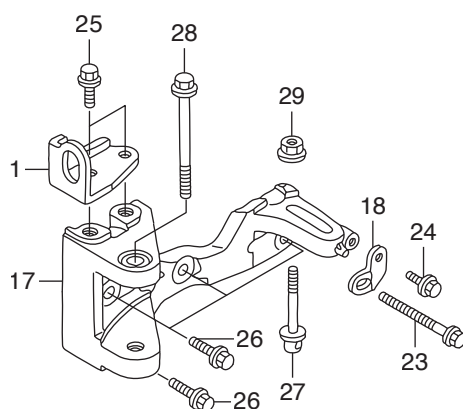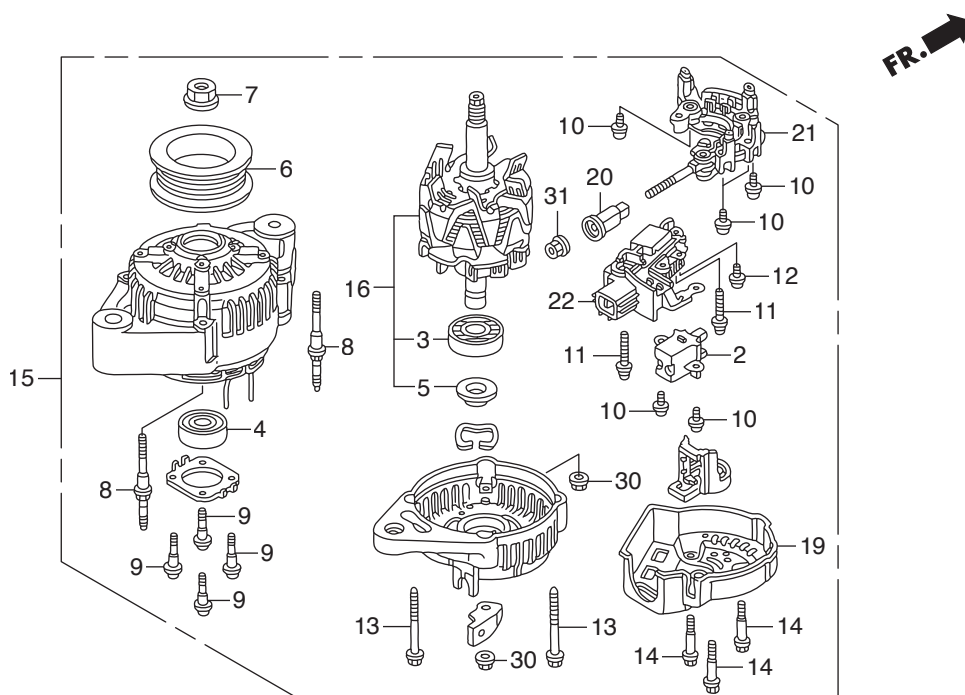


[illegible]

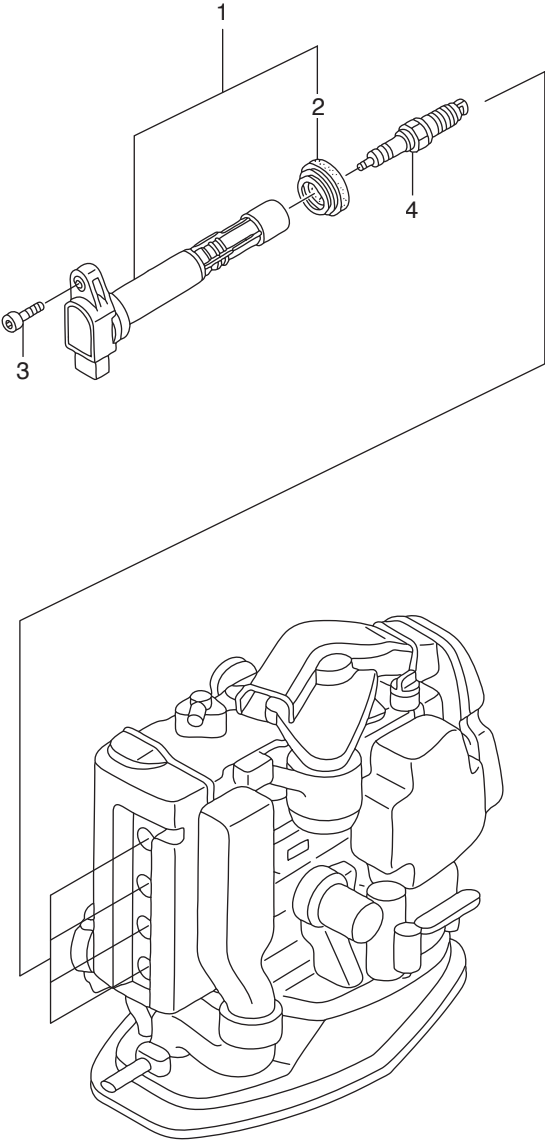


[illegible]


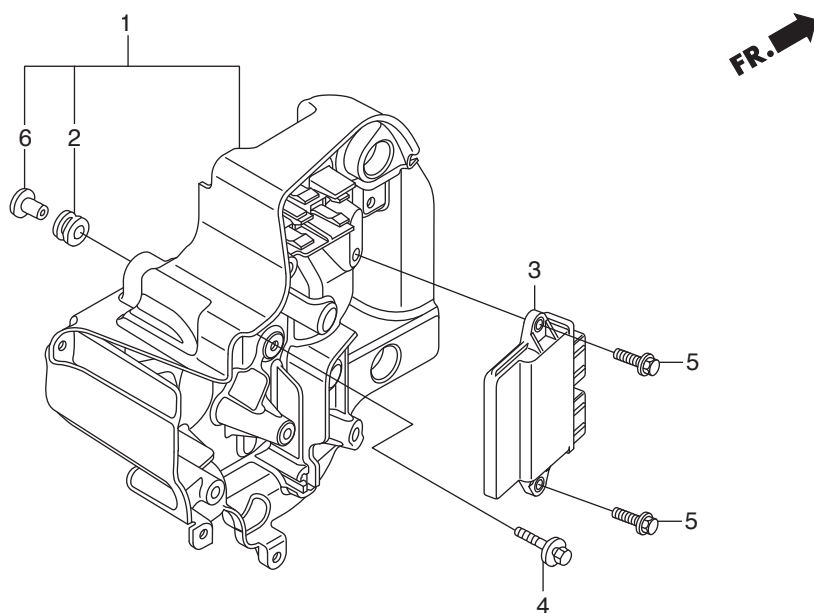


[illegible]


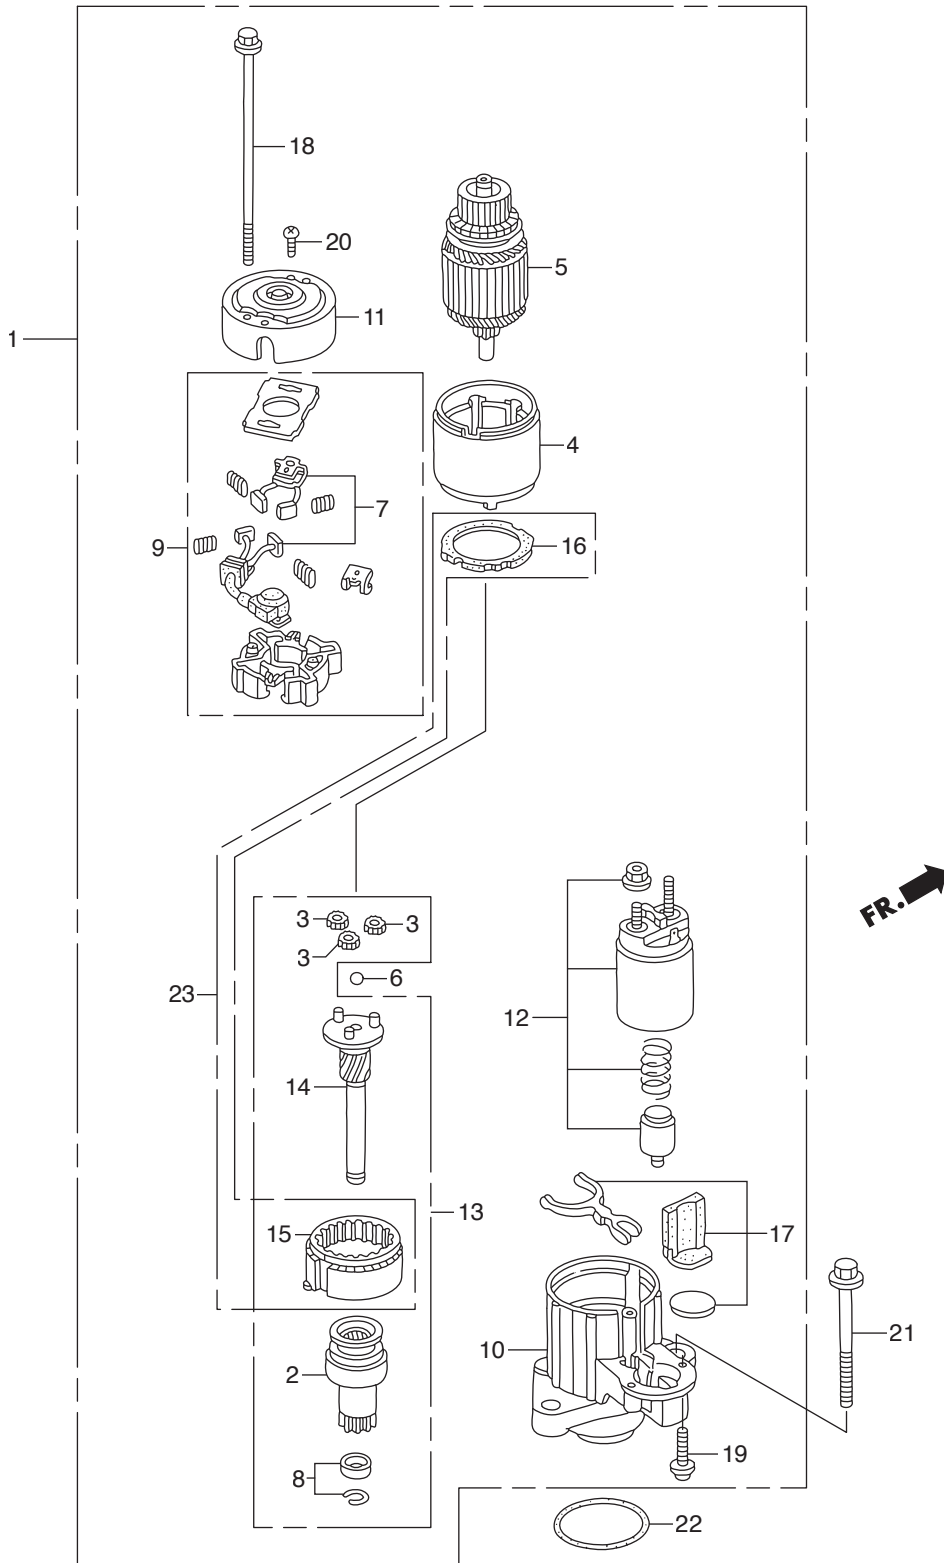


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
E-21	1	HZY6-31200-003	MOTOR ASSY., STARTER	1	
E-21	2	HZY3-31207-003	CLUTCH COMP., OVERRUNNING	1	#~1004968 #~6000047
E-21	2	HZY9-31207-H01	CLUTCH COMP., OVERRUNNING	1	#1004969~ #6000048~
E-21	3	HPY3-31215-004	GEAR ASSY., PLANETARY	3	
E-21	4	HZY6-31216-003	YOKE COMP.	1	
E-21	5	HZW5-31217-003	ROTOR COMP.	1	
E-21	6	HPY3-31218-004	BALL, STEEL	1	
E-21	7	HZY6-31226-003	BRUSH SET	1	#~1004968 #~6000047
E-21	7	HZY6-31227-003	BRUSH SET	1	#1004969~ #6000048~
E-21	8	HZW1-31229-004	STOPPER SET, SLEEVE	1	#~1004968 #~6000047
E-21	8	HZY9-31229-H01	STOPPER SET, SLEEVE	1	#1004969~ #6000048~
E-21	9	HZY6-31231-003	HOLDER COMP., BRUSH	1	#~1004968 #~6000047
E-21	9	HZY6-31232-003	HOLDER COMP., BRUSH	1	#1004969~ #6000048~
E-21	10	HZY6-31235-003	BRACKET, FR.	1	
E-21	11	HZY6-31236-003	BRACKET, RR.	1	
E-21	12	HZY6-31240-003	SWITCH ASSY., MAGNET	1	#~1004968 #~6000047
E-21	12	HZY9-31240-003	SWITCH ASSY., MAGNET	1	#1004969~ #6000048~
E-21	13	HZY6-31242-003	SHAFT ASSY., CLUTCH	1	#~1004968 #~6000047
E-21	13	HZY9-31242-H01	SHAFT ASSY., CLUTCH	1	#1004969~ #6000048~
E-21	14	HZY3-31246-003	SHAFT ASSY., GEAR	1	#~1004968 #~6000047
E-21	14	HZY9-31246-H01	SHAFT ASSY., GEAR	1	#1004969~ #6000048~
E-21	15	HZW1-31247-004	GEAR ASSY.,INTERNAL	1	#~1004968 #~6000047
E-21	16	HZW1-31249-004	PACKING	1	#~1004968 #~6000047
E-21	17	HZW1-31250-004	LEVER SET	1	
E-21	18	HZW1-31261-004	BOLT A, THROUGH	2	
E-21	19	HZW1-90106-004	SCREW, PAN, 6X22(SPECIAL)	2	#~1004968 #~6000047
E-21	19	HZY9-31226-H01	SCREW, PAN, 6X22	2	#1004969~ #6000048~
E-21	20	HZW1-90107-004	SCREW, PAN, 5X8	2	
E-21	21	HZW4-90164-000	BOLT, FLANGE, 10X90	2	

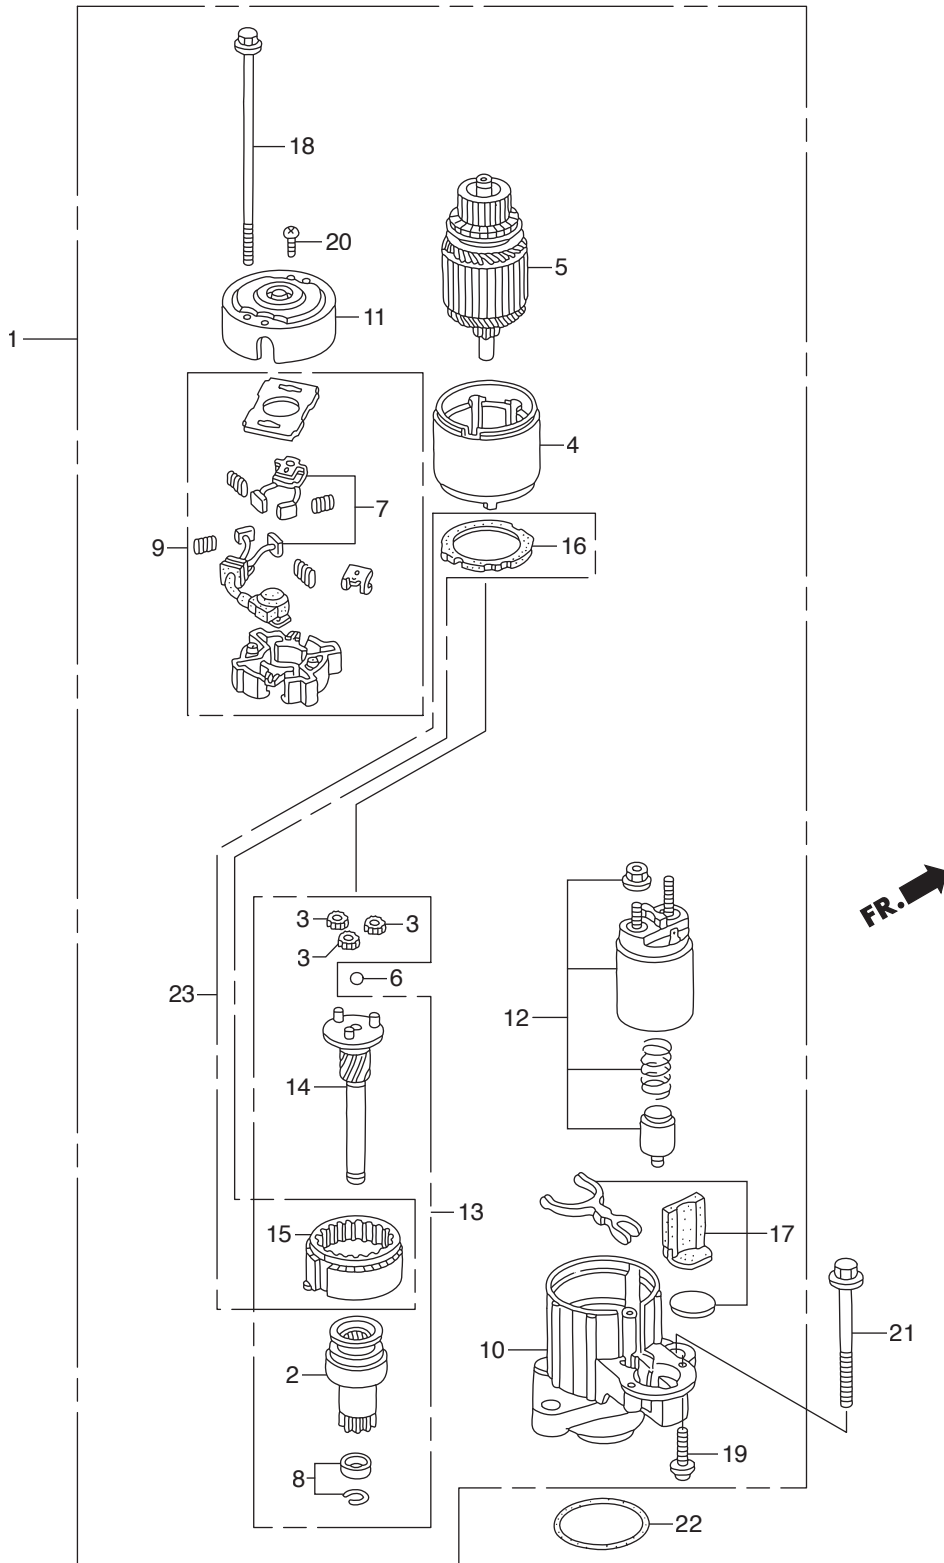


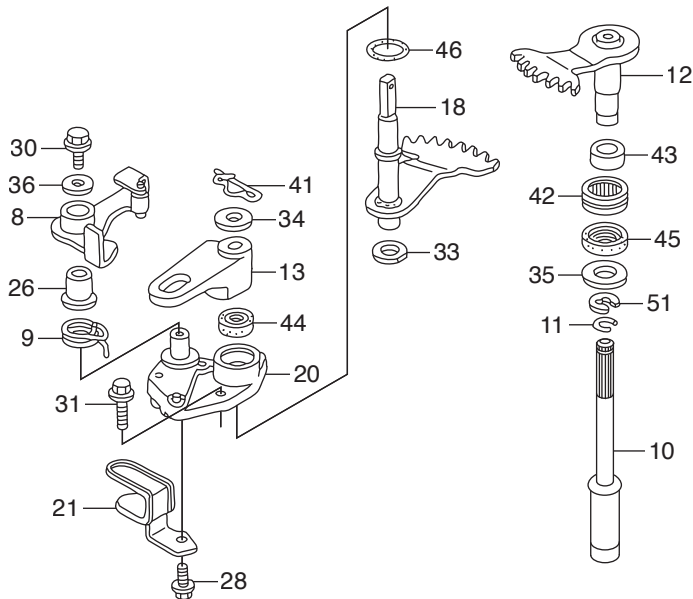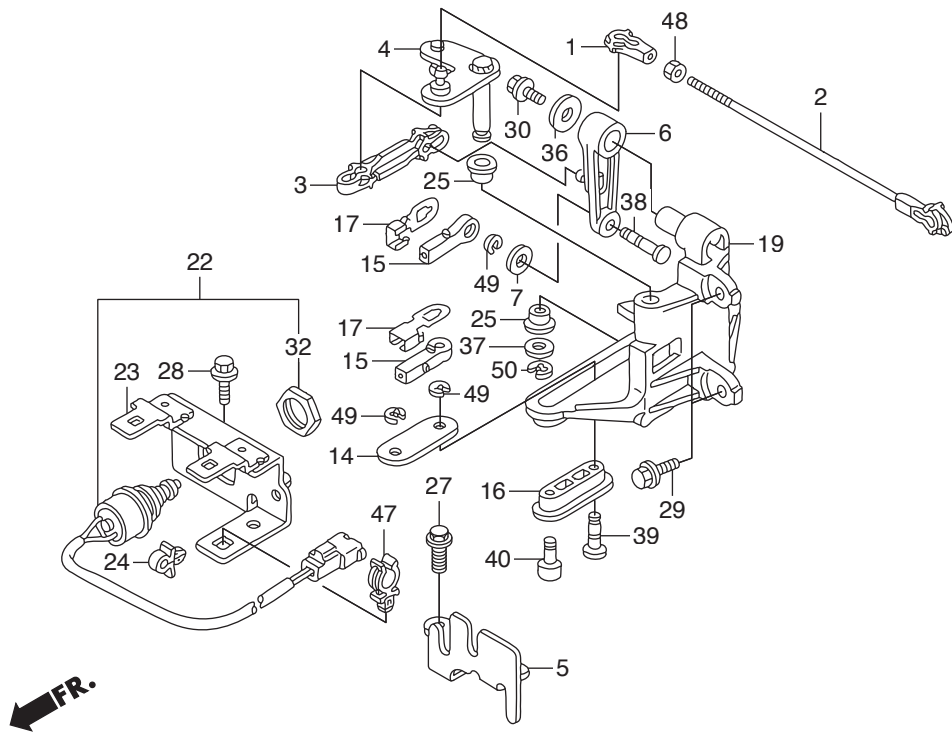


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-2	1	HZV5-17838-000	LINKAGE, PIVOT	1	
F-2	2	HZY6-17840-000	ROD COMP., THROTTLE	1	
F-2	3	HZY6-17845-000	LINK, THROTTLE	1	
F-2	4	HZY6-17860-000	PLATE COMP., THROTTLE	1	
F-2	5	HZY6-17877-010	PLATE, REMOTE CONTROL CABLE	1	
F-2	6	HZY6-17931-000	ARM, THROTTLE	1	
F-2	7	H921-17936-000	WASHER, PIVOT	1	
F-2	8	HZY6-24166-000	ARM COMP., CLICK	1	
F-2	9	HZY6-24218-000	SPRING, CLICK	1	
F-2	10	HZY6-24320-000	ROD COMP. A, SHIFT(L)	1	LA
F-2	10	HZY6-24320-610	ROD COMP. A, SHIFT(XL)	1	XA,XCA
F-2	11	HZW1-24327-000	RING, STOPPER	1	
F-2	12	HZY6-24610-000	SHAFT COMP. A, SHIFT	1	
F-2	13	HZY6-24612-020	ARM, SHIFT	1	
F-2	14	HZY6-24614-000	PLATE, SHIFT PIVOT	1	
F-2	15	HZY3-24618-000	PIVOT, SHIFT	2	
F-2	16	HZY6-24618-000	PIVOT, SHIFT SLIDE	1	
F-2	17	HZY3-24619-000	PLATE, LOCK	2	
F-2	18	HZY6-24620-000	SHAFT COMP. B, SHIFT	1	
F-2	19	HZY6-24628-000	BRACKET, SHIFT LINK	1	
F-2	20	HZY6-24629-000ZA	HOLDER, SEAL	1	*NH8* DARK GRAY
F-2	21	HZY6-32418-000	BRACKET A, CABLE	1	
F-2	22	HZY3-35470-023	SWITCH ASSY., NEUTRAL	1	
F-2	23	HZY6-35475-000	BRACKET, NEUTRAL SWITCH	1	
F-2	24	HVM0-46391-003	CLIP, BRAKE PIPE(A)	1	
F-2	25	HZY3-63205-000	BUSH A, COVER LOCK	2	
F-2	26	H763-75538-C01	BUSH, BLADE BRAKE	1	
F-2	27	HZY3-90017-000	BOLT, FLANGE, 6X16	1	
F-2	28	HZY3-90021-000	BOLT, FLANGE, 6X14	2	

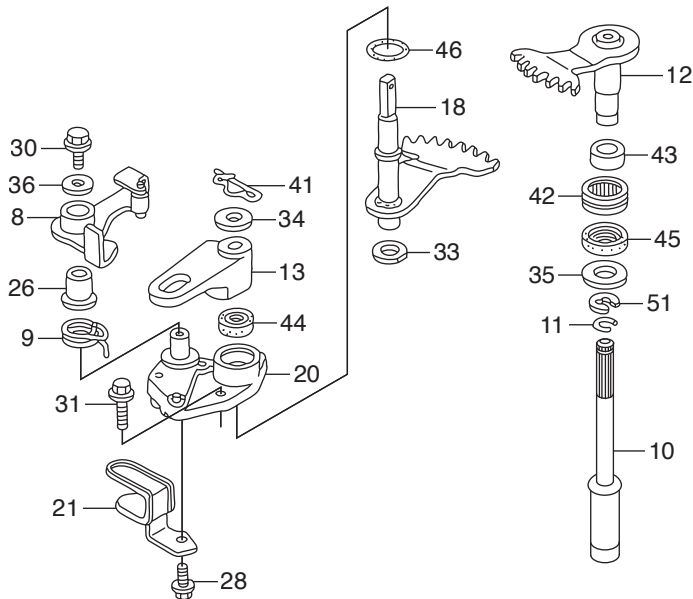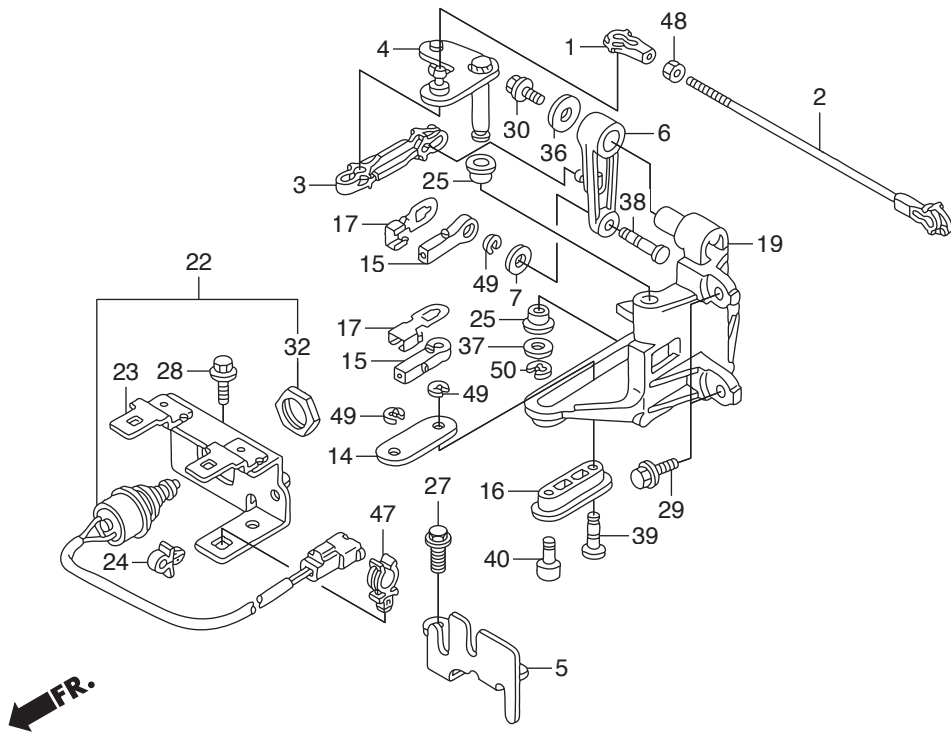


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-2	29	HZY3-90028-000	BOLT, FLANGE, 6X18	2	
F-2	30	HZW9-90102-000	BOLT, FLANGE, 6X12	2	
F-2	31	HZW9-90105-000	BOLT, FLANGE, 6X20	2	
F-2	32	HZV5-90302-003	NUT, HEX., 20MM	1	
F-2	33	HZW5-90501-000	WASHER, SHIFT SHAFT	1	
F-2	34	HZY3-90507-000	WASHER, PLAIN, 12MM	1	
F-2	35	HZV7-90508-000	WASHER	1	
F-2	36	HZV4-90512-000	WASHER, PLAIN, 6MM	2	
F-2	37	H921-90518-000	WASHER, PLAIN, 8MM	1	
F-2	38	HZY3-90751-000	PIN, LINK	1	
F-2	39	HZY6-90752-000	PIN, SHIFT LINK	1	
F-2	40	HZY6-90753-000	PIN, LINK	1	
F-2	41	HZY6-90755-003	PIN, SNAP, 12MM	1	
F-2	42	HZY3-91001-003	BEARING, NEEDLE, 20X28X13	1	(SOLID)
F-2	43	HZY3-91152-003	RING, INNER(15X20X23)	1	
F-2	44	HZW5-91251-003	OIL SEAL, 14X26X6	1	
F-2	45	HZY3-91255-003	SEAL, WATER(14X26X8)	1	
F-2	46	HP0X-91321-003	O-RING, 25X2.4(NOK)	1	
F-2	47	HSV1-91549-L01	HOLDER, DRAIN TUBE	1	
F-2	48	HCO-94001-05490-0S	NUT, HEX., 5MM	1	
F-2	49	HCO-94540-04029	E-RING, 4MM	3	
F-2	50	HCO-94540-06029	E-RING, 6MM	1	
F-2	51	HCO-94540-12029	E-RING, 12MM	1	

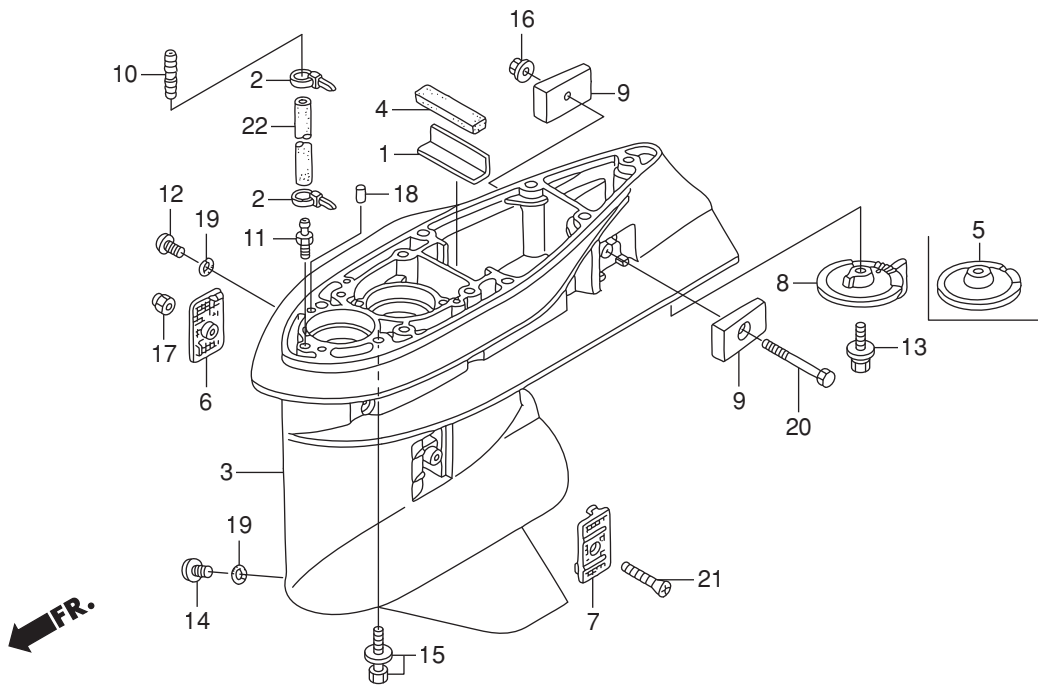


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-3	1	HZW1-19286-B00	PLATE, RUBBER SETTING	1	
F-3	2	HKM3-32161-003	BAND, WIRE	2	
F-3	3	HZY6-41101-020ZC	CASE, GEAR	1	*T107* BAY BLUE
F-3	4	HZW1-41102-B00	GROMMET, GEAR CASE	1	
F-3	5	HZX2-41102-E00ZC	COVER, GEAR CASE	1	*T107* BAY BLUE XCA
F-3	6	HZY6-41104-010	SCREEN, R. WATER	1	
F-3	7	HZY6-41105-010	SCREEN, L. WATER	1	
F-3	8	HZX2-41107-C00ZC	TAB, TRIM	1	*T107* BAY BLUE LA,XA
F-3	9	HZW1-41109-B00	METAL COMP., ANODE	2	
F-3	10	HZV5-41171-000	END, NIPPLE	1	
F-3	11	HZV5-41172-000	NIPPLE, SENSOR	1	
F-3	12	HZW9-90101-003	BOLT, OIL CHECK	1	
F-3	13	HZY6-90103-000	BOLT-WASHER, 10X32	1	
F-3	14	HZY3-90120-000	BOLT, DRAIN PLUG	1	
F-3	15	HZY6-90123-000	BOLT-WASHER, 10X40	7	
F-3	16	HZY1-90205-000	NUT, SELF-LOCK, 6MM	1	
F-3	17	HZV4-90302-000	NUT, SELF-LOCK, 5MM	1	
F-3	18	HZV5-90756-000	DOWEL PIN, 6X10	2	
F-3	19	HZW4-91301-003	O-RING, 6.9X1.45	2	
F-3	20	HCO-92101-06050-4J	BOLT, HEX., 6X50	1	
F-3	21	HCO-93700-05050-4J	SCREW, OVAL, 5X50	1	
F-3	22	HCO-95005-50140-30	TUBE, 5X140	1	(HC-95005-50001-30M) LD,LU
F-3	22	HCO-95005-50270-30	TUBE, 5X270	1	(HC-95005-50001-30M) XU

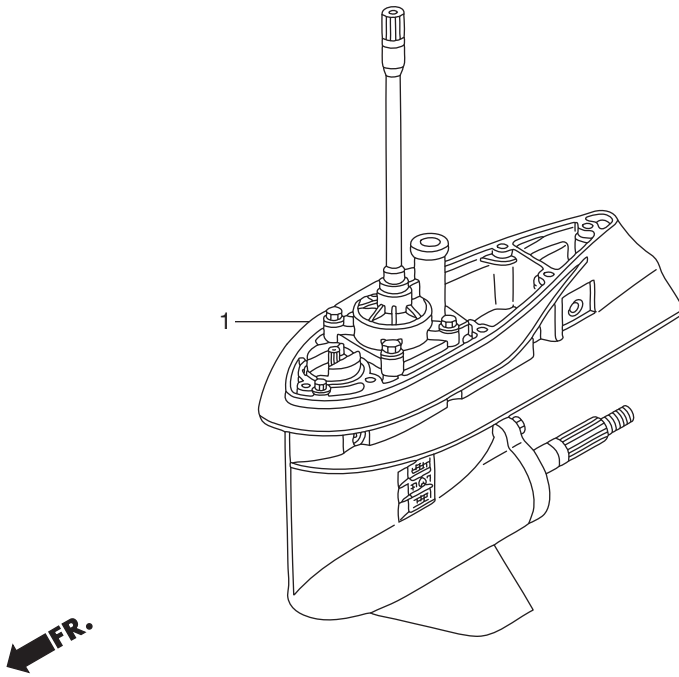


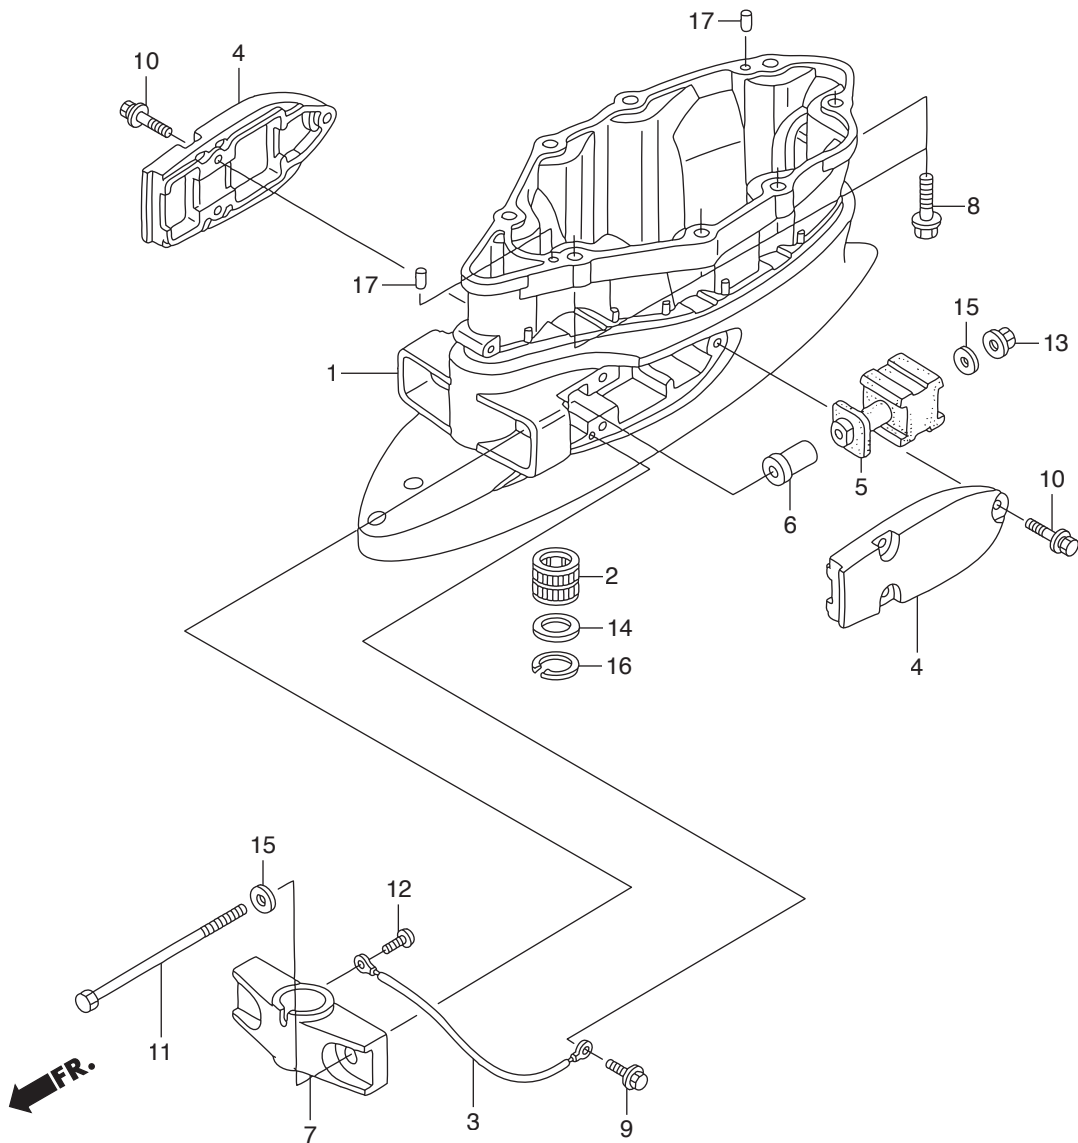

[illegible]

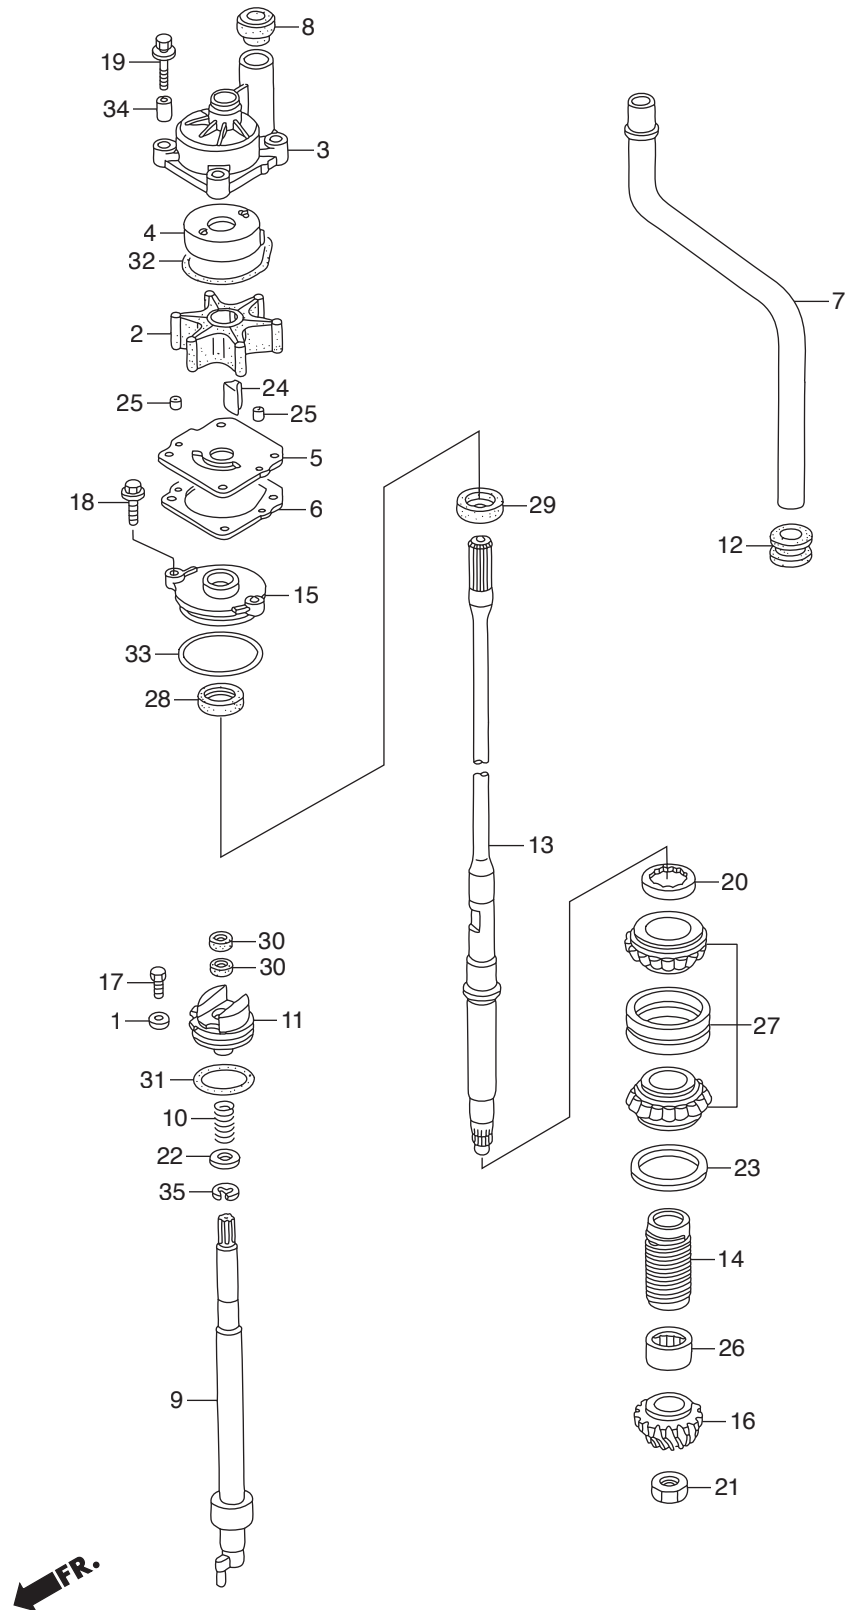


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-4	1	H921-17936-000	WASHER, PIVOT	1	
F-4	2	HZW1-19210-B04	IMPELLER, PUMP	1	
F-4	3	HZY6-19221-A00	HOUSING, IMPELLER	1	
F-4	4	HZW1-19223-B00	LINER, PUMP	1	
F-4	5	HZY6-19231-000	COVER, IMPELLER	1	
F-4	6	HZY6-19234-000	GASKET B, IMPELLER	1	
F-4	7	HZY6-19251-000	TUBE, WATER(L)	1	LA
F-4	7	HZY6-19251-611	TUBE, WATER(XL)	1	XA,XCA
F-4	8	HZW1-19253-B01	RING, WATER TUBE SEAL	1	
F-4	9	HZY6-24310-000	ROD COMP., SHIFT	1	LA,XA
F-4	9	HZY6-24310-710	ROD COMP., SHIFT	1	(COUNTER ROTATION) XCA
F-4	10	HZY3-24318-000	SPRING, SHIFT ROD	1	
F-4	11	HZY6-24343-000	HOLDER, SHIFT ROD	1	
F-4	12	HZW1-40204-000	GROMMET, EXTENSION CASE	1	
F-4	13	HZY6-41112-010	SHAFT, VERTICAL(L)	1	LA
F-4	13	HZY6-41112-611	SHAFT, VERTICAL(XL)	1	XA,XCA
F-4	14	HZW1-41116-B00	SLINGER, OIL	1	
F-4	15	HZZ3-41117-000	HOUSING, WATER SEAL	1	
F-4	16	HZY6-41131-000	GEAR, PINION	1	
F-4	17	H881-90105-000	BOLT, HEX., 6X12	1	
F-4	18	HZW9-90105-000	BOLT, FLANGE, 6X20	2	
F-4	19	HZY6-90116-000	BOLT-WASHER, 8X40	4	
F-4	20	HZW1-90242-000	NUT, LOCK, 64MM	1	
F-4	21	HZW5-90303-000	NUT, HEX., 18MM	1	
F-4	22	H723-90472-000	WASHER, PLAIN, 12MM	1	
F-4	23	HZW1-90518-B00	SHIM A, GEAR(0.10)	1	
F-4	23	HZW1-90519-B00	SHIM B, GEAR(0.15)	1	
F-4	23	HZW1-90520-B00	SHIM C, GEAR(0.30)	1	
F-4	23	HZW1-90521-B00	SHIM D, GEAR(0.50)	1	

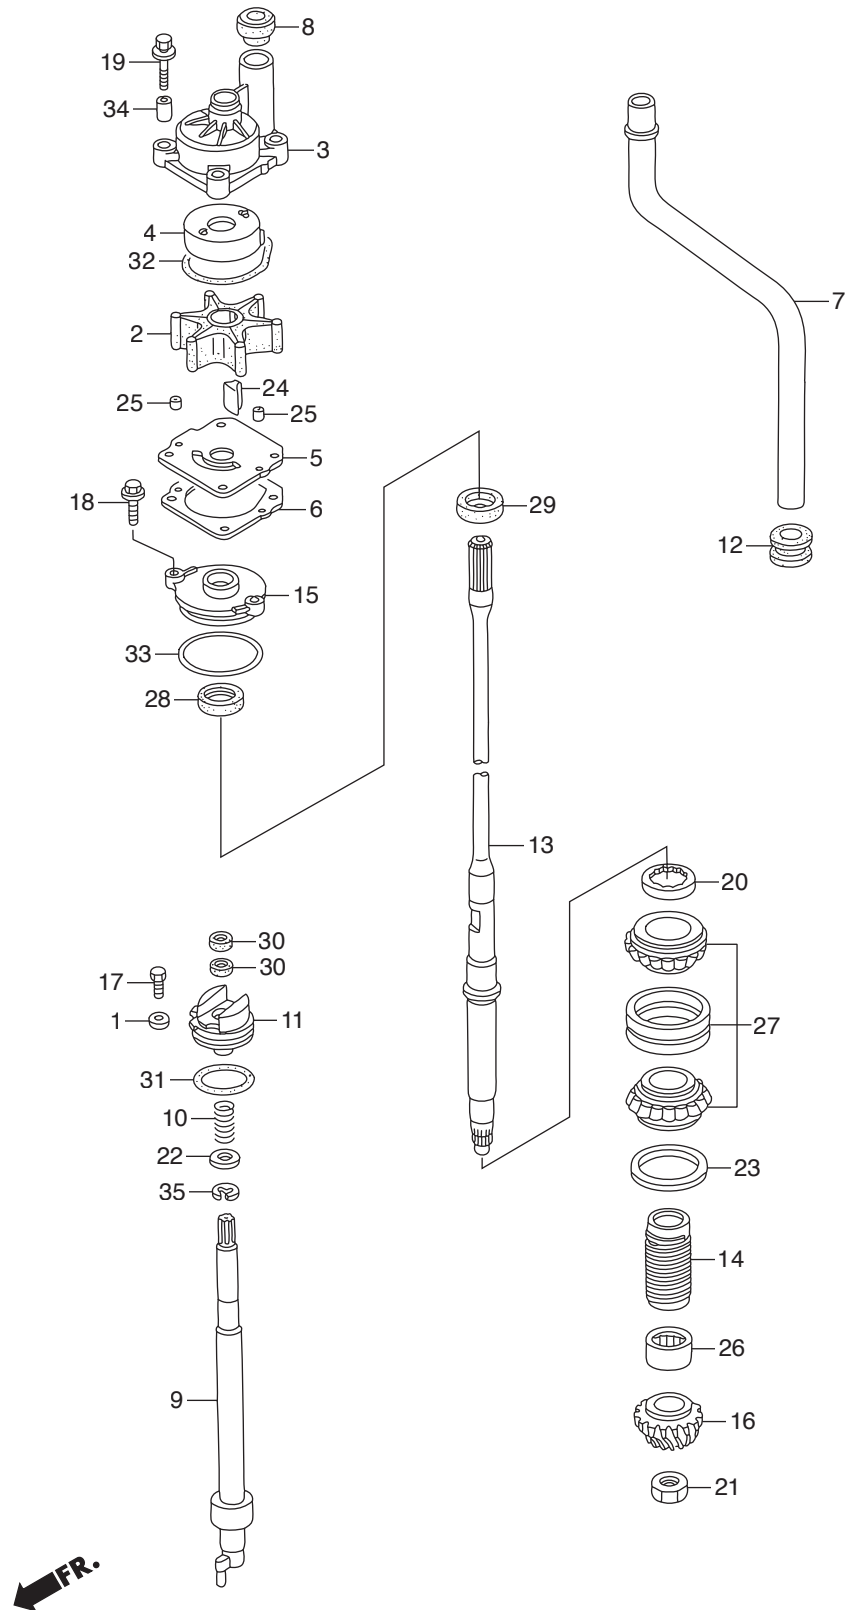





Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-5	1	HZY6-24101-000	SHIFTER, CLUTCH	1	LA,XA
F-5	2	HZW1-24102-B00	PIN, SHIFTER, 8X47	1	LA,XA
F-5	3	HZW1-24103-B00	RING, CROSS PIN	1	LA,XA
F-5	4	HZY6-24122-000	SLIDER, SHIFT	1	LA,XA
F-5	5	HZY6-24123-000	SPRING, SHIFT	2	LA,XA
F-5	6	HZY6-24124-000	PLATE, SHIFT	1	LA,XA
F-5	7	HZY6-41140-000	GEAR COMP., BEVEL(FORWARD 30T)	1	LA,XA
F-5	8	HZY6-41151-000	GEAR, BEVEL(RVS. 30T)	1	LA,XA
F-5	9	HZY6-41161-000	SHAFT, PROPELLER	1	LA,XA
F-5	10	HZY6-41201-000ZC	HOLDER, PROPELLER SHAFT	1	*T107* BAY BLUELA,XA
F-5	11	HZY3-58130-T00	PROPELLER COMP., THREE BLADES	1	(14-1/2X15)(SUS) LA,XA
F-5	11	HZY3-58130-T10	PROPELLER COMP., THREE BLADES	1	(14-1/4X17)(SUS) LA,XA
F-5	11	HZY3-58130-T20	PROPELLER COMP., THREE BLADES	1	(14X19)(SUS) LA,XA
F-5	11	HZY3-58130-T30	PROPELLER COMP., THREE BLADES	1	(14X21)(SUS) LA,XA
F-5	11	HZY3-58130-T40	PROPELLER COMP., THREE BLADES	1	(14-1/2X23)(SUS) LA,XA
F-5	11	HZY3-58130-T50	PROPELLER COMP., THREE BLADES	1	(14X25)(SUS) LA,XA
F-5	11	HZY3-58130-V01ZA	PROPELLER COMP., THREE BLADES	1	*NH283* (15-1/2X13)(AL) STIN GRAY LA,XA
F-5	11	HZY3-58130-V11ZA	PROPELLER COMP., THREE BLADES	1	*NH283* (15-1/4X15)(AL) STIN GRAY LA,XA
F-5	11	HZY3-58130-V21ZA	PROPELLER COMP., THREE BLADES	1	*NH283* (15X17)(AL) STIN GRAY LA,XA
F-5	11	HZY3-58130-V31ZA	PROPELLER COMP., THREE BLADES	1	*NH283* (14-3/4X19)(AL) STIN GRAY LA,XA
F-5	11	HZY3-58130-V41ZA	PROPELLER COMP., THREE BLADES	1	*NH283* (14-1/2X21)(AL) STIN GRAY LA,XA
F-5	11	HZY3-58130-V51ZA	PROPELLER COMP., THREE BLADES	1	*NH283* (14-1/4X23)(AL) STIN GRAY LA,XA
F-5	12	HZY6-90104-000	BOLT, FLANGE, 10X40	2	LA,XA
F-5	13	HZW1-90301-B00	NUT, CASTLE, 18MM	1	LA,XA
F-5	14	HZY3-90506-000	WASHER, PROPELLER THRUST	1	LA,XA
F-5	15	HZW5-90509-711	WASHER, THRUST BEARING	1	LA,XA
F-5	16	HZY3-90512-000	WASHER, PROPELLER	1	LA,XA
F-5	17	HZY3-90528-000	SHIM A, BEVEL(0.10)	1	LA,XA
F-5	17	HZY3-90529-000	SHIM B, BEVEL(0.15)	1	LA,XA

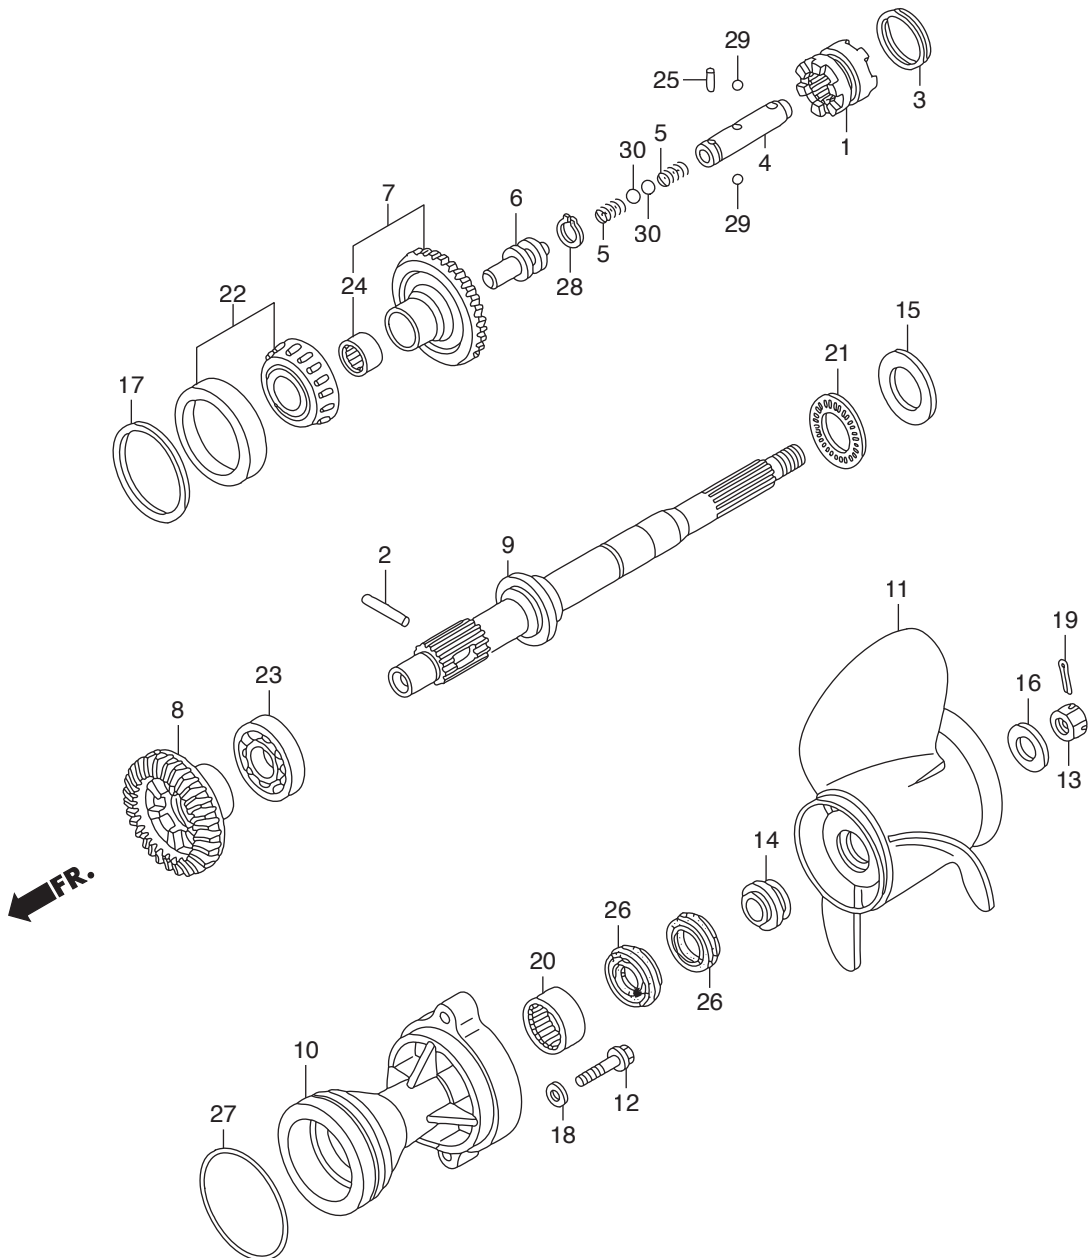


[illegible]

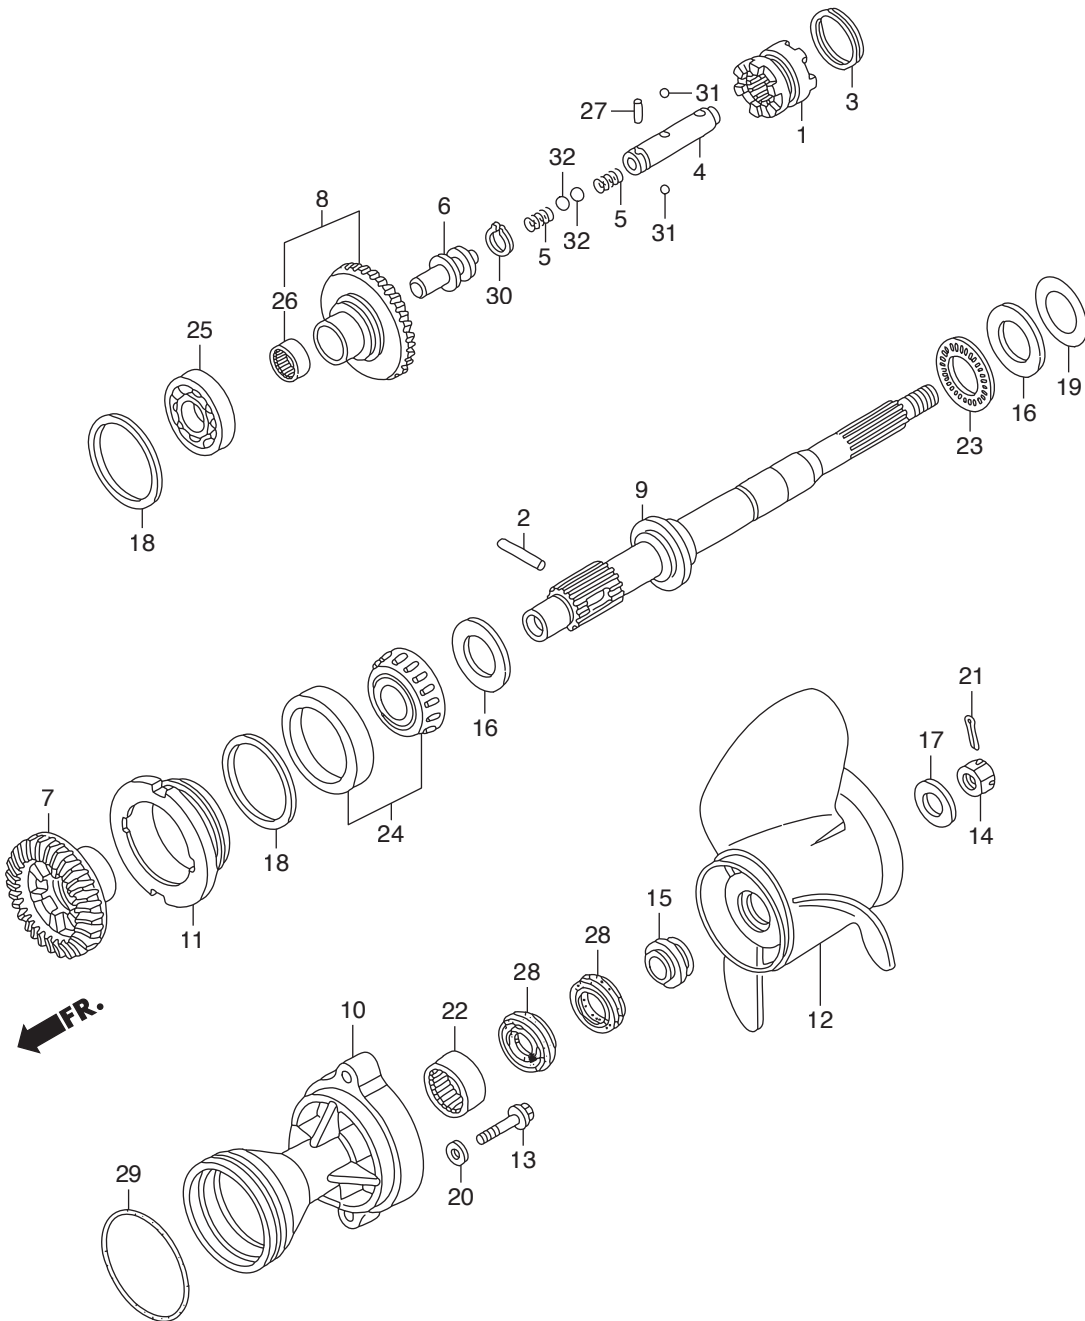



Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-5-1	1	HZY6-24101-000	SHIFTER, CLUTCH	1	XCA
F-5-1	2	HZW1-24102-B00	PIN, SHIFTER, 8X47	1	XCA
F-5-1	3	HZW1-24103-B00	RING, CROSS PIN	1	XCA
F-5-1	4	HZY6-24122-000	SLIDER, SHIFT	1	XCA
F-5-1	5	HZY6-24123-000	SPRING, SHIFT	2	XCA
F-5-1	6	HZY6-24124-000	PLATE, SHIFT	1	XCA
F-5-1	7	HZY6-41141-710	GEAR, BEVEL(FORWARD 30T)	1	(COUNTER ROTATION) XCA
F-5-1	8	HZY6-41150-710	GEAR COMP., BEVEL(RVS. 30T)	1	(COUNTER ROTATION) XCA
F-5-1	9	HZY6-41161-710	SHAFT, PROPELLER	1	(COUNTER ROTATION) XCA
F-5-1	10	HZY6-41201-710ZC	HOLDER, PROPELLER SHAFT	1	*T107* BAY BLUE XCA
F-5-1	11	HZY6-41202-710	HOLDER, BEARING	1	(COUNTER ROTATION) XCA
F-5-1	12	HZY3-58180-T00	PROPELLER COMP., THREE BLADES	1	(14-1/2X15)(C/R) XCA
F-5-1	12	HZY3-58180-T10	PROPELLER COMP., THREE BLADES	1	(14-1/4X17)(C/R) XCA
F-5-1	12	HZY3-58180-T20	PROPELLER COMP., THREE BLADES	1	(14X19)(C/R) XCA
F-5-1	12	HZY3-58180-T30	PROPELLER COMP., THREE BLADES	1	(14X21)(C/R) XCA
F-5-1	12	HZY3-58180-T40	PROPELLER COMP., THREE BLADES	1	(14-1/2X23)(C/R) XCA
F-5-1	13	HZY6-90104-000	BOLT, FLANGE, 10X40	2	XCA
F-5-1	14	HZW1-90301-B00	NUT, CASTLE, 18MM	1	XCA
F-5-1	15	HZY3-90506-000	WASHER, PROPELLER THRUST	1	XCA
F-5-1	16	HZW5-90509-711	WASHER, THRUST BEARING	2	XCA
F-5-1	17	HZY3-90512-000	WASHER, PROPELLER	1	XCA
F-5-1	18	HZY3-90528-000	SHIM A, BEVEL(0.10)	1	XCA
F-5-1	18	HZY3-90529-000	SHIM B, BEVEL(0.15)	1	XCA
F-5-1	18	HZY3-90530-000	SHIM C, BEVEL(0.30)	1	XCA
F-5-1	18	HZY3-90531-000	SHIM D, BEVEL(0.50)	1	XCA
F-5-1	19	HZW5-90548-710	SHIM A, THRUST(0.10)	1	XCA
F-5-1	19	HZW5-90549-710	SHIM B, THRUST(0.15)	1	XCA
F-5-1	19	HZW5-90550-710	SHIM C, THRUST(0.30)	1	XCA
F-5-1	19	HZW5-90551-710	SHIM D, THRUST(0.50)	1	XCA

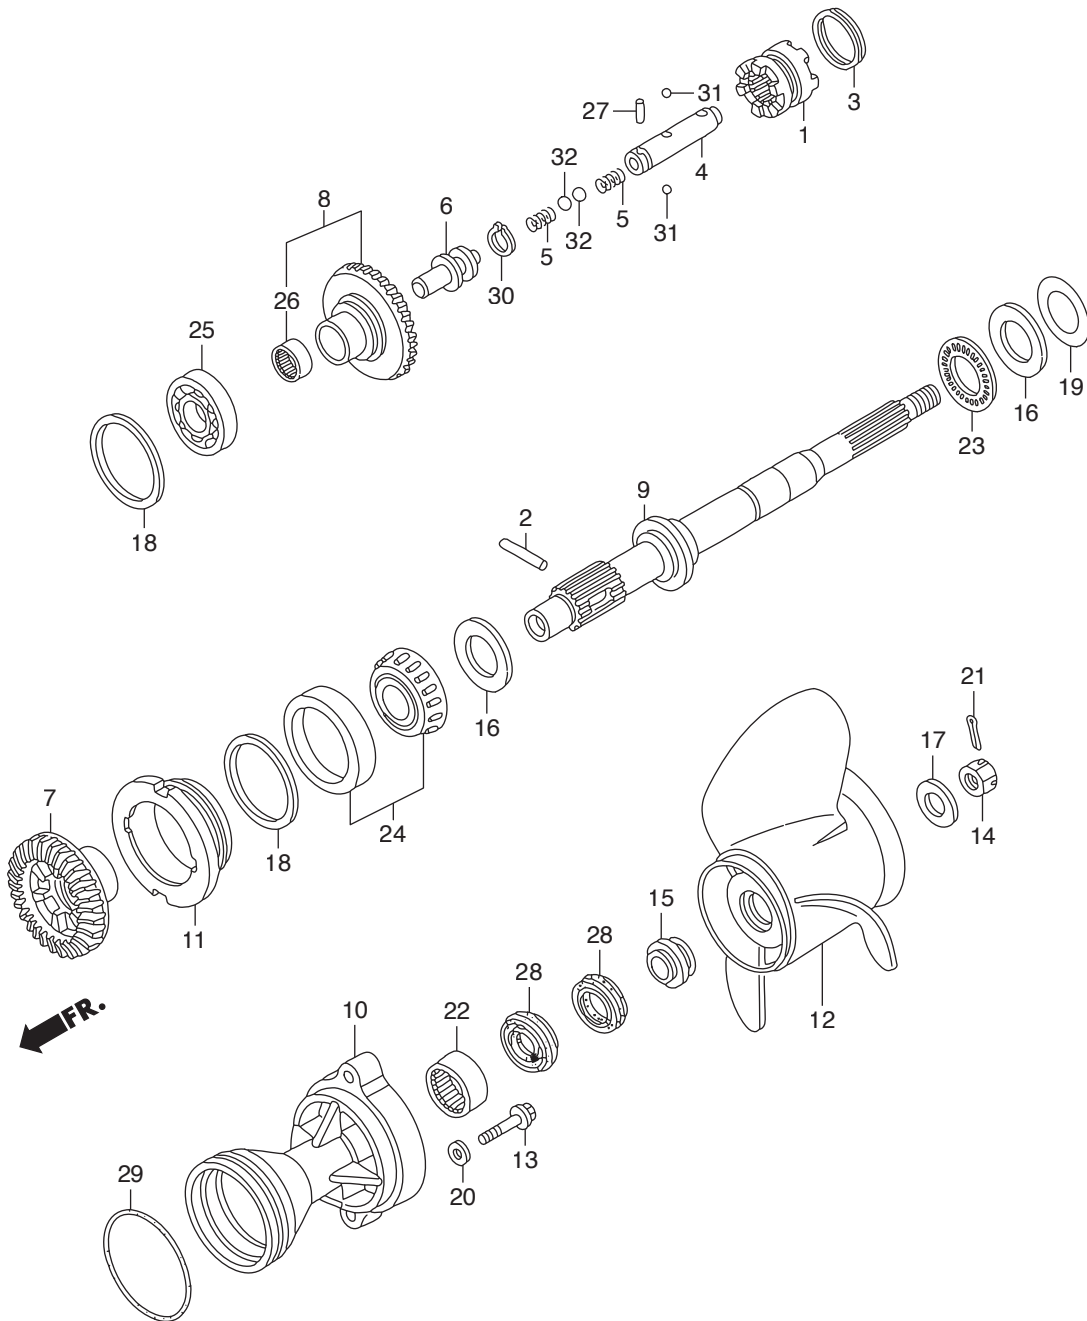


[illegible]

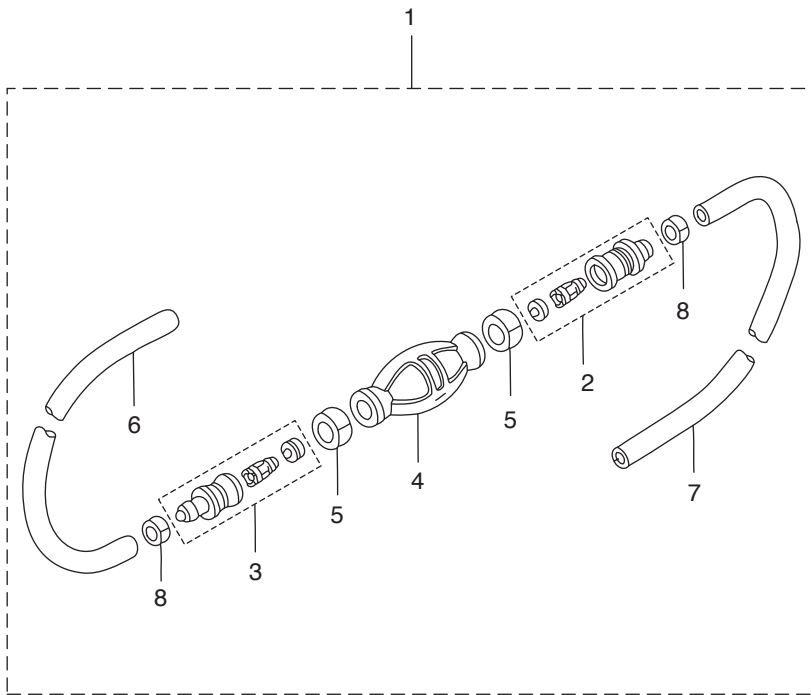


[illegible]

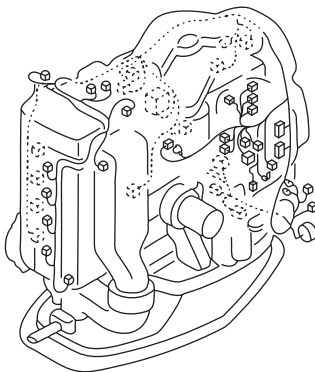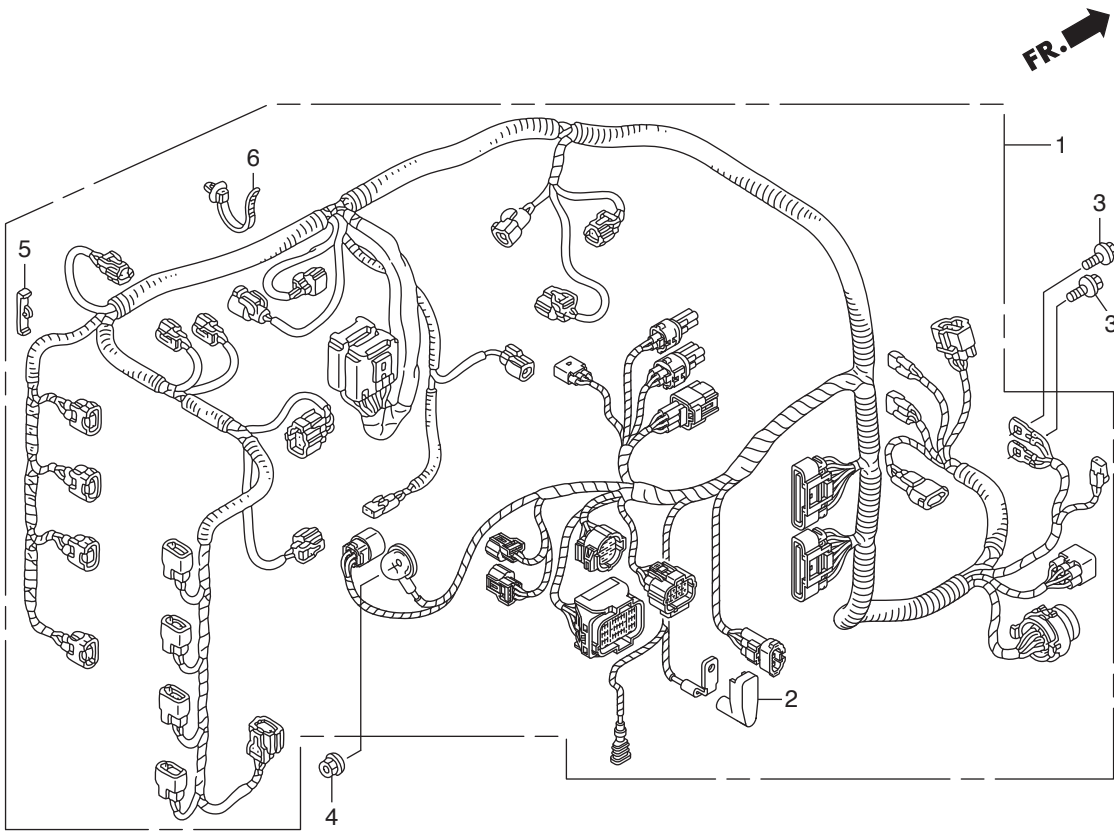


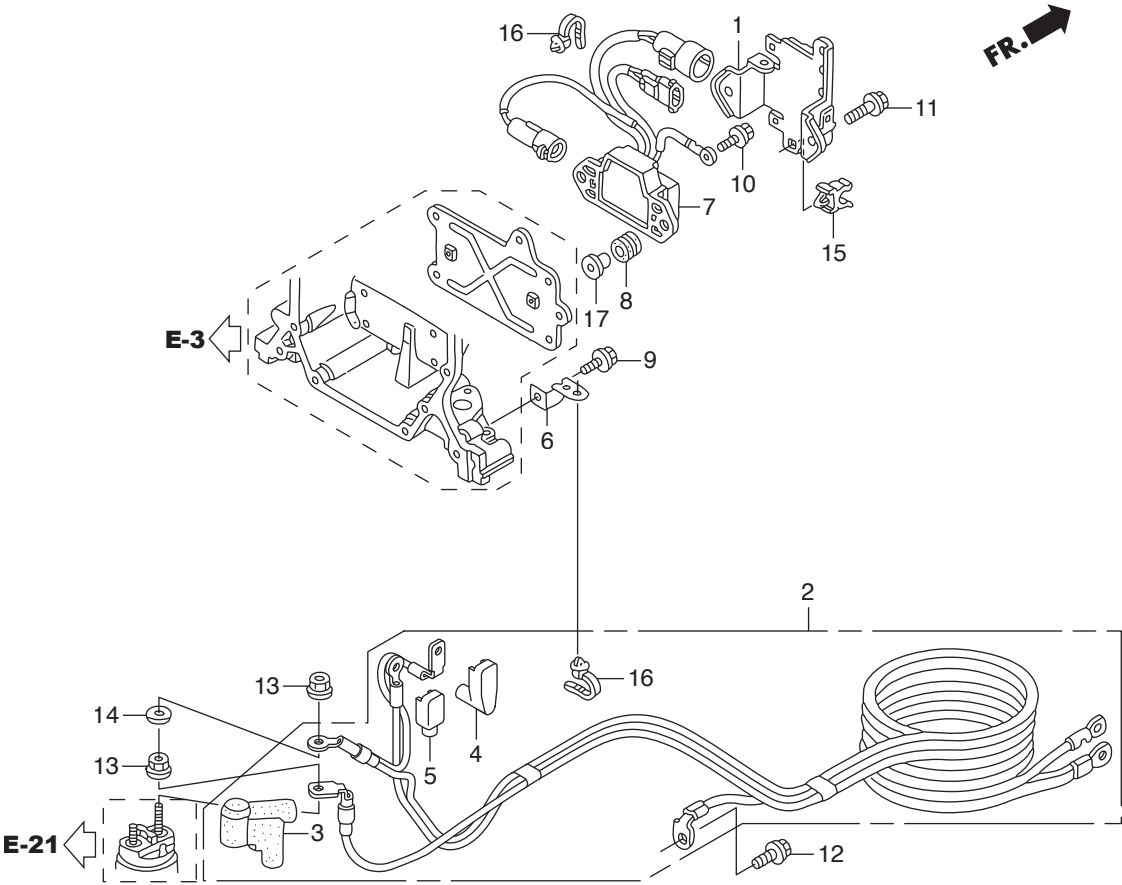


[illegible]

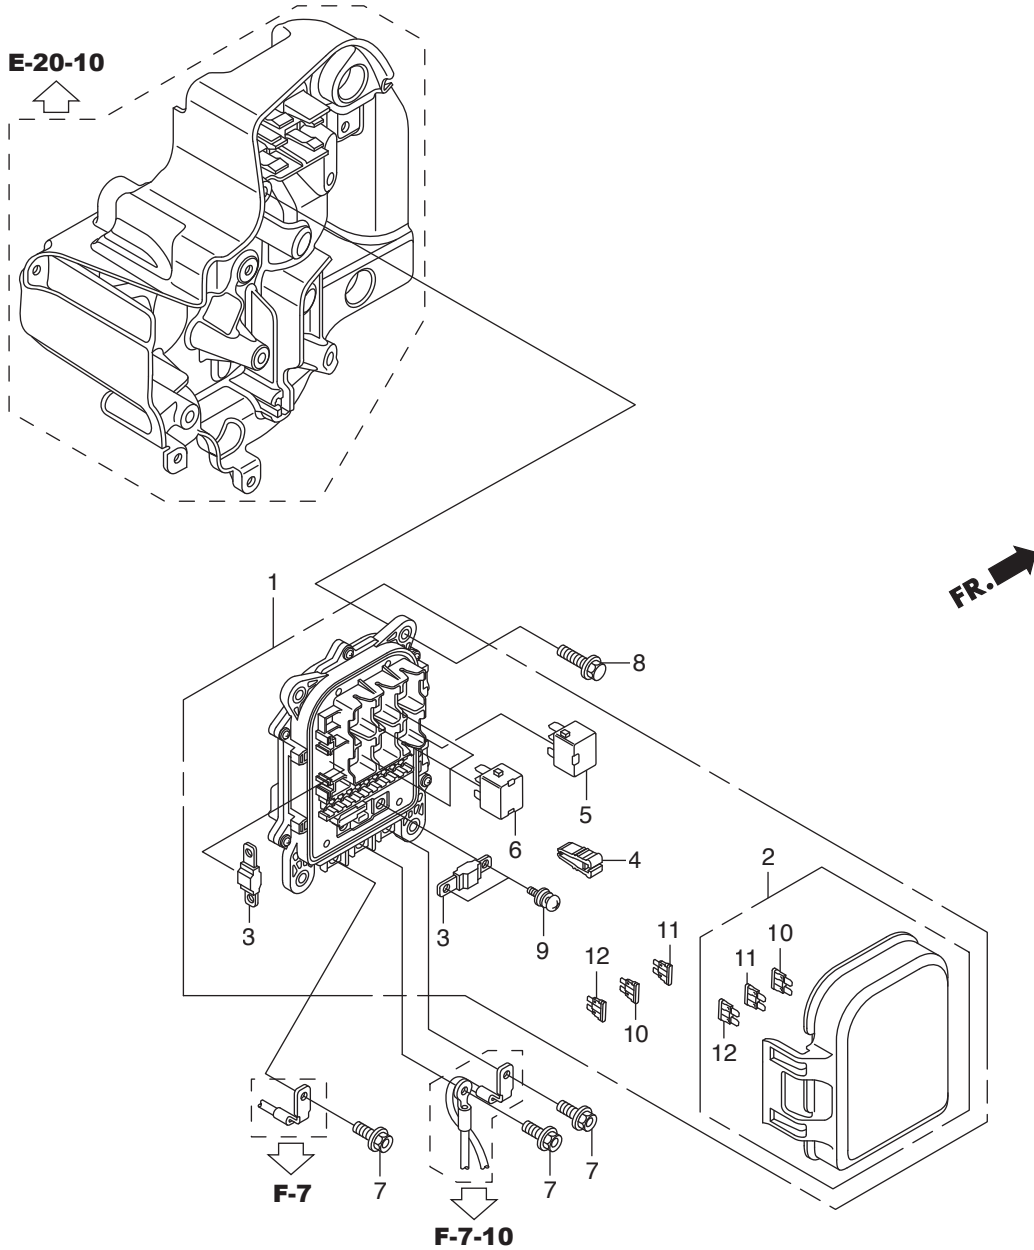


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-7-20	1	HZY6-32370-004	BOX ASSY., JUNCTION	1	
F-7-20					
F-7-20					
F-7-20					
F-7-20	2	HZY6-32371-004	COVER COMP., FUSE	1	
F-7-20					
F-7-20					
F-7-20					
F-7-20	3	HZY6-38228-003	FUSE, BLOCK 100A(L TYPE)	2	
F-7-20	4	HZY6-38235-004	PULLER, MINI FUSE	1	
F-7-20					
F-7-20					
F-7-20					
F-7-20	5	HSDA-39794-004	RELAY ASSY., FUEL PUMP(DENSO)	1	
F-7-20	6	HZY6-39794-003	RELAY ASSY., POWER(12V-20A)	3	(MICRO ISO 4P)
F-7-20	7	HZW9-90013-000	BOLT, FLANGE, 6X12	3	
F-7-20	8	HZW5-90018-000	BOLT, FLANGE, 6X20	4	
F-7-20	9	HZY6-90135-004	SCREW-WASHER, 5X15	2	
F-7-20					
F-7-20					
F-7-20					
F-7-20	10	HCO-98200-41000	FUSE, MINI(10A)	4	
F-7-20	11	HCO-98200-41500	FUSE, MINI(15A)	3	
F-7-20	12	HCO-98200-43000	FUSE, MINI(30A)	3	

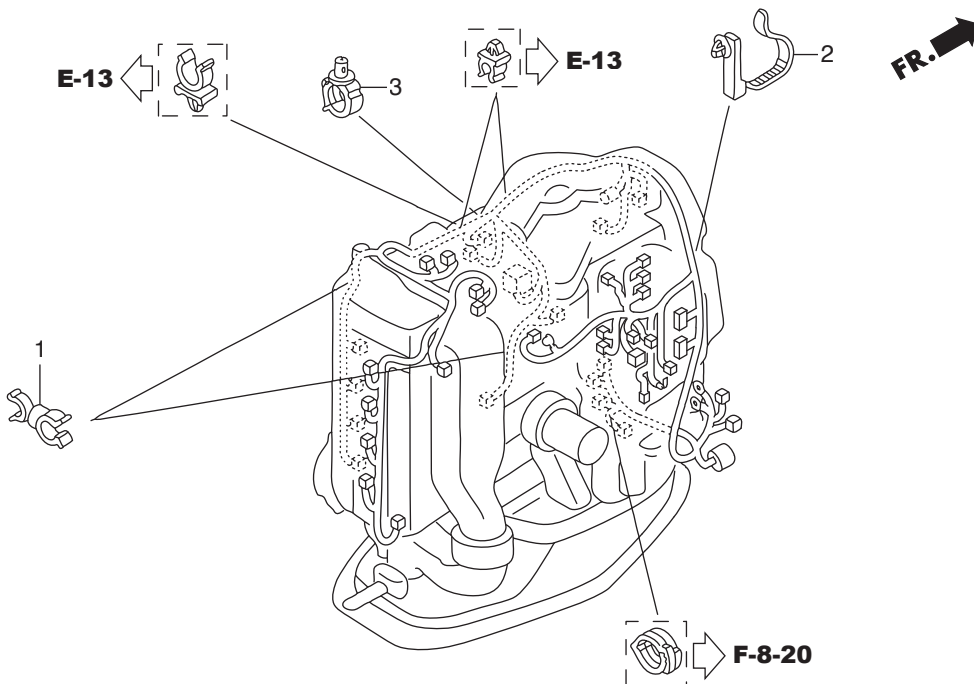


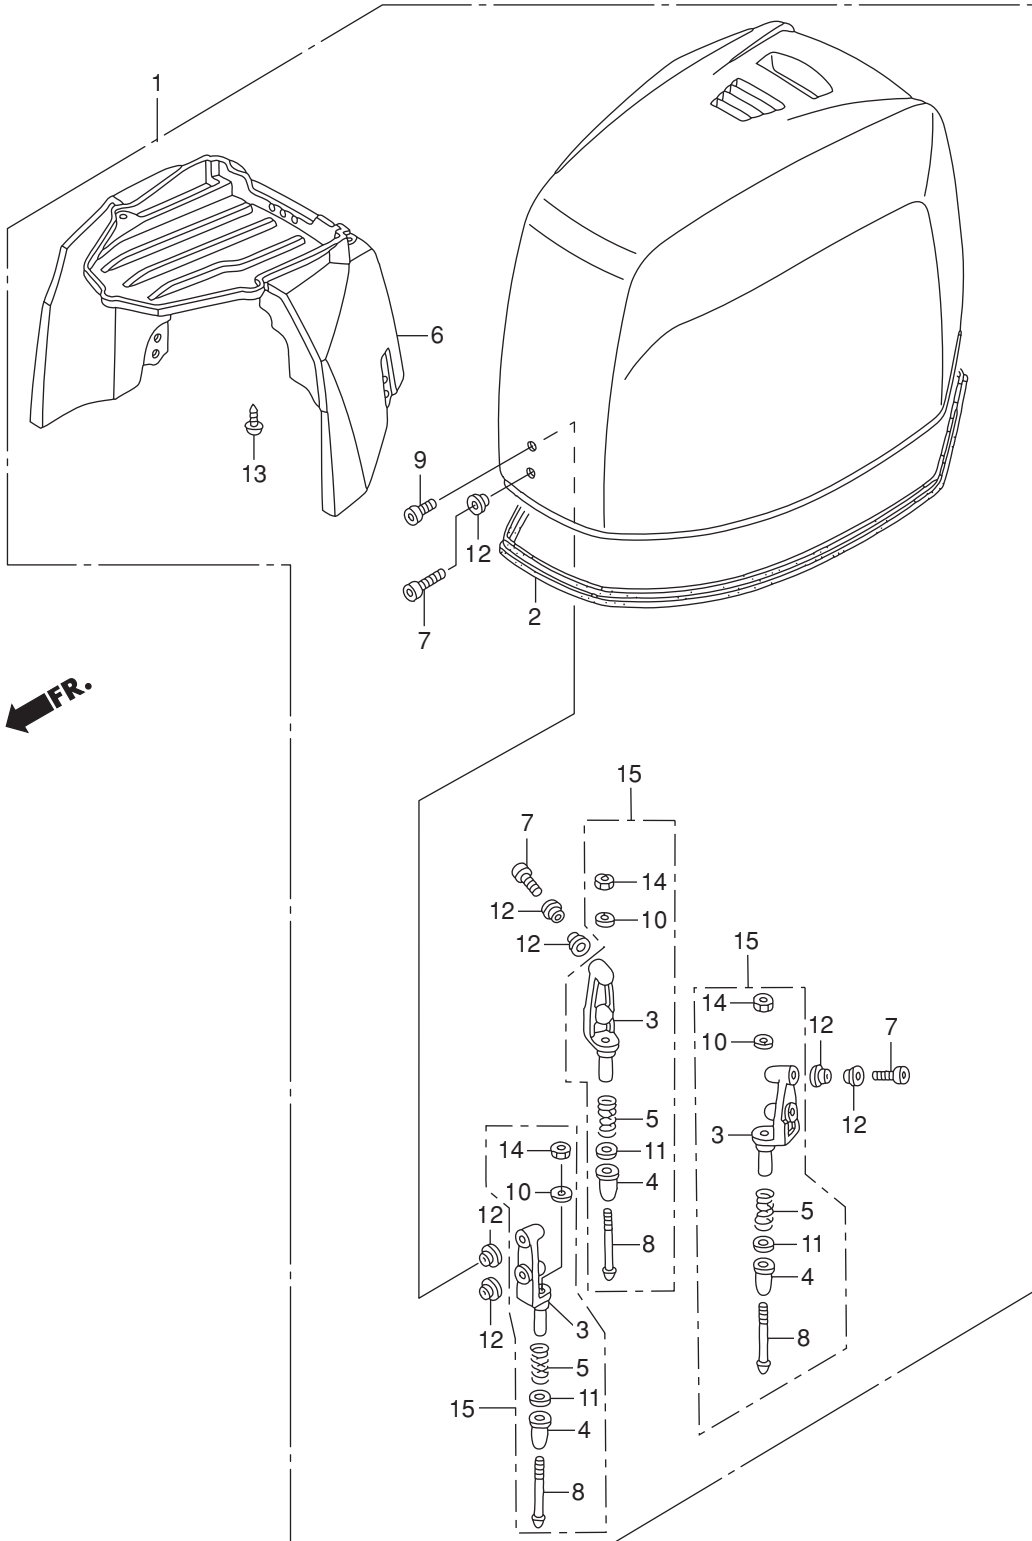


[illegible]

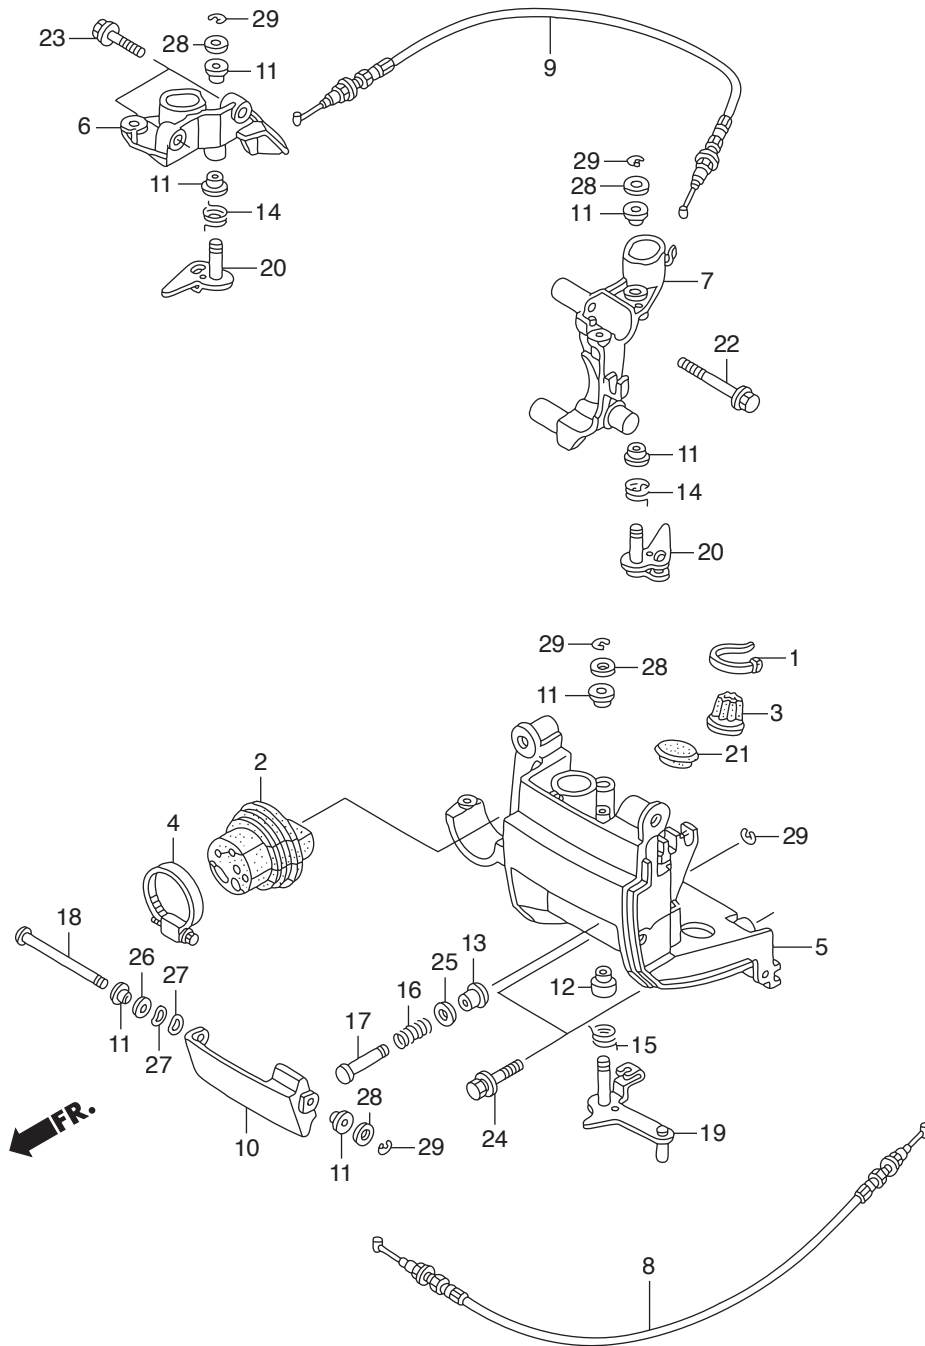


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-8-10	1	HMG9-35701-950	BAND(BLACK 3.5X140)	1	
F-8-10	2	HZY6-40105-020	GROMMET, REMOTE CONTROL CABLE	1	
F-8-10	3	HZW1-40107-700	GROMMET, UNDER CASE(C)	1	
F-8-10	4	HZY3-40119-003	BAND, UNDER CASE GROMMET	1	
F-8-10	5	HZY6-40154-000ZC	BRACKET, FR. UNDER COVER	1	*T107* BAY BLUE
F-8-10	6	HZY6-40155-000	BRACKET, R. SIDE COVER	1	
F-8-10	7	HZY6-40157-000	BRACKET, L. SIDE COVER	1	
F-8-10	8	HZY6-60180-003	CABLE COMP. A, COVER LOCK	1	
F-8-10	9	HZY6-60185-003	CABLE COMP. B, COVER LOCK	1	
F-8-10	10	HZY3-63201-000ZC	LEVER, COVER LOCK	1	*T107* BAY BLUE
F-8-10	11	HZY3-63205-000	BUSH A, COVER LOCK	7	
F-8-10	12	HZY6-63205-000	BUSH A, COVER LOCK	1	
F-8-10	13	HZY3-63208-000	BUSH B, COVER LOCK	1	
F-8-10	14	HZY3-63212-000	SPRING, COVER LOCK HOOK	2	
F-8-10	15	HZY6-63212-000	SPRING, COVER LOCK HOOK	1	
F-8-10	16	HZY6-63223-000	SPRING, LOCK LEVER RETURN	1	
F-8-10	17	HZY3-63224-000	SHAFT, COVER OPEN	1	
F-8-10	18	HZY6-63225-000	SHAFT, FR. LOCK	1	
F-8-10	19	HZY6-63240-000	LOCK COMP., FR.	1	XCA ~#6000128 LA,XA
F-8-10	19	HZY6-63240-010	LOCK COMP., FR.	1	#6000129~ LA,XA
F-8-10	20	HZY3-63260-000	LOCK COMP., SIDE	2	XCA ~#6000128 LA,XA
F-8-10	20	HZY3-63260-C00	LOCK COMP., SIDE	2	#6000129~ LA,XA
F-8-10	21	HZC0-63515-700	CAP, L. SIDE COVER	1	
F-8-10	22	HZY6-90001-000	BOLT, FLANGE, 8X55	2	
F-8-10	23	HZY3-90030-000	BOLT, FLANGE, 6X22	2	
F-8-10	24	HZY6-90105-000	BOLT-WASHER, 8X30	2	
F-8-10	25	HMM8-90501-610	WASHER, PLAIN, 8MM	1	
F-8-10	26	HMM8-90502-610	WASHER, PLAIN, 10MM	1	
F-8-10	27	HZW9-90506-000	WASHER, WAVE, 10MM	2	

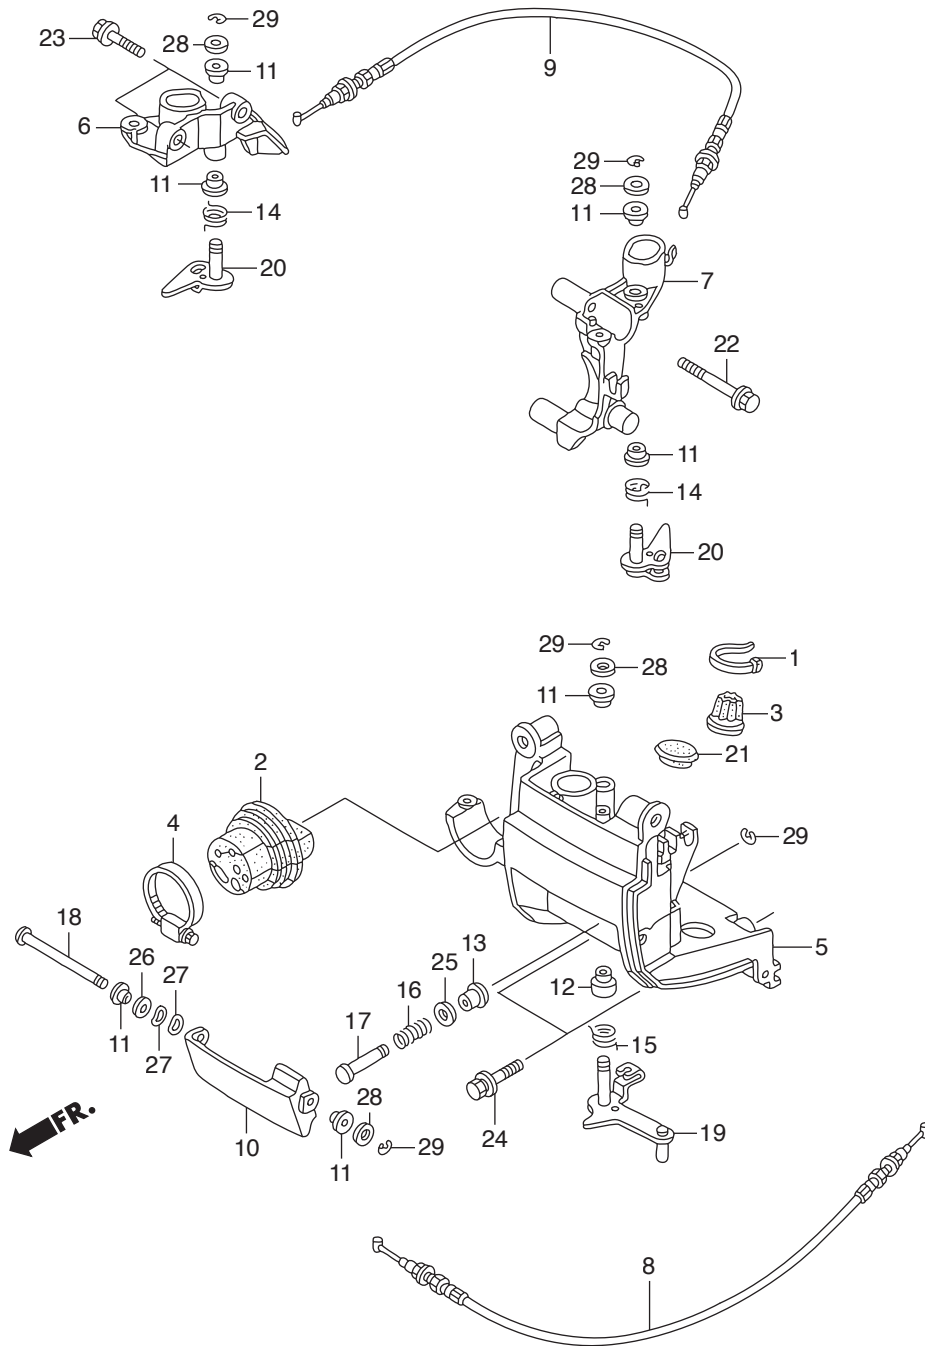


[illegible]

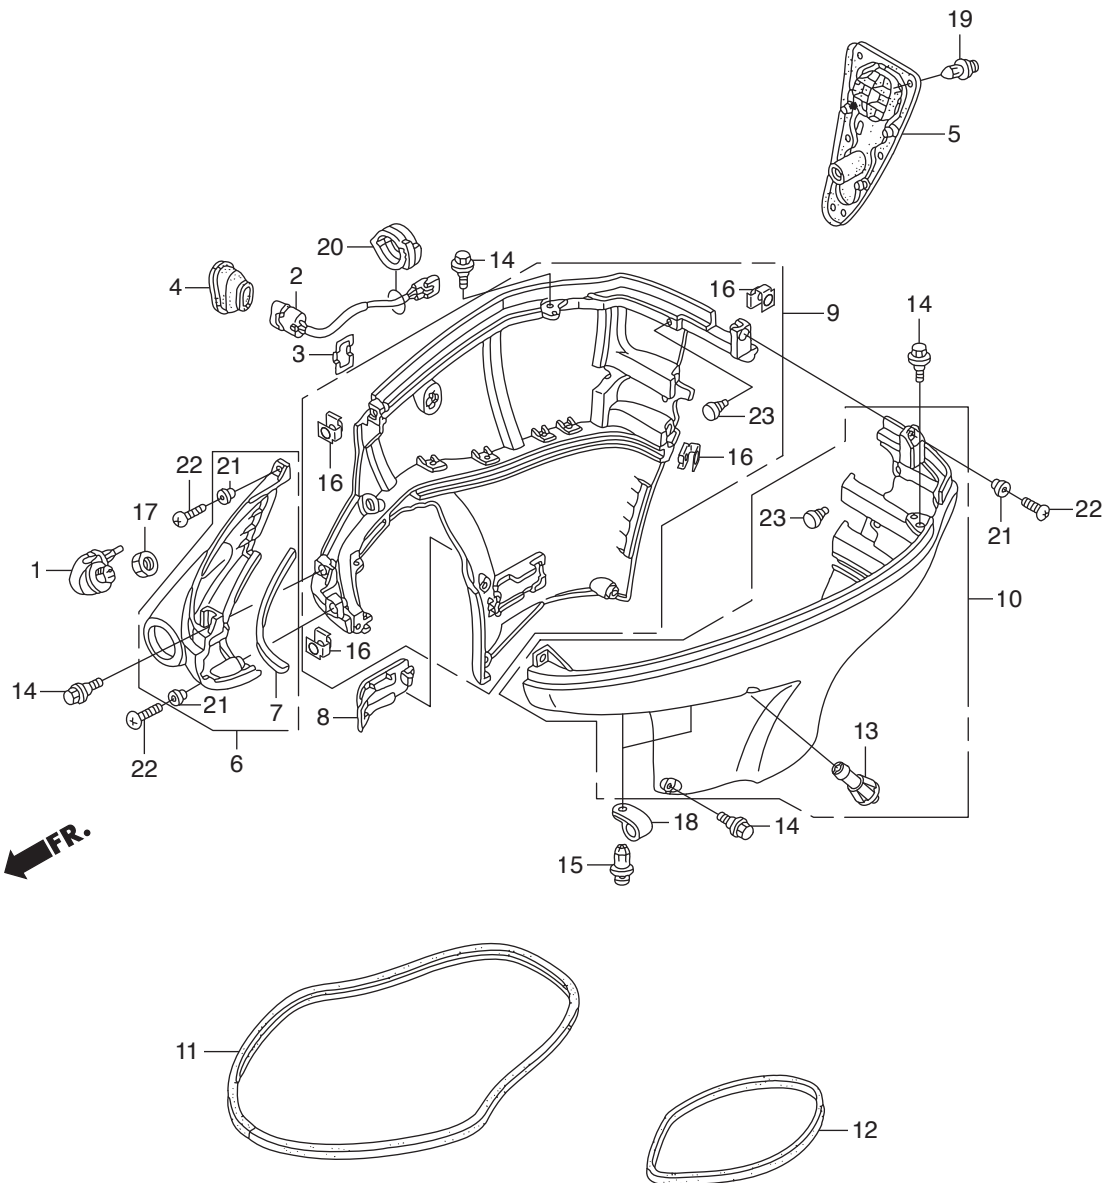


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-8-20	1	HZY6-19289-000	CAP, WATER JOINT	1	
F-8-20	2	HZY6-35640-003	SWITCH ASSY., POWER TILT	1	
F-8-20	3	HZY3-35645-000	STAY, POWER TILT SWITCH	1	
F-8-20	4	HZY6-40114-010	GROMMET, POWER TILT SWITCH	1	
F-8-20	5	HZY6-40116-000	GROMMET, UNDER COVER	1	
F-8-20	6	HZY6-40151-010ZD	COVER, FR. SEPARATE	1	*T107* BAY BLUE
F-8-20	7	HZY6-40152-300	SEAL, FR. SEPARATE COVER	1	
F-8-20	8	HZY6-40212-020ZC	COVER, DRAIN PLUG	1	*T107* BAY BLUE
F-8-20	9	HZY6-63711-010ZC	COVER, R. ENGINE UNDER	1	*T107* BAY BLUE
F-8-20	10	HZY6-63716-010ZC	COVER, L. ENGINE UNDER	1	*T107* BAY BLUE
F-8-20	11	HZY6-63718-000	SEAL A, COVER UNDER	1	
F-8-20	12	HZY6-63719-000	SEAL B, COVER UNDER	1	
F-8-20	13	HZY6-82873-000	GROMMET, WATER CHECK	1	
F-8-20	14	HZY3-90111-000	BOLT, SPECIAL, 6X17	12	
F-8-20	15	HZV5-90127-003	SCREW, RIVET, 5X10	2	
F-8-20	16	HZY6-90301-000	NUT, CLIP	6	
F-8-20	17	H921-90302-000	NUT, HEX., 16MM	1	
F-8-20	18	HZB5-90626-730	CLIP(10.7MM)	2	
F-8-20	19	HHC4-90653-900	CLIP, MUDGUARD	6	
F-8-20	20	HKJ2-90683-003	CLIP, WIRE HARNESS	1	
F-8-20	21	HZY6-91553-000	COLLAR, DISTANCE, 6.5X9X5	6	
F-8-20	22	HCO-93500-06025-4J	SCREW, PAN, 6X25	6	
F-8-20	23	HCO-95011-62000	RUBBER B, STAND STOPPER	2	

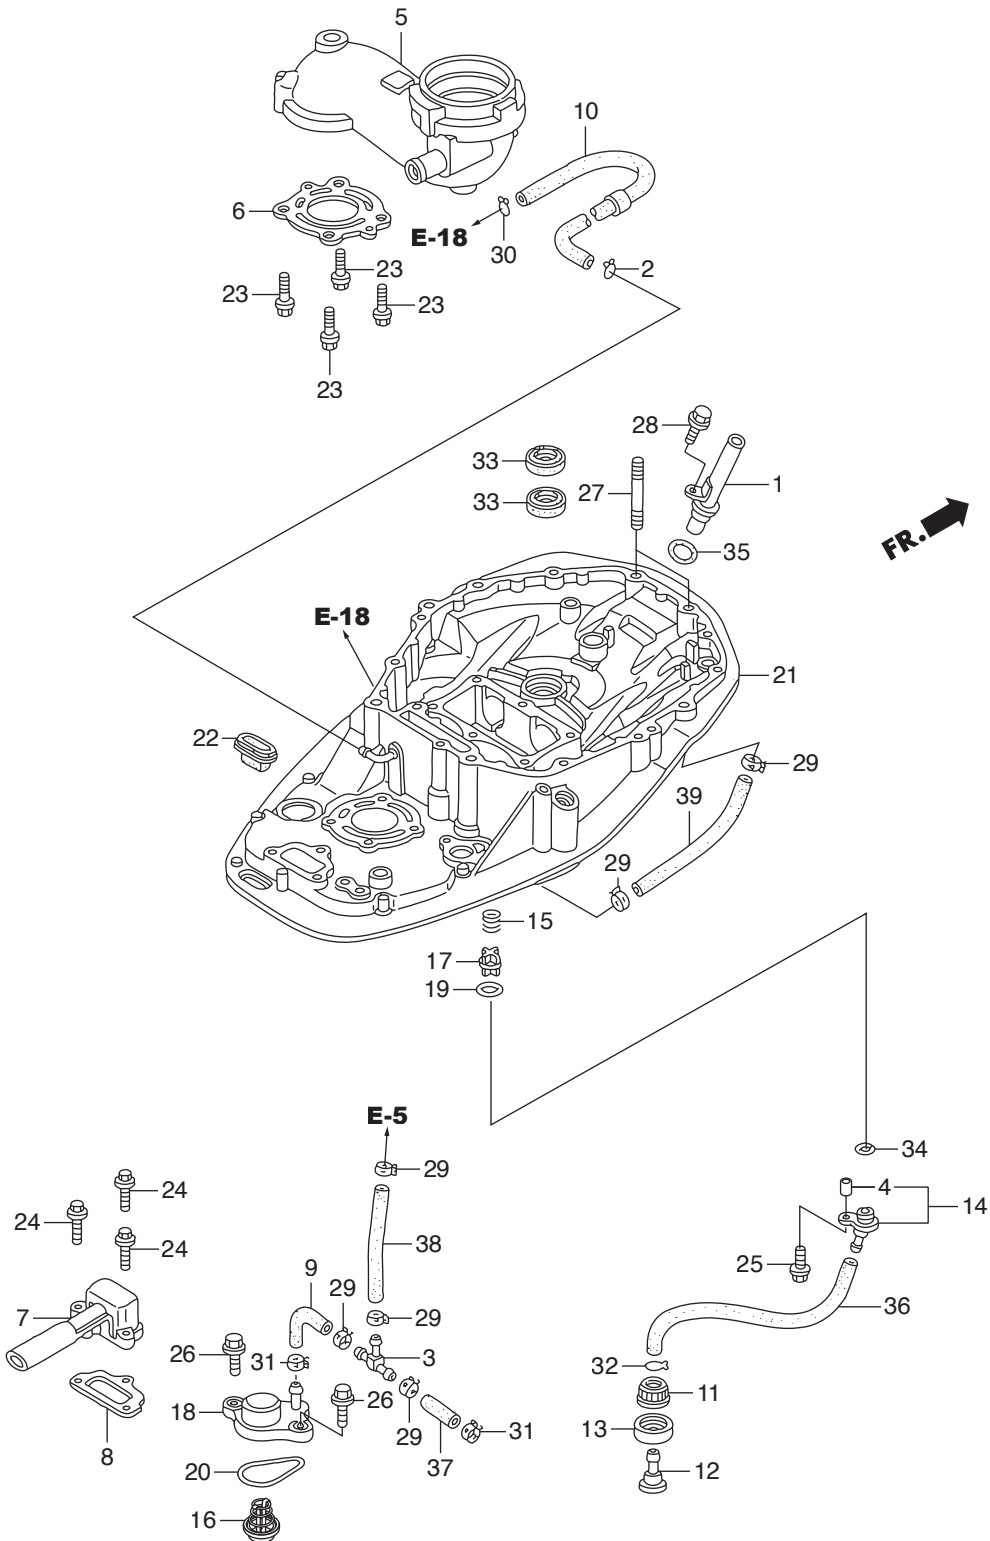


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-9	1	HZW1-15665-020	PIPE COMP., OIL LEVEL	1	
F-9	2	HGHB-16163-610	CLIP, TUBE	1	
F-9	3	HMN5-17195-000	T-JOINT	1	
F-9	4	HZV5-17202-310	COLLAR, DISTANCE, 6.5X11X7.5	1	
F-9	5	HZY6-18130-000ZA	GUIDE COMP., EX.	1	*NH8* DARK GRAY
F-9	6	HZY6-18135-003	GASKET, EX. GUIDE	1	
F-9	7	HZY6-18211-000	PORT, IDLE EXHAUST	1	
F-9	8	HZY6-18212-000	GASKET, IDLE EX. PORT	1	
F-9	9	HZY6-19256-000	TUBE, WATER RELIEF	1	
F-9	10	HZY6-19267-010	TUBE F, WATER	1	
F-9	11	HZY3-19270-000	NUT, WATER MOUTH	1	
F-9	12	HZY3-19271-000	JOINT, WATER HOSE	1	
F-9	13	HZY3-19272-000	SEAT, WATER MOUTH	1	
F-9	14	HZZ3-19277-000	COVER, FLUSH VALVE	1	
F-9	15	HZW9-19279-000	SPRING, FLUSH VALVE	1	
F-9	16	HZY6-19290-003	VALVE ASSY., RELIEF	1	
F-9	17	HZW9-19291-000	VALVE, FLASH	1	
F-9	18	HZY6-19295-000	COVER, RELIEF VALVE	1	
F-9	19	HZW9-19297-000	PACKING, FLASH VALVE	1	
F-9	20	HZW9-19317-000	O-RING, THERMOSTAT COVER	1	
F-9	21	HZY6-23170-000ZA	CASE COMP., MOUNT	1	*NH8* DARK GRAY
F-9	22	HZY3-23173-010	RUBBER, MOUNT CASE SEAL	1	
F-9	23	HZY6-90014-000	BOLT, FLANGE, 8X30	4	
F-9	24	HZW9-90016-000	BOLT, FLANGE, 6X25	3	
F-9	25	HZY3-90017-000	BOLT, FLANGE, 6X16	1	
F-9	26	HZY3-90030-000	BOLT, FLANGE, 6X22	2	
F-9	27	HZY6-90045-000	BOLT, STUD, 10X55	2	
F-9	28	HZY3-90056-000	BOLT, FLANGE, 6X12	1	
F-9	29	HZY3-90601-030	CLAMP, TUBE(D10.5)	6	

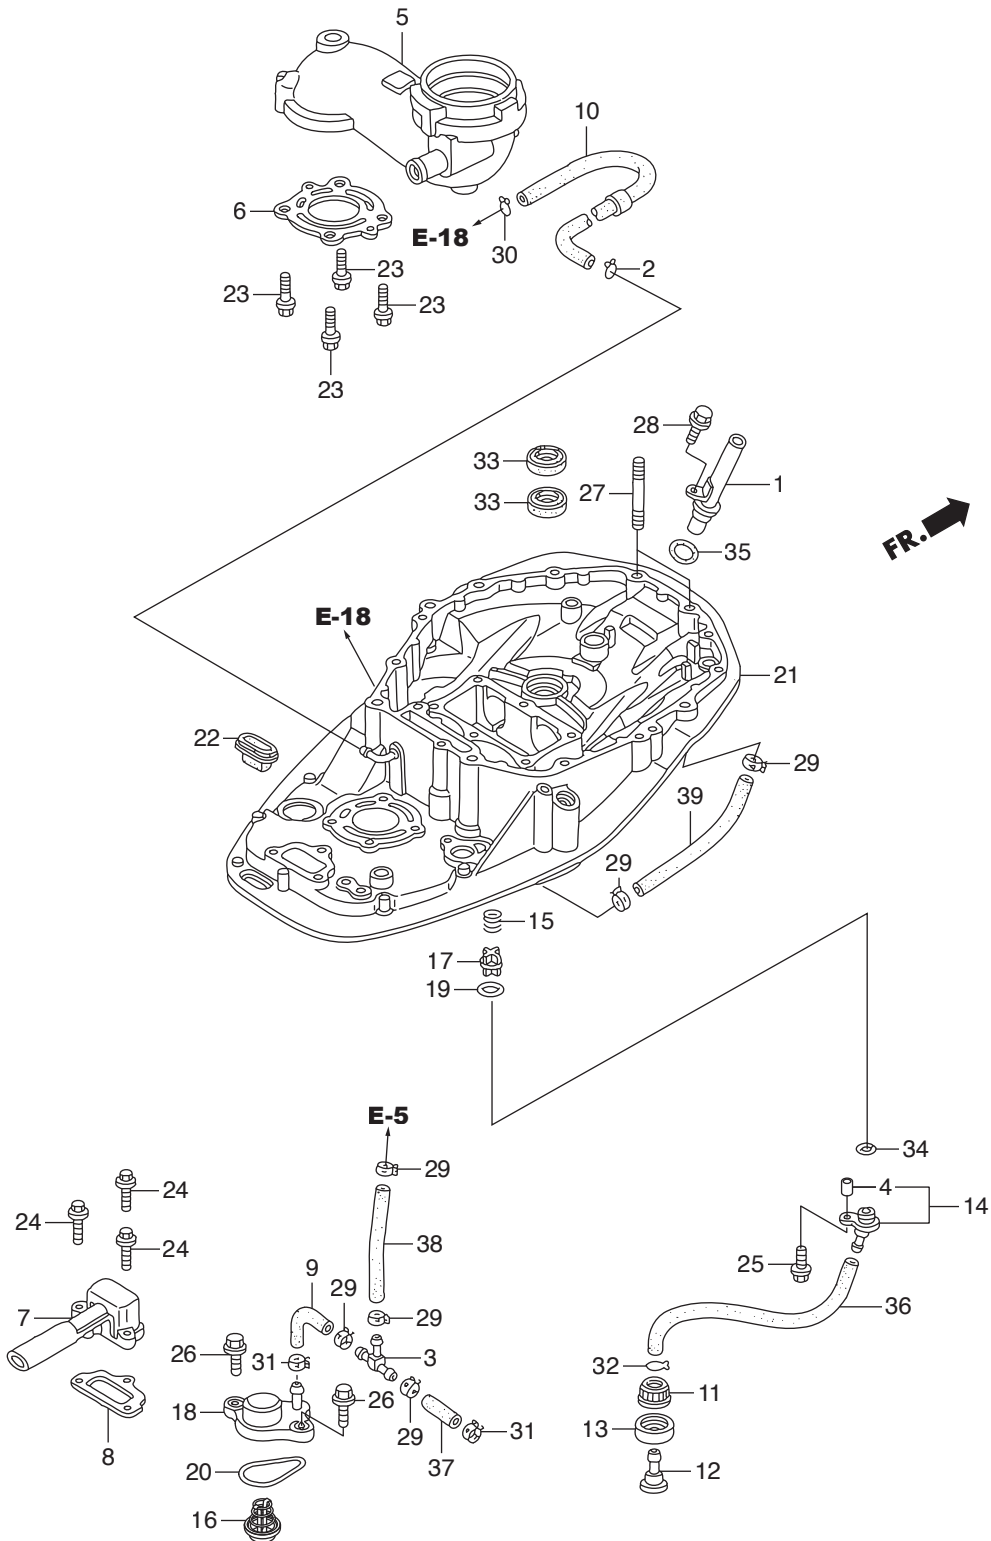


[illegible]

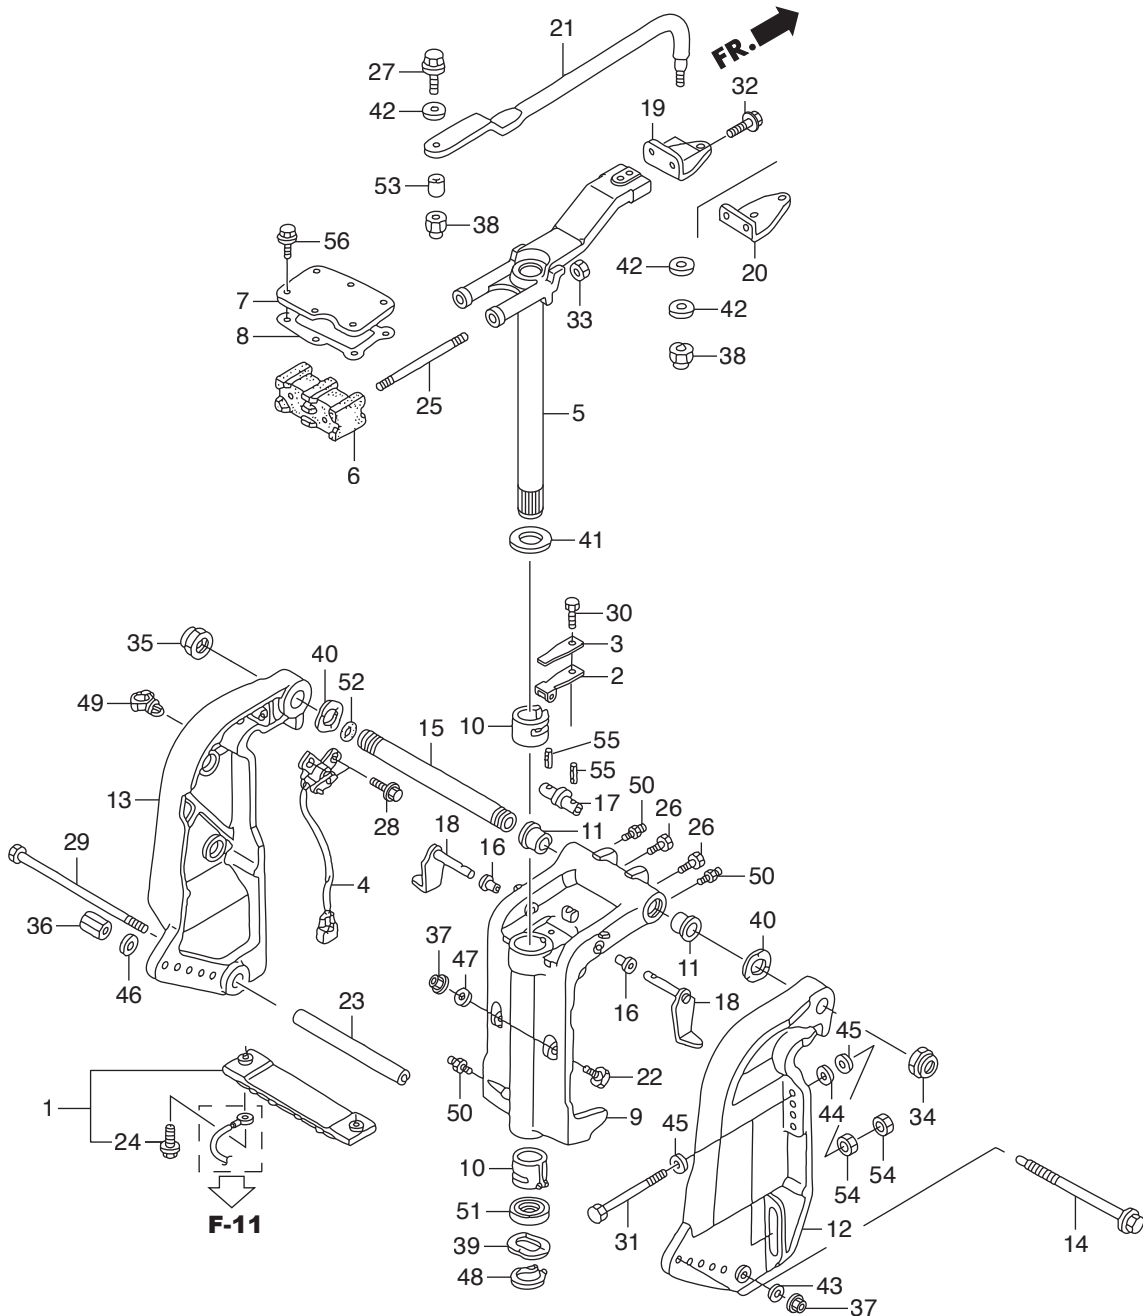


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-10	1	HZW1-06411-020	METAL KIT, ANODE	1	
F-10	2	HZV1-24210-010	SPRING COMP., CLICK	1	
F-10	3	HZV4-24221-010	SPRING, CLICK ASSIST	1	
F-10	4	HZY6-35660-013	SENSOR ASSY., TRIM ANGLE	1	
F-10	5	HZX1-50100-000	FRAME COMP., MOUNTING	1	
F-10	6	HZW5-50151-000	MOUNT COMP., UPPER RUBBER	1	
F-10	7	HZY6-50167-000	HOLDER, UPPER MOUNTING	1	
F-10	8	HZY6-50168-003	GASKET, UPPER MOUNTING HOLDER	1	
F-10	9	HZW1-50201-040ZC	CASE, SWIVEL	1	*T107* BAY BLUE
F-10	10	HZZ5-50211-000	LINER, SWIVEL CASE	2	
F-10	11	HZW1-50214-000	BUSH, SWIVEL CASE	2	
F-10	12	HZW1-50301-070ZC	BRACKET, R. STERN	1	*T107* BAY BLUE
F-10	13	HZW1-50311-070ZC	BRACKET, L. STERN	1	*T107* BAY BLUE
F-10	14	HZW5-50341-010	ROD, ADJUSTING	1	
F-10	15	HZY9-50381-000	SHAFT, TILTING	1	
F-10	16	HZV5-50522-000	BUSH, TILT ARM	2	
F-10	17	HZW1-50527-000	BRACKET, TILTING	1	
F-10	18	HZW1-50529-000	STOPPER, TILT	2	
F-10	19	HZW1-53234-010	PLATE, STEERING	1	
F-10	20	HZW5-53234-010	PLATE, STEERING	1	
F-10	21	HZW1-53238-010	ROD, STEERING	1	
F-10	22	HZW1-56516-000	RECEIVER, THRUST	2	
F-10	23	HZW1-56539-000	COLLAR, LOWER CYLINDER	1	
F-10	24	HZW9-90009-000	BOLT, FLANGE, 6X23	2	
F-10	25	HZW5-90101-000	BOLT, STUD, 12X150	2	
F-10	26	HZW1-90102-000	BOLT, 1/4-28UNF	2	
F-10	27	HZW1-90105-000	BOLT, 3/8-24UNF	1	
F-10	28	HZW9-90105-000	BOLT, FLANGE, 6X20	2	
F-10	29	HZW1-90108-000	BOLT, HEX., 10X235	1	

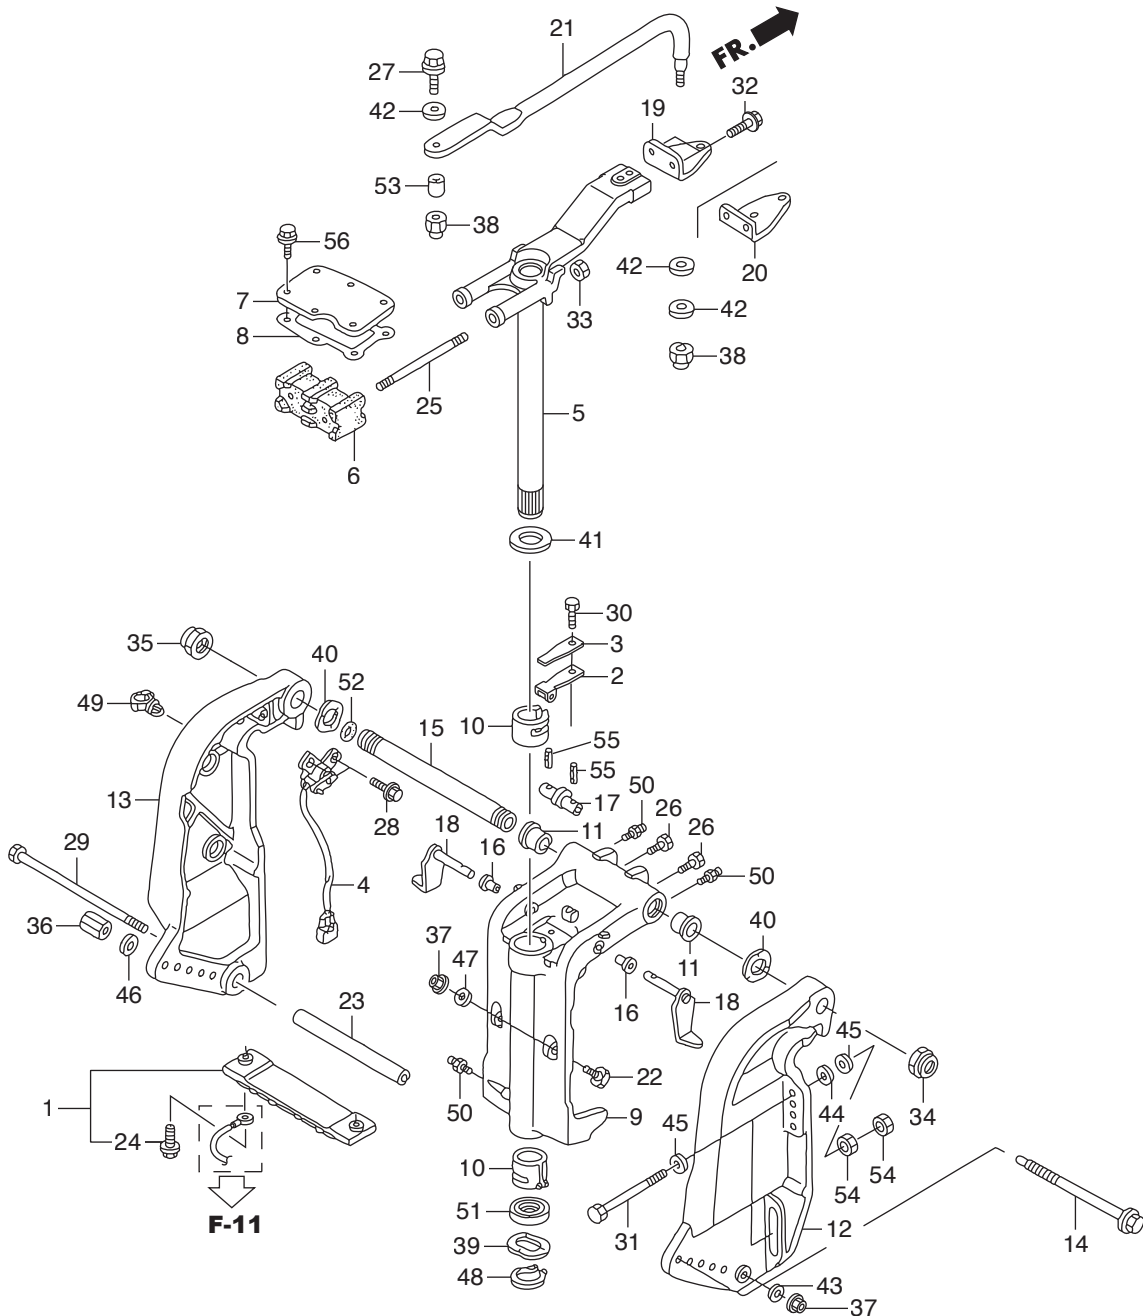


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-10	30	H881-90110-000	BOLT, HEX., 6X14	1	
F-10	31	HZZ3-90129-000	BOLT, HEX., 12X119	4	
F-10					
F-10					
F-10	31	HZX2-90129-000	BOLT, HEX., 12X130	4	
F-10					
F-10	32	HZW9-90154-000	BOLT, FLANGE, 10X25	2	
F-10	33	HZW5-90302-003	NUT, FLANGE, 12MM	2	
F-10	34	HZV5-90304-013	NUT, SELF-LOCK(7/8-14UNF)	1	
F-10	35	HZW1-90304-013	NUT, SELF-LOCK(25X2.0)	1	
F-10	36	HZW5-90304-000	NUT, ADJUSTER ROD	1	
F-10	37	HZW4-90306-003	NUT, FLANGE, 10MM	3	
F-10	38	HZV5-90307-003	NUT, SELF-LOCK(3/8-24UNF)	2	
F-10	39	HZV5-90501-000	WASHER, WAVE, 40MM	1	
F-10	40	HZV5-90502-000	WASHER, WAVE, 26MM	2	
F-10	41	HZV5-90504-000	WASHER, THRUST, 34MM	1	
F-10	42	HZV4-90514-000	WASHER, 10MM	3	
F-10	43	H921-90511-000	WASHER, PLAIN, 10MM	1	
F-10	44	HZV5-90552-000	WASHER, PLAIN, 12MM	3	
F-10					
F-10					
F-10					
F-10					
F-10					
F-10					
F-10					
F-10					
F-10	45	HZV5-90559-000	WASHER, PLAIN, 12MM	12	
F-10					
F-10					

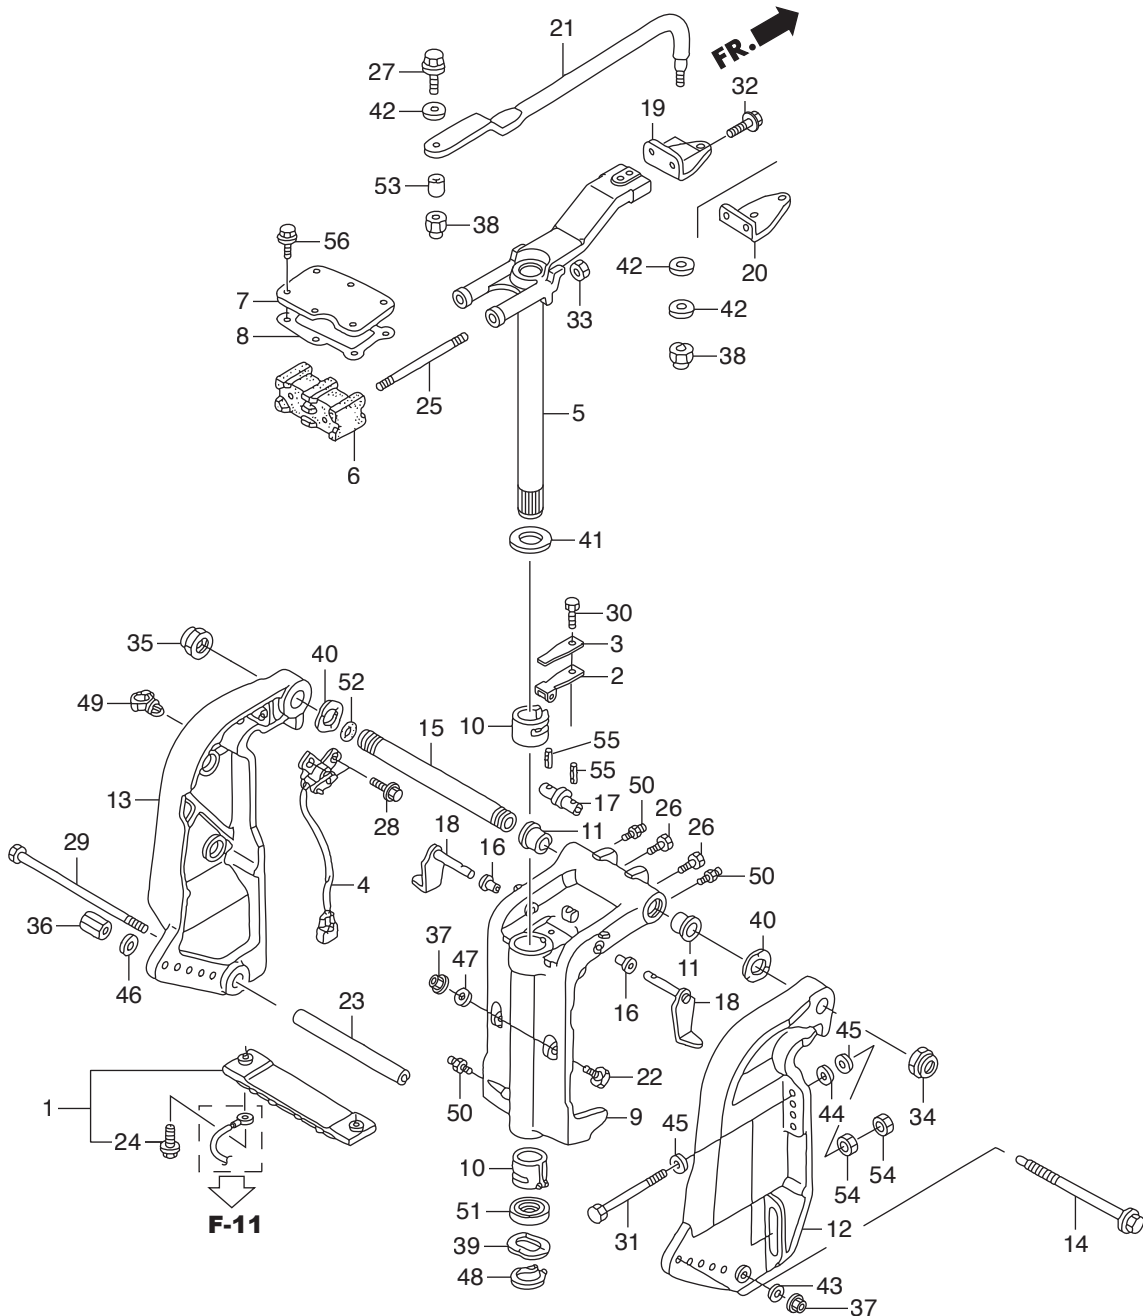



[illegible]


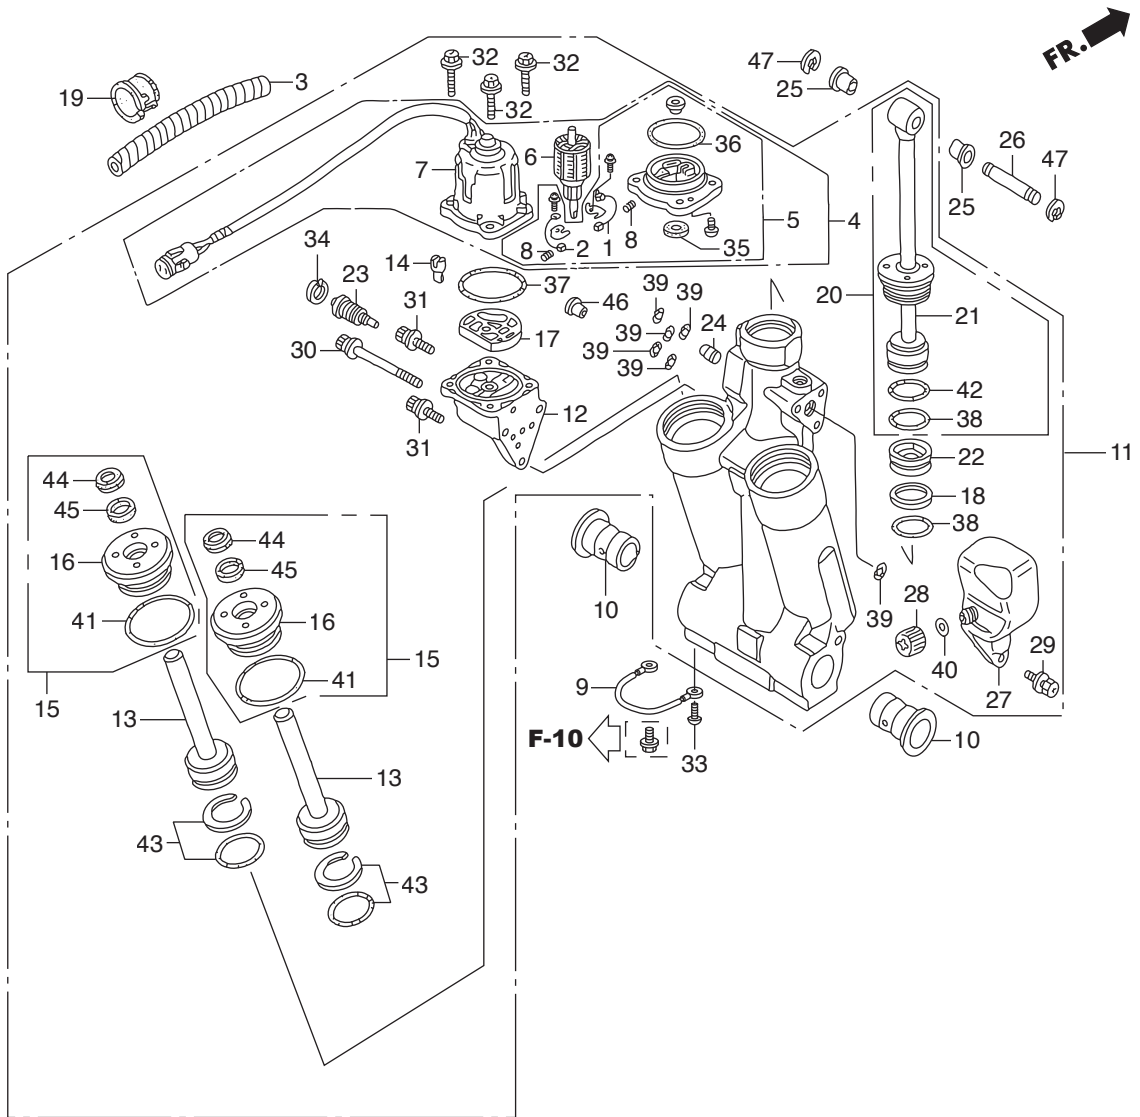



Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-11	1	HZY3-30280-003	BREAKER ASSY.	1	
F-11	2	HZY3-31106-003	BRUSH ASSY.	1	
F-11	3	HZV5-36104-821	TUBE, SPIRAL	1	
F-11	4	HZY6-36120-013	MOTOR ASSY., POWER TILT	1	
F-11	5	HZY3-36122-013	BRACKET ASSY.	1	
F-11	6	HZY3-36123-013	ARMATURE COMP.	1	
F-11	7	HZY6-36129-013	YOKE ASSY.	1	
F-11	8	HZV5-36136-821	SPRING, MOTOR	2	
F-11	9	HZY3-40219-013	WIRE, LEAD(1.5X116MM)	1	
F-11	10	HZV5-50214-003	BUSH, SWIVEL CASE	2	
F-11	11	HZY6-56000-043	TRIM-TILT ASSY., POWER	1	
F-11					
F-11					
F-11					
F-11	12	HZY6-56100-013	PUMP ASSY.	1	
F-11					
F-11					
F-11					
F-11	13	HZW1-56110-701	ROD COMP., PISTON(B)	2	
F-11	14	HZW1-56113-701	JOINT, DRIVE	1	
F-11	15	HZW1-56115-305	GUIDE COMP., ROD	2	
F-11	16	HZY9-56115-003	GUIDE COMP., ROD	2	
F-11	17	HZW1-56116-701	FILTER B	1	
F-11	18	HZV5-56117-821	RING, BACK UP	1	
F-11	19	HZV5-56118-820	BUSH, MOTOR CODE	1	
F-11	20	HZW1-56120-305	ROD COMP., PISTON	1	
F-11	21	HZY9-56120-003	ROD COMP., PISTON	1	
F-11	22	HZW1-56130-702	PISTON COMP., FREE	1	
F-11	23	HZY3-56170-013	VALVE COMP., MANUAL	1	

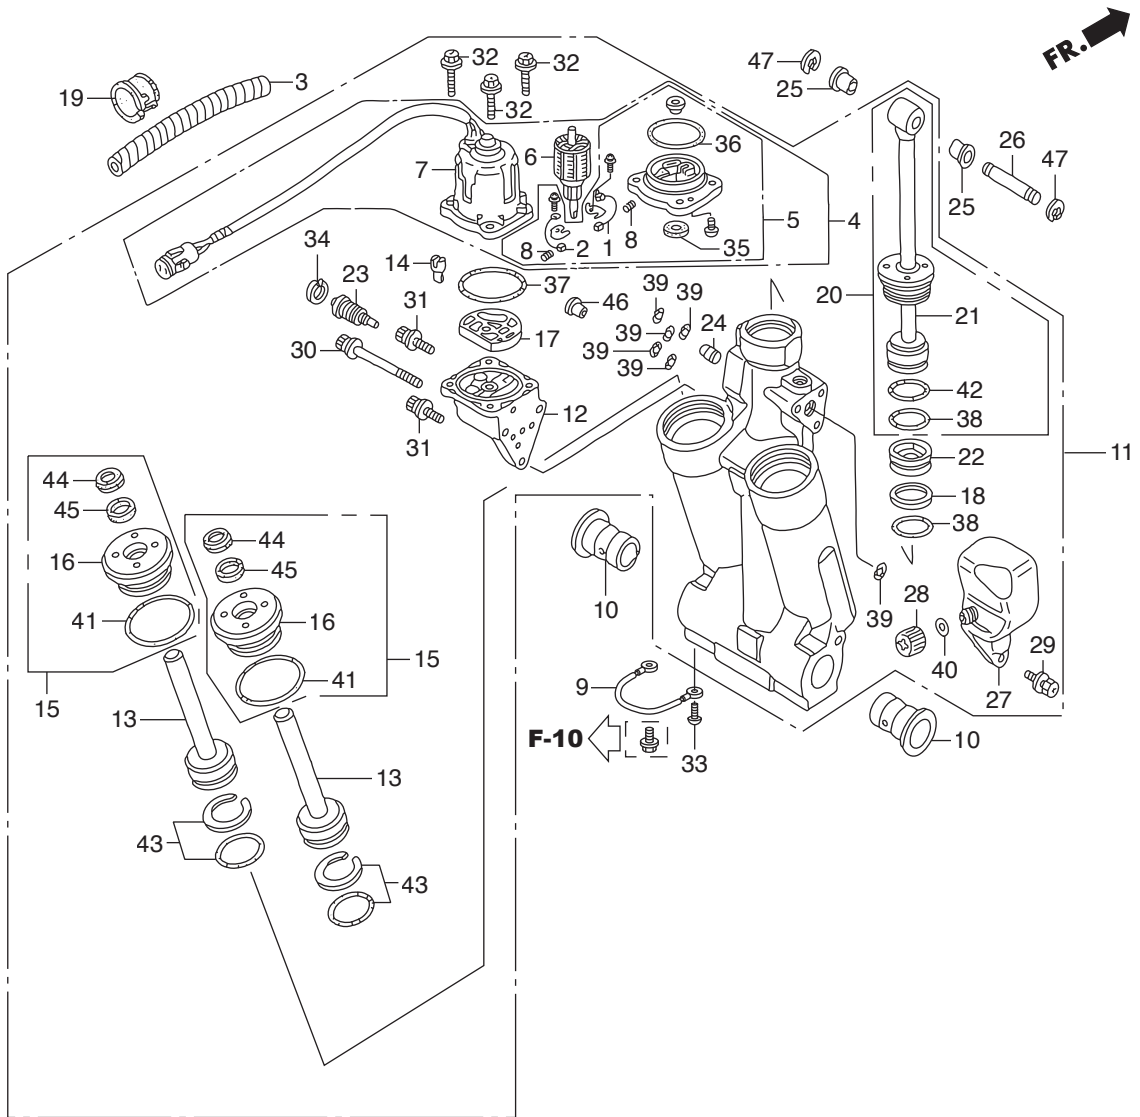




Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
F-11	24	HZW1-56180-701	VALVE COMP., RESERVOIR	1	
F-11	25	HZV5-56513-000	BUSH, LOWER CYLINDER	2	
F-11	26	HZW1-56532-000	PIN, UPPER CYLINDER	1	
F-11	27	HZW1-56851-703	TANK, OIL	1	
F-11	28	HZW1-56860-701	CAP COMP., OIL TANK	1	
F-11	29	HZW1-90113-702	BOLT, RECESSED	3	
F-11	30	HZW1-90114-702	BOLT, SOCKET(A)	1	
F-11	31	HZW1-90115-702	BOLT, SOCKET(B)	2	
F-11	32	HZW1-90116-702	BOLT, HEX.	4	
F-11	33	HZV5-90119-000	SCREW, PAN, 6X8	1	
F-11	34	HZW1-90652-702	CIRCLIP, INTERNAL	1	
F-11	35	HZV5-91203-821	OIL SEAL	1	
F-11	36	HZW1-91207-013	O-RING, 2.0X70.5	1	
F-11	37	HZV5-91302-821	O-RING, 1.8X69.6	1	
F-11	38	HZV5-91316-821	O-RING, 3.5X38.7	2	
F-11	39	HZW1-91352-702	O-RING, 1.8X7.7	6	
F-11	40	HZW1-91353-703	O-RING, 1.9X11	1	
F-11	41	HZW1-91354-701	O-RING, 3.5X35.7	2	
F-11	42	HZW1-91355-701	O-RING, 3.5X41.7	1	
F-11	43	HZW1-91357-701	O-RING SET, 3.5X31.7	2	
F-11	44	HZW1-91358-701	SEAL, WATER	2	
F-11	45	HZW1-91361-701	PACKING	2	
F-11	46	HZW1-91557-701	COLLAR, ORIFICE	1	
F-11	47	HCO-94540-15029	E-RING, 15MM	2	

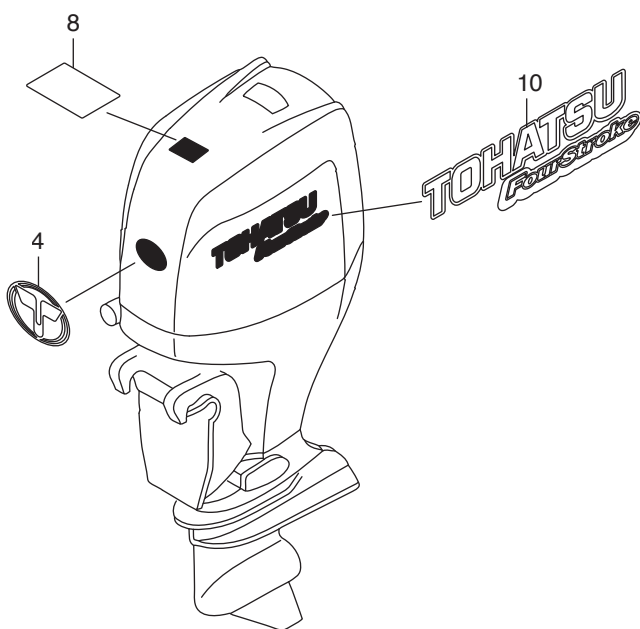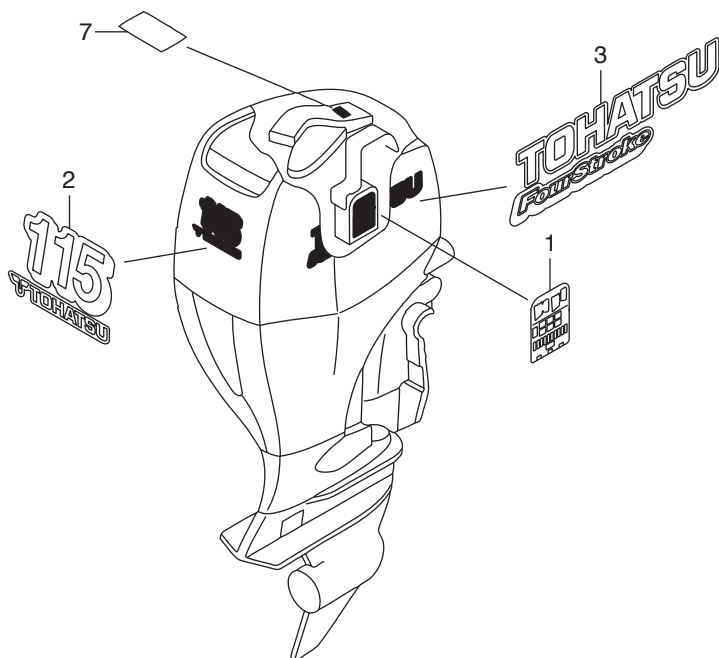

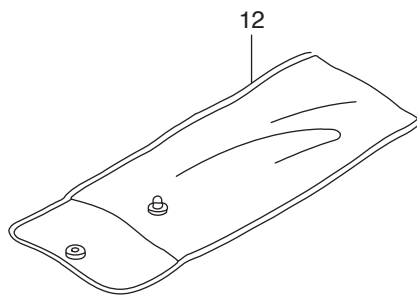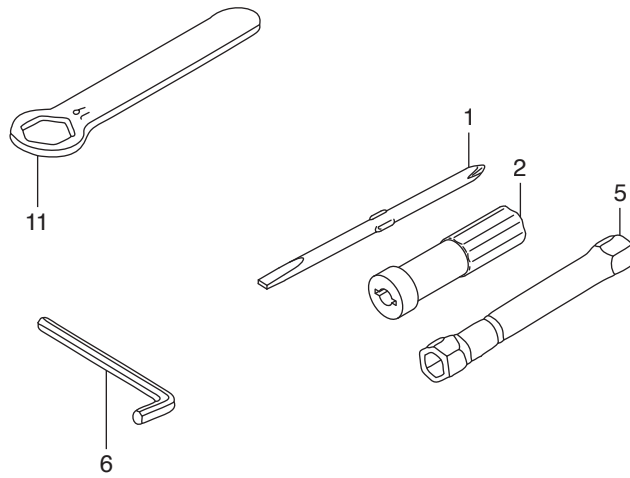


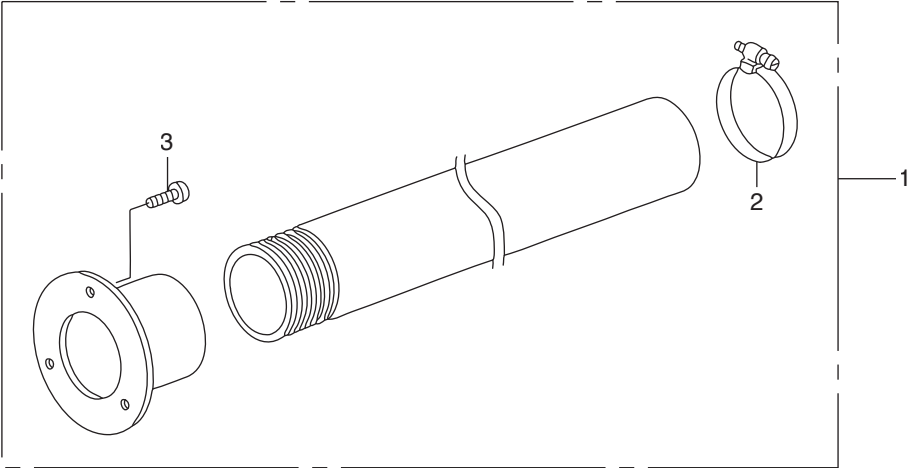


[illegible]

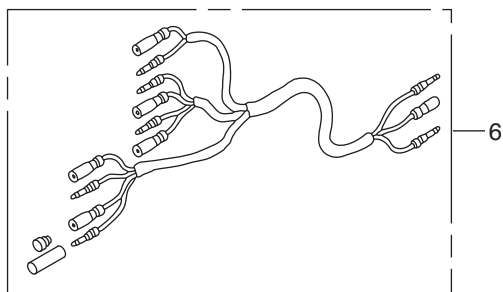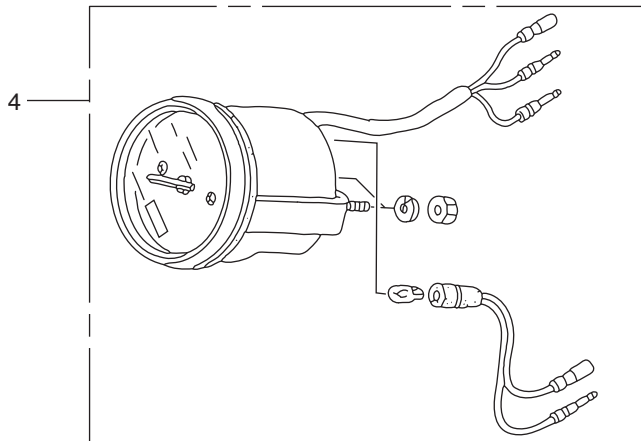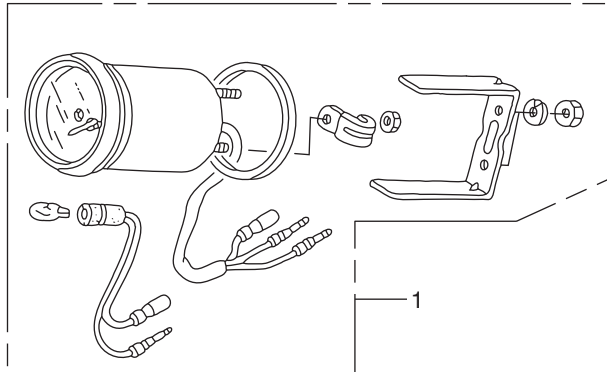



[illegible]

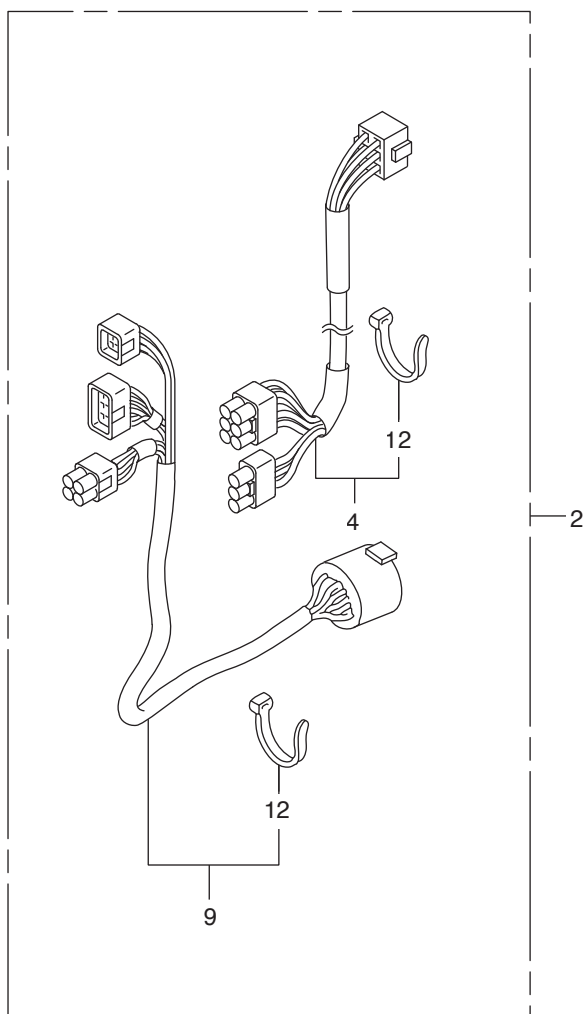


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
FOP-6					
FOP-6					
FOP-6	2	HZZ5-06325-600	CABLE SET, PANEL INDICATOR	1	(20FT)
FOP-6	2	HZZ5-06325-700	CABLE SET, PANEL INDICATOR	1	(25FT)
FOP-6	2	HZZ5-06325-800	CABLE SET, PANEL INDICATOR	1	(30FT)
FOP-6					
FOP-6	4	HZZ5-32185-600	CORD ASSY., INDICATOR(20FT)	1	
FOP-6	4	HZZ5-32185-700	CORD ASSY., INDICATOR(25FT)	1	
FOP-6	4	HZZ5-32185-800	CORD ASSY., INDICATOR(30FT)	1	
FOP-6					
FOP-6					
FOP-6					
FOP-6					
FOP-6					
FOP-6					
FOP-6	9	HZZ5-32580-600	CABLE ASSY., SWITCH PANEL	1	(20FT)
FOP-6	9	HZZ5-32580-700	CABLE ASSY., SWITCH PANEL	1	(25FT)
FOP-6	9	HZZ5-32580-800	CABLE ASSY., SWITCH PANEL	1	(30FT)
FOP-6					
FOP-6					
FOP-6	12	H952-32901-770	TIE, CABLE(NATURAL)(2.4X92)	6	

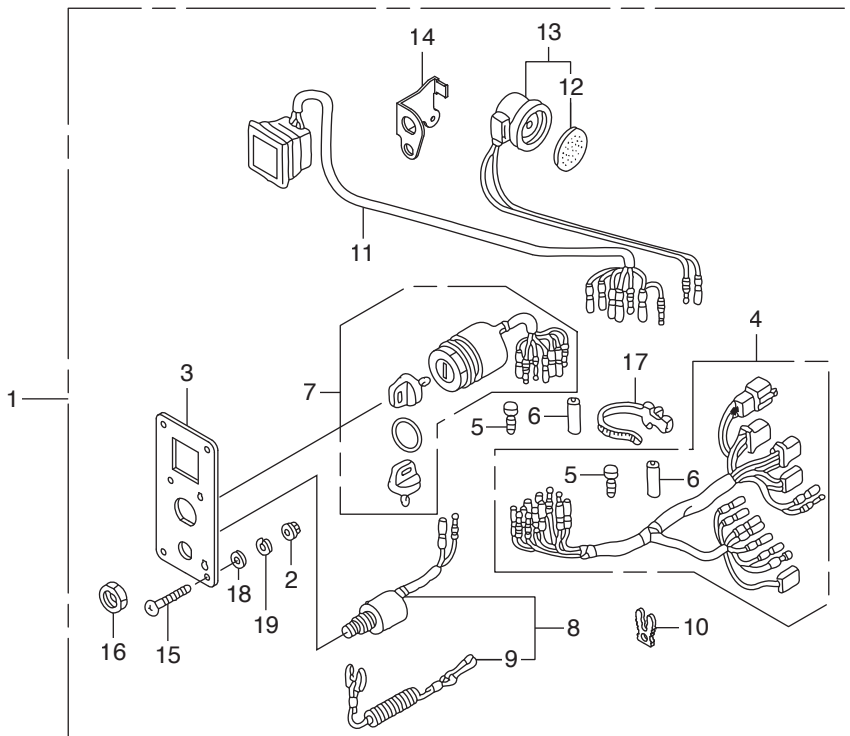


[illegible]

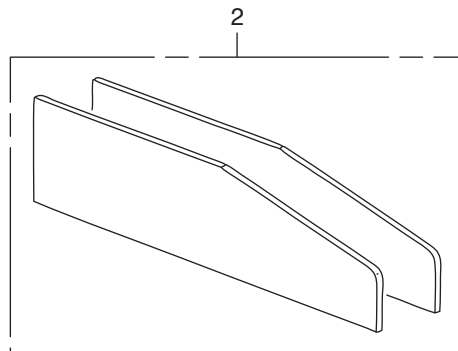
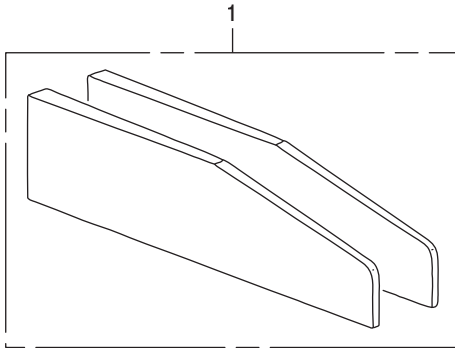


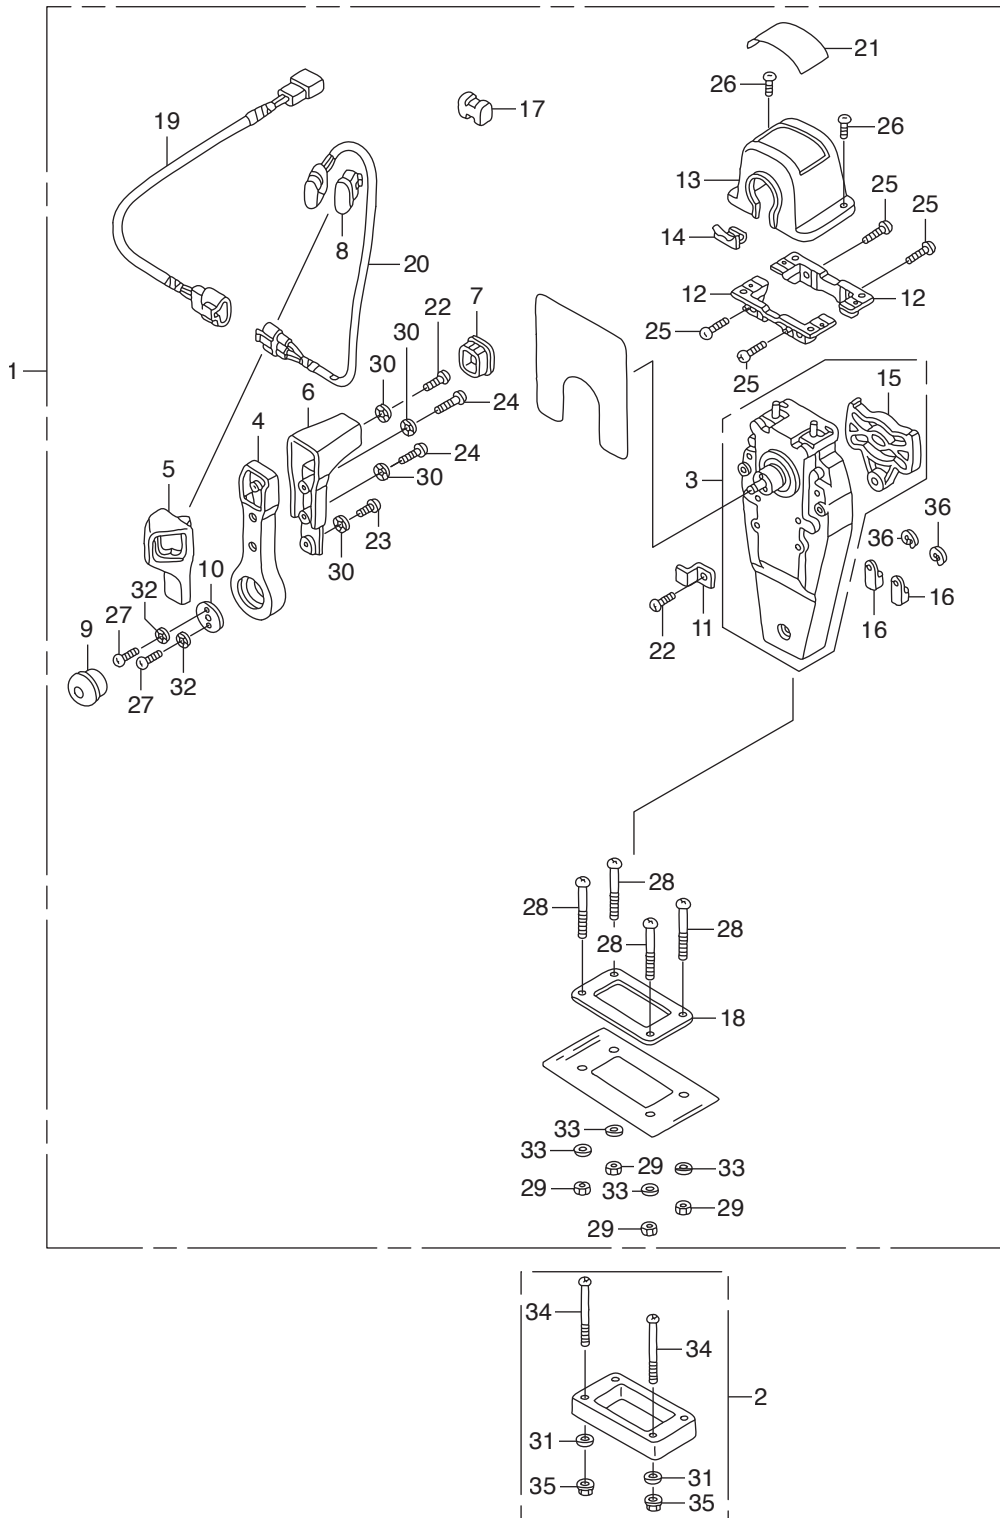



Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
FOP-8	1	HZZ3-06240-R30	BOX KIT, REMOTE CONTROL	1	(TOP MOUNT SINGLE)(R.)
FOP-8	2	HZW5-06241-U00	SPACER KIT, REMOTE CONTROL BOX	1	(TOP MOUNT SINGLE)
FOP-8	3	HZW5-24810-U01	HOUSING ASSY., L. INNER	1	(TOP MOUNT)
FOP-8	4	HZW5-24811-U01	HANDLE, REMOTE CONTROL	1	
FOP-8	5	HZW5-24812-U01	COVER, L. GRIP	1	
FOP-8	6	HZW5-24813-U01	GRIP, REMOTE CONTROL HANDLE	1	
FOP-8	7	HZW5-24814-U01	CAP, GRIP	1	
FOP-8	8	HZW5-24815-U01	CAP, SWITCH	1	
FOP-8	9	HZW5-24816-U01	BUTTON, THROTTLE	1	
FOP-8	10	HZW5-24817-U01	PLATE, HANDLE	1	
FOP-8	11	HZW5-24818-U01	PLATE, CABLE CLAMP	1	
FOP-8	12	HZW5-24819-U01	BRACKET, REMOTE CONTROL	2	HOUSING
FOP-8	13	HZW5-24820-U01	HOUSING COMP., REMOTE CONTROL	1	BOX
FOP-8	13	HZZ3-24820-R11	HOUSING COMP., REMOTE CONTROL	1	BOX
FOP-8	14	HZW5-24825-U01	HOUSING, LEAD	1	
FOP-8	15	HZW5-24826-U01	PLATE, DWELL	1	
FOP-8	16	HZW5-24831-U01	TERMINAL, CABLE	2	
FOP-8	17	HZW5-24832-U01	SPACER, CABLE CLAMP	1	
FOP-8	18	HZW5-24834-U01	PACKING, SINGLE	1	
FOP-8	19	HZW7-32530-U00	SUB HARNESS ASSY., POWER	1	TRIM-TILT(A)
FOP-8	20	HZW5-35370-U02	SWITCH ASSY., POWER TRIM-TILT	1	(A)
FOP-8	21	HZZ3-87703-R81	MARK, REMOTE CONTROL(SINGLE)	1	
FOP-8	22	HZW5-90101-U00	SCREW, PAN, 5X16	2	
FOP-8	23	HZW5-90102-U00	SCREW, PAN, 5X10	1	
FOP-8	24	HZW5-90103-U01	SCREW, PAN, 5X20	2	
FOP-8	25	HZW5-90104-U00	SCREW, PAN, 5X18	4	
FOP-8	26	HZW5-90105-U01	SCREW, PAN, 4X10	2	
FOP-8	27	HZW5-90106-U00	SCREW, PAN, 6X18	2	
FOP-8	28	HZW5-90107-U00	SCREW, PAN, 5X40	4	

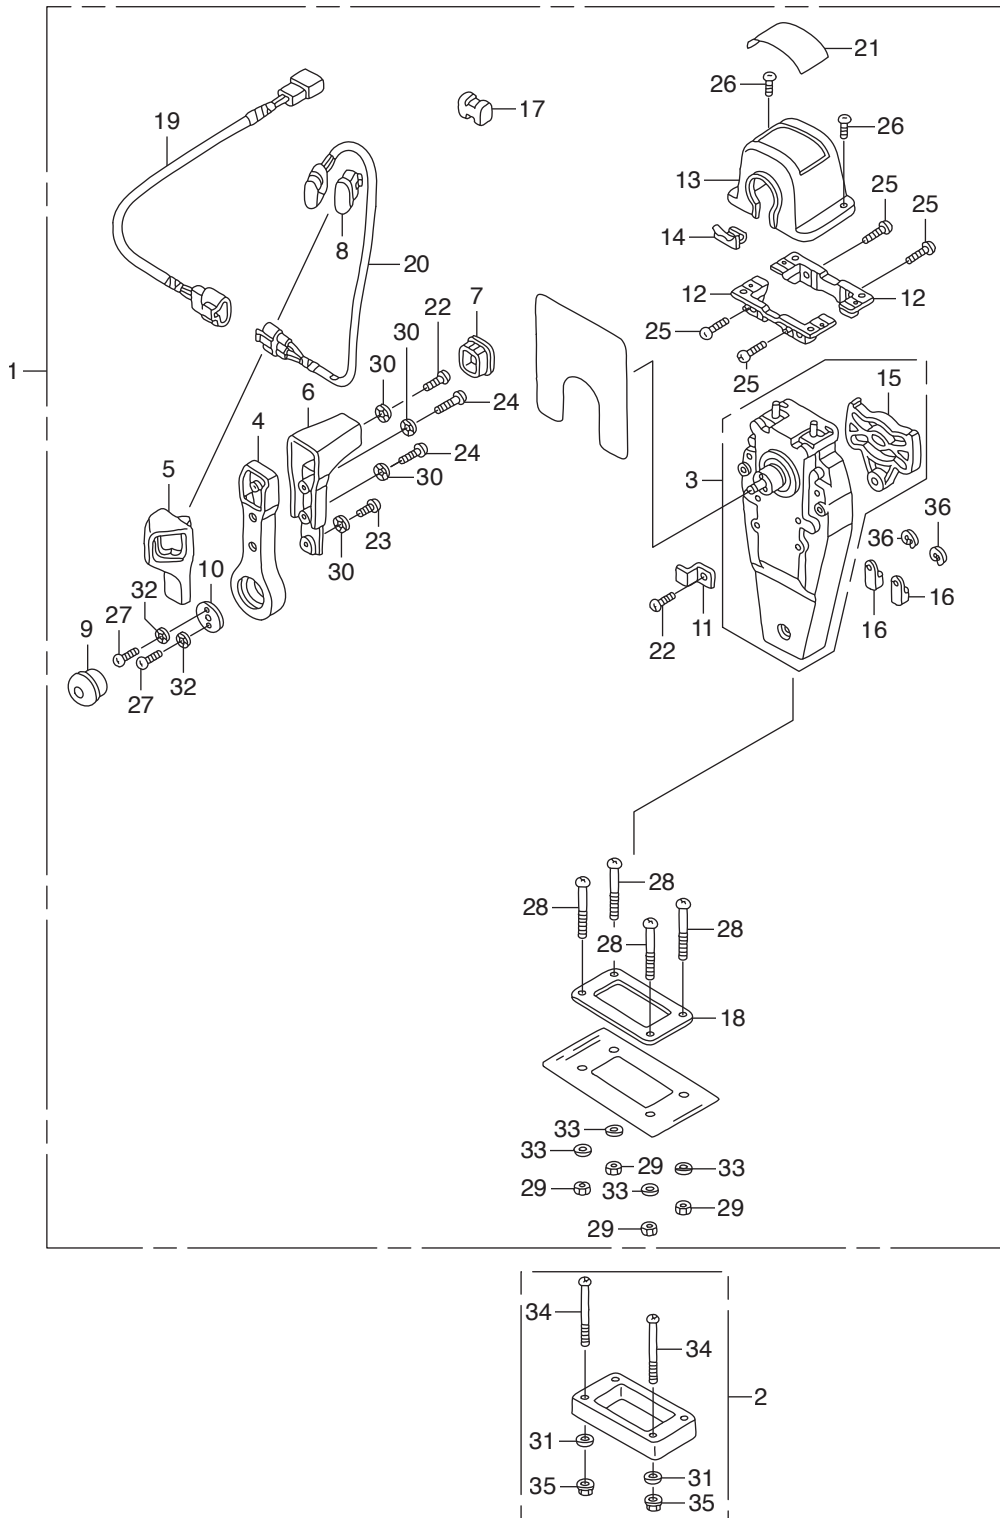

[illegible]

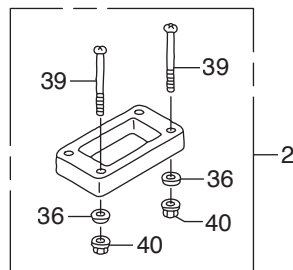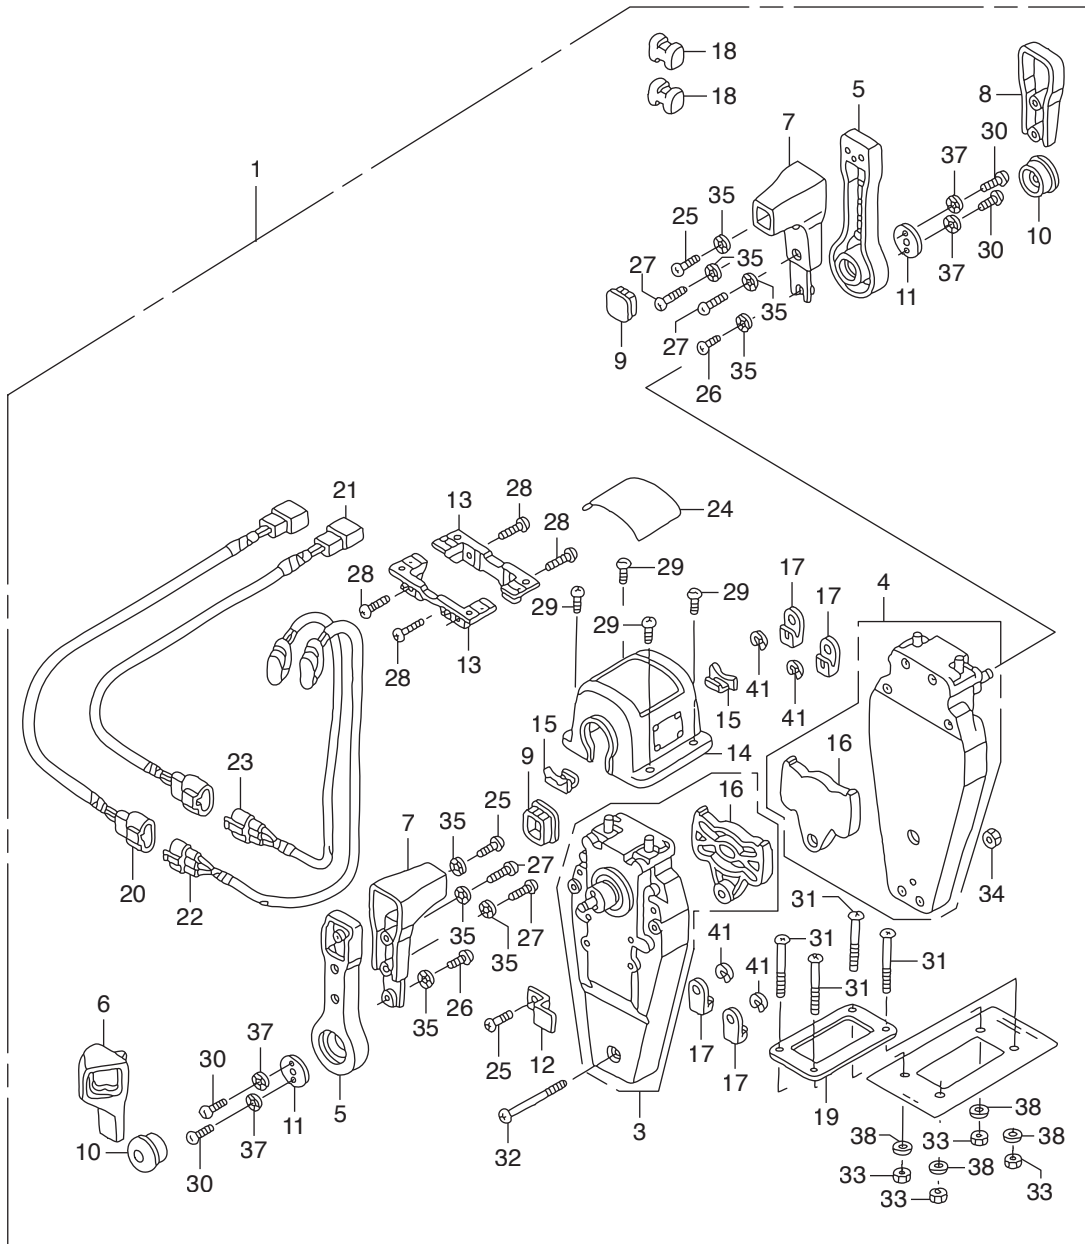

Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
FOP-8-2	1	HZZ3-06240-R60	BOX KIT, REMOTE CONTROL	1	(TOP MOUNT DUAL)(R.)
FOP-8-2	2	HZW5-06241-U10	SPACER KIT, REMOTE CONTROL BOX	1	(TOP MOUNT DUAL)
FOP-8-2	3	HZW5-24810-U01	HOUSING ASSY., L. INNER	1	(TOP MOUNT)
FOP-8-2	4	HZW5-24810-U11	HOUSING ASSY., R. INNER	1	(TOP MOUNT)
FOP-8-2	5	HZW5-24811-U01	HANDLE, REMOTE CONTROL	2	
FOP-8-2	6	HZW5-24812-U01	COVER, L. GRIP	1	
FOP-8-2	7	HZW5-24813-U01	GRIP, REMOTE CONTROL HANDLE	2	
FOP-8-2	8	HZW5-24813-U21	COVER, DUAL GRIP	1	
FOP-8-2	9	HZW5-24814-U01	CAP, GRIP	2	
FOP-8-2	10	HZW5-24816-U01	BUTTON, THROTTLE	2	
FOP-8-2	11	HZW5-24817-U01	PLATE, HANDLE	2	
FOP-8-2	12	HZW5-24818-U01	PLATE, CABLE CLAMP	1	
FOP-8-2	13	HZW5-24819-U01	BRACKET, REMOTE CONTROL	2	HOUSING
FOP-8-2	14	HZW5-24820-U21	HOUSING COMP., DUAL REMOTE	1	CONTROL BOX
FOP-8-2	14	HZZ3-24820-R21	HOUSING COMP., DUAL REMOTE	1	CONTROL BOX
FOP-8-2	15	HZW5-24825-U01	HOUSING, LEAD	2	
FOP-8-2	16	HZW5-24826-U01	PLATE, DWELL	2	
FOP-8-2	17	HZW5-24831-U01	TERMINAL, CABLE	4	
FOP-8-2	18	HZW5-24832-U01	SPACER, CABLE CLAMP	2	
FOP-8-2	19	HZW5-24834-U21	PACKING, DUAL	1	
FOP-8-2	20	HZW7-32530-U00	SUB HARNESS ASSY., POWER	1	TRIM-TILT(A)
FOP-8-2	21	HZW7-32530-U10	SUB HARNESS ASSY., POWER	1	TRIM-TILT(B)
FOP-8-2	22	HZW5-35370-U02	SWITCH ASSY., POWER TRIM-TILT	1	(A)
FOP-8-2	23	HZW5-35370-U12	SWITCH ASSY., POWER TRIM-TILT	1	(B)
FOP-8-2	24	HZZ3-87703-R01	MARK, REMOTE CONTROL(DUAL)	1	
FOP-8-2	25	HZW5-90101-U00	SCREW, PAN, 5X16	3	
FOP-8-2	26	HZW5-90102-U00	SCREW, PAN, 5X10	2	
FOP-8-2	27	HZW5-90103-U01	SCREW, PAN, 5X20	4	
FOP-8-2	28	HZW5-90104-U00	SCREW, PAN, 5X18	4	

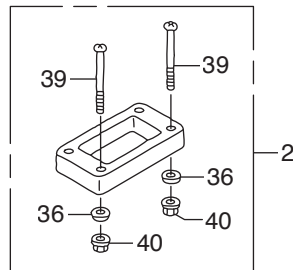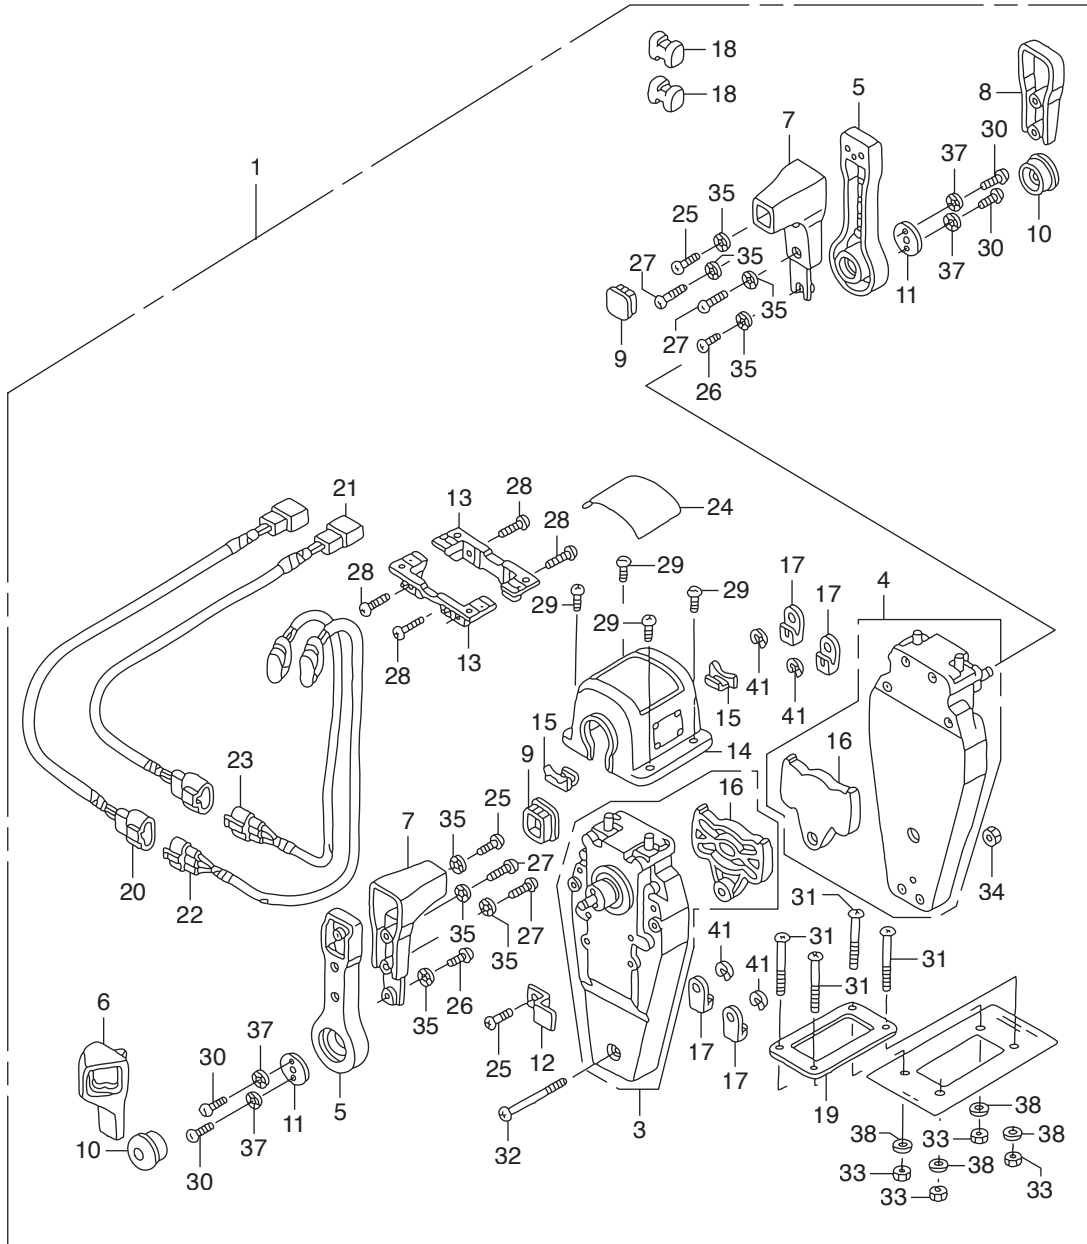


[illegible]




Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
FOP-8-4	1	HZZ3-06240-R40	BOX KIT, REMOTE CONTROL	1	(FLUSH MOUNT)(R.)
FOP-8-4	2	HZW7-24810-U01	HOUSING ASSY., R. INNER	1	(FLUSH MOUNT)
FOP-8-4	3	HZW7-24811-U01	HANDLE, REMOTE CONTROL	1	
FOP-8-4	4	HZW7-24812-U01	COVER, GRIP	1	
FOP-8-4	5	HZW7-24813-U01	ARM, NEUTRAL LOCK	1	
FOP-8-4	6	HZW7-24814-U01	COVER, LOCK ARM	1	
FOP-8-4	7	HZW7-24815-U01	SPRING, NEUTRAL LOCK ARM	1	
FOP-8-4	8	HZW5-24816-U01	BUTTON, THROTTLE	1	
FOP-8-4	9	HZW7-24817-U01	SHAFT, THROTTLE BUTTON	1	
FOP-8-4	10	HZW5-24826-U01	PLATE, DWELL	1	
FOP-8-4	11	HZW7-24830-U01	COVER ASSY.	1	
FOP-8-4	11	HZZ3-24830-R41	COVER ASSY.	1	
FOP-8-4	12	HZW5-24831-U01	TERMINAL, CABLE	2	
FOP-8-4	13	HZW5-24832-U01	SPACER, CABLE CLAMP	1	
FOP-8-4	14	HZW7-24832-U01	HOLDER, NEUTRAL LOCK	1	
FOP-8-4	15	HZW7-24833-U01	BASE	1	
FOP-8-4	16	HZW7-32530-U20	SUB HARNESS ASSY., POWER	1	TRIM-TILT(C)
FOP-8-4	17	HZW7-35370-U02	SWITCH ASSY., POWER TRIM-TILT	1	(C)
FOP-8-4	18	HZW7-87701-U01	MARK, HANDLE FLUSH MOUNT	1	
FOP-8-4	18	HZZ3-87701-R40	MARK, HANDLE FLUSH MOUNT	1	
FOP-8-4	19	HZW7-87703-U00	MARK, FLUSH MOUNT	1	
FOP-8-4	20	HZW5-90101-U00	SCREW, PAN, 5X16	1	
FOP-8-4	21	HZW7-90101-U01	SCREW, TRUSS, 4X12	1	
FOP-8-4	22	HZW7-90102-U01	SCREW, PAN, 5X30	4	
FOP-8-4	23	HZW7-90103-U01	SCREW, PAN, 6X35	3	
FOP-8-4	24	HZW7-90104-U01	SCREW, TAPPING, 6X30	3	
FOP-8-4	25	HZW7-90301-U01	NUT, HEX., 6MM	3	
FOP-8-4	26	HZW5-90501-U00	WASHER, LOCK, 5MM	4	
FOP-8-4	27	HZW7-90502-U00	WASHER, PLAIN, 6MM	3	




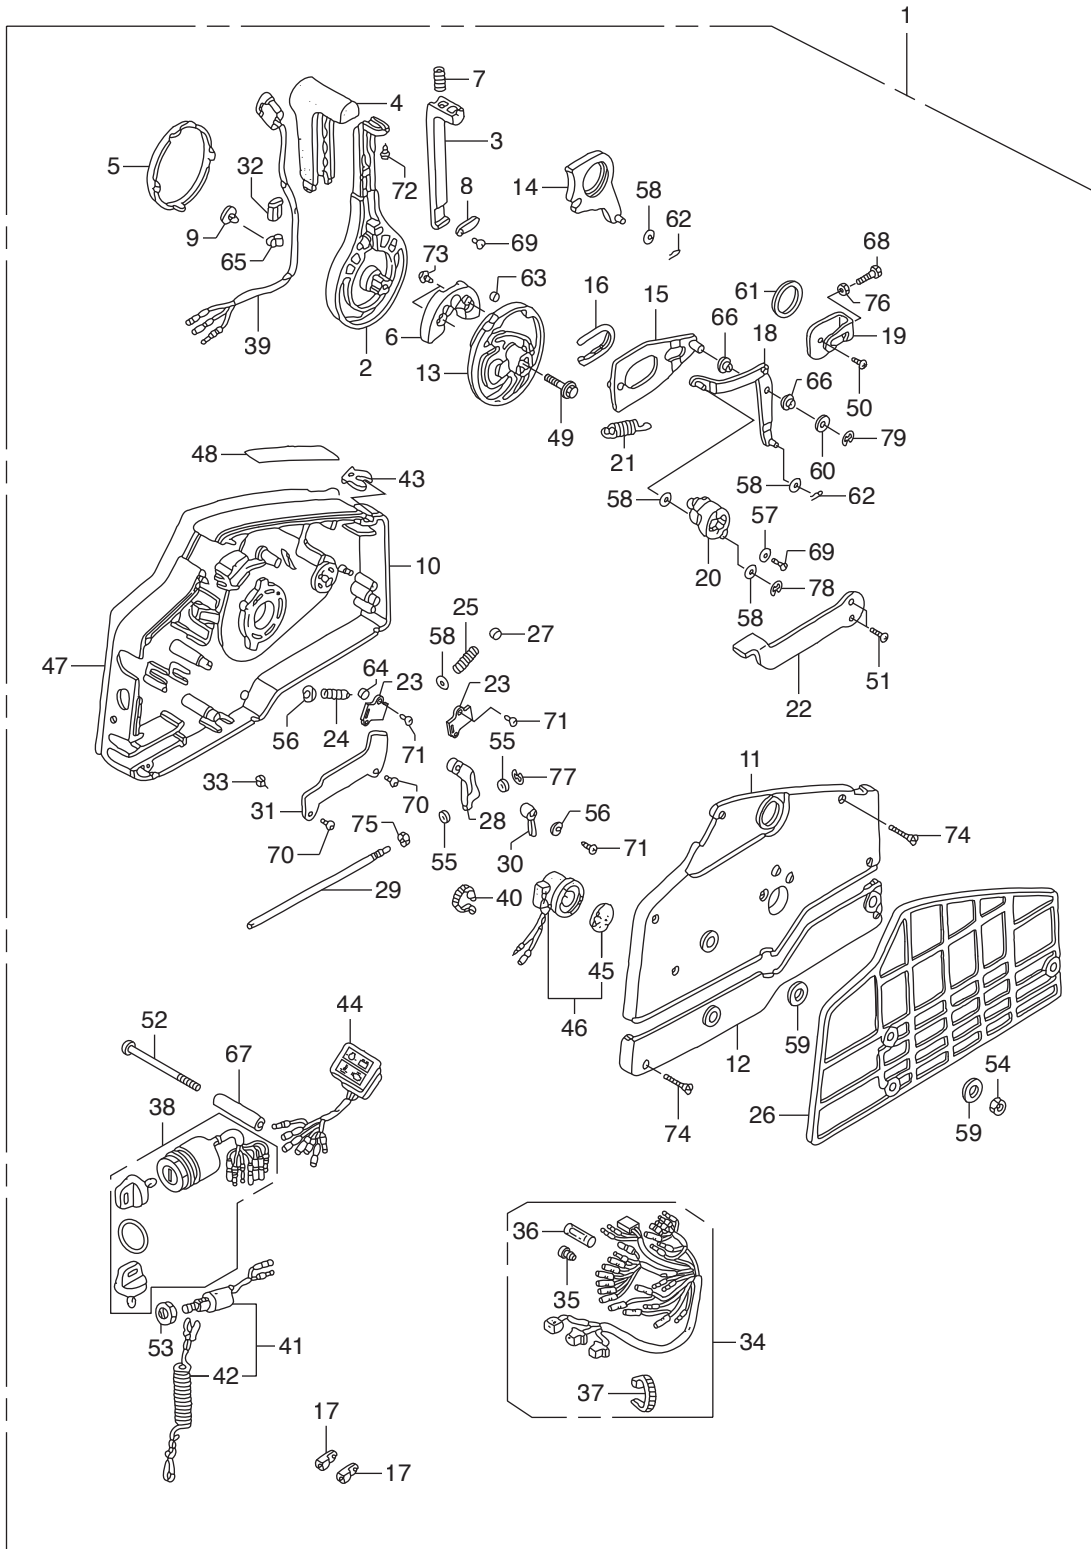


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
FOP-8-6	1	HZZ3-06240-R30	BOX ASSY., REMOTE CONTROL	1	
FOP-8-6	2	HZV5-24811-010	HANDLE, REMOTE CONTROL	1	
FOP-8-6	3	HZV5-24812-000	LEVER, HANDLE LOCK	1	
FOP-8-6	4	HZV5-24813-000	GRIP, REMOTE CONTROL HANDLE	1	
FOP-8-6	5	HZV5-24814-010	CAP, HANDLE	1	
FOP-8-6	6	HZV5-24815-010	BLOCK, NEUTRAL LOCK	1	
FOP-8-6	7	HZV5-24816-000	SPRING, REMOTE CONTROL HANDLE	1	
FOP-8-6	8	HZV5-24817-000	PLATE, LEVER SETTING	1	
FOP-8-6	9	HZV5-24818-003	CLAMP, HARNESS	1	
FOP-8-6	10	HZV5-24820-010	HOUSING COMP., REMOTE CONTROL	1	BOX(A)LA,XA
FOP-8-6	11	HZV5-24830-010	HOUSING COMP., REMOTE CONTROL	1	BOX(B)LA,XA
FOP-8-6	12	HZV5-24836-000	HOUSING, REMOTE CONTROL BOX(C)	1	
FOP-8-6	13	HZV5-24841-000	WHEEL, CONTROL	1	
FOP-8-6	14	HZV5-24845-000	ARM COMP., SHIFT LINK	1	
FOP-8-6	15	HZV5-24850-000	PLATE COMP., SLIDING	1	
FOP-8-6	16	HZV5-24854-000	COLLAR, SLIDING PLATE	1	
FOP-8-6	17	HZV5-24855-000	PIVOT, SHIFT	2	
FOP-8-6	18	HZV5-24860-000	ARM COMP., LINK JOINT	1	
FOP-8-6	19	HZV5-24865-000	BRACKET, LINK JOINT	1	
FOP-8-6	20	HZV5-24875-000	WHEEL, ACCELERATOR	1	
FOP-8-6	21	HZV5-24876-000	SPRING, ACCELERATOR WHEEL	1	
FOP-8-6	22	HZV5-24878-000	LEVER, IDLE	1	
FOP-8-6	23	HZV5-24881-000	PLATE, SPRING SETTING	2	
FOP-8-6	24	HZV5-24883-000	SPRING, SHIFT CLICK	1	
FOP-8-6	25	HZV5-24884-000	SPRING, CHOKE RETURN	1	
FOP-8-6	26	HZV5-24885-000	SPACER, REMOTE CONTROL BOX	1	
FOP-8-6	27	HZV5-24887-000	SPACER, CLICK SPRING	1	
FOP-8-6	28	HZV5-24891-000	BLOCK, THROTTLE FRICTION	1	
FOP-8-6	29	HZV5-24892-000	BOLT, FRICTION	1	

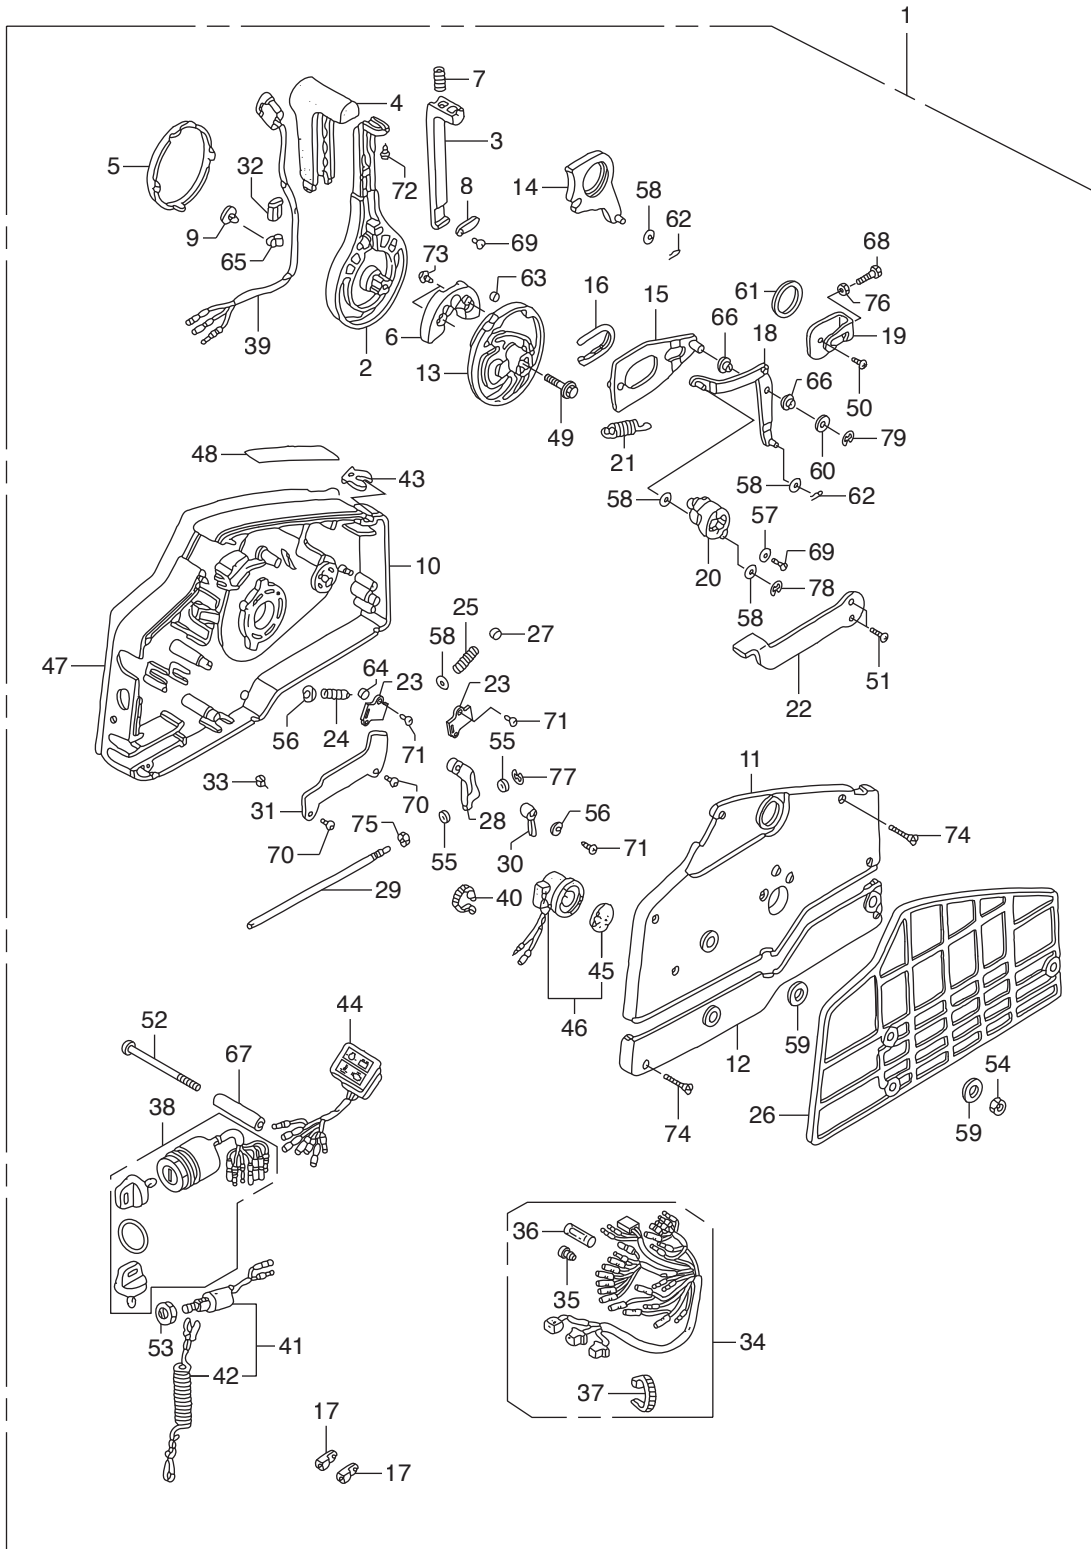


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
FOP-8-6	30	HZV5-24894-000	SPACER, NEUTRAL SWITCH	1	
FOP-8-6	31	HZV5-24895-000	CLAMP, POWER TILT CORD	1	
FOP-8-6	32	HZV5-24897-000	PIPE, HARNESS GUIDE	1	
FOP-8-6	33	HZV5-24898-000	SPACER, CABLE CLAMP	1	
FOP-8-6	34	HZZ5-32530-000	CABLE ASSY., REMOTE CONTROL(B)	1	
FOP-8-6	35	HZV5-32823-003	PLUG, INNER CONNECTOR	7	
FOP-8-6	36	HZV5-32824-003	PLUG, OUTER CONNECTOR	1	
FOP-8-6	37	H952-32901-770	TIE, CABLE(NATURAL)(2.4X92)	1	
FOP-8-6	38	HZZ3-35100-R11	SWITCH ASSY., COMBINATION	1	
FOP-8-6	39	HZV5-35370-823	SWITCH ASSY., POWER TRIM-TILT	1	
FOP-8-6	40	HMG9-35701-950	BAND(BLACK 3.5X140)	1	
FOP-8-6	41	HZV5-36180-033	SWITCH ASSY., EMERGENCY STOP	1	
FOP-8-6	42	HZV4-36182-651	CORD COMP., EMERGENCY	1	
FOP-8-6	43	HZV4-36187-652	CLIP, EMERGENCY LOCK	1	
FOP-8-6	44	HZZ5-37210-013	LAMP ASSY., INDICATION	1	
FOP-8-6	45	H341-38403-672	PLATE, WINKER BUZZER	1	
FOP-8-6	46	HZV5-38410-003	BUZZER COMP., WARNING	1	
FOP-8-6	47	HZZ3-87701-R00	PLATE, REMOTE CONTROL	1	LA,XA
FOP-8-6	48	HZW9-87702-800	MARK, FAST IDLE	1	
FOP-8-6	49	HZW9-90008-000	BOLT, FLANGE, 8X35	1	
FOP-8-6	50	HMM4-90105-000	SCREW, PAN, 6X10	1	
FOP-8-6	51	HZW4-90108-000	SCREW, FLAT, 5X12	2	
FOP-8-6	52	HZV5-90125-000	SCREW, 6X95	3	
FOP-8-6	53	H921-90302-000	NUT, HEX., 16MM	1	
FOP-8-6	54	HZV4-90304-000	NUT, HEX., 6MM	3	
FOP-8-6	55	HZW4-90401-000	WASHER, PLAIN, 4MM	2	
FOP-8-6	56	HZW4-90402-000	WASHER, PLAIN, 5MM	2	
FOP-8-6	57	HZV4-90502-000	WASHER, PLAIN, 5MM	1	
FOP-8-6	58	H921-90504-010	WASHER, PLAIN, 6MM	5	

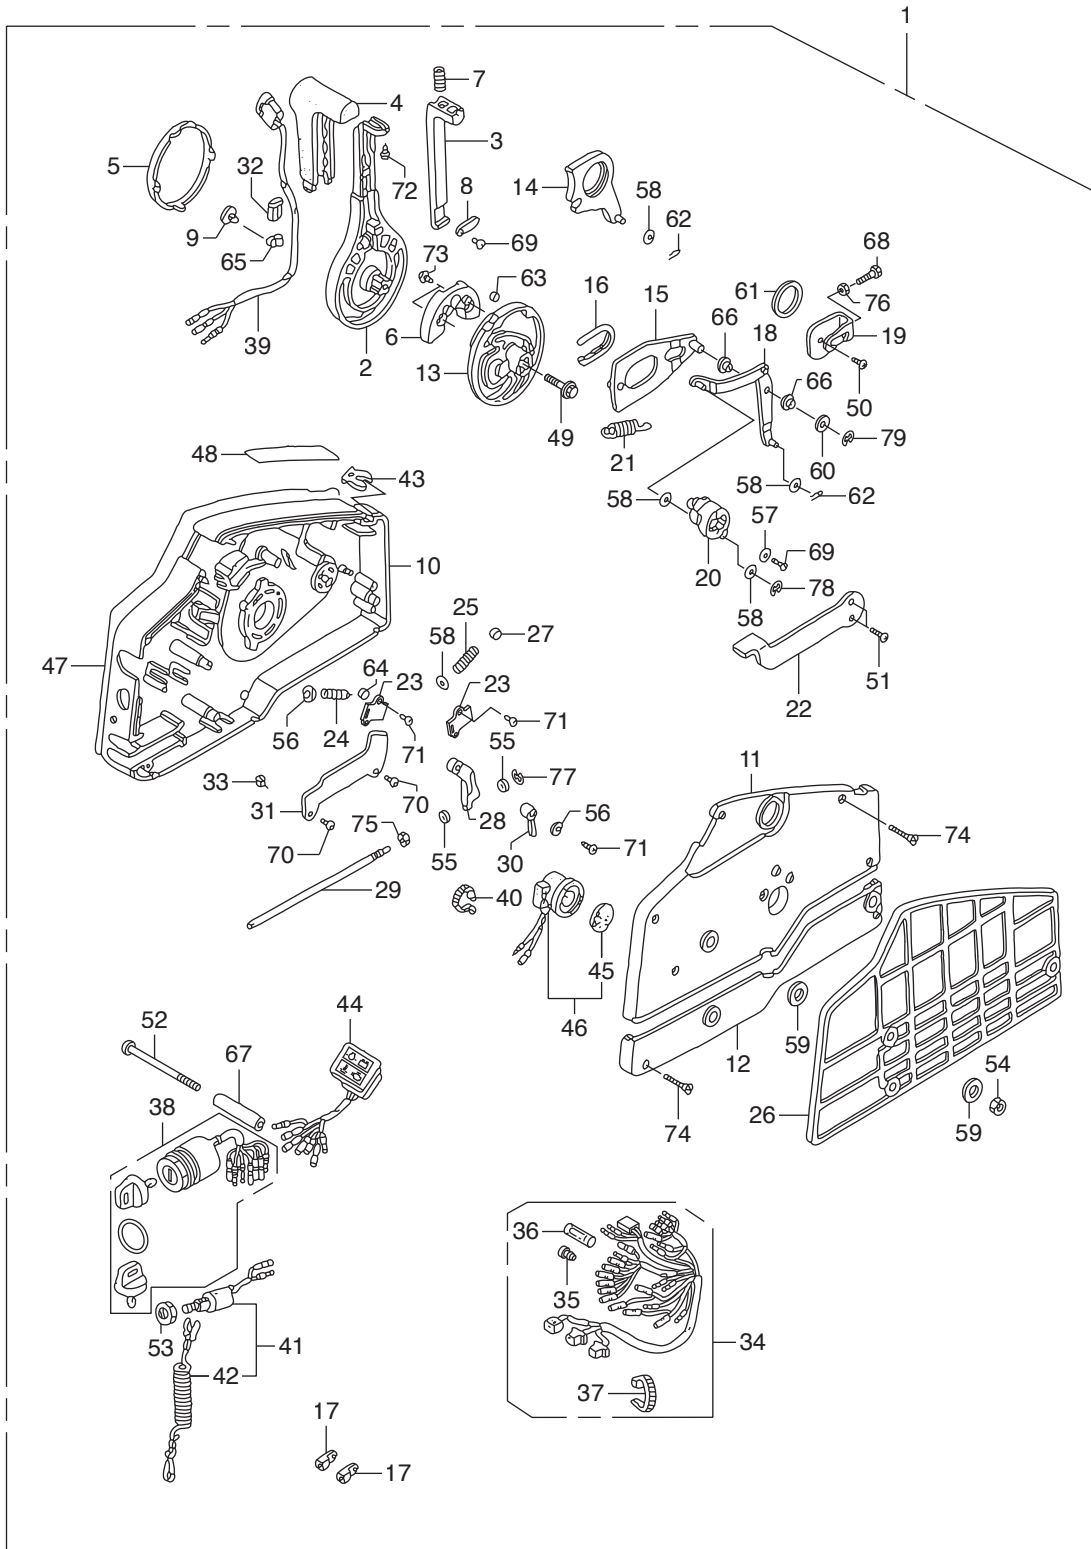


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT115A	
FOP-8-6	59	H921-90512-010	WASHER, 6MM	6	
FOP-8-6	60	H921-90518-000	WASHER, PLAIN, 8MM	1	
FOP-8-6	61	HZV5-90557-000	WASHER, 28MM	1	
FOP-8-6	62	HZV5-90751-000	PIN, LOCK, 6MM	2	
FOP-8-6	63	HZV5-90772-000	PIN, 6X6	1	
FOP-8-6	64	HZV5-91151-000	ROLLER, CLICK	1	
FOP-8-6	65	HSB6-91475-000	CLIP, WIRE HARNESS(6.3MM)	1	
FOP-8-6	66	HZV5-91567-000	COLLAR, LINK JOINT	2	
FOP-8-6	67	HZV5-91570-000	COLLAR, DISTANCE, 6X10X43.5	3	
FOP-8-6	68	HCO-92101-05016-4J	BOLT, HEX., 5X16	1	
FOP-8-6	69	HCO-93500-05010-4J	SCREW, PAN, 5X10	2	
FOP-8-6	70	HCO-93901-250J0	SCREW, TAPPING, 5X8	2	
FOP-8-6	71	HCO-93901-251J0	SCREW, TAPPING, 5X10	3	
FOP-8-6	72	HCO-93901-252J0	SCREW, TAPPING, 5X12	1	
FOP-8-6	73	HCO-93903-262J0	SCREW, TAPPING, 6X16	2	
FOP-8-6	74	HCO-93905-255J0	SCREW, TAPPING, 5X25	7	
FOP-8-6	75	HCO-94001-06490-0S	NUT, HEX., 6MM	1	
FOP-8-6	76	HCO-94002-05490-0S	NUT, HEX., 5MM	1	
FOP-8-6	77	HCO-94540-03029	E-RING, 3MM	1	
FOP-8-6	78	HCO-94540-04029	E-RING, 4MM	1	
FOP-8-6	79	HCO-94540-07029	E-RING, 7MM	1	

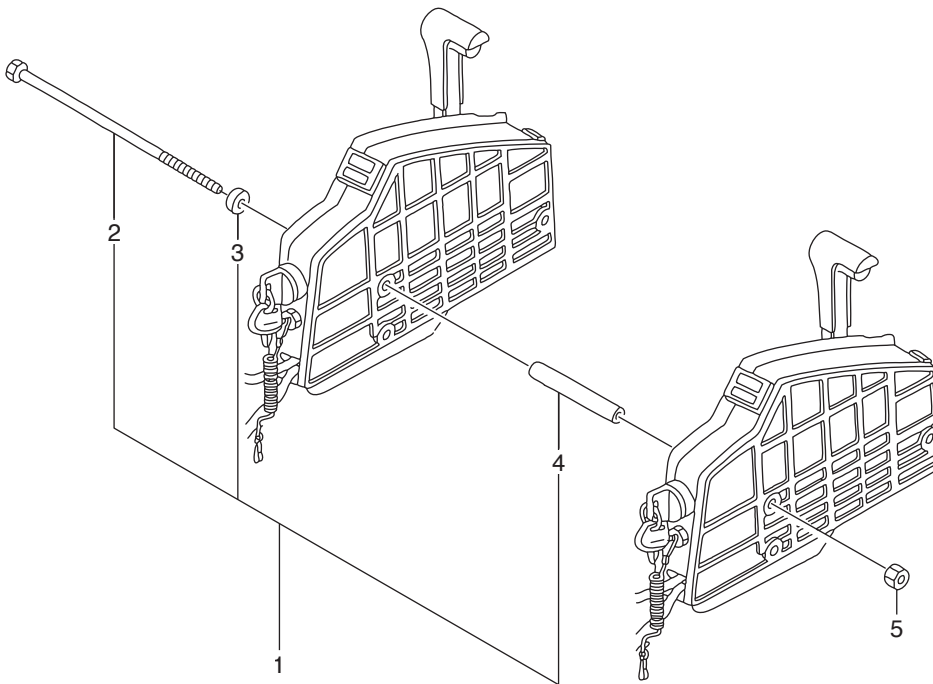



[illegible]

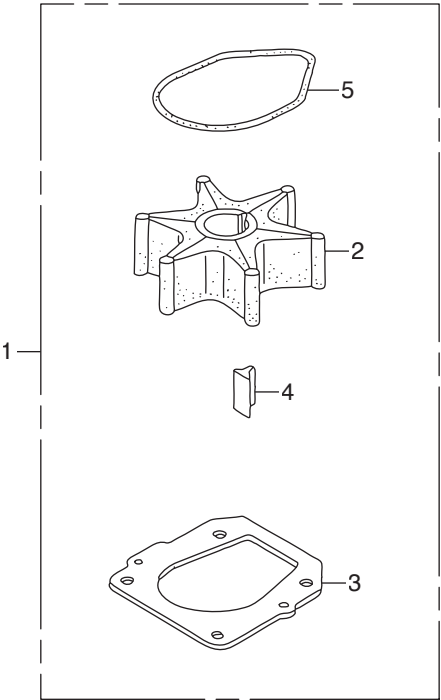


[illegible]

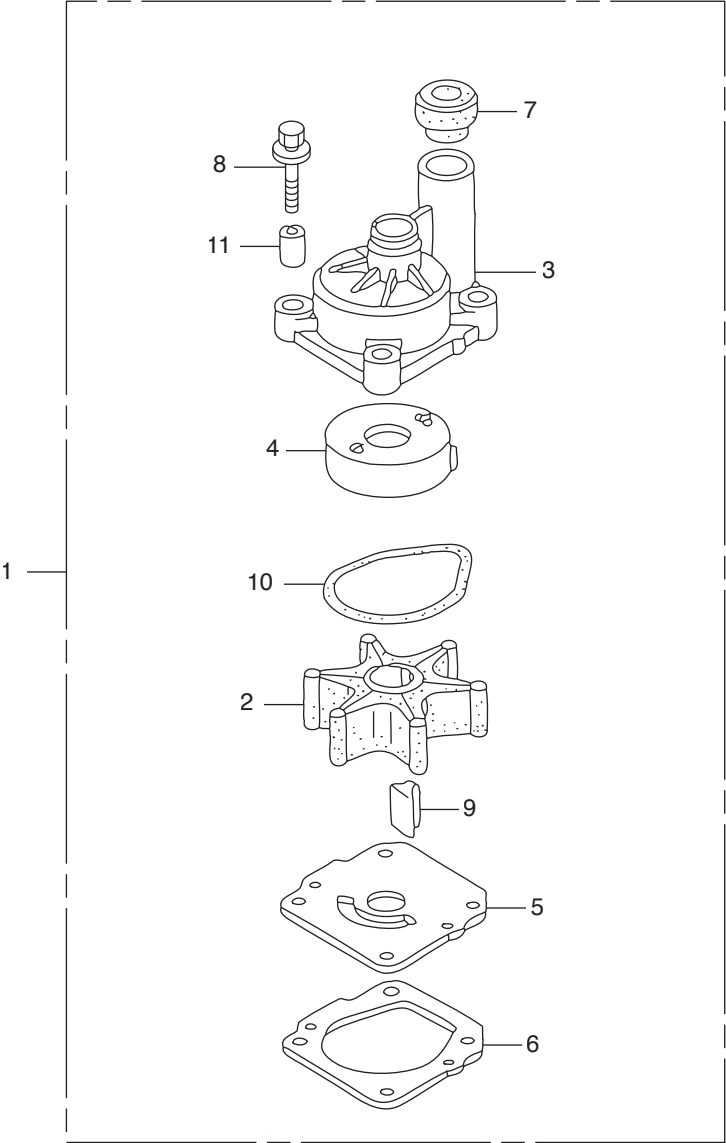


[illegible]

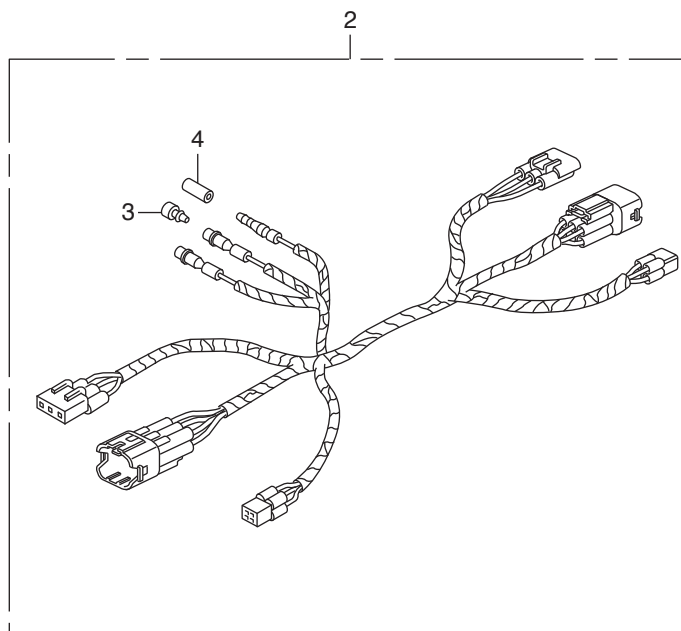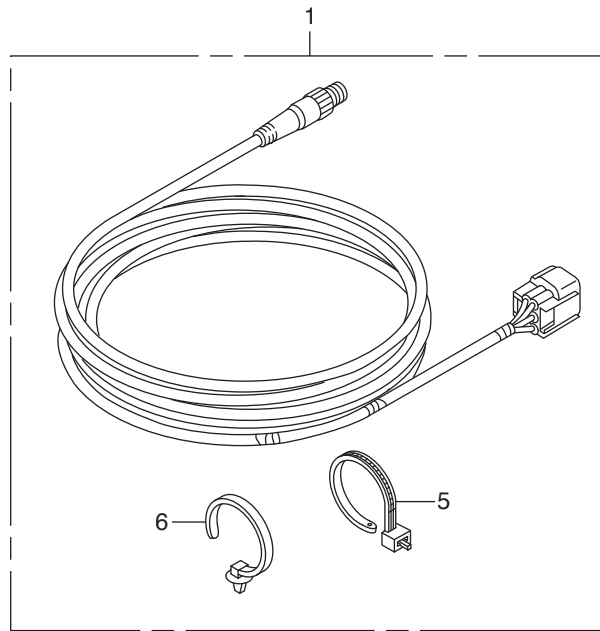

[illegible]

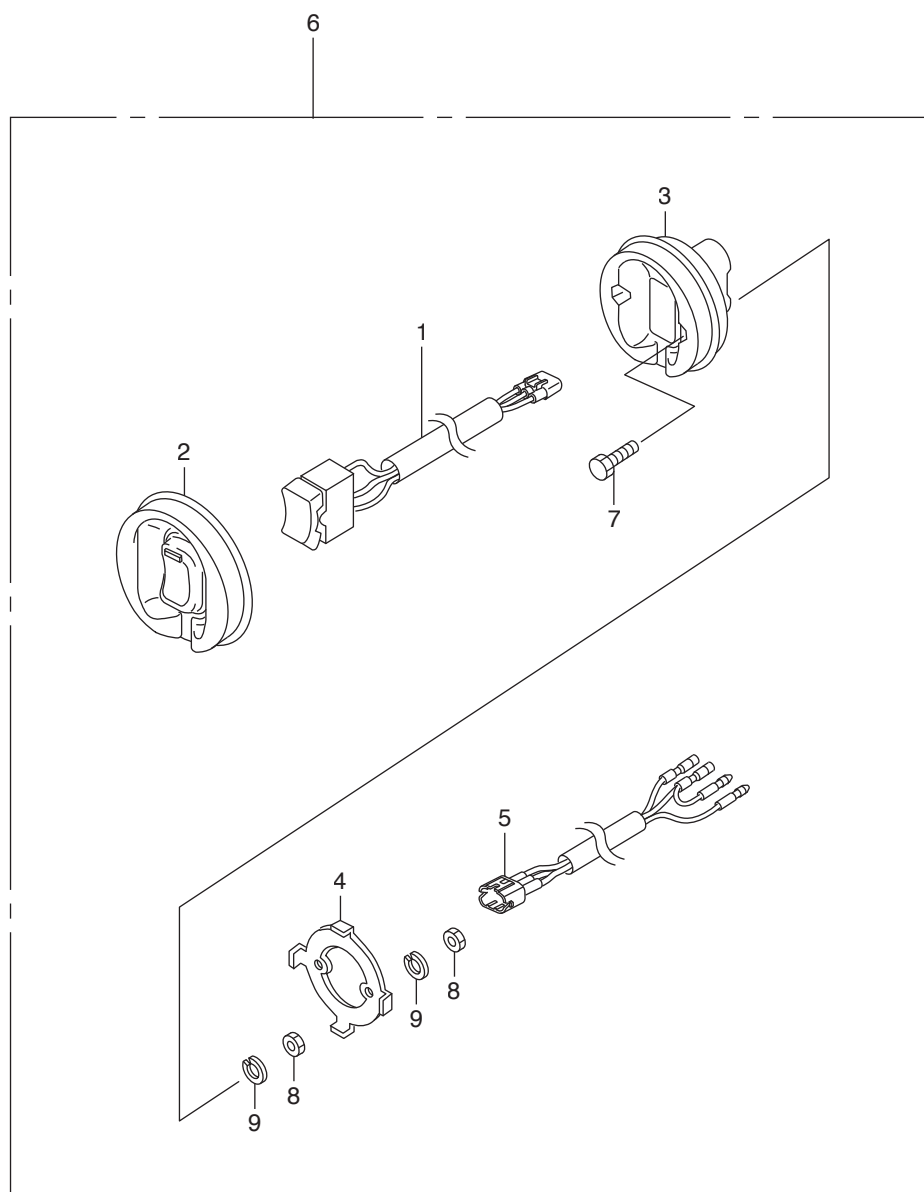

[illegible]

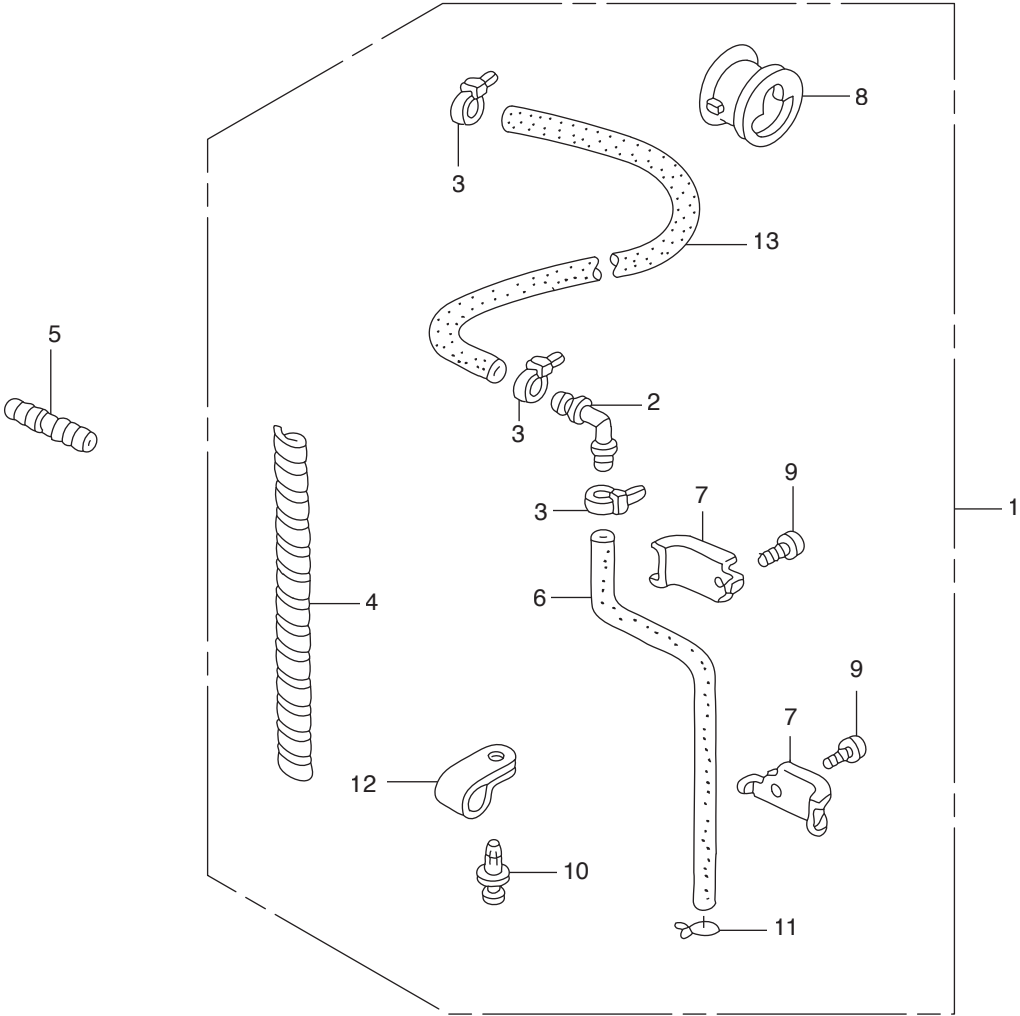

INDEX

<A>		
ARM ASSY., EX. ROCKER	E-9-14	
ARM ASSY., ROCKER	E-9-13	
ARM COMP., CAM CHAIN TENSIONER	E-9-10	
ARM COMP., CLICK	F-2-8	
ARM COMP., LINK JOINT	FOP-8-6-18	
ARM COMP., SHIFT LINK	FOP-8-6-14	
ARM, NEUTRAL LOCK	FOP-8-4-5	
ARM, SHIFT	F-2-13	
ARM, THROTTLE	F-2-6	
ARMATURE COMP.	F-11-6	
		
BAG, TOOL, 230MM	F-13-12	
BALL, STEEL	E-21-6	
BALL, STEEL, #7(7/32)	F-5-29	
BALL, STEEL, #7(7/32)	F-5-1-31	
BALL, STEEL, #9(9/32)	F-5-30	
BALL, STEEL, #9(9/32)	F-5-1-32	
BAND	E-18-10-43	
BAND(BLACK 3.5X140)	F-8-10-1	
BAND(BLACK 3.5X140)	FOP-8-6-40	
BAND, AIR FLOW	E-15-4	
BAND, HARNESS	E-14-30	
BAND, HARNESS OFFSET(10)	F-7-30-2	
BAND, UNDER CASE GROMMET	F-8-10-4	
BAND, WIRE	F-3-2	
BAND, WIRE	FOP-13-3	
BAND, WIRE HARNESS(NATURAL)	FOP-6-1-17	
BASE	FOP-8-4-15	
BASE, INJECTOR	E-14-10	
BEARING A, CONNECTING ROD	E-7-7	
BEARING A, MAIN LOWER(BLUE)	E-7-11	
BEARING A, MAIN UPPER(BLUE)	E-7-9	
BEARING B, CONNECTING ROD	E-7-7	
BEARING B, MAIN LOWER(BLACK)	E-7-11	
BEARING B, MAIN UPPER(BLACK)	E-7-9	
BEARING C, CONNECTING ROD	E-7-7	
BEARING C, MAIN LOWER(BROWN)	E-7-11	
BEARING C, MAIN UPPER(BROWN)	E-7-9	
BEARING D, CONNECTING ROD	E-7-7	
BEARING D, MAIN LOWER(GREEN)	E-7-11	
BEARING D, MAIN UPPER(GREEN)	E-7-9	
BEARING E, CONNECTING ROD	E-7-7	
BEARING E, MAIN LOWER(YELLOW)	E-7-11	
BEARING E, MAIN UPPER(YELLOW)	E-7-9	
BEARING F, CONNECTING ROD	E-7-7	
BEARING F, MAIN LOWER(PINK)	E-7-11	
BEARING F, MAIN UPPER(PINK)	E-7-9	
BEARING G, CONNECTING ROD(RED)	E-7-7	
BEARING, FR.	E-19-4	
BEARING, NEEDLE(25X32X26)	F-5-24	
BEARING, NEEDLE(25X32X26)	F-5-1-26	
BEARING, NEEDLE,	F-4-26	
BEARING, NEEDLE, 20X28X13	F-2-42	
BEARING, NEEDLE, 30X37X26	F-5-20	
BEARING, NEEDLE, 30X37X26	F-5-1-22	
BEARING, RADIAL BALL, 50X90X20	F-5-23	
BEARING, RADIAL BALL, 50X90X20	F-5-1-25	
BEARING, RR.	E-19-3	
BEARING, TAPER ROLLER,	F-4-27	
BEARING, TAPER, 50X90X28	F-5-22	
BEARING, TAPER, 50X90X28	F-5-1-24	
BEARING, THRUST(F)	F-5-21	
BEARING, THRUST(F)	F-5-1-23	
BELT, A.C. GENERATOR(4PK810)	E-13-3	
BLOCK ASSY., CYLINDER	E-3-6	
BLOCK, NEUTRAL LOCK	FOP-8-6-6	
BLOCK, THROTTLE FRICTION	FOP-8-6-28	
BODY COMP., CHAMBER	E-18-10-5	
BODY COMP., OIL JET	E-3-9	
BODY, TROLLING CONTROL SWITCH	FOP-12-3	
BOLT	E-19-14	
BOLT A, HEAD COVER	E-9-20-16	
BOLT A, THROUGH	E-21-18	
BOLT COMP., OIL JET	E-3-10	
BOLT KIT, SIDE REMOTE CONTROL	FOP-9-1	
BOLT, 1/4-28UNF	F-10-26	
BOLT, 3/8-24UNF	F-10-27	
BOLT, CHAIN GUIDE	E-10-9	
BOLT, CONNECTING ROD	E-7-5	
BOLT, CONNECTING ROD	E-7-5	
BOLT, COVER LOCK	F-8-8	
BOLT, DRAIN PLUG	E-6-15	
BOLT, DRAIN PLUG	F-3-14	
BOLT, FLANGE, 10X105	E-10-18	
BOLT, FLANGE, 10X110	E-6-23	
BOLT, FLANGE, 10X25	F-10-32	
BOLT, FLANGE, 10X32	E-9-29	
BOLT, FLANGE, 10X40	E-6-9	
BOLT, FLANGE, 10X40	F-3-20-8	
BOLT, FLANGE, 10X40	F-5-12	
BOLT, FLANGE, 10X40	F-5-1-13	
BOLT, FLANGE, 10X43	E-9-10-19	
BOLT, FLANGE, 10X45	E-4-11	
BOLT, FLANGE, 10X70	E-3-29	
BOLT, FLANGE, 10X70	E-9-10-21	
BOLT, FLANGE, 10X75	E-4-8	
BOLT, FLANGE, 10X80	E-6-10	
BOLT, FLANGE, 10X80	E-19-28	
BOLT, FLANGE, 10X90	E-21-21	
BOLT, FLANGE, 12MM	E-5-15	
BOLT, FLANGE, 12X47	E-9-28	
BOLT, FLANGE, 12X83	E-3-20	
BOLT, FLANGE, 6X10	E-14-22	
BOLT, FLANGE, 6X12	E-6-14	
BOLT, FLANGE, 6X12	E-15-19	
BOLT, FLANGE, 6X12	F-2-30	
BOLT, FLANGE, 6X12	F-3-20-9	
BOLT, FLANGE, 6X12	F-7-3	
BOLT, FLANGE, 6X12	F-7-10-10	
BOLT, FLANGE, 6X12	F-7-20-7	
BOLT, FLANGE, 6X12	F-9-28	
BOLT, FLANGE, 6X14	E-4-9	
BOLT, FLANGE, 6X14	E-9-10-17	
BOLT, FLANGE, 6X14	E-9-20-20	
BOLT, FLANGE, 6X14	E-10-15	
BOLT, FLANGE, 6X14	E-14-21	
BOLT, FLANGE, 6X14	E-18-1-19	
BOLT, FLANGE, 6X14	F-2-28	
BOLT, FLANGE, 6X14(CT200)	E-3-22	
BOLT, FLANGE, 6X14(CT200)	E-9-10-14	
BOLT, FLANGE, 6X14(CT200)	F-7-10-9	
BOLT, FLANGE, 6X16	E-9-10-16	
BOLT, FLANGE, 6X16	E-9-20-18	
BOLT, FLANGE, 6X16	E-18-10-47	
BOLT, FLANGE, 6X16	E-19-24	
BOLT, FLANGE, 6X16	F-2-27	
BOLT, FLANGE, 6X16	F-9-25	
BOLT, FLANGE, 6X18	E-6-22	
BOLT, FLANGE, 6X18	F-2-29	
BOLT, FLANGE, 6X20	E-5-18	
BOLT, FLANGE, 6X20	E-9-34	
BOLT, FLANGE, 6X20	E-9-20-19	
BOLT, FLANGE, 6X20	E-9-20-27	
BOLT, FLANGE, 6X20	E-20-10-5	
BOLT, FLANGE, 6X20	F-2-31	
BOLT, FLANGE, 6X20	F-4-18	
BOLT, FLANGE, 6X20	F-7-20-8	
BOLT, FLANGE, 6X20	F-10-28	
BOLT, FLANGE, 6X22	E-4-10	
BOLT, FLANGE, 6X22	F-7-10-11	
BOLT, FLANGE, 6X22	F-8-10-23	
BOLT, FLANGE, 6X22	F-9-26	
BOLT, FLANGE, 6X23	F-10-24	
BOLT, FLANGE, 6X25	E-3-23	
BOLT, FLANGE, 6X25	E-5-17	
BOLT, FLANGE, 6X25	E-10-19	
BOLT, FLANGE, 6X25	E-18-21	
BOLT, FLANGE, 6X25	E-18-10-46	
BOLT, FLANGE, 6X25	F-9-24	
BOLT, FLANGE, 6X27	E-18-19	
BOLT, FLANGE, 6X28	E-9-10-15	
BOLT, FLANGE, 6X30	E-9-35	
BOLT, FLANGE, 6X32	E-9-20-28	
BOLT, FLANGE, 6X32	E-10-20	
BOLT, FLANGE, 6X38	E-9-10-20	
BOLT, FLANGE, 6X52	E-9-20-17	
BOLT, FLANGE, 8X100	E-6-13	
BOLT, FLANGE, 8X110	E-9-20-30	
BOLT, FLANGE, 8X18	F-7-10-12	
BOLT, FLANGE, 8X20	E-3-24	
BOLT, FLANGE, 8X20	E-19-25	
BOLT, FLANGE, 8X25	E-14-27	
BOLT, FLANGE, 8X28	E-19-26	
BOLT, FLANGE, 8X30	E-18-10-48	
BOLT, FLANGE, 8X30	F-9-23	
BOLT, FLANGE, 8X32	E-5-27	
BOLT, FLANGE, 8X35	E-3-25	
BOLT, FLANGE, 8X35	E-14-25	
BOLT, FLANGE, 8X35	F-10-56	
BOLT, FLANGE, 8X35	FOP-8-6-49	
BOLT, FLANGE, 8X45	E-14-26	
BOLT, FLANGE, 8X50	E-3-28	
BOLT, FLANGE, 8X50	E-10-16	
BOLT, FLANGE, 8X55	E-3-19	
BOLT, FLANGE, 8X55	E-10-10	
BOLT, FLANGE, 8X55	F-8-10-22	
BOLT, FLANGE, 8X60	E-15-20	
BOLT, FLANGE, 8X75	E-10-17	
BOLT, FLANGE, 8X90	E-9-20-29	
BOLT, FRICTION	FOP-8-6-29	
BOLT, FUEL PIPE	E-14-1	
BOLT, HEX.	F-11-32	
BOLT, HEX., 10X235	F-10-29	
BOLT, HEX., 12X119	F-10-31	
BOLT, HEX., 12X130	E-6-12	
BOLT, HEX., 12X130	F-10-31	
BOLT, HEX., 12X225	F-3-20-11	
BOLT, HEX., 12X70	E-6-11	
BOLT, HEX., 4X20	FOP-12-7	
BOLT, HEX., 5X16	FOP-8-6-68	
BOLT, HEX., 6X12	F-4-17	
BOLT, HEX., 6X14	F-10-30	
BOLT, HEX., 6X50	F-3-20	
BOLT, OIL CHECK	F-3-12	
BOLT, RECESSED	F-11-29	
BOLT, SEALING, 14MM	E-9-3	
BOLT, SEALING, 18MM	E-5-7	
BOLT, SEALING, 20MM	E-3-2	
BOLT, SEALING, 20MM	E-5-1	
BOLT, SEALING, 20MM	E-9-20-21	
BOLT, SEALING, 22MM	E-3-26	
BOLT, SEALING, 22MM	E-5-19	
BOLT, SEALING, 28MM	E-3-3	
BOLT, SEALING, 6MM	E-18-10-44	
BOLT, SOCKET(A)	F-11-30	
BOLT, SOCKET(B)	F-11-31	
BOLT, SOCKET, 6X16	F-8-9	
BOLT, SOCKET, 6X20	F-8-7	
BOLT, SOCKET, 6X25	E-1-5	
BOLT, SOCKET, 6X25	E-20-3	
BOLT, SPECIAL ADJUSTER	E-19-23	
BOLT, SPECIAL, 6X17	F-8-20-14	
BOLT, SPECIAL, 6X220	FOP-9-2	
BOLT, SPECIAL, 6X31	E-9-10-18	
BOLT, SPECIAL, 8MM	E-5-14	
BOLT, STUD	E-19-8	
BOLT, STUD 2, 8X25	E-14-23	
BOLT, STUD, 10X55	F-9-27	
BOLT, STUD, 12X150	F-10-25	
BOLT, STUD, 8X32	E-14-24	
BOLT, TENSIONER	E-19-27	
BOLT, TENSIONER PIVOT	E-9-27	
BOLT-WASHER	E-19-13	
BOLT-WASHER, 10X30	E-10-11	
BOLT-WASHER, 10X32	F-3-13	
BOLT-WASHER, 10X40	F-3-15	
BOLT-WASHER, 11X155	E-9-20-15	
BOLT-WASHER, 11X95	E-3-21	
BOLT-WASHER, 16X49	E-7-15	
BOLT-WASHER, 5X30	E-15-18	
BOLT-WASHER, 6X25	E-13-5	
BOLT-WASHER, 6X25	E-15-17	
BOLT-WASHER, 6X27(CT200)	E-20-10-4	
BOLT-WASHER, 8X10	E-3-11	
BOLT-WASHER, 8X30	F-3-20-10	
BOLT-WASHER, 8X30	F-8-10-24	

BOLT-WASHER, 8X35	E-14-20	CAP, L. SIDE COVER	F-8-10-21	CLIP, WIRE HARNESS(6.3MM)	FOP-8-6-65
BOLT-WASHER, 8X35	E-18-20	CAP, OIL(YELLOW)	E-3-12	CLIP, WIRE HARNESS, 25MM.	E-18-1-22
BOLT-WASHER, 8X35	E-18-10-45	CAP, REGULATOR	E-14-6	CLUTCH COMP., OVERRUNNING	E-21-2
BOLT-WASHER, 8X40	F-4-19	CAP, SWITCH	FOP-8-8	CLUTCH COMP., OVERRUNNING	E-21-2
BOLT-WASHER, 8X40	FOP-10-1-8	CAP, WATER JOINT	F-8-20-1	COIL COMP., PLUG HOLE	E-20-1
BOSS, FLYWHEEL	E-5-13	CARTRIDGE, OIL FILTER	E-5-10	COLLAR	E-18-10-23
BOX ASSY., JUNCTION	F-7-20-1	CASE ASSY., BALANCER HOLDER	E-10-1	COLLAR	E-18-10-26
BOX ASSY., REMOTE CONTROL	FOP-8-6-1	CASE ASSY., CHAIN	E-9-10-1	COLLAR, 8.5X14.5.	E-14-35
BOX KIT, REMOTE CONTROL	FOP-8-1	CASE ASSY., ELECTRONIC PARTS.	E-20-10-1	COLLAR, 8.5X14.5.	E-18-28
BOX KIT, REMOTE CONTROL	FOP-8-2-1	CASE ASSY., GEAR(L)	F-3-10-1	COLLAR, 8.5X14.5.	E-18-10-52
BOX KIT, REMOTE CONTROL	FOP-8-4-1	CASE ASSY., GEAR(XL)	F-3-10-1	COLLAR, C.D.I. UNIT CASE	E-13-8
BRACKET A, CABLE	F-2-21	CASE ASSY., GEAR(XL)	F-3-10-1	COLLAR, C.D.I. UNIT CASE	E-15-22
BRACKET A, COUPLER	F-7-10-1	CASE COMP., MOUNT	F-9-21	COLLAR, C.D.I. UNIT CASE	E-20-10-6
BRACKET A, HARNESS CLIP	E-14-15	CASE COMP., PUMP	E-18-10-27	COLLAR, C.D.I. UNIT CASE	F-7-10-17
BRACKET ASSY.	F-11-5	CASE COMP., SILENCER	E-15-5	COLLAR, CAMSHAFT	E-9-33
BRACKET B, CABLE	F-7-10-6	CASE, EXTENSION	F-3-20-1	COLLAR, DISTANCE	F-4-34
BRACKET B, HARNESS CLIP	E-9-10-9	CASE, EXTENSION(L)	F-3-20-1	COLLAR, DISTANCE	FOP-10-1-11
BRACKET C, HARNESS CLIP	E-9-10-10	CASE, GEAR	F-3-3	COLLAR, DISTANCE(A)	FOP-9-3
BRACKET COMP., A.C. GENERATOR	E-19-17	CASE, OIL	E-6-1	COLLAR, DISTANCE(B)	FOP-9-4
BRACKET D, HARNESS CLIP	E-3-15	CASE, SWIVEL	F-10-9	COLLAR, DISTANCE, 6.5X11X7.5	F-9-4
BRACKET E, HARNESS CLIP	E-15-9	CHAIN(176L)(BORG WARNER)	E-9-7	COLLAR, DISTANCE, 6.5X9X3	F-8-12
BRACKET F, CLIP	E-9-20-12	CHAIN(62L)	E-10-5	COLLAR, DISTANCE, 6.5X9X5	F-8-20-21
BRACKET, BUZZER	FOP-6-1-14	CIRCLIP, EXTERNAL, 14MM	F-5-28	COLLAR, DISTANCE, 6X10X43.5	FOP-8-6-67
BRACKET, CLIP B	E-3-14	CIRCLIP, EXTERNAL, 14MM	F-5-1-30	COLLAR, LINK JOINT	FOP-8-6-66
BRACKET, FR.	E-21-10	CIRCLIP, EXTERNAL, 39MM	F-10-48	COLLAR, LOWER CYLINDER	F-10-23
BRACKET, FR. UNDER COVER	F-8-10-5	CIRCLIP, INTERNAL	F-11-34	COLLAR, LOWER MOUNTING	F-3-20-6
BRACKET, HOOK	F-8-3	CIRCLIP, INTERNAL, 40	F-3-20-16	COLLAR, ORIFICE	F-11-46
BRACKET, L. SIDE COVER	F-8-10-7	CLAMP	F-6-5	COLLAR, SLIDING PLATE	FOP-8-6-16
BRACKET, L. STERN	F-10-13	CLAMP	F-6-8	COLLAR, STEERING ROD	F-10-53
BRACKET, LINK JOINT	FOP-8-6-19	CLAMP	FOP-1-2	CONTROL UNIT, ELECTRONIC	E-20-10-3
BRACKET, NEUTRAL SWITCH	F-2-23	CLAMP B, WATER TUBE	E-4-12	CORD ASSY., INDICATOR(20FT)	FOP-6-4
BRACKET, R. SIDE COVER	F-8-10-6	CLAMP, 18.5MM	E-9-10-28	CORD ASSY., INDICATOR(25FT)	FOP-6-4
BRACKET, R. STERN	F-10-12	CLAMP, 18.5MM	E-13-7	CORD ASSY., INDICATOR(30FT)	FOP-6-4
BRACKET, RELAY	E-3-18	CLAMP, ENGINE SUB CORD	F-7-30-3	CORD COMP., EMERGENCY	FOP-6-1-9
BRACKET, REMOTE CONTROL	FOP-8-12	CLAMP, FUEL HOSE	E-15-23	CORD COMP., EMERGENCY	FOP-8-6-42
BRACKET, REMOTE CONTROL	FOP-8-2-13	CLAMP, HARNESS	FOP-8-6-9	COTTER, VALVE(FUJI VALVE)	E-9-26
BRACKET, RR.	E-21-11	CLAMP, HOSE	E-18-12	COVER ASSY.	FOP-8-4-11
BRACKET, SENSOR CORD	E-15-10	CLAMP, HOSE	F-7-30-1	COVER ASSY.	FOP-8-4-11
BRACKET, SHIFT LINK	F-2-19	CLAMP, PIPE	E-18-13	COVER ASSY., ENGINE *T107BAY BLUE.	F-8-1
BRACKET, TILTING	F-10-17	CLAMP, POWER TILT CORD	FOP-8-6-31	COVER ASSY., ENGINE *T107BAY BLUE.	F-8-1
BRACKET, TROLLING CONTROL	FOP-12-4	CLAMP, PURGE HOSE	E-18-30	COVER ASSY., OIL PATH	E-9-20-8
BRACKET, WATER TUBE CLAMP	E-4-5	CLAMP, TUBE(8.0)	E-18-10-50	COVER B, TERMINAL	F-7-10-5
BREAKER ASSY.	F-11-1	CLAMP, TUBE(D10.5)	E-4-10-8	COVER B, TERMINAL(L)	F-7-2
BRUSH ASSY.	F-11-2	CLAMP, TUBE(D10.5)	F-9-29	COVER B, TERMINAL(L)	F-7-10-4
BRUSH SET	E-21-7	CLAMP, TUBE(D10.5)	F-9-31	COVER COMP.	E-18-10-6
BRUSH SET	E-21-7	CLAMP, TUBE(D10.7)	E-18-22	COVER COMP., CYLINDER HEAD	E-1-1
BUFFER, PLATE	E-18-1-4	CLAMP, TUBE(D17)	E-15-21	COVER COMP., FUSE	F-7-20-2
BUSH A, COVER LOCK	F-2-25	CLAMP, TUBE(D25.0)	E-4-10-10	COVER COMP., PLUG HOLE COIL	E-1-4
BUSH A, COVER LOCK	F-8-10-11	CLAMP, TUBE(D32.5)	E-4-10-9	COVER, BEARING	E-19-5
BUSH A, COVER LOCK	F-8-10-12	CLAMP, WATER TUBE	E-4-10-11	COVER, CHAIN CASE	E-9-10-2
BUSH B, COVER LOCK	F-8-10-13	CLIP B1, TUBE	F-9-32	COVER, DRAIN PLUG	F-8-20-8
BUSH COMP., VERTICAL SHAFT	F-3-20-2	CLIP(10.7MM)	F-8-20-18	COVER, DUAL GRIP	FOP-8-2-8
BUSH, BLADE BRAKE	F-2-26	CLIP(14MM)	FOP-13-12	COVER, EX. MANIFOLD	E-4-3
BUSH, INSULATION	E-19-20	CLIP, BRAKE PIPE(A)	F-2-24	COVER, FLUSH VALVE	F-9-14
BUSH, LOWER CYLINDER	F-11-25	CLIP, EMERGENCY LOCK	FOP-6-1-10	COVER, FR. SEPARATE	F-8-20-6
BUSH, MOTOR CODE	F-11-19	CLIP, EMERGENCY LOCK	FOP-8-6-43	COVER, GEAR CASE	F-3-5
BUSH, MOTOR CODE	FOP-13-8	CLIP, FUEL HOSE	E-18-25	COVER, GRIP	FOP-8-4-4
BUSH, SWIVEL CASE	F-10-11	CLIP, FUEL TUBE, 14.	E-14-31	COVER, IMPELLER	F-4-5
BUSH, SWIVEL CASE	F-11-10	CLIP, FUEL TUBE, 14.	F-7-10-15	COVER, IMPELLER	FOP-10-1-5
BUSH, TILT ARM	F-10-16	CLIP, HARNESS	E-18-27	COVER, L. ENGINE UNDER	F-8-20-10
BUTTON, THROTTLE	FOP-8-9	CLIP, HARNESS BAND(BLACK)	E-3-40	COVER, L. GRIP	FOP-8-5
BUTTON, THROTTLE	FOP-8-2-10	CLIP, HARNESS BAND(BLACK)	F-7-6	COVER, L. GRIP	FOP-8-2-6
BUTTON, THROTTLE	FOP-8-4-8	CLIP, HARNESS BAND(BLACK)	F-7-10-16	COVER, LOCK ARM	FOP-8-4-6
BUZZER COMP., WARNING	FOP-6-1-13	CLIP, HARNESS BAND(BLACK)	FOP-11-6	COVER, OIL PUMP	E-5-4
BUZZER COMP., WARNING	FOP-8-6-46	CLIP, HARNESS BAND(NATURAL)	E-4-17	COVER, PUMP(A)	E-18-10-29
<C>		CLIP, INJECTOR	E-14-3	COVER, PUMP(B)	E-18-10-28
CABLE ASSY., REMOTE CONTROL(B) ...	FOP-8-6-34	CLIP, MUDGUARD	F-8-20-19	COVER, R. ENGINE UNDER	F-8-20-9
CABLE ASSY., STARTER	F-7-10-2	CLIP, PISTON PIN	E-7-4	COVER, RELIEF VALVE	F-9-18
CABLE ASSY., SWITCH PANEL	FOP-6-9	CLIP, SENSOR HOSE	E-18-18	COVER, STARTER TERMINAL	F-7-10-3
CABLE ASSY., SWITCH PANEL	FOP-6-9	CLIP, TUBE	E-18-1	COVER, THERMOSTAT	E-9-10-6
CABLE ASSY., SWITCH PANEL	FOP-6-9	CLIP, TUBE	E-18-1-1	COVER, WATER JACKET	E-18-10-12
CABLE COMP. A, COVER LOCK	F-8-10-8	CLIP, TUBE	F-9-2	CRANKCASE COMP.	E-3-1
CABLE COMP. B, COVER LOCK	F-8-10-9	CLIP, TUBE(B1 14.5)	E-18-23	CRANKSHAFT COMP.	E-7-8
CABLE SET, PANEL INDICATOR	FOP-6-2	CLIP, TUBE(B1 14.5)	E-18-1-20	CRANKSHAFT COMP.	E-7-8
CABLE SET, PANEL INDICATOR	FOP-6-2	CLIP, TUBE(B12)	E-18-24	CUP SET, WATER SEPARATOR	E-18-1-3
CABLE SET, PANEL INDICATOR	FOP-6-2	CLIP, TUBE(B12)	E-18-1-21	CUP, FUEL STRAINER	E-18-1-13
CAMSHAFT COMP., EX.	E-9-4	CLIP, TUBE(B12)	F-9-30	<D>	
CAMSHAFT COMP., IN.	E-9-1	CLIP, TUBE(B8)	FOP-13-11	DAMPER, HOOK	F-8-4
CAP COMP., OIL TANK	F-11-28	CLIP, TUBE(BLACK)(135MM)	E-18-29	DOWEL PIN, 10X12	E-7-17
CAP, BOLT, 8MM	E-3-27	CLIP, TUBE, 3.5.	E-13-6	DOWEL PIN, 10X16	E-5-25
CAP, GRIP	FOP-8-7	CLIP, WIRE HARNESS	F-7-5	DOWEL PIN, 10X16	E-6-20
CAP, GRIP	FOP-8-2-9	CLIP, WIRE HARNESS	F-8-20-20	DOWEL PIN, 10X16	E-9-20-25
CAP, HANDLE	FOP-8-6-5	CLIP, WIRE HARNESS	F-10-49	DOWEL PIN, 13X14	E-3-34

DOWEL PIN, 13X20	E-3-33	GROMMET, VAPOR SEPARATOR	E-18-10-34	KEY, WOODRUFF	FOP-10-4
DOWEL PIN, 14X20	E-5-26	GROMMET, VAPOR SEPARATOR	E-18-10-35	KEY, WOODRUFF	FOP-10-1-9
DOWEL PIN, 14X20	E-6-21	GROMMET, WATER CHECK	F-8-20-13	KIT, CABLE(NMEA)(6FT)	FOP-11-1
DOWEL PIN, 14X20	E-9-20-26	GROMMET, WATER TUBE	E-6-6	KIT, COVER HOOK	F-8-15
DOWEL PIN, 18X13	E-10-12	GUIDE COMP. B, CAM CHAIN	E-9-12	<L>	
DOWEL PIN, 18X22	E-3-32	GUIDE COMP., BALANCER SHAFT	E-10-7	LABEL, FUSE	F-12-1
DOWEL PIN, 4.2X10.3	E-9-32	GUIDE COMP., CAM CHAIN	E-9-11	LABEL, OIL CAUTION(E)	F-12-7
DOWEL PIN, 6X10	E-6-19	GUIDE COMP., EX	F-9-5	LABEL, OIL CAUTION(EF)	F-12-7
DOWEL PIN, 6X10	F-3-18	GUIDE COMP., ROD	F-11-15	LABEL, WARNING OPERATOR	F-12-8
DOWEL PIN, 6X10	F-3-20-17	GUIDE COMP., ROD	F-11-16	LABEL, WARNING OPERATOR(EC)	F-12-8
DOWEL PIN, 6X10	F-4-25	GUIDE, ENGINE COVER AIR	F-8-6	LAMP ASSY., INDICATION	FOP-8-6-44
DOWEL PIN, 8X10	E-10-13	GUIDE, EX. VALVE(OS)	E-9-20-3	LAMP ASSY., INDICATION(4-LED)	FOP-6-1-11
DRIVER, SCREW(NO.2 + -)	F-13-1	GUIDE, IN. VALVE(OS)	E-9-20-2	LEVER SET	E-21-17
DUCT A, SILENCER	E-13-1	<H>		LEVER, COVER LOCK	F-8-10-10
DUCT B, SILENCER	E-13-2	HANDLE, REMOTE CONTROL	FOP-8-4	LEVER, HANDLE LOCK	FOP-8-6-3
<E>		HANDLE, REMOTE CONTROL	FOP-8-2-5	LEVER, IDLE	FOP-8-6-22
END COVER, RR.	E-19-19	HANDLE, REMOTE CONTROL	FOP-8-4-3	LINE, FUEL	E-14-4
END, NIPPLE	F-3-10	HANDLE, REMOTE CONTROL	FOP-8-6-2	LINER, PUMP	F-4-4
END, NIPPLE	FOP-13-5	HANGER B, ENGINE	E-19-1	LINER, PUMP	FOP-10-1-4
E-RING, 10MM	F-4-35	HANGER, ENGINE	E-3-5	LINER, SWIVEL CASE	F-10-10
E-RING, 12MM	F-2-51	HARNESS ASSY., MAIN WIRE	F-7-1	LINK, THROTTLE	F-2-3
E-RING, 15MM	F-11-47	HARNESS ASSY., REMOTE CONTROL	FOP-11-2	LINKAGE, PIVOT	F-2-1
E-RING, 3MM	FOP-8-6-77	HARNESS ASSY., SWITCH PANEL	FOP-6-1-4	LOCK COMP., FR.	F-8-10-19
E-RING, 4MM	F-2-49	HARNESS COMP.	E-18-10-42	LOCK COMP., FR.	F-8-10-19
E-RING, 4MM	FOP-8-6-78	HARNESS, TROLLING CONTROL	FOP-12-5	LOCK COMP., SIDE	F-8-10-20
E-RING, 6MM	F-2-50	HEAD KIT, CYLINDER	E-9-20-1	LOCK COMP., SIDE	F-8-10-20
E-RING, 6MM	F-8-10-29	HOLDER	E-18-10-11	LOW PERMEATION HOSE L=1600	F-6-7
E-RING, 6MM	FOP-8-36	HOLDER ASSY., BRUSH	E-19-2	LOW PERMEATION HOSE L=700	F-6-6
E-RING, 6MM	FOP-8-2-41	HOLDER COMP., BRUSH	E-21-9	<M>	
E-RING, 6MM	FOP-8-4-28	HOLDER COMP., BRUSH	E-21-9	MANIFOLD COMP., EX.	E-4-2
E-RING, 7MM	FOP-8-6-79	HOLDER, BEARING	F-5-1-11	MANIFOLD COMP., INLET	E-14-14
<F>		HOLDER, DRAIN TUBE	F-2-47	MARK, FAST IDLE	FOP-8-6-48
FILTER ASSY., SPOOL VALVE	E-9-20-7	HOLDER, NEUTRAL LOCK	FOP-8-4-14	MARK, FLUSH MOUNT	FOP-8-4-19
FILTER ASSY., VTC	E-9-20-11	HOLDER, OIL FILTER	E-5-16	MARK, FR. EMBLEM(115)	F-12-4
FILTER B	F-11-17	HOLDER, PROPELLER SHAFT	F-5-10	MARK, HANDLE FLUSH MOUNT	FOP-8-4-18
FILTER COMP., ELECTRONIC AIR	E-14-16	HOLDER, PROPELLER SHAFT	F-5-1-10	MARK, HANDLE FLUSH MOUNT	FOP-8-4-18
FLANGE COMP., OIL FILTER	E-5-11	HOLDER, SEAL	F-2-20	MARK, REMOTE CONTROL(DUAL)	FOP-8-2-24
FLOAT SET	E-18-10-2	HOLDER, SHIFT ROD	F-4-11	MARK, REMOTE CONTROL(SINGLE)	FOP-8-21
FLYWHEEL COMP.	E-5-12	HOLDER, UPPER MOUNTING	F-10-7	MARK, RR.(115)	F-12-2
FRAME COMP., MOUNTING	F-10-5	HOSE COMP., FUEL	E-18-6	MARK, SIDE STRIPE	F-12-3
FUSE, BLOCK 100A(L TYPE)	F-7-20-3	HOSE KIT, RIGGING	FOP-1-1	MARK, SIDE STRIPE	F-12-10
FUSE, MINI(10A)	F-7-20-10	HOSE, PRESSURE REGULATOR	E-18-14	METAL COMP., ANODE	F-3-9
FUSE, MINI(15A)	F-7-20-11	HOUSING ASSY., L. INNER	FOP-8-3	METAL KIT, ANODE	F-10-1
FUSE, MINI(30A)	F-7-20-12	HOUSING ASSY., L. INNER	FOP-8-2-3	METAL, ANODE	E-4-1
<G>		HOUSING ASSY., R. INNER	FOP-8-2-4	METAL, BALANCER SHAFT(DAIDO)	E-10-8
GASKET A, INJECTOR BASE	E-14-11	HOUSING ASSY., R. INNER	FOP-8-4-2	METER LEAD WIRE	FOP-2-6
GASKET B, IMPELLER	F-4-6	HOUSING COMP., DUAL REMOTE	FOP-8-2-14	MOTOR ASSY., POWER TILT	F-11-4
GASKET B, IMPELLER	FOP-10-3	HOUSING COMP., DUAL REMOTE	FOP-8-2-14	MOTOR ASSY., STARTER	E-21-1
GASKET B, IMPELLER	FOP-10-1-6	HOUSING COMP., REMOTE CONTROL	FOP-8-13	MOUNT COMP., UPPER RUBBER	F-10-6
GASKET COMP., CYLINDER HEAD	E-9-20-6	HOUSING COMP., REMOTE CONTROL	FOP-8-13	<N>	
GASKET COMP., EX. MANIFOLD	E-4-4	HOUSING COMP., REMOTE CONTROL	FOP-8-6-10	NIPPLE, GREASE	F-10-50
GASKET, EX. GUIDE	F-9-6	HOUSING COMP., REMOTE CONTROL	FOP-8-6-11	NIPPLE, SENSOR	F-3-11
GASKET, IDLE EX. PORT	F-9-8	HOUSING, IMPELLER	F-4-3	NUT, ADJUSTER ROD	F-10-36
GASKET, MOUNT CASE	E-6-8	HOUSING, IMPELLER	FOP-10-1-3	NUT, CASTLE, 18MM	F-5-13
GASKET, UPPER MOUNTING HOLDER	F-10-8	HOUSING, LEAD	FOP-8-14	NUT, CASTLE, 18MM	F-5-1-14
GAUGE COMP., OIL LEVEL	E-6-5	HOUSING, LEAD	FOP-8-2-15	NUT, CLIP	F-8-20-16
GEAR ASSY., PLANETARY	E-21-3	HOUSING, LOWER CENTER MOUNTING	F-3-20-7	NUT, FLANGE CAP, 10MM	E-3-30
GEAR ASSY., INTERNAL	E-21-15	HOUSING, LOWER MOUNTING	F-3-20-4	NUT, FLANGE CAP, 6MM	E-1-6
GEAR ASSY., INTERNAL	E-21-23	HOUSING, REMOTE CONTROL BOX(C)	FOP-8-6-12	NUT, FLANGE, 10MM	F-10-37
GEAR COMP., BEVEL(FORWARD 30T)	F-5-7	HOUSING, WATER SEAL	F-4-15	NUT, FLANGE, 12MM	F-3-20-13
GEAR COMP., BEVEL(RVS. 30T)	F-5-1-8	<I>		NUT, FLANGE, 12MM	F-10-33
GEAR, BEVEL(FORWARD 30T)	F-5-1-7	IMPELLER, PUMP	F-4-2	NUT, FLANGE, 5MM	FOP-6-1-2
GEAR, BEVEL(RVS. 30T)	F-5-8	IMPELLER, PUMP	FOP-10-2	NUT, FLANGE, 6MM	E-14-29
GEAR, PINION	F-4-16	IMPELLER, PUMP	FOP-10-1-2	NUT, FLANGE, 8MM	E-14-28
GENERATOR ASSY., A.C.	E-19-15	INJECTOR ASSY., FUEL	E-14-2	NUT, FLANGE, 8MM	E-19-29
GENERATOR ASSY., A.C.	E-19-15	INSULATOR	E-18-10-31	NUT, HEX, 12MM	F-10-54
GRIP	F-13-2	INSULATOR COMP.	E-18-10-30	NUT, HEX, 16MM	F-8-20-17
GRIP, REMOTE CONTROL HANDLE	FOP-8-6	<J>		NUT, HEX, 16MM	FOP-6-1-16
GRIP, REMOTE CONTROL HANDLE	FOP-8-2-7	JOINT A, BREATHER	FOP-13-2	NUT, HEX, 16MM	FOP-8-6-53
GRIP, REMOTE CONTROL HANDLE	FOP-8-6-4	JOINT ASSY (INLET)	F-6-2	NUT, HEX, 18MM	F-4-21
GROMMET, ELECTRONIC PARTS CASE	E-20-10-2	JOINT ASSY (OUTLET)	F-6-3	NUT, HEX, 20MM	F-2-32
GROMMET, EXTENSION CASE	F-4-12	JOINT SET	E-18-10-8	NUT, HEX, 4MM	FOP-12-8
GROMMET, GEAR CASE	F-3-4	JOINT, DRIVE	F-11-14	NUT, HEX, 5MM	F-2-48
GROMMET, POWER TILT SWITCH	F-8-20-4	JOINT, FOUR-WAY	E-4-10-6	NUT, HEX, 5MM	FOP-8-29
GROMMET, RELAY	F-7-10-8	JOINT, FUEL PIPE	E-14-8	NUT, HEX, 5MM	FOP-8-35
GROMMET, REMOTE CONTROL CABLE	F-8-10-2	JOINT, FUEL PIPE	E-14-9	NUT, HEX, 5MM	FOP-8-2-33
GROMMET, SILENCER	E-15-6	JOINT, FUEL PIPE	E-18-10-38	NUT, HEX, 5MM	FOP-8-2-34
GROMMET, SILENCER DUCT	E-15-7	JOINT, FUEL TUBE	E-4-10-2	NUT, HEX, 5MM	FOP-8-2-40
GROMMET, TA SENSOR	E-15-14	JOINT, FUEL TUBE	E-18-1-18	NUT, HEX, 5MM	FOP-8-6-76
GROMMET, UNDER CASE	E-13-4	JOINT, WATER HOSE	F-9-12	NUT, HEX, 6MM	E-19-31
GROMMET, UNDER CASE	E-15-15	<K>		NUT, HEX, 6MM	F-8-14
GROMMET, UNDER CASE(C)	F-8-10-3	KEY, 4.5X21	E-7-16	NUT, HEX, 6MM	FOP-8-4-25
GROMMET, UNDER COVER	F-8-20-5	KEY, WOODRUFF	F-4-24	NUT, HEX, 6MM	FOP-8-6-54

NUT, HEX., 6MM	FOP-8-6-75	PACKING, DUAL	FOP-8-2-19	PROPELLER COMP., THREE BLADES	F-5-11
NUT, HEX., 6MM	FOP-9-5	PACKING, ELECTRONIC AIR	E-14-18	PROPELLER COMP., THREE BLADES	F-5-11
NUT, LOCK, 64MM	F-4-20	PACKING, FLASH VALVE	F-9-19	PROPELLER COMP., THREE BLADES	F-5-11
NUT, PULLEY LOCK	E-19-7	PACKING, INTAKE MANIFOLD	E-14-12	PROPELLER COMP., THREE BLADES	F-5-11
NUT, SELF-LOCK(25X2.0)	F-10-35	PACKING, OIL PAN	E-6-2	PROPELLER COMP., THREE BLADES	F-5-11
NUT, SELF-LOCK(3/8-24UNF)	F-10-38	PACKING, OIL PUMP BODY	E-5-3	PROPELLER COMP., THREE BLADES	F-5-11
NUT, SELF-LOCK(7/8-14UNF)	F-10-34	PACKING, SINGLE	FOP-8-18	PROPELLER COMP., THREE BLADES	F-5-11
NUT, SELF-LOCK, 5MM	F-3-17	PACKING, THERMOSTAT COVER	E-9-10-7	PROPELLER COMP., THREE BLADES	F-5-11
NUT, SELF-LOCK, 6MM	F-3-16	PACKING, THERMOSTAT SPACER	E-9-10-8	PROPELLER COMP., THREE BLADES	F-5-11
NUT, TAPPET ADJUSTING	E-9-30	PACKING, THROTTLE BODY	E-14-13	PROPELLER COMP., THREE BLADES	F-5-11
NUT, TAPPET ADJUSTING	E-9-31	PANEL ASSY., TROLLING CONTROL	FOP-12-6	PROPELLER COMP., THREE BLADES	F-5-11
NUT, WATER MOUTH	F-9-11	PANEL KIT, SWITCH(4-LED)	FOP-6-1-1	PROPELLER COMP., THREE BLADES	F-5-1-12
NUT-WASHER, 5MM	E-19-30	PANEL KIT, SWITCH(4-LED) (EU)	FOP-6-1-1	PROPELLER COMP., THREE BLADES	F-5-1-12
NUT-WASHER, 6MM	F-7-4	PANEL, CONTROL	FOP-6-1-3	PROPELLER COMP., THREE BLADES	F-5-1-12
NUT-WASHER, 8MM	F-7-10-13	PANEL, CONTROL	FOP-6-1-3	PROPELLER COMP., THREE BLADES	F-5-1-12
<O>		PIN A, DOWEL, 12X16	E-10-14	PULLER, MINI FUSE	F-7-20-4
OIL SEAL	F-11-35	PIN, 6X6	FOP-8-6-63	PULLEY	E-19-6
OIL SEAL, 14X26X6	F-2-44	PIN, LINK	F-2-38	PULLEY, CRANKSHAFT	E-7-14
OIL SEAL, 31X46X7(NOK)	E-5-21	PIN, LOCK, 6MM	FOP-8-6-62	PUMP ASSY.	F-11-12
OIL SEAL, 39.5X52X6(ARAI)	F-10-51	PIN, PISTON	E-7-3	PUMP ASSY., FUEL	E-18-5
OIL SEAL, 43X58X7(ARAI)	E-9-10-22	PIN, SHIFT LINK	F-2-39	PUMP ASSY., OIL	E-5-2
OIL SEAL, 46X60X9	E-5-20	PIN, SHIFTER, 8X47	F-5-2	PUMP KIT, IMPELLER	FOP-10-1
OIL SEAL, 80X98X10(ARAI)	E-3-35	PIN, SHIFTER, 8X47	F-5-1-2	PUMP KIT, IMPELLER	FOP-10-1-1
ORIFICE, LOWER BLOCK	E-3-4	PIN, SNAP, 12MM	F-2-41	PUMP UNIT, FUEL	E-18-10-4
ORIFICE, OIL JET	E-3-8	PIN, SPLIT, 4.0	F-5-19	PUMP UNIT, FUEL(B)	E-18-10-9
O-RING	E-15-12	PIN, SPLIT, 4.0	F-5-1-21	<R>	
O-RING	E-18-1-5	PIN, SPRING, 2.5X20	F-10-55	RECEIVER, THRUST	F-10-22
O-RING	E-18-1-16	PIN, UPPER CYLINDER	F-11-26	RECTIFIER ASSY.	E-19-21
O-RING	E-18-10-13	PIPE COMP., OIL LEVEL	F-9-1	REGULATOR ASSY.	E-19-22
O-RING	E-18-10-14	PIPE, HARNESS GUIDE	FOP-8-6-32	REGULATOR ASSY., PRESSURE	E-14-5
O-RING	E-18-10-15	PISTON A	E-7-2	RELAY ASSY., FUEL PUMP(DENSO)	F-7-20-5
O-RING	E-18-10-16	PISTON B	E-7-2	RELAY ASSY., POWER TILT	F-7-10-7
O-RING	E-18-10-17	PISTON COMP., FREE	F-11-22	RELAY ASSY., POWER(12V-20A)	F-7-20-6
O-RING	E-18-10-18	PIVOT, SHIFT	F-2-15	RETAINER, VALVE SPRING	E-9-24
O-RING	E-18-10-19	PIVOT, SHIFT	FOP-8-6-17	RING	E-18-10-32
O-RING SET, 3.5X31.7	F-11-43	PIVOT, SHIFT SLIDE	F-2-16	RING SET, PISTON(STD.)	E-7-1
O-RING, 1.8X69.6	F-11-37	PLATE	E-18-1-17	RING, BACK UP	F-11-18
O-RING, 1.8X7.7	F-11-39	PLATE	E-18-10-17	RING, CROSS PIN	F-5-3
O-RING, 1.9X11	F-11-40	PLATE COMP., SLIDING	FOP-8-6-15	RING, CROSS PIN	F-5-1-3
O-RING, 105X3.1	F-5-27	PLATE COMP., THROTTLE	F-2-4	RING, INNER(15X20X23)	F-2-43
O-RING, 105X3.1	F-5-1-29	PLATE SET, TRANSOM(5.5MM FLAT)	FOP-7-2	RING, STOPPER	F-2-11
O-RING, 11.5X3.5	F-9-35	PLATE SET, TRIM ADJUST	FOP-7-1	RING, WATER TUBE SEAL	F-4-8
O-RING, 13X1.5(ARAI)	E-3-39	PLATE, CABLE CLAMP	FOP-8-11	RING, WATER TUBE SEAL	FOP-10-1-7
O-RING, 15.54X2.26	F-10-52	PLATE, CABLE CLAMP	FOP-8-2-12	ROD COMP. A, SHIFT(L)	F-2-10
O-RING, 15X1.9	E-9-10-27	PLATE, CRANK PULSER	E-7-13	ROD COMP. A, SHIFT(XL)	F-2-10
O-RING, 15X1.9	E-9-20-22	PLATE, DWELL	FOP-8-15	ROD COMP., CONNECTING	E-7-6
O-RING, 15X1.9	E-9-20-23	PLATE, DWELL	FOP-8-2-16	ROD COMP., CONNECTING	E-7-6
O-RING, 16MM	F-9-34	PLATE, DWELL	FOP-8-4-10	ROD COMP., PISTON	F-11-20
O-RING, 2.0X70.5	F-11-36	PLATE, HANDLE	FOP-8-10	ROD COMP., PISTON(B)	F-11-21
O-RING, 20.6X2.6	E-6-18	PLATE, HANDLE	FOP-8-2-11	ROD COMP., SHIFT	F-4-9
O-RING, 22.5X2.4	E-5-22	PLATE, LEVER SETTING	FOP-8-6-8	ROD COMP., SHIFT	F-4-9
O-RING, 25X2.4(NOK)	F-2-46	PLATE, LOCK	F-2-17	ROD COMP., THROTTLE	F-2-2
O-RING, 26X2.7	E-3-36	PLATE, REMOTE CONTROL	FOP-8-6-47	ROD, ADJUSTING	F-10-14
O-RING, 3.5X35.7	F-11-41	PLATE, REMOTE CONTROL CABLE	F-2-5	ROD, STEERING	F-10-21
O-RING, 3.5X38.7	F-11-38	PLATE, RUBBER SETTING	F-3-1	ROLLER, 3X12.8	F-5-25
O-RING, 3.5X41.7	F-11-42	PLATE, SHIFT	F-5-6	ROLLER, 3X12.8	F-5-1-27
O-RING, 33.2X2.4(NOK)	E-18-26	PLATE, SHIFT	F-5-1-6	ROLLER, 5X8	E-5-28
O-RING, 37X2.4	E-4-15	PLATE, SHIFT PIVOT	F-2-14	ROLLER, CLICK	FOP-8-6-64
O-RING, 55.6X3.5	F-4-31	PLATE, SPEED SENSOR TUBE	FOP-13-7	ROTOR ASSY.	E-19-16
O-RING, 58.5X3.5	F-4-33	PLATE, SPRING SETTING	FOP-8-6-23	ROTOR COMP.	E-21-5
O-RING, 59.4X3.1	E-21-22	PLATE, STEERING	F-10-19	ROTOR, INNER OIL PUMP	E-5-8
O-RING, 6.5X1.5	E-3-37	PLATE, STEERING	F-10-20	ROTOR, OUTER OIL PUMP	E-5-9
O-RING, 6.9X1.45	F-3-19	PLATE, TDC PULSE	E-9-2	RUBBER B, STAND STOPPER	F-8-20-23
O-RING, 7.45X3.61(NOK)	E-14-34	PLATE, WATER TUBE	E-6-7	RUBBER COMP., LOWER MOUNT	F-3-20-5
O-RING, 7.47X3.6	E-14-33	PLATE, WINKER BUZZER	FOP-6-1-12	RUBBER, FR. CARRIER CUSHION	E-14-19
O-RING, 7.8X1.9(ARAI)	E-14-32	PLATE, WINKER BUZZER	FOP-8-6-45	RUBBER, MOUNT CASE SEAL	F-9-22
O-RING, 7.8X1.9(ARAI)	E-18-10-51	PLUG, INNER CONNECTOR	FOP-6-1-5	RUBBER, OIL PUMP	E-6-3
O-RING, 76.4X3.1	E-4-13	PLUG, INNER CONNECTOR	FOP-8-6-35	RUBBER, RING	E-9-10-29
O-RING, 79.8X3.1	E-4-14	PLUG, OUTER CONNECTOR	FOP-11-3	RUBBER, TROLLING CONTROL	FOP-12-2
O-RING, 9.5X1.5(HONDA KIKAKI)	E-9-10-25	PLUG, OUTER CONNECTOR	FOP-6-1-6	<S>	
O-RING, 9.5X1.9	E-3-38	PLUG, OUTER CONNECTOR	FOP-8-6-36	SCREEN COMP., FUEL STRAINER	E-18-10-40
O-RING, 9.5X1.9	E-4-16	PLUG, OUTER CONNECTOR	FOP-11-4	SCREEN, L. WATER	F-3-7
O-RING, 9.5X1.9	E-9-10-26	PLUG, SPARK(KJ20DR-M11)	E-20-4	SCREEN, R. WATER	F-3-6
O-RING, CHAIN CASE	E-9-10-23	PLUG, SPARK(SKJ20DR-M11)	E-20-4	SCREW	E-19-9
O-RING, THERMOSTAT COVER	F-9-20	PLUG, SPARK(ZFR6K-11)	E-20-4	SCREW	E-19-12
O-RING, WATER PUMP	F-4-32	PLUG, TDC HOLE	E-9-20-14	SCREW SET	E-15-1
O-RING, WATER PUMP	FOP-10-5	PLUG, VTC HOLE	E-9-20-9	SCREW SET, DRAIN	E-18-10-7
O-RING, WATER PUMP	FOP-10-1-10	PORT, IDLE EXHAUST	F-9-7	SCREW, 6X95	FOP-8-6-52
<P>		PRIMER BULB	F-6-4	SCREW, FLAT, 5X12	FOP-8-6-51
PACKING	E-21-16	PRIMER BULB ASSY	F-6-1	SCREW, FLAT, 6X16	E-5-23
PACKING	F-11-45	PROPELLER COMP., THREE BLADES	F-5-11	SCREW, OVAL, 5X50	F-3-21
PACKING, CHAIN CASE	E-9-10-24				
PACKING, CYLINDER HEAD COVER	E-1-2				

SCREW, PAN.....	E-18-10-21	SENSOR, LAF.....	E-4-6	STAY, PLATE.....	E-18-10-36
SCREW, PAN, 4X10.....	FOP-8-26	SENSOR, OIL PRESSURE.....	E-3-17	STAY, POWER TILT SWITCH.....	F-8-20-3
SCREW, PAN, 4X10.....	FOP-8-2-29	SEPARATOR ASSY., VAPOR.....	E-18-10-33	STAY, VAPOR SEPARATOR.....	E-18-10-37
SCREW, PAN, 5X10.....	FOP-8-23	SEPARATOR ASSY., WATER.....	E-18-1-2	STOPPER SET, SLEEVE.....	E-21-8
SCREW, PAN, 5X10.....	FOP-8-2-26	SHAFT ASSY., CLUTCH.....	E-21-13	STOPPER SET, SLEEVE.....	E-21-8
SCREW, PAN, 5X10.....	FOP-8-6-69	SHAFT ASSY., CLUTCH.....	E-21-13	STOPPER(TOOL).....	E-9-9
SCREW, PAN, 5X12.....	E-18-1-12	SHAFT ASSY., GEAR.....	E-21-14	STOPPER, TILT.....	F-10-18
SCREW, PAN, 5X16.....	FOP-8-8-22	SHAFT ASSY., GEAR.....	E-21-14	STRAINER ASSY., VTC.....	E-9-20-10
SCREW, PAN, 5X16.....	FOP-8-2-25	SHAFT COMP. A, SHIFT.....	F-2-12	STRAINER COMP., FUEL.....	E-18-1-10
SCREW, PAN, 5X16.....	FOP-8-4-20	SHAFT COMP. B, SHIFT.....	F-2-18	STRAINER COMP., OIL.....	E-6-4
SCREW, PAN, 5X18.....	E-15-16	SHAFT COMP., FR. BALANCER.....	E-10-2	STRAINER, FUEL.....	E-18-1-11
SCREW, PAN, 5X18.....	FOP-8-25	SHAFT COMP., RR. BALANCER.....	E-10-3	STRAINER, FUEL PUMP.....	E-18-9
SCREW, PAN, 5X18.....	FOP-8-2-28	SHAFT, COVER OPEN.....	F-8-10-17	SUB HARNESS ASSY., POWER.....	FOP-8-19
SCREW, PAN, 5X20.....	FOP-8-24	SHAFT, EX. ROCKER.....	E-9-16	SUB HARNESS ASSY., POWER.....	FOP-8-2-20
SCREW, PAN, 5X20.....	FOP-8-2-27	SHAFT, FR. LOCK.....	F-8-10-18	SUB HARNESS ASSY., POWER.....	FOP-8-2-21
SCREW, PAN, 5X30.....	FOP-8-4-22	SHAFT, IN. ROCKER.....	E-9-15	SUB HARNESS ASSY., POWER.....	FOP-8-4-16
SCREW, PAN, 5X40.....	FOP-6-1-15	SHAFT, PROPELLER.....	F-5-9	SUSPENSION, STRAINER.....	E-18-10
SCREW, PAN, 5X40.....	FOP-8-28	SHAFT, PROPELLER.....	F-5-1-9	SUSPENSION, STRAINER.....	E-18-1-15
SCREW, PAN, 5X40.....	FOP-8-2-31	SHAFT, THROTTLE BUTTON.....	FOP-8-4-9	SWITCH ASSY., COMBINATION.....	FOP-6-1-7
SCREW, PAN, 5X55.....	FOP-8-2-32	SHAFT, TILTING.....	F-10-15	SWITCH ASSY., COMBINATION.....	FOP-8-6-38
SCREW, PAN, 5X65.....	FOP-8-34	SHAFT, VERTICAL(L).....	F-4-13	SWITCH ASSY., EMERGENCY STOP.....	FOP-6-1-8
SCREW, PAN, 5X65.....	FOP-8-2-39	SHAFT, VERTICAL(XL).....	F-4-13	SWITCH ASSY., EMERGENCY STOP.....	FOP-8-6-41
SCREW, PAN, 5X8.....	E-21-20	SHIFTER, CLUTCH.....	F-5-1	SWITCH ASSY., MAGNET.....	E-21-12
SCREW, PAN, 6X10.....	FOP-8-6-50	SHIFTER, CLUTCH.....	F-5-1-1	SWITCH ASSY., MAGNET.....	E-21-12
SCREW, PAN, 6X18.....	E-4-18	SHIM A, BEVEL(0.10).....	F-5-17	SWITCH ASSY., NEUTRAL.....	F-2-22
SCREW, PAN, 6X18.....	FOP-8-27	SHIM A, BEVEL(0.10).....	F-5-1-18	SWITCH ASSY., POWER TILT.....	F-8-20-2
SCREW, PAN, 6X18.....	FOP-8-2-30	SHIM A, GEAR(0.10).....	F-4-23	SWITCH ASSY., POWER TRIM-TILT.....	FOP-8-20
SCREW, PAN, 6X22.....	E-21-19	SHIM A, THRUST(0.10).....	F-5-1-19	SWITCH ASSY., POWER TRIM-TILT.....	FOP-8-2-22
SCREW, PAN, 6X22(SPECIAL).....	E-21-19	SHIM B, BEVEL(0.15).....	F-5-17	SWITCH ASSY., POWER TRIM-TILT.....	FOP-8-2-23
SCREW, PAN, 6X25.....	F-8-20-22	SHIM B, BEVEL(0.15).....	F-5-1-18	SWITCH ASSY., POWER TRIM-TILT.....	FOP-8-4-17
SCREW, PAN, 6X35.....	FOP-8-4-23	SHIM B, GEAR(0.15).....	F-4-23	SWITCH ASSY., POWER TRIM-TILT.....	FOP-8-6-39
SCREW, PAN, 6X8.....	F-3-20-12	SHIM B, THRUST(0.15).....	F-5-1-19	SWITCH ASSY., TROLLING CONTROL.....	FOP-12-1
SCREW, PAN, 6X8.....	F-11-33	SHIM C, BEVEL(0.30).....	F-5-17	<T>	
SCREW, PAN, 6X8.....	FOP-13-9	SHIM C, BEVEL(0.30).....	F-5-1-18	TAB, TRIM.....	F-3-8
SCREW, RIVET, 5X10.....	F-8-20-15	SHIM C, GEAR(0.30).....	F-4-23	TACHOMETER HOUR METER (BLACK).....	FOP-2-4
SCREW, RIVET, 5X10.....	FOP-13-10	SHIM C, THRUST(0.30).....	F-5-1-19	TANK, OIL.....	F-11-27
SCREW, TAPPET ADJUSTING.....	E-9-20	SHIM D, BEVEL(0.50).....	F-5-17	TENSIONER ASSY., CAM CHAIN.....	E-9-8
SCREW, TAPPET ADJUSTING.....	E-9-21	SHIM D, BEVEL(0.50).....	F-5-1-18	TENSIONER COMP., BALANCER.....	E-10-6
SCREW, TAPPING.....	FOP-1-3	SHIM D, GEAR(0.50).....	F-4-23	TERMINAL, CABLE.....	FOP-8-16
SCREW, TAPPING, 4X12.....	F-8-13	SHIM D, THRUST(0.50).....	F-5-1-19	TERMINAL, CABLE.....	FOP-8-2-17
SCREW, TAPPING, 5X10.....	FOP-8-6-71	SLIDER, SHIFT.....	F-5-4	TERMINAL, CABLE.....	FOP-8-4-12
SCREW, TAPPING, 5X12.....	FOP-8-6-72	SLIDER, SHIFT.....	F-5-1-4	THERMOSTAT ASSY.....	E-9-10-3
SCREW, TAPPING, 5X20.....	E-13-9	SLINGER, OIL.....	F-4-14	THERMOSTAT ASSY.....	E-9-10-4
SCREW, TAPPING, 5X25.....	FOP-8-6-74	SPACER KIT, REMOTE CONTROL BOX.....	FOP-8-2	THROTTLE BODY ASSY.....	E-15-2
SCREW, TAPPING, 5X8.....	FOP-8-6-70	SPACER KIT, REMOTE CONTROL BOX.....	FOP-8-2-2	TIE, CABLE.....	FOP-11-5
SCREW, TAPPING, 6X16.....	FOP-8-6-73	SPACER, CABLE CLAMP.....	FOP-8-17	TIE, CABLE(NATURAL)(2.4X92).....	FOP-6-12
SCREW, TAPPING, 6X30.....	FOP-8-4-24	SPACER, CABLE CLAMP.....	FOP-8-2-18	TIE, CABLE(NATURAL)(2.4X92).....	FOP-8-6-37
SCREW, TRUSS, 4X12.....	FOP-8-4-21	SPACER, CABLE CLAMP.....	FOP-8-4-13	T-JOINT.....	E-18-15
SCREW, WASHER.....	E-18-10-22	SPACER, CABLE CLAMP.....	FOP-8-6-33	T-JOINT.....	F-9-3
SCREW-WASHER.....	E-18-10-20	SPACER, CLICK SPRING.....	FOP-8-6-27	TRIM METER ASSY (BLACK).....	FOP-2-1
SCREW-WASHER.....	E-19-10	SPACER, NEUTRAL SWITCH.....	FOP-8-6-30	TRIM-TILT ASSY., POWER.....	F-11-11
SCREW-WASHER, 4X25.....	E-19-11	SPACER, REMOTE CONTROL BOX.....	FOP-8-6-26	TUBE A, WATER RELIEF.....	E-4-10-4
SCREW-WASHER, 5X15.....	F-7-20-9	SPACER, THERMOSTAT COVER.....	E-9-10-5	TUBE B, AIR VENT.....	E-18-3
SEAL A, COVER UNDER.....	F-8-20-11	SPRING COMP., CLICK.....	F-10-2	TUBE B, FUEL.....	E-18-11
SEAL A, VALVE STEM(ARAI).....	E-9-20-4	SPRING, ACCELERATOR WHEEL.....	FOP-8-6-21	TUBE B, WATER RELIEF.....	E-4-10-5
SEAL A, VALVE STEM(NOK).....	E-9-20-4	SPRING, AIR FLOW TUBE.....	E-15-3	TUBE COMP. A, FUEL(FKM).....	E-18-1-6
SEAL B, COVER UNDER.....	F-8-20-12	SPRING, CHOKE RETURN.....	FOP-8-6-25	TUBE COMP. B, FUEL.....	E-18-7
SEAL B, VALVE STEM(ARAI).....	E-9-20-5	SPRING, CLICK.....	F-2-9	TUBE COMP. C, AIR VENT.....	E-18-2
SEAL B, VALVE STEM(NOK).....	E-9-20-5	SPRING, CLICK ASSIST.....	F-10-3	TUBE COMP. C, FUEL.....	E-18-1-7
SEAL, ENGINE COVER.....	F-8-2	SPRING, COVER LOCK HOOK.....	F-8-10-14	TUBE COMP. E, FUEL.....	E-18-1-9
SEAL, FR. SEPARATE COVER.....	F-8-20-7	SPRING, COVER LOCK HOOK.....	F-8-10-15	TUBE COMP. E, WATER.....	E-4-10-7
SEAL, PLUG HOLE.....	E-20-2	SPRING, EX. VALVE(GRAY).....	E-9-23	TUBE COMP., AIR VENT.....	E-18-4
SEAL, SPARK PLUG TUBE(NOK).....	E-1-3	SPRING, FLUSH VALVE.....	F-9-15	TUBE COMP., WATER RELIEF.....	E-4-10-3
SEAL, WATER.....	F-11-44	SPRING, IN. VALVE(PINK).....	E-9-22	TUBE D, FUEL.....	E-18-8
SEAL, WATER(14X26X8).....	F-2-45	SPRING, LOCK ADJUSTER.....	F-8-5	TUBE D, FUEL.....	E-18-1-8
SEAL, WATER, 12X21X6.....	F-4-30	SPRING, LOCK LEVER RETURN.....	F-8-10-16	TUBE F, FUEL.....	E-18-10-39
SEAL, WATER, 22X35X7.....	F-9-33	SPRING, MOTOR.....	F-11-8	TUBE F, WATER.....	F-9-10
SEAL, WATER, 23X36X6.....	F-4-29	SPRING, NEUTRAL LOCK ARM.....	FOP-8-4-7	TUBE G, WATER.....	E-18-16
SEAL, WATER, 23X36X8.....	F-4-28	SPRING, RELIEF VALVE.....	E-5-6	TUBE KIT, SPEED SENSOR.....	FOP-13-1
SEAL, WATER, 30X45X7.....	F-5-26	SPRING, REMOTE CONTROL HANDLE.....	FOP-8-6-7	TUBE, 12X740.....	E-15-25
SEAL, WATER, 30X45X7.....	F-5-1-28	SPRING, SET.....	E-18-10-41	TUBE, 5X140.....	F-3-22
SEAT, VALVE SPRING.....	E-9-25	SPRING, SHIFT.....	F-5-5	TUBE, 5X270.....	F-3-22
SEAT, WATER MOUTH.....	F-9-13	SPRING, SHIFT.....	F-5-1-5	TUBE, 5X950.....	FOP-13-13
SENSOR ASSY., AIR TEMP.....	E-15-13	SPRING, SHIFT CLICK.....	FOP-8-6-24	TUBE, 7X120.....	E-4-10-14
SENSOR ASSY., CRANK.....	E-9-10-13	SPRING, SHIFT ROD.....	F-4-10	TUBE, 7X160.....	F-9-38
SENSOR ASSY., KNOCK.....	E-3-13	SPRING, SILENCER DUCT GROMMET.....	E-15-8	TUBE, 7X200.....	F-9-39
SENSOR ASSY., MAP.....	E-15-11	SPROCKET COMP., CHAIN DRIVE.....	E-7-12	TUBE, 7X40.....	F-9-37
SENSOR ASSY., TDC.....	E-9-20-13	SPROCKET, CAM CHAIN DRIVEN.....	E-9-5	TUBE, 7X75.....	E-4-10-12
SENSOR ASSY., TRIM ANGLE.....	F-10-4	SPROCKET, CAM CHAIN DRIVEN IN.....	E-9-6	TUBE, 7X90.....	E-4-10-13
SENSOR ASSY., WATER.....	E-3-16	SPROCKET, DRIVEN(17T).....	E-10-4	TUBE, FUEL, 3.5X430.....	E-18-31
SENSOR ASSY., WATER.....	E-4-7	STAY A, PLATE.....	E-18-10-3	TUBE, FUEL, 8X300.....	F-9-36
SENSOR ASSY., WATER.....	E-9-10-11	STAY, A.C. GENERATOR.....	E-19-18	TUBE, OIL.....	E-4-10-1
SENSOR ASSY., WATER.....	E-9-10-12	STAY, FUEL STRAINER.....	E-18-1-14	TUBE, PRESSURE REGULATOR.....	E-14-7

TUBE, SPEED SENSOR FOP-13-6
 TUBE, SPIRAL F-11-3
 TUBE, SPIRAL FOP-13-4
 TUBE, VINYL, 4X7X160 E-15-24
 TUBE, WATER RELIEF F-9-9
 TUBE, WATER(L) F-4-7
 TUBE, WATER(XL) F-4-7
 <V>
 VALVE ASSY., ELECTRONIC AIR E-14-17
 VALVE ASSY., RELIEF F-9-16
 VALVE COMP., MANUAL F-11-23
 VALVE COMP., RESERVOIR F-11-24
 VALVE SET, FLOAT E-18-10-1
 VALVE, CHECK E-18-17
 VALVE, EX E-9-19
 VALVE, FLASH F-9-17
 VALVE, IN E-9-18
 VALVE, RELIEF E-5-5
 <W>
 WASHER F-2-35
 WASHER, 10MM F-10-42
 WASHER, 26MM F-3-20-14
 WASHER, 28MM FOP-8-6-61
 WASHER, 6MM FOP-8-6-59
 WASHER, DRAIN PLUG, 12MM E-6-17
 WASHER, DRAIN PLUG, 20MM E-5-24
 WASHER, DRAIN PLUG, 20MM E-9-20-24
 WASHER, HEAD COVER E-1-7
 WASHER, LOCK, 5MM FOP-8-30
 WASHER, LOCK, 5MM FOP-8-2-35
 WASHER, LOCK, 5MM FOP-8-4-26
 WASHER, LOCK, 6MM FOP-8-32
 WASHER, LOCK, 6MM FOP-8-2-37
 WASHER, PIVOT F-2-7
 WASHER, PIVOT F-4-1
 WASHER, PLAIN E-18-10-24
 WASHER, PLAIN E-18-10-25
 WASHER, PLAIN, 10MM F-5-18
 WASHER, PLAIN, 10MM F-5-1-20
 WASHER, PLAIN, 10MM F-8-10-26
 WASHER, PLAIN, 10MM F-10-43
 WASHER, PLAIN, 10MM F-10-47
 WASHER, PLAIN, 12MM E-6-16
 WASHER, PLAIN, 12MM F-2-34
 WASHER, PLAIN, 12MM F-3-20-15
 WASHER, PLAIN, 12MM F-4-22
 WASHER, PLAIN, 12MM F-8-11
 WASHER, PLAIN, 12MM F-10-44
 WASHER, PLAIN, 12MM F-10-45
 WASHER, PLAIN, 12MM F-10-46
 WASHER, PLAIN, 4MM FOP-8-6-55
 WASHER, PLAIN, 5MM FOP-6-1-18
 WASHER, PLAIN, 5MM FOP-8-31
 WASHER, PLAIN, 5MM FOP-8-33
 WASHER, PLAIN, 5MM FOP-8-2-36
 WASHER, PLAIN, 5MM FOP-8-2-38
 WASHER, PLAIN, 5MM FOP-8-6-56
 WASHER, PLAIN, 5MM FOP-8-6-57
 WASHER, PLAIN, 6MM F-2-36
 WASHER, PLAIN, 6MM F-8-10
 WASHER, PLAIN, 6MM FOP-8-4-27
 WASHER, PLAIN, 6MM FOP-8-6-58
 WASHER, PLAIN, 8MM F-2-37
 WASHER, PLAIN, 8MM F-7-10-14
 WASHER, PLAIN, 8MM F-8-10-25
 WASHER, PLAIN, 8MM F-8-10-28
 WASHER, PLAIN, 8MM FOP-8-6-60
 WASHER, PROPELLER F-5-16
 WASHER, PROPELLER F-5-1-17
 WASHER, PROPELLER THRUST F-5-14
 WASHER, PROPELLER THRUST F-5-1-15
 WASHER, SEALING(22MM) E-3-7
 WASHER, SEALING, 28MM E-3-31
 WASHER, SEALING, 6MM E-18-10-49
 WASHER, SHIFT SHAFT F-2-33
 WASHER, SPRING, 4MM FOP-12-9
 WASHER, SPRING, 5MM FOP-6-1-19
 WASHER, THRUST E-7-10
 WASHER, THRUST E-9-17
 WASHER, THRUST BEARING F-5-15
 WASHER, THRUST BEARING F-5-1-16
 WASHER, THRUST, 34MM F-10-41
 WASHER, WAVE, 10MM F-8-10-27

WASHER, WAVE, 26MM F-10-40
 WASHER, WAVE, 40MM F-10-39
 WHEEL, ACCELERATOR FOP-8-6-20
 WHEEL, CONTROL FOP-8-6-13
 WIRE, LEAD(1.5X116MM) F-11-9
 WIRE, LEAD(1.5X137MM) F-3-20-3
 WRENCH, EYE, 19MM F-13-11
 WRENCH, HEX., 6MM F-13-6
 WRENCH, PLUG F-13-5
 <Y>
 YOKE ASSY F-11-7
 YOKE COMP E-21-4

INDEX (Parts Number)

332-70201-0	F-6-8	HCO-94301-10160	E-9-20-25	HMM4-90105-000.	FOP-8-6-50	HPNA-90006-003	E-3-21
3C7-70217-0	F-6-5	HCO-94301-12160	E-10-14	HMM8-90501-610.	F-8-10-25	HPNA-90011-003	E-9-20-16
3C7-70220-1	F-6-2	HCO-94301-14200	E-5-26	HMM8-90502-610.	F-8-10-26	HPNA-90031-004	E-10-11
3C7-70224-1	F-6-3	HCO-94301-14200	E-6-21	HMM5-17195-000.	F-9-3	HPNA-90032-000	E-9-28
3FF-70200-4	F-6-1	HCO-94301-14200	E-9-20-26	HMR5-16966-000	E-18-1-18	HPNA-90042-003	E-9-29
3GF-70211-1	F-6-4	HCO-94305-25203	F-10-55	HM78-18334-770	FOP-6-1-2	HPNA-90703-300	E-9-32
3GF-70240-1	F-6-7	HCO-94510-14000	F-5-28	HM71-16959-000	E-4-10-2	HPNA-90704-000	E-7-16
3GF-70241-1	F-6-6	HCO-94510-14000	F-5-1-30	HM75-91005-601	F-5-20	HPNA-90715-000	E-3-34
3PU-72537-0	FOP-2-6	HCO-94540-03029	FOP-8-6-77	HM75-91005-601	F-5-1-22	HPNA-91214-014	E-3-35
3PV-72571-0	FOP-2-1	HCO-94540-04029	F-2-49	HM25-16952-000	E-18-11	HPNA-91302-003	E-14-34
3PV-72637-0	FOP-2-4	HCO-94540-04029	FOP-8-6-78	HP01-91212-003.	E-5-21	HPNA-91302-004	E-9-10-23
H121-51640-730.	E-14-19	HCO-94540-06029	F-2-50	HP0X-91321-003.	F-2-46	HPNA-91307-003	E-3-38
H341-38403-672.	FOP-6-1-12	HCO-94540-06029	F-8-10-29	HP2A-37881-000	E-15-14	HPNA-91307-003	E-4-16
H341-38403-672.	FOP-8-6-45	HCO-94540-06029	FOP-8-36	HP5A-13115-000	E-7-4	HPNA-91307-003	E-9-10-26
H460-89221-840.	F-13-6	HCO-94540-06029	FOP-8-2-41	HP64-31141-003.	E-19-6	HPNA-91333-003	E-9-10-27
H538-89102-000.	F-13-1	HCO-94540-06029	FOP-8-4-28	HP8A-13204-A01	E-7-5	HPNA-91333-003	E-9-20-23
H538-89103-000.	F-13-2	HCO-94540-07029	FOP-8-6-79	HPA9-91317-003	E-18-26	HPNB-37500-003	E-9-10-13
H723-90472-000.	F-4-22	HCO-94540-10019	F-4-35	HPC6-15233-000.	E-5-7	HPNB-37510-003	E-9-20-13
H750-90628-000.	FOP-13-12	HCO-94540-12029	F-2-51	HPC6-90715-000.	E-3-33	HPNC-91212-004	E-9-10-22
H759-16911-003.	E-18-9	HCO-94540-15029	F-11-47	HPC6-91324-000.	E-6-18	HPNE-14631-000	E-9-15
H763-75538-C01.	F-2-26	HCO-95001-35430-40	E-18-31	HPCX-12342-004	E-1-3	HPP4-90009-E01.	E-18-10-44
H763-90681-A01	F-10-49	HCO-95001-80300-40	F-9-36	HPCX-90017-013	E-7-15	HPPA-13210-000	E-7-6
H800-91303-000.	F-9-34	HCO-95003-07016-31	E-15-24	HPD1-31138-004	E-19-5	HPPA-13310-000	E-7-8
H805-91301-000.	E-3-36	HCO-95005-12740-20	E-15-25	HPD1-31142-004	E-19-7	HPPA-14520-003	E-9-10
H881-90105-000.	F-4-17	HCO-95005-50140-30	F-3-22	HPD1-31148-004	E-19-11	HPPA-14530-003	E-9-11
H881-90110-000.	F-10-30	HCO-95005-50270-30	F-3-22	HPD1-90231-014	E-19-30	HPR3-91319-003.	E-3-39
H921-15611-000.	E-3-12	HCO-95005-50950-30	FOP-13-13	HPD6-90430-003	E-18-10-49	HPR4-11106-013.	E-3-3
H921-17936-000.	F-2-7	HCO-95005-70040-30	F-9-37	HPD6-90430-003	E-18-10-49	HPR4-90401-000.	E-3-31
H921-17936-000.	F-4-1	HCO-95005-70075-30	E-4-10-12	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
H921-90302-000.	F-8-20-17	HCO-95005-70090-30	E-4-10-13	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
H921-90302-000.	FOP-6-1-16	HCO-95005-70120-30	E-4-10-14	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
H921-90302-000.	FOP-8-6-53	HCO-95005-70160-30	F-9-38	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
H921-90504-010.	F-8-10	HCO-95005-70200-30	F-9-39	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
H921-90504-010.	FOP-8-6-58	HCO-95011-62000	F-8-20-23	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
H921-90511-000.	F-10-43	HCO-95701-06014-08	E-9-20-30	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
H921-90512-010.	FOP-8-6-59	HCO-95701-06014-08	E-10-15	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
H921-90518-000.	F-2-37	HCO-95701-06018-09	E-6-22	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
H921-90518-000.	F-8-10-28	HCO-95701-06020-08	E-9-34	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
H921-90518-000.	FOP-8-6-60	HCO-95701-06020-08	E-9-20-27	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
H921-90602-000.	FOP-13-11	HCO-95701-06030-08	E-9-35	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
H952-32901-770.	FOP-6-12	HCO-95701-06032-08	E-9-20-28	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
H952-32901-770.	FOP-8-6-37	HCO-95701-08032-08	E-5-27	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-92101-04020-4J.	FOP-12-7	HCO-95701-08050-08	E-10-16	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
HCO-92101-05016-4J.	FOP-8-6-68	HCO-95701-08075-08	E-10-17	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
HCO-92101-06050-4J.	F-3-20	HCO-95701-08090-08	E-9-20-29	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-93500-05010-4J.	FOP-8-6-69	HCO-95701-10105-08	E-10-18	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
HCO-93500-05065-4J.	FOP-8-34	HCO-95701-10110-09	E-6-23	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
HCO-93500-05065-4J.	FOP-8-2-39	HCO-95801-08035-09	F-10-56	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-93500-06018-4J.	E-4-18	HCO-96211-07000	F-5-29	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
HCO-93500-06025-4J.	F-8-20-22	HCO-96211-07000	F-5-1-31	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
HCO-93600-06016-0A	E-5-23	HCO-96211-09000	F-5-30	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-93700-05050-4J.	F-3-21	HCO-96211-09000	F-5-1-32	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
HCO-93901-250J0.	FOP-8-6-70	HCO-96220-50080	E-5-28	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
HCO-93901-251J0.	FOP-8-6-71	HCO-96300-06025-00	E-10-19	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-93901-252J0.	FOP-8-6-72	HCO-96300-06032-00	E-10-20	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
HCO-93903-254G0	E-13-9	HCO-9807B-5615P	E-20-4	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
HCO-93903-262J0.	FOP-8-6-73	HCO-9807B-5615W	E-20-4	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-93905-255J0.	FOP-8-6-74	HCO-9807B-5617P	E-20-4	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
HCO-93913-142J0.	F-8-13	HCO-9807B-5617W	E-20-4	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
HCO-94001-04490-05	FOP-12-8	HCO-98200-41000	F-7-20-10	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-94001-05490-05	F-2-48	HCO-98200-41500	F-7-20-11	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
HCO-94001-05490-05	FOP-8-35	HCO-98200-43000	F-7-20-12	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
HCO-94001-05490-05	FOP-8-2-40	HCO-99006-19000	F-13-11	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-94001-06080-05	E-19-31	HCO-99008-02300	F-13-12	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
HCO-94001-06490-05	FOP-8-6-75	HGE1-17357-670	FOP-13-2	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
HCO-94001-06490-05	FOP-9-5	HGEV-90650-003	E-14-30	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-94001-12490-05	F-10-54	HGHB-16163-610	E-18-1	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
HCO-94002-05490-05	FOP-8-6-76	HGHB-16163-610	F-9-2	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
HCO-94002-06490-05	F-8-14	HHC4-90653-900	F-8-20-19	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-94103-05400	FOP-6-1-18	HMN0-91305-A00	E-4-15	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
HCO-94109-20000	E-5-24	HKJ2-90683-003	F-8-20-20	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
HCO-94109-20000	E-9-20-24	HKM3-32161-003	F-3-2	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-94111-05400	FOP-12-9	HKM3-32161-003	FOP-13-3	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
HCO-94111-05400	FOP-6-1-19	HKV7-17368-671.	E-18-13	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
HCO-94301-06100	E-6-19	HMB0-91359-000	F-4-33	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-94301-08100	E-10-13	HMG9-35701-950	F-8-10-1	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
HCO-94301-10120	E-7-17	HMG9-35701-950	FOP-8-6-40	HPD6-90430-003	E-18-10-49	HPRA-15290-000	E-3-10
HCO-94301-10160	E-5-25	HMJ0-91301-003	E-14-32	HPD6-90430-003	E-18-10-49	HPRB-14721-A00	E-9-19
HCO-94301-10160	E-6-20	HMJ0-91301-003	E-18-10-51	HPD6-90430-003	E-18-10-49	HPRB-15280-A00	E-3-9
				HPM4-90105-000.	FOP-8-6-50	HPNA-90006-003	E-3-21
				HMM8-90501-610.	F-8-10-25	HPNA-90011-003	E-9-20-16
				HMM8-90502-610.	F-8-10-26	HPNA-90031-004	E-10-11
				HMM5-17195-000.	F-9-3	HPNA-90032-000	E-9-28
				HMR5-16966-000	E-18-1-18	HPNA-90042-003	E-9-29
				HM78-18334-770	FOP-6-1-2	HPNA-90703-300	E-9-32
				HM71-16959-000	E-4-10-2	HPNA-90704-000	E-7-16
				HM75-91005-601	F-5-20	HPNA-90715-000	E-3-34
				HM75-91005-601	F-5-1-22	HPNA-91214-014	E-3-35
				HM25-16952-000	E-18-11	HPNA-91302-003	E-14-34
				HP01-91212-003.	E-5-21	HPNA-91302-004	E-9-10-23
				HP0X-91321-			

HSE0-91547-003.	E-18-27	HZV5-36136-821.	F-11-8	HZW1-40204-000.	F-4-12	HZW4-90151-000.	E-14-27
HSF1-91595-003.	E-15-23	HZV5-36180-033.	FOP-6-1-8	HZW1-40210-710.	F-3-20-2	HZW4-90156-000.	E-3-28
HS43-91599-A32.	E-18-30	HZV5-36180-033.	FOP-8-6-41	HZW1-41102-800.	F-3-4	HZW4-90162-000.	E-3-29
HSM4-32134-003.	F-7-30-2	HZV5-38410-003.	FOP-6-1-13	HZW1-41109-800.	F-3-9	HZW4-90162-000.	E-9-10-21
HSM4-91558-003.	E-18-29	HZV5-38410-003.	FOP-8-6-46	HZW1-41116-800.	F-4-14	HZW4-90163-000.	E-19-28
HSP0-91546-A01.	E-9-10-28	HZV5-40102-000.	E-13-4	HZW1-50111-010ZC.	F-3-20-4	HZW4-90164-000.	E-21-21
HSP0-91546-A01.	E-13-7	HZV5-40102-000.	E-15-15	HZW1-50156-010.	F-3-20-6	HZW4-90170-000.	E-4-11
HSTK-91540-003.	FOP-11-6	HZV5-41171-000.	F-3-10	HZW1-50161-020ZC.	F-3-20-7	HZW4-90306-003.	F-10-37
HSV1-91549-L01.	F-2-47	HZV5-41171-000.	FOP-13-5	HZW1-50201-040ZC.	F-10-9	HZW4-90401-000.	FOP-8-6-55
HSV4-91540-003.	E-4-17	HZV5-41172-000.	F-3-11	HZW1-50214-000.	F-10-11	HZW4-90402-000.	FOP-8-6-56
HSZ5-91531-003.	E-13-6	HZV5-50214-003.	F-11-10	HZW1-50301-070ZC.	F-10-12	HZW4-91301-003.	F-3-19
HVD6-91360-003.	E-5-22	HZV5-50522-000.	F-10-16	HZW1-50311-070ZC.	F-10-13	HZW5-06241-U00.	FOP-8-2
HVM0-16965-771.	E-18-12	HZV5-56117-821.	F-11-18	HZW1-50527-000.	F-10-17	HZW5-06241-U10.	FOP-8-2-2
HVM0-16965-771.	F-7-30-1	HZV5-56118-820.	F-11-19	HZW1-50529-000.	F-10-18	HZW5-06900-U00.	FOP-9-1
HVM0-46391-003.	F-2-24	HZV5-56513-000.	F-11-25	HZW1-53234-010.	F-10-19	HZW5-15113-000.	E-6-3
HZB5-90626-730.	F-8-20-18	HZV5-90081-010.	E-3-26	HZW1-53238-010.	F-10-21	HZW5-15331-003.	E-5-8
HZC0-63515-700.	F-8-10-21	HZV5-90081-010.	E-5-19	HZW1-56110-701.	F-11-13	HZW5-15341-003.	E-5-9
HZE2-16731-003.	E-18-1-1	HZV5-90119-000.	F-3-20-12	HZW1-56113-701.	F-11-14	HZW5-16081-010.	E-18-10-20
HZE2-90601-000.	E-6-17	HZV5-90119-000.	F-11-33	HZW1-56115-305.	F-11-15	HZW5-16086-000.	E-18-10-23
HZV0-90604-000.	E-18-24	HZV5-90119-000.	FOP-13-9	HZW1-56116-701.	F-11-17	HZW5-16087-000.	E-18-10-24
HZV0-90604-000.	E-18-1-21	HZV5-90125-000.	FOP-8-6-52	HZW1-56120-305.	F-11-20	HZW5-16708-003.	E-18-10-28
HZV0-90604-000.	F-9-30	HZV5-90127-003.	F-8-20-15	HZW1-56130-702.	F-11-22	HZW5-16715-023.	E-18-10-29
HZV1-24210-010.	F-10-2	HZV5-90127-003.	FOP-13-10	HZW1-56180-701.	F-11-24	HZW5-16733-000.	E-18-10-34
HZV1-87538-C23.	F-12-8	HZV5-90131-000.	E-6-15	HZW1-56516-000.	F-10-22	HZW5-16915-000.	E-18-10
HZV1-90127-010.	E-15-20	HZV5-90302-003.	F-2-32	HZW1-56532-000.	F-11-26	HZW5-24810-U01.	FOP-8-3
HZV3-90601-030.	E-15-21	HZV5-90304-013.	F-10-34	HZW1-56539-000.	F-10-23	HZW5-24810-U01.	FOP-8-2-3
HZV4-24221-010.	F-10-3	HZV5-90307-003.	F-10-38	HZW1-56851-703.	F-11-27	HZW5-24810-U11.	FOP-8-2-4
HZV4-36182-651.	FOP-6-1-9	HZV5-90501-000.	F-10-39	HZW1-56860-701.	F-11-28	HZW5-24811-U01.	FOP-8-4
HZV4-36182-651.	FOP-8-6-42	HZV5-90502-000.	F-10-40	HZW1-87538-721.	F-12-8	HZW5-24811-U01.	FOP-8-2-5
HZV4-36187-652.	FOP-6-1-10	HZV5-90504-000.	F-10-41	HZW1-90013-000.	E-13-5	HZW5-24812-U01.	FOP-8-5
HZV4-36187-652.	FOP-8-6-43	HZV5-90552-000.	F-10-44	HZW1-90013-000.	E-15-17	HZW5-24812-U01.	FOP-8-2-6
HZV4-90302-000.	F-3-17	HZV5-90557-000.	FOP-8-6-61	HZW1-90014-000.	E-14-20	HZW5-24813-U01.	FOP-8-6
HZV4-90304-000.	FOP-8-6-54	HZV5-90559-000.	E-6-16	HZW1-90014-000.	E-18-20	HZW5-24813-U01.	FOP-8-2-7
HZV4-90502-000.	FOP-8-31	HZV5-90559-000.	F-10-45	HZW1-90014-000.	E-18-10-45	HZW5-24813-U21.	FOP-8-2-8
HZV4-90502-000.	FOP-8-2-36	HZV5-90559-000.	F-10-46	HZW1-90102-000.	F-10-26	HZW5-24814-U01.	FOP-8-7
HZV4-90502-000.	FOP-8-6-57	HZV5-90563-000.	F-5-18	HZW1-90105-000.	F-10-27	HZW5-24814-U01.	FOP-8-2-9
HZV4-90512-000.	F-2-36	HZV5-90563-000.	F-5-1-20	HZW1-90106-004.	E-21-19	HZW5-24815-U01.	FOP-8-8
HZV4-90514-000.	F-10-42	HZV5-90563-000.	F-10-47	HZW1-90107-004.	E-21-20	HZW5-24816-U01.	FOP-8-9
HZV5-12155-000.	E-4-1	HZV5-90651-000.	F-10-48	HZW1-90108-000.	F-10-29	HZW5-24816-U01.	FOP-8-2-10
HZV5-12214-000.	E-3-7	HZV5-90751-000.	FOP-8-6-62	HZW1-90113-702.	F-11-29	HZW5-24816-U01.	FOP-8-4-8
HZV5-16881-000.	E-18-8	HZV5-90756-000.	F-3-18	HZW1-90114-702.	F-11-30	HZW5-24817-U01.	FOP-8-10
HZV5-17202-310.	F-9-4	HZV5-90756-000.	F-3-20-17	HZW1-90115-702.	F-11-31	HZW5-24817-U01.	FOP-8-2-11
HZV5-17838-000.	F-2-1	HZV5-90756-000.	F-4-25	HZW1-90116-702.	F-11-32	HZW5-24818-U01.	FOP-8-11
HZV5-24811-010.	FOP-8-6-2	HZV5-90772-000.	FOP-8-6-63	HZW1-90203-000.	F-7-10-13	HZW5-24818-U01.	FOP-8-2-12
HZV5-24812-000.	FOP-8-6-3	HZV5-91151-000.	FOP-8-6-64	HZW1-90242-000.	F-4-20	HZW5-24819-U01.	FOP-8-12
HZV5-24813-000.	FOP-8-6-4	HZV5-91203-821.	F-11-35	HZW1-90301-800.	F-5-13	HZW5-24819-U01.	FOP-8-2-13
HZV5-24814-010.	FOP-8-6-5	HZV5-91256-003.	F-10-51	HZW1-90301-800.	F-5-1-14	HZW5-24820-U01.	FOP-8-13
HZV5-24815-010.	FOP-8-6-6	HZV5-91302-821.	F-11-37	HZW1-90304-013.	F-10-35	HZW5-24820-U21.	FOP-8-2-14
HZV5-24816-000.	FOP-8-6-7	HZV5-91316-821.	F-11-38	HZW1-90501-710.	F-3-20-14	HZW5-24825-U01.	FOP-8-14
HZV5-24817-000.	FOP-8-6-8	HZV5-91352-000.	F-10-52	HZW1-90518-800.	F-4-23	HZW5-24825-U01.	FOP-8-2-15
HZV5-24818-003.	FOP-8-6-9	HZV5-91553-010.	E-13-8	HZW1-90519-800.	F-4-23	HZW5-24826-U01.	FOP-8-15
HZV5-24820-010.	FOP-8-6-10	HZV5-91553-010.	E-15-22	HZW1-90520-800.	F-4-23	HZW5-24826-U01.	FOP-8-2-16
HZV5-24830-010.	FOP-8-6-11	HZV5-91553-010.	E-20-10-6	HZW1-90521-800.	F-4-23	HZW5-24826-U01.	FOP-8-4-10
HZV5-24836-000.	FOP-8-6-12	HZV5-91553-010.	F-7-10-17	HZW1-90559-000.	F-3-20-15	HZW5-24831-U01.	FOP-8-16
HZV5-24841-000.	FOP-8-6-13	HZV5-91560-000.	F-10-53	HZW1-90651-710.	F-3-20-16	HZW5-24831-U01.	FOP-8-2-17
HZV5-24845-000.	FOP-8-6-14	HZV5-91567-000.	FOP-8-6-66	HZW1-90652-702.	F-11-34	HZW5-24831-U01.	FOP-8-4-12
HZV5-24850-000.	FOP-8-6-15	HZV5-91570-000.	FOP-8-6-67	HZW1-90752-B02.	F-4-24	HZW5-24832-U01.	FOP-8-17
HZV5-24854-000.	FOP-8-6-16	HZV7-90508-000.	F-2-35	HZW1-90752-B02.	FOP-10-4	HZW5-24832-U01.	FOP-8-2-18
HZV5-24855-000.	FOP-8-6-17	HZV7-90951-010.	F-10-50	HZW1-90752-B02.	FOP-10-1-9	HZW5-24832-U01.	FOP-8-4-13
HZV5-24860-000.	FOP-8-6-18	HZW1-06411-020.	F-10-1	HZW1-90758-B00.	F-5-19	HZW5-24834-U01.	FOP-8-18
HZV5-24865-000.	FOP-8-6-19	HZW1-12217-010.	E-5-1	HZW1-90758-B00.	F-5-1-21	HZW5-24834-U21.	FOP-8-2-19
HZV5-24875-000.	FOP-8-6-20	HZW1-15665-020.	F-9-1	HZW1-91054-B31.	F-4-27	HZW5-31217-003.	E-21-5
HZV5-24876-000.	FOP-8-6-21	HZW1-19210-B04.	F-4-2	HZW1-91101-003.	F-5-25	HZW5-31631-003.	E-19-16
HZV5-24878-000.	FOP-8-6-22	HZW1-19210-B04.	FOP-10-2	HZW1-91101-003.	F-5-1-27	HZW5-31639-003.	E-19-19
HZV5-24881-000.	FOP-8-6-23	HZW1-19210-B04.	FOP-10-1-2	HZW1-91207-013.	F-11-36	HZW5-31644-003.	E-19-20
HZV5-24883-000.	FOP-8-6-24	HZW1-19223-B00.	F-4-4	HZW1-91352-702.	F-11-39	HZW5-31710-003.	E-19-21
HZV5-24884-000.	FOP-8-6-25	HZW1-19223-B00.	FOP-10-1-4	HZW1-91353-703.	F-11-40	HZW5-32168-003.	E-18-10-43
HZV5-24885-000.	FOP-8-6-26	HZW1-19252-000.	E-6-6	HZW1-91354-701.	F-11-41	HZW5-35370-U02.	FOP-8-20
HZV5-24887-000.	FOP-8-6-27	HZW1-19253-B01.	F-4-8	HZW1-91355-701.	F-11-42	HZW5-35370-U02.	FOP-8-2-22
HZV5-24891-000.	FOP-8-6-28	HZW1-19253-B01.	FOP-10-1-7	HZW1-91356-B00.	F-4-32	HZW5-35370-U12.	FOP-8-2-23
HZV5-24892-000.	FOP-8-6-29	HZW1-19286-B00.	F-3-1	HZW1-91356-B00.	FOP-10-5	HZW5-35673-003.	E-9-10-11
HZV5-24894-000.	FOP-8-6-30	HZW1-24102-B00.	F-5-2	HZW1-91356-B00.	FOP-10-1-10	HZW5-50151-000.	F-10-6
HZV5-24895-000.	FOP-8-6-31	HZW1-24102-B00.	F-5-1-2	HZW1-91357-701.	F-11-43	HZW5-50155-000.	F-3-20-5
HZV5-24897-000.	FOP-8-6-32	HZW1-24103-B00.	F-5-3	HZW1-91358-701.	F-11-44	HZW5-50341-010.	F-10-14
HZV5-24898-000.	FOP-8-6-33	HZW1-24103-B00.	F-5-1-3	HZW1-91361-701.	F-11-45	HZW5-53234-010.	F-10-20
HZV5-32823-003.	FOP-6-1-5	HZW1-24327-000.	F-2-11	HZW1-91554-000.	E-14-35	HZW5-90002-013.	E-5-14
HZV5-32823-003.	FOP-8-6-35	HZW1-31229-004.	E-21-8	HZW1-91554-000.	E-18-28	HZW5-90011-010.	E-19-23
HZV5-32823-003.	FOP-11-3	HZW1-31247-004.	E-21-15	HZW1-91554-000.	E-18-10-52	HZW5-90018-000.	E-5-18
HZV5-32824-003.	FOP-6-1-6	HZW1-31249-004.	E-21-16	HZW1-91557-701.	F-11-46	HZW5-90018-000.	E-9-20-19
HZV5-32824-003.	FOP-8-6-36	HZW1-31250-004.	E-21-17	HZW2-90003-000.	E-20-10-4	HZW5-90018-000.	E-7-20-10-5
HZV5-32824-003.	FOP-11-4	HZW1-31261-004.	E-21-18	HZW2-90301-F00.	E-14-29	HZW5-90018-000.	F-10-8
HZV5-35370-823.	FOP-8-6-39	HZW1-38551-000.	F-7-10-8	HZW4-90108-000.	FOP-8-6-51	HZW5-90021-U00.	FOP-9-2
HZV5-36104-821.	F-11-13	HZW1-40107-700.	F-8-10-3	HZW4-90126-000.	E-14-26	HZW5-90101-000.	F-10-25

HZW5-90101-U00	FOP-8-22	HZW9-90013-000	F-7-10-10	HZY3-35645-000.	F-8-20-3	HZY3-90507-000.	F-8-11
HZW5-90101-U00	FOP-8-2-25	HZW9-90013-000	F-7-20-7	HZY3-35673-003.	E-3-16	HZY3-90512-000.	F-5-16
HZW5-90101-U00	FOP-8-4-20	HZW9-90016-000	E-3-23	HZY3-35673-003.	E-4-7	HZY3-90512-000.	F-5-1-17
HZW5-90102-U00	FOP-8-23	HZW9-90016-000	E-5-17	HZY3-35673-003.	E-9-10-12	HZY3-90528-000.	F-5-17
HZW5-90102-U00	FOP-8-2-26	HZW9-90016-000	E-18-21	HZY3-36122-013.	F-11-5	HZY3-90528-000.	F-5-1-18
HZW5-90103-U01	FOP-8-24	HZW9-90016-000	E-18-10-46	HZY3-36123-013.	F-11-6	HZY3-90529-000.	F-5-17
HZW5-90103-U01	FOP-8-2-27	HZW9-90016-000	F-9-24	HZY3-40119-003.	F-8-10-4	HZY3-90529-000.	F-5-1-18
HZW5-90104-U00	FOP-8-25	HZW9-90101-003	F-3-12	HZY3-40219-013.	F-11-9	HZY3-90530-000.	F-5-17
HZW5-90104-U00	FOP-8-2-28	HZW9-90102-000	E-6-14	HZY3-50388-U00	FOP-7-1	HZY3-90530-000.	F-5-1-18
HZW5-90105-U01	FOP-8-26	HZW9-90102-000	F-2-30	HZY3-50388-U10	FOP-7-2	HZY3-90531-000.	F-5-17
HZW5-90105-U01	FOP-8-2-29	HZW9-90103-010	F-3-20-9	HZY3-56170-013.	F-11-23	HZY3-90531-000.	F-5-1-18
HZW5-90106-U00	FOP-8-27	HZW9-90105-000	F-2-31	HZY3-58130-T00.	F-5-11	HZY3-90601-030.	E-4-10-8
HZW5-90106-U00	FOP-8-2-30	HZW9-90105-000	F-4-18	HZY3-58130-T10.	F-5-11	HZY3-90601-030.	F-9-29
HZW5-90107-U00	FOP-8-238	HZW9-90105-000	F-10-28	HZY3-58130-T20.	F-5-11	HZY3-90602-020.	E-4-10-9
HZW5-90107-U00	FOP-8-2-31	HZW9-90154-000	F-10-32	HZY3-58130-T30.	F-5-11	HZY3-90653-003.	F-7-5
HZW5-90108-U00	FOP-8-2-32	HZW9-90506-000	F-8-10-27	HZY3-58130-T40.	F-5-11	HZY3-90751-000.	F-2-38
HZW5-90109-000	FOP-6-1-15	HZX1-17110-003	E-14-14	HZY3-58130-T50.	F-5-11	HZY3-91001-003.	F-2-42
HZW5-90203-010	E-19-29	HZX1-32100-020	F-7-1	HZY3-58130-V01ZA.	F-5-11	HZY3-91152-003.	F-2-43
HZW5-90301-U00	FOP-8-29	HZX1-34750-023	E-20-10-3	HZY3-58130-V11ZA.	F-5-11	HZY3-91254-003.	F-4-30
HZW5-90301-U00	FOP-8-2-33	HZX1-50100-000	F-10-5	HZY3-58130-V21ZA.	F-5-11	HZY3-91255-003.	F-2-45
HZW5-90302-003	F-3-20-13	HZX1-63100-R00ZA.	F-8-1	HZY3-58130-V31ZA.	F-5-11	HZY3-91303-000.	E-21-22
HZW5-90302-003	F-10-33	HZX1-63100-R01ZA.	F-8-1	HZY3-58130-V41ZA.	F-5-11	HZY3-91351-003.	F-5-27
HZW5-90302-U21	FOP-8-2-34	HZX1-87121-R00	F-12-2	HZY3-58130-V51ZA.	F-5-11	HZY3-91351-003.	F-5-1-29
HZW5-90303-000	F-4-21	HZX1-87132-R00	F-12-3	HZY3-58180-T00.	F-5-1-12	HZY3-91556-000.	F-8-12
HZW5-90304-000	F-10-36	HZX1-87133-R00	F-12-10	HZY3-58180-T10.	F-5-1-12	HZY5-14110-000.	E-9-1
HZW5-90501-000	F-2-33	HZX1-90101-R00	F-8-7	HZY3-58180-T20.	F-5-1-12	HZY6-06122-010ZA.	E-9-20-1
HZW5-90501-U00	FOP-8-30	HZX2-41102-E00ZC.	F-3-5	HZY3-58180-T30.	F-5-1-12	HZY6-06192-000.	FOP-10-1
HZW5-90501-U00	FOP-8-2-35	HZX2-41107-C00ZC.	F-3-8	HZY3-58180-T40.	F-5-1-12	HZY6-06193-A01	FOP-10-1-1
HZW5-90501-U00	FOP-8-4-26	HZX2-90129-000	F-10-31	HZY3-63107-000.	F-8-3	HZY6-06411-000.	FOP-13-1
HZW5-90502-U00	FOP-8-32	HZY1-90205-000	F-3-16	HZY3-63108-000.	F-8-4	HZY6-06631-000.	F-8-15
HZW5-90502-U00	FOP-8-2-37	HZY1-90650-003.	FOP-11-5	HZY3-63119-000.	F-8-5	HZY6-11100-405.	E-3-1
HZW5-90503-U00	FOP-8-33	HZY3-06177-U02	FOP-1-1	HZY3-63201-000ZC.	F-8-10-10	HZY6-11321-010ZB.	E-6-1
HZW5-90503-U00	FOP-8-2-38	HZY3-16011-000.	E-18-10-1	HZY3-63205-000.	F-2-25	HZY6-11381-010.	E-6-2
HZW5-90509-711	F-5-15	HZY3-16013-000.	E-18-10-2	HZY3-63205-000.	F-8-10-11	HZY6-11410-425ZA.	E-9-10-1
HZW5-90509-711	F-5-1-16	HZY3-16024-000.	E-18-10-7	HZY3-63208-000.	F-8-10-13	HZY6-11412-000.	E-9-10-2
HZW5-90511-U00	FOP-9-3	HZY3-16026-000.	E-18-10-8	HZY3-63212-000.	F-8-10-14	HZY6-11911-000.	E-3-5
HZW5-90512-U00	FOP-9-4	HZY3-16041-000.	E-18-10-10	HZY3-63224-000.	F-8-10-17	HZY6-11912-000.	E-19-1
HZW5-90548-710	F-5-1-19	HZY3-16042-000.	E-18-10-11	HZY3-63260-000.	F-8-10-20	HZY6-12000-415ZA.	E-3-6
HZW5-90549-710	F-5-1-19	HZY3-16061-000.	E-18-10-12	HZY3-63260-C00	F-8-10-20	HZY6-12251-003.	E-9-20-6
HZW5-90550-710	F-5-1-19	HZY3-16072-000.	E-18-10-13	HZY3-90016-000.	E-9-10-15	HZY6-12310-010ZA.	E-1-1
HZW5-90551-710	F-5-1-19	HZY3-16073-000.	E-18-10-14	HZY3-90017-000.	E-9-10-16	HZY6-12500-000.	E-1-4
HZW5-90601-030	E-18-22	HZY3-16074-000.	E-18-10-15	HZY3-90017-000.	E-9-20-18	HZY6-13010-000.	E-7-1
HZW5-91056-003	F-5-24	HZY3-16075-000.	E-18-10-16	HZY3-90017-000.	E-18-10-47	HZY6-13101-000.	E-7-2
HZW5-91056-003	F-5-1-26	HZY3-16076-000.	E-18-10-17	HZY3-90017-000.	E-19-24	HZY6-13102-000.	E-7-2
HZW5-91201-003	E-5-20	HZY3-16077-000.	E-18-10-18	HZY3-90017-000.	F-2-27	HZY6-13211-004.	E-7-7
HZW5-91202-003	F-9-33	HZY3-16078-000.	E-18-10-19	HZY3-90017-000.	F-9-25	HZY6-13212-004.	E-7-7
HZW5-91251-003	F-2-44	HZY3-16082-000.	E-18-10-21	HZY3-90021-000.	E-4-9	HZY6-13213-004.	E-7-7
HZW7-24810-U01	FOP-8-4-2	HZY3-16083-000.	E-18-10-22	HZY3-90021-000.	E-9-10-17	HZY6-13214-004.	E-7-7
HZW7-24811-U01	FOP-8-4-3	HZY3-16087-000.	E-18-10-23	HZY3-90021-000.	E-9-20-20	HZY6-13215-004.	E-7-7
HZW7-24812-U01	FOP-8-4-4	HZY3-16088-000.	E-18-10-26	HZY3-90021-000.	E-14-21	HZY6-13216-004.	E-7-7
HZW7-24813-U01	FOP-8-4-5	HZY3-16721-000.	E-18-10-31	HZY3-90021-000.	E-18-1-19	HZY6-13217-004.	E-7-7
HZW7-24814-U01	FOP-8-4-6	HZY3-16733-000.	E-18-10-35	HZY3-90021-000.	F-2-28	HZY6-13331-013.	E-7-10
HZW7-24815-U01	FOP-8-4-7	HZY3-16752-000.	E-14-8	HZY3-90026-000.	E-3-24	HZY6-13400-000.	E-10-1
HZW7-24817-U01	FOP-8-4-9	HZY3-16752-000.	E-18-10-38	HZY3-90026-000.	E-19-25	HZY6-13811-000.	E-7-14
HZW7-24830-U01	FOP-8-4-11	HZY3-16807-003.	E-18-1-4	HZY3-90028-000.	F-2-29	HZY6-14120-000.	E-9-4
HZW7-24832-U01	FOP-8-4-14	HZY3-16818-003.	E-18-1-5	HZY3-90030-000.	E-4-10	HZY6-14311-000.	E-9-6
HZW7-24833-U01	FOP-8-4-15	HZY3-16900-003.	E-18-1-10	HZY3-90030-000.	F-7-10-11	HZY6-14510-003.	E-9-8
HZW7-32530-U00	FOP-8-19	HZY3-16901-003.	E-18-1-11	HZY3-90030-000.	F-8-10-23	HZY6-14751-003.	E-9-22
HZW7-32530-U00	FOP-8-2-20	HZY3-16904-003.	E-18-1-12	HZY3-90030-000.	F-9-26	HZY6-15100-000ZA.	E-5-2
HZW7-32530-U10	FOP-8-2-21	HZY3-16911-010.	E-18-10-40	HZY3-90035-000.	E-19-26	HZY6-15112-000.	E-5-3
HZW7-32530-U20	FOP-8-4-16	HZY3-16912-003.	E-18-1-13	HZY3-90040-000.	E-9-10-19	HZY6-15121-000.	E-5-4
HZW7-35370-U02	FOP-8-4-17	HZY3-16913-000.	E-18-10-41	HZY3-90042-000.	E-14-22	HZY6-15152-000.	E-3-8
HZW7-87701-U00	FOP-8-4-18	HZY3-16915-010.	E-18-1-15	HZY3-90046-000.	E-6-13	HZY6-15220-010.	E-6-4
HZW7-87703-U00	FOP-8-4-19	HZY3-16918-003.	E-18-1-16	HZY3-90049-000.	E-18-10-48	HZY6-15299-000.	E-3-11
HZW7-90101-U01	FOP-8-4-21	HZY3-16919-003.	E-18-1-17	HZY3-90054-000.	E-3-25	HZY6-15410-010ZA.	E-5-11
HZW7-90102-U01	FOP-8-4-22	HZY3-17748-U01	FOP-1-2	HZY3-90054-000.	E-14-25	HZY6-15425-010.	E-4-10-1
HZW7-90103-U01	FOP-8-4-23	HZY3-17749-U01	FOP-1-3	HZY3-90055-000.	E-19-27	HZY6-15655-000.	E-6-5
HZW7-90104-U01	FOP-8-4-24	HZY3-19270-000.	F-9-11	HZY3-90056-000.	E-15-19	HZY6-15834-000.	E-9-20-9
HZW7-90301-U01	FOP-8-4-25	HZY3-19271-000.	F-9-12	HZY3-90056-000.	F-9-28	HZY6-15840-000ZA.	E-9-20-10
HZW7-90502-U00	FOP-8-4-27	HZY3-19272-000.	F-9-13	HZY3-90084-000.	E-1-5	HZY6-16014-003.	E-18-10-3
HZW9-19279-000	F-9-15	HZY3-19300-023.	E-9-10-3	HZY3-90084-000.	E-20-3	HZY6-16016-003.	E-15-1
HZW9-19291-000	F-9-17	HZY3-23173-010.	F-9-22	HZY3-90107-000.	F-7-10-12	HZY6-16017-043.	E-18-10-4
HZW9-19297-000	F-9-19	HZY3-24318-000.	F-4-10	HZY3-90109-010.	F-8-8	HZY6-16019-003.	E-18-10-5
HZW9-19303-003	E-9-10-29	HZY3-24618-000.	F-2-15	HZY3-90111-000.	F-8-20-14	HZY6-16020-023.	E-18-10-6
HZW9-19317-000	F-9-20	HZY3-24619-000.	F-2-17	HZY3-90120-000.	F-3-14	HZY6-16036-000.	E-18-10-9
HZW9-32114-730	E-3-14	HZY3-30280-003.	F-11-1	HZY3-90133-000.	F-8-9	HZY6-16089-000.	E-14-1
HZW9-87702-800	FOP-8-6-48	HZY3-31106-003.	F-11-2	HZY3-90204-000.	E-3-30	HZY6-16196-000.	E-18-2
HZW9-90008-000	FOP-8-6-49	HZY3-31116-000.	E-5-13	HZY3-90205-000.	E-14-28	HZY6-16198-000.	E-18-3
HZW9-90009-000	F-10-24	HZY3-31207-003.	E-21-2	HZY3-90304-000.	F-7-4	HZY6-16199-000.	E-18-4
HZW9-90011-000	E-3-22	HZY3-31246-003.	E-21-14	HZY3-90405-000.	F-7-10-14	HZY6-16400-013.	E-15-2
HZW9-90011-000	E-9-10-14	HZY3-32128-000.	E-15-10	HZY3-90506-000.	F-5-14	HZY6-16450-003.	E-14-2
HZW9-90011-000	F-7-10-9	HZY3-32411-003.	F-7-10-3	HZY3-90506-000.	F-5-1-15	HZY6-16451-000.	E-14-3
HZW9-90013-000	F-7-3	HZY3-35470-023.	F-2-22	HZY3-90507-000.	F-2-34	HZY6-16621-000.	E-14-4

HZY6-16700-013.	E-18-5	HZY6-24310-000.	F-4-9	HZY6-41131-000.	F-4-16	HZY6-91051-003.	F-5-22
HZY6-16701-003.	E-18-10-27	HZY6-24310-710.	F-4-9	HZY6-41140-000.	F-5-7	HZY6-91051-003.	F-5-1-24
HZY6-16718-013.	E-18-10-30	HZY6-24320-000.	F-2-10	HZY6-41141-710.	F-5-1-7	HZY6-91052-003.	F-4-26
HZY6-16723-003.	E-18-10-32	HZY6-24320-610.	F-2-10	HZY6-41150-710.	F-5-1-8	HZY6-91055-004.	F-5-23
HZY6-16730-063.	E-18-10-33	HZY6-24343-000.	F-4-11	HZY6-41151-000.	F-5-8	HZY6-91055-004.	F-5-1-25
HZY6-16734-003.	E-18-10-36	HZY6-24610-000.	F-2-12	HZY6-41161-000.	F-5-9	HZY6-91251-003.	F-4-28
HZY6-16736-003.	E-18-10-37	HZY6-24612-020.	F-2-13	HZY6-41161-710.	F-5-1-9	HZY6-91301-003.	E-4-13
HZY6-16740-003.	E-14-5	HZY6-24614-000.	F-2-14	HZY6-41173-000.	FOP-13-6	HZY6-91302-003.	E-4-14
HZY6-16744-010.	E-14-6	HZY6-24618-000.	F-2-16	HZY6-41201-000ZC.	F-5-10	HZY6-91303-003.	E-9-20-22
HZY6-16748-000.	E-14-7	HZY6-24620-000.	F-2-18	HZY6-41201-710ZC.	F-5-1-10	HZY6-91304-010.	E-9-10-24
HZY6-16752-000.	E-14-9	HZY6-24628-000.	F-2-19	HZY6-41202-710.	F-5-1-11	HZY6-91305-003.	E-3-37
HZY6-16755-003.	E-18-6	HZY6-24629-000ZA.	F-2-20	HZY6-50167-000.	F-10-7	HZY6-91351-003.	F-4-31
HZY6-16800-003.	E-18-1-2	HZY6-30410-000.	E-20-10-1	HZY6-50168-003.	F-10-8	HZY6-91502-003.	E-9-33
HZY6-16805-003.	E-18-1-3	HZY6-30530-003.	E-3-13	HZY6-50209-000.	FOP-13-7	HZY6-91552-000.	F-4-34
HZY6-16840-A00.	E-18-10-39	HZY6-31110-000ZA.	E-5-12	HZY6-56000-043.	F-11-11	HZY6-91552-000.	FOP-10-1-11
HZY6-16850-A01.	E-18-1-6	HZY6-31200-003.	E-21-1	HZY6-56100-013.	F-11-12	HZY6-91553-000.	F-8-20-21
HZY6-16860-A00.	E-18-7	HZY6-31216-003.	E-21-4	HZY6-56118-000.	FOP-13-8	HZY9-15815-000.	E-9-20-8
HZY6-16871-A00.	E-18-1-7	HZY6-31226-003.	E-21-7	HZY6-60180-003.	F-8-10-8	HZY9-17315-000.	E-15-4
HZY6-16881-A00.	E-18-1-8	HZY6-31227-003.	E-21-7	HZY6-60185-003.	F-8-10-9	HZY9-30419-003.	E-20-10-2
HZY6-16890-A00.	E-18-1-9	HZY6-31231-003.	E-21-9	HZY6-63102-010.	F-8-2	HZY9-31207-H01.	E-21-2
HZY6-16914-010.	E-18-1-14	HZY6-31232-003.	E-21-9	HZY6-63144-000.	F-8-6	HZY9-31226-H01.	E-21-19
HZY6-17051-000ZA.	E-14-10	HZY6-31235-003.	E-21-10	HZY6-63205-000.	F-8-10-12	HZY9-31229-H01.	E-21-8
HZY6-17105-000.	E-14-12	HZY6-31236-003.	E-21-11	HZY6-63212-000.	F-8-10-15	HZY9-31240-003.	E-21-12
HZY6-17109-000.	E-14-13	HZY6-31240-003.	E-21-12	HZY6-63223-000.	F-8-10-16	HZY9-31242-H01.	E-21-13
HZY6-17371-020.	E-15-5	HZY6-31242-003.	E-21-13	HZY6-63225-000.	F-8-10-18	HZY9-31246-H01.	E-21-14
HZY6-17374-000.	E-15-6	HZY6-31630-003.	E-19-15	HZY6-63240-000.	F-8-10-19	HZY9-31251-H01.	E-21-23
HZY6-17397-013.	E-15-7	HZY6-31630-013.	E-19-15	HZY6-63240-010.	F-8-10-19	HZY9-50381-000.	F-10-15
HZY6-17398-000.	E-15-8	HZY6-31636-010.	E-19-17	HZY6-63711-010ZC.	F-8-20-9	HZY9-56115-003.	F-11-16
HZY6-17431-000.	E-13-1	HZY6-31637-000.	E-19-18	HZY6-63716-010ZC.	F-8-20-10	HZY9-56120-003.	F-11-21
HZY6-17432-000.	E-13-2	HZY6-31638-003.	E-13-3	HZY6-63718-000.	F-8-20-11	HZY9-90017-000.	E-15-18
HZY6-17723-020.	E-18-14	HZY6-31750-003.	E-19-22	HZY6-63719-000.	F-8-20-12	HZZ3-06240-R30.	FOP-8-1
HZY6-17840-000.	F-2-2	HZY6-32101-000.	F-7-10-1	HZY6-82873-000.	F-8-20-13	HZZ3-06240-R30.	FOP-8-6-1
HZY6-17845-000.	F-2-3	HZY6-32111-000.	E-14-15	HZY6-87117-640.	F-12-1	HZZ3-06240-R40.	FOP-8-4-1
HZY6-17860-000.	F-2-4	HZY6-32112-000.	E-9-10-9	HZY6-87531-000.	F-12-7	HZZ3-06240-R60.	FOP-8-2-1
HZY6-17877-010.	F-2-5	HZY6-32113-000.	E-9-10-10	HZY6-87531-620.	F-12-7	HZZ3-06323-R10.	FOP-6-1-1
HZY6-17931-000.	F-2-6	HZY6-32114-010.	E-3-15	HZY6-89216-000.	F-13-5	HZZ3-06323-R30.	FOP-6-1-1
HZY6-18110-415ZA.	E-4-2	HZY6-32115-000.	E-15-9	HZY6-90001-000.	E-3-19	HZZ3-06328-762.	FOP-11-1
HZY6-18112-030ZA.	E-4-3	HZY6-32116-000.	E-9-20-12	HZY6-90001-000.	F-8-10-22	HZZ3-19277-000.	F-9-14
HZY6-18115-003.	E-4-4	HZY6-32166-003.	E-18-10-42	HZY6-90002-000.	E-6-9	HZZ3-24820-R11.	FOP-8-13
HZY6-18130-000ZA.	F-9-5	HZY6-32370-004.	F-7-20-1	HZY6-90002-000.	F-3-20-8	HZZ3-24820-R21.	FOP-8-2-14
HZY6-18135-003.	F-9-6	HZY6-32371-004.	F-7-20-2	HZY6-90005-000.	E-3-20	HZZ3-24830-R41.	FOP-8-4-11
HZY6-18211-000.	F-9-7	HZY6-32410-020.	F-7-10-2	HZY6-90006-000.	E-15-16	HZZ3-32186-000.	FOP-11-2
HZY6-18212-000.	F-9-8	HZY6-32414-300.	F-7-2	HZY6-90010-000.	E-18-19	HZZ3-32346-R11.	FOP-6-1-3
HZY6-19221-A00.	F-4-3	HZY6-32414-300.	F-7-10-4	HZY6-90011-000.	E-9-20-17	HZZ3-32346-R31.	FOP-6-1-3
HZY6-19221-A00.	FOP-10-1-3	HZY6-32414-640.	F-7-10-5	HZY6-90013-000.	E-4-8	HZZ3-35100-R11.	FOP-6-1-7
HZY6-19231-000.	F-4-5	HZY6-32418-000.	F-2-21	HZY6-90014-000.	F-9-23	HZZ3-35100-R11.	FOP-8-6-38
HZY6-19231-000.	FOP-10-1-5	HZY6-32419-000.	F-7-10-6	HZY6-90017-000.	E-6-10	HZZ3-35340-741.	FOP-12-1
HZY6-19234-000.	F-4-6	HZY6-35475-000.	F-2-23	HZY6-90018-000.	E-6-11	HZZ3-35341-740.	FOP-12-2
HZY6-19234-000.	FOP-10-3	HZY6-35640-003.	F-8-20-2	HZY6-90019-000.	E-6-12	HZZ3-35342-740.	FOP-12-3
HZY6-19234-000.	FOP-10-1-6	HZY6-35660-013.	F-10-4	HZY6-90020-000.	E-10-10	HZZ3-35343-740.	FOP-12-4
HZY6-19251-000.	F-4-7	HZY6-35668-003.	E-4-6	HZY6-90023-000.	E-9-10-18	HZZ3-35344-740.	FOP-12-5
HZY6-19251-611.	F-4-7	HZY6-36104-003.	FOP-13-4	HZY6-90043-000.	E-14-23	HZZ3-35345-741.	FOP-12-6
HZY6-19254-000.	E-6-7	HZY6-36120-013.	F-11-4	HZY6-90045-000.	F-9-27	HZZ3-41117-000.	F-4-15
HZY6-19256-000.	F-9-9	HZY6-36129-013.	F-11-7	HZY6-90047-000.	E-14-24	HZZ3-87301-R00.	F-12-4
HZY6-19260-020.	E-4-10-3	HZY6-36135-003.	E-18-17	HZY6-90048-010.	E-9-20-21	HZZ3-87701-R00.	FOP-8-6-47
HZY6-19261-010.	E-4-10-4	HZY6-36550-003.	E-14-17	HZY6-90059-000.	E-9-10-20	HZZ3-87701-R40.	FOP-8-4-18
HZY6-19262-010.	E-4-10-5	HZY6-36551-003.	E-14-18	HZY6-90082-003.	E-3-27	HZZ3-87703-R01.	FOP-8-2-24
HZY6-19263-000.	E-4-10-6	HZY6-37521-000.	E-9-20-14	HZY6-90103-000.	F-3-13	HZZ3-87703-R81.	FOP-8-2-21
HZY6-19266-000.	E-4-10-7	HZY6-38228-003.	F-7-20-3	HZY6-90104-000.	F-5-12	HZZ3-90129-000.	F-10-31
HZY6-19267-010.	F-9-10	HZY6-38235-004.	F-7-20-4	HZY6-90104-000.	F-5-1-13	HZZ3-91252-003.	F-5-26
HZY6-19268-000.	E-4-5	HZY6-38550-003.	F-7-10-7	HZY6-90105-000.	F-3-20-10	HZZ3-91252-003.	F-5-1-28
HZY6-19269-000.	E-18-15	HZY6-38552-000.	E-3-18	HZY6-90105-000.	F-8-10-24	HZZ3-91253-003.	F-4-29
HZY6-19273-000.	E-18-16	HZY6-39794-003.	F-7-20-6	HZY6-90116-000.	F-4-19	HZZ5-06325-600.	FOP-6-2
HZY6-19289-000.	F-8-20-1	HZY6-40105-020.	F-8-10-2	HZY6-90116-000.	FOP-10-1-8	HZZ5-06325-700.	FOP-6-2
HZY6-19290-003.	F-9-16	HZY6-40114-010.	F-8-20-4	HZY6-90118-000.	F-3-20-11	HZZ5-06325-800.	FOP-6-2
HZY6-19295-000.	F-9-18	HZY6-40116-000.	F-8-20-5	HZY6-90123-000.	F-3-15	HZZ5-32185-600.	FOP-6-4
HZY6-19300-003.	E-9-10-4	HZY6-40151-010ZD.	F-8-20-6	HZY6-90135-004.	F-7-20-9	HZZ5-32185-700.	FOP-6-4
HZY6-19313-000ZB.	E-9-10-5	HZY6-40152-300.	F-8-20-7	HZY6-90201-000.	E-1-6	HZZ5-32185-800.	FOP-6-4
HZY6-19315-010.	E-9-10-6	HZY6-40154-000ZC.	F-8-10-5	HZY6-90301-000.	F-8-20-16	HZZ5-32530-000.	FOP-8-6-34
HZY6-19318-010.	E-9-10-7	HZY6-40155-000.	F-8-10-6	HZY6-90401-000.	E-1-7	HZZ5-32545-000.	FOP-6-1-4
HZY6-19319-000.	E-9-10-8	HZY6-40157-000.	F-8-10-7	HZY6-90601-000.	E-18-23	HZZ5-32580-600.	FOP-6-9
HZY6-23170-000ZA.	F-9-21	HZY6-40201-000ZC.	F-3-20-1	HZY6-90601-000.	E-18-1-20	HZZ5-32580-700.	FOP-6-9
HZY6-23172-000.	E-6-8	HZY6-40201-611ZC.	F-3-20-1	HZY6-90602-020.	E-4-10-10	HZZ5-32580-800.	FOP-6-9
HZY6-24101-000.	F-5-1	HZY6-40212-020ZC.	F-8-20-8	HZY6-90603-003.	E-4-10-11	HZZ5-37210-013.	FOP-8-6-44
HZY6-24101-000.	F-5-1-1	HZY6-40219-023.	F-3-20-3	HZY6-90604-003.	E-4-12	HZZ5-37210-712.	FOP-6-1-11
HZY6-24122-000.	F-5-4	HZY6-41100-040ZC.	F-3-10-1	HZY6-90605-003.	E-18-25	HZZ5-38414-003.	FOP-6-1-14
HZY6-24122-000.	F-5-1-4	HZY6-41100-614ZC.	F-3-10-1	HZY6-90606-003.	F-9-31	HZZ5-50211-000.	F-10-10
HZY6-24123-000.	F-5-5	HZY6-41100-714ZC.	F-3-10-1	HZY6-90607-000.	E-18-10-50		
HZY6-24123-000.	F-5-1-5	HZY6-41101-020ZC.	F-3-3	HZY6-90651-000.	F-9-32		
HZY6-24124-000.	F-5-6	HZY6-41104-010.	F-3-6	HZY6-90701-000.	E-10-12		
HZY6-24124-000.	F-5-1-6	HZY6-41105-010.	F-3-7	HZY6-90752-000.	F-2-39		
HZY6-24166-000.	F-2-8	HZY6-41112-010.	F-4-13	HZY6-90753-000.	F-2-40		
HZY6-24218-000.	F-2-9	HZY6-41112-611.	F-4-13	HZY6-90755-003.	F-2-41		

Note

Note

Note

TOHATSU CORPORATION

**Address : 5-4,3-chome,Azusawa,Itabashi-ku,
TOKYO,174-0051 JAPAN**

Phone : TOKYO (03)3966-3117

FAX : TOKYO (03)3966-0090

Website : www.tohatsu.co.jp

**2016
PARTS CATALOG**

BFT 115A