


2014 PARTS CATALOG

 **TOHATSU**

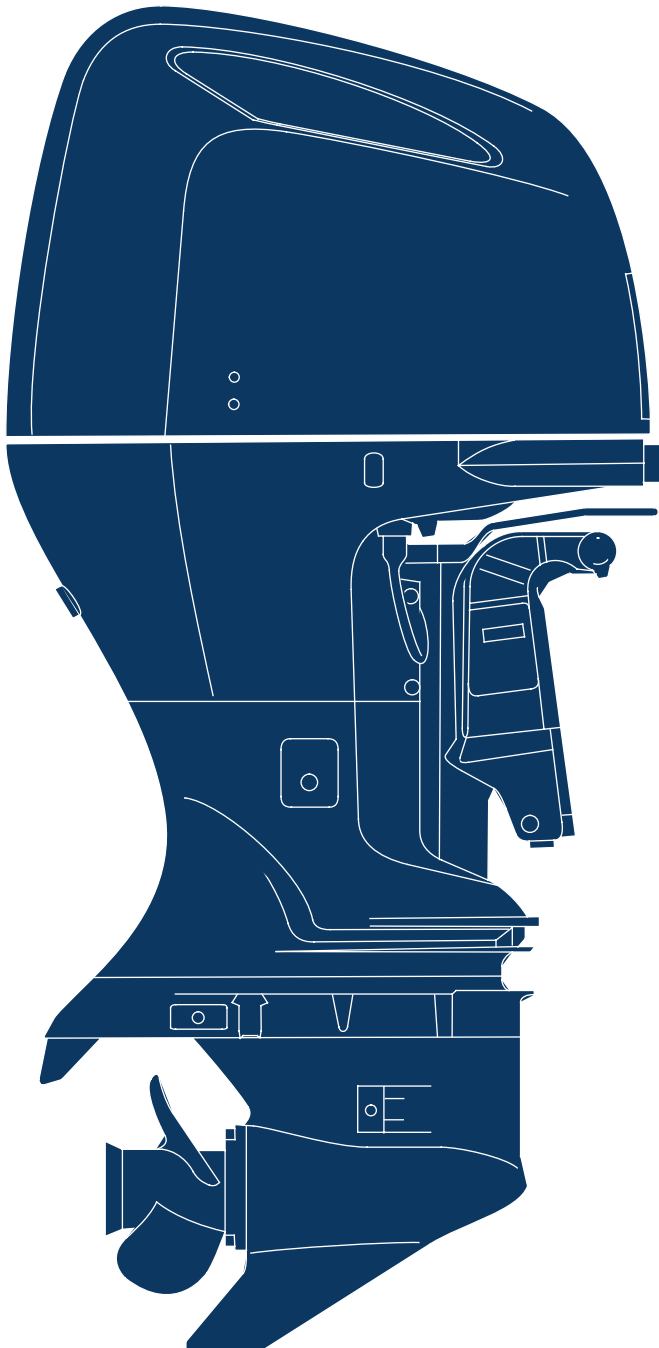

BFT 250A

**OB NO.002-14ZX2-0
1311US**

Instruction for use of parts catalogue

- **This parts catalogue was prepared based on the latest information available as of December 1, 2013.**
- See the Service Bulletin for any revision that is made after December 1, 2013.
- **Always specify the part number when ordering a part.**
 - Check the model, type, serial numbers, color, maker, and the size as needed before ordering a part.
 - Note that the illustrations (part drawings) can differ from the actual parts in shape.
Illustrations are given just to help you to refer to the parts.
- **When modifications or additions to this parts catalogue are made, a revised edition will be issued at an appropriate time, with successively progressing revision numbers on the cover. We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times.**

Initial version issue date December 1, 2013

CONTENTS

E-1	CYLINDER HEAD COVER	1
E-3	CYLINDER BLOCK	3
E-3-10	CRANKCASE	7
E-4	EXHAUST MANIFOLD/THERMOSTAT	9
E-5	OIL PUMP/FLYWHEEL	11
E-6	OIL PAN	13
E-6-10	MOUNT CASE	15
E-6-20	MOUNT CASE BOLT	19
E-7	CRANKSHAFT/PISTON	21
E-9	CYLINDER HEAD	23
E-9-10	CAMSHAFT/ROCKER ARM	25
E-13	TIMING BELT	27
E-13-10	TIMING BELT COVER	31
E-14	FUEL PIPE/INJECTOR	33
E-14-10	INTAKE MANIFOLD	37
E-15	THROTTLE BODY	39
E-18	VAPOR SEPARATOR ASSY	41
E-18-1	WATER SEPARATOR/FUEL STRAINER	45
E-18-10	PIPING	49
E-19	A.C.GENERATOR	51
E-20	SPARK PLUG	53
E-20-10	ELECTRONIC CONTROL UNIT	55
E-21	STARTER MOTOR	57
F-2	SHIFT SHAFT	59
F-3	GEAR CASE	63
F-3-10	GEAR CASE ASSY	65
F-3-20	EXTENSION CASE	67
F-4	WATER PUMP/VERTICAL SHAFT	73
F-5	PROPELLER SHAFT	77
F-5-1	PROPELLER SHAFT (COUNTER ROTATION)	81
F-6	FUEL TUBE	85
F-7	WIRE HARNESS	87
F-7-10	STARTER CABLE	89
F-7-20	FUSE BOX/RELAY	91
F-8	ENGINE COVER	93
F-8-10	FR.COVER BRACKET/FR.LOCK SHAFT	95
F-8-20	FUEL TUBE (2)	99
F-10	STERN BRACKET/SWIVEL CASE	101
F-11	POWER TRIM-TILT	107
F-12	LABEL	111
F-13	TOOL	113
FOP-1	REMOTE CONTROL (TOP MOUNT SINGLE TYPE) (RIGHT)	115
FOP-1-2	REMOTE CONTROL (TOP MOUNT DUAL TYPE) (RIGHT)	119
FOP-1-4	REMOTE CONTROL (FLUSH MOUNT DUAL TYPE) (RIGHT)	123
FOP-1-6	REMOTE CONTROL	125
FOP-3	METER	131
FOP-5	BOLT KIT	133
FOP-6	SWITCH PANEL KIT	135
FOP-7	CONTROL PANEL (1)	137
FOP-7-1	CONTROL PANEL (2)	139
FOP-8	PROPELLER	141
FOP-9	TRIM ADJUST PLATE SET	143
FOP-10	INTERFACE CABLE KIT	145
FOP-12	GEAR CASE KIT	147
FOP-13	PANEL INTERFACE CABLE SET	149
INDEX		151
INDEX (Parts Number)		157

How to refer to the part information

A. Reference with "Illustrated index"

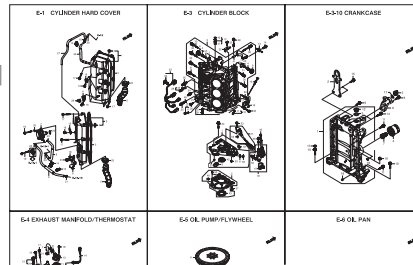


Fig. Number

E-15 THROTTLE BODY


Ref. Number/Part Number/Parts Name

Ref.No.	Part No.	Description	Q'ty	Remarks
E-15	1	H2YH18016-003	SCREW SET	1
E-15	2	H2YH18176-000	GASKET, THROTTLE BODY	1
E-15	3	H2YH18002-001	THROTTLE BODY ASSY.	1
E-15	4	H2X2-1849-000	SPACER, THROTTLE BODY	1
E-15	5	H2YH18485-000	GASKET, EAC VALVE	1
E-15	7	HPFH13140-000	SPRING, AIR FLOW TUBE	1
E-15	8	H2YH17315-000	BAND, AIR FLOW	1
E-15	9	H2X2-17316-000	CROWMET, SILENCER	1
E-15	10	H2YH17910-013	CABLE COMP. THROTTLE	2
E-15	16	H2WH-05065-000	SENSOR ASSY., AIR TEMP	1
E-15	17	H2YH18003-003	VALVE ASSY., EAC	1
E-15	18	H2YH18102-000	CROWMET, UNDER CASE	4
E-15	19	H2WH-08013-000	BOLT-WASHER, 6X25	2
E-15	20	H2YH18013-000	BOLT-WASHER, 10X30	1
E-15	21	H2YH18002-000	BOLT, FLANGE, 6X25	2
E-15	22	H2YH18003-000	BOLT, FLANGE, 6X30	2
E-15	23	H2YH18003-000	BOLT, FLANGE, 6X35	4
E-15	24	H2YH18003-000	WASHER, PLAIN, 6MM	2
E-15	25	HPFH18302-002	O-RING	1
E-15	26	H2YH18020-010	COLLAR, C3/L UNIT CASE	4
E-15	28	H2C-04001-00100	DOREL, PIN, 6X10	2
E-15	29	H2X2-18464-010	COVER ASSY., COOLING FAN	1

B. Reference with "Parts number index"


INDEX (Parts Number)			
102-215540	1515	164-000050	1162-053
106-001134	47	164-000064	1162-064
106-000750	520	164-001174	1182-05
106-000750	511	164-001184	1182-06
106-000750	517	164-001194	1182-07
106-000750	530	164-001204	1182-08
106-000750	535	164-001214	1182-09
106-000750	536	164-001224	1182-10
106-000750	537	164-001234	1182-11
106-000750	538	164-001244	1182-12
106-000750	539	164-001254	1182-13
106-000750	540	164-001264	1182-14
106-000750	541	164-001274	1182-15
106-000750	542	164-001284	1182-16
106-000750	543	164-001294	1182-17
106-000750	544	164-001304	1182-18
106-000750	545	164-001314	1182-19
106-000750	546	164-001324	1182-20
106-000750	547	164-001334	1182-21
106-000750	548	164-001344	1182-22
106-000750	549	164-001354	1182-23
106-000750	550	164-001364	1182-24
106-000750	551	164-001374	1182-25
106-000750	552	164-001384	1182-26
106-000750	553	164-001394	1182-27
106-000750	554	164-001404	1182-28
106-000750	555	164-001414	1182-29
106-000750	556	164-001424	1182-30
106-000750	557	164-001434	1182-31
106-000750	558	164-001444	1182-32
106-000750	559	164-001454	1182-33
106-000750	560	164-001464	1182-34
106-000750	561	164-001474	1182-35
106-000750	562	164-001484	1182-36
106-000750	563	164-001494	1182-37
106-000750	564	164-001504	1182-38
106-000750	565	164-001514	1182-39
106-000750	566	164-001524	1182-40
106-000750	567	164-001534	1182-41
106-000750	568	164-001544	1182-42
106-000750	569	164-001554	1182-43
106-000750	570	164-001564	1182-44
106-000750	571	164-001574	1182-45
106-000750	572	164-001584	1182-46
106-000750	573	164-001594	1182-47
106-000750	574	164-001604	1182-48
106-000750	575	164-001614	1182-49
106-000750	576	164-001624	1182-50
106-000750	577	164-001634	1182-51
106-000750	578	164-001644	1182-52
106-000750	579	164-001654	1182-53
106-000750	580	164-001664	1182-54
106-000750	581	164-001674	1182-55
106-000750	582	164-001684	1182-56
106-000750	583	164-001694	1182-57
106-000750	584	164-001704	1182-58
106-000750	585	164-001714	1182-59
106-000750	586	164-001724	1182-60
106-000750	587	164-001734	1182-61
106-000750	588	164-001744	1182-62
106-000750	589	164-001754	1182-63
106-000750	590	164-001764	1182-64
106-000750	591	164-001774	1182-65
106-000750	592	164-001784	1182-66
106-000750	593	164-001794	1182-67
106-000750	594	164-001804	1182-68
106-000750	595	164-001814	1182-69
106-000750	596	164-001824	1182-70
106-000750	597	164-001834	1182-71
106-000750	598	164-001844	1182-72
106-000750	599	164-001854	1182-73
106-000750	600	164-001864	1182-74
106-000750	601	164-001874	1182-75
106-000750	602	164-001884	1182-76
106-000750	603	164-001894	1182-77
106-000750	604	164-001904	1182-78
106-000750	605	164-001914	1182-79
106-000750	606	164-001924	1182-80
106-000750	607	164-001934	1182-81
106-000750	608	164-001944	1182-82
106-000750	609	164-001954	1182-83
106-000750	610	164-001964	1182-84
106-000750	611	164-001974	1182-85
106-000750	612	164-001984	1182-86
106-000750	613	164-001994	1182-87
106-000750	614	164-002004	1182-88
106-000750	615	164-002014	1182-89
106-000750	616	164-002024	1182-90
106-000750	617	164-002034	1182-91
106-000750	618	164-002044	1182-92
106-000750	619	164-002054	1182-93
106-000750	620	164-002064	1182-94
106-000750	621	164-002074	1182-95
106-000750	622	164-002084	1182-96
106-000750	623	164-002094	1182-97
106-000750	624	164-002104	1182-98
106-000750	625	164-002114	1182-99
106-000750	626	164-002124	1183-00
106-000750	627	164-002134	1183-01
106-000750	628	164-002144	1183-02
106-000750	629	164-002154	1183-03
106-000750	630	164-002164	1183-04
106-000750	631	164-002174	1183-05
106-000750	632	164-002184	1183-06
106-000750	633	164-002194	1183-07
106-000750	634	164-002204	1183-08
106-000750	635	164-002214	1183-09
106-000750	636	164-002224	1183-10
106-000750	637	164-002234	1183-11
106-000750	638	164-002244	1183-12
106-000750	639	164-002254	1183-13
106-000750	640	164-002264	1183-14
106-000750	641	164-002274	1183-15
106-000750	642	164-002284	1183-16
106-000750	643	164-002294	1183-17
106-000750	644	164-002304	1183-18
106-000750	645	164-002314	1183-19
106-000750	646	164-002324	1183-20
106-000750	647	164-002334	1183-21
106-000750	648	164-002344	1183-22
106-000750	649	164-002354	1183-23
106-000750	650	164-002364	1183-24
106-000750	651	164-002374	1183-25
106-000750	652	164-002384	1183-26
106-000750	653	164-002394	1183-27
106-000750	654	164-002404	1183-28
106-000750	655	164-002414	1183-29
106-000750	656	164-002424	1183-30
106-000750	657	164-002434	1183-31
106-000750	658	164-002444	1183-32
106-000750	659	164-002454	1183-33
106-000750	660	164-002464	1183-34
106-000750	661	164-002474	1183-35
106-000750	662	164-002484	1183-36
106-000750	663	164-002494	1183-37
106-000750	664	164-002504	1183-38
106-000750	665	164-002514	1183-39
106-000750	666	164-002524	1183-40
106-000750	667	164-002534	1183-41
106-000750	668	164-002544	1183-42
106-000750	669	164-002554	1183-43
106-000750	670	164-002564	1183-44
106-000750	671	164-002574	1183-45
106-000750	672	164-002584	1183-46
106-000750	673	164-002594	1183-47
106-000750	674	164-002604	1183-48
106-000750	675	164-002614	1183-49
106-000750	676	164-002624	1183-50
106-000750	677	164-002634	1183-51
106-000750	678	164-002644	1183-52
106-000750	679	164-002654	1183-53
106-000750	680	164-002664	1183-54
106-000750	681	164-002674	1183-55
106-000750	682	164-002684	1183-56
106-000750	683	164-002694	1183-57
106-000750	684	164-002704	1183-58
106-000750	685	164-002714	1183-59
106-000750	686	164-002724	1183-60
106-000750	687	164-002734	1183-61
106-000750	688	164-002744	1183-62
106-000750	689	164-002754	1183-63
106-000750	690	164-002764	1183-64
106-000750	691	164-002774	1183-65
106-000750	692	164-002784	1183-66
106-000750	693	164-002794	1183-67
106-000750	694	164-002804	1183-68
106-000750	695	164-002814	1183-69
106-000750	696	164-002824	1183-70
106-000750	697	164-002834	1183-71
106-000750	698	164-002844	1183-72
106-000750	699	164-002854	1183-73
106-000750	700	164-002864	1183-74
106-000750	701	164-002874	1183-75
106-000750	702	164-002884	1183-76
106-000750	703	164-002894	1183-77
106-000750	704	164-002904	1183-78
106-000750	705	164-002914	1183-79
106-000750	706	164-002924	1183-80
106-000750	707	164-002934	1183-81
106-000750	708	164-002944	1183-82
106-000750	709	164-002954	1183-83
106-000750	710	164-002964	1183-84
106-000750	711	164-002974	1183-85
106-000750	712	164-002984	1183-86
106-000750	713	164-002994	1183-87
106-000750	714	164-003004	1183-88
106-000750	715	164-003014	1183-89
106-000750	716	164-003024	1183-90
106-000750	717	164-003034	1183-91
106-000750	718	164-003044	1183-92
106-000750	719	164-003054	1183-93
106-000750	720	164-003064	1183-94
106-000750	721	164-003074	1183-95
106-000750	722	164-003084	1183-96
106-000750	723	164-003094	1183-97
106-000750	724	164-003104	1183-98
106-000750	725	164-003114	1183-99
106-000750	726	164-003124	1184-00
106-000750	727	164-003	

Part catalogue structure

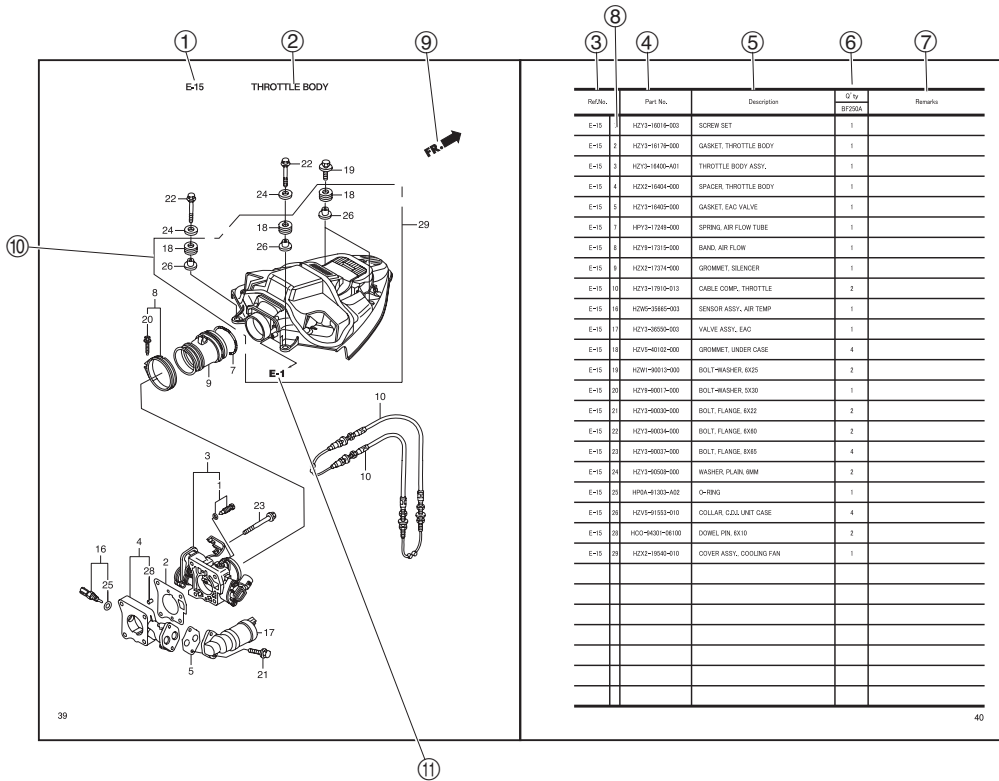

- ① Fig. Number
- ② Fig. Title
- ③ Ref. Number
- ④ Parts Number
- ⑤ Parts Name
- ⑥ Q.ty
- ⑦ Remarks
- ⑧ Defferent specification
- ⑨ Direction Arrow
- ⑩ Parts enclosed within a dotted line are sub assembly parts.
- ⑪ A solid arrow indicates the block No. the part in question is connected to.

How to check the part block and serial numbers

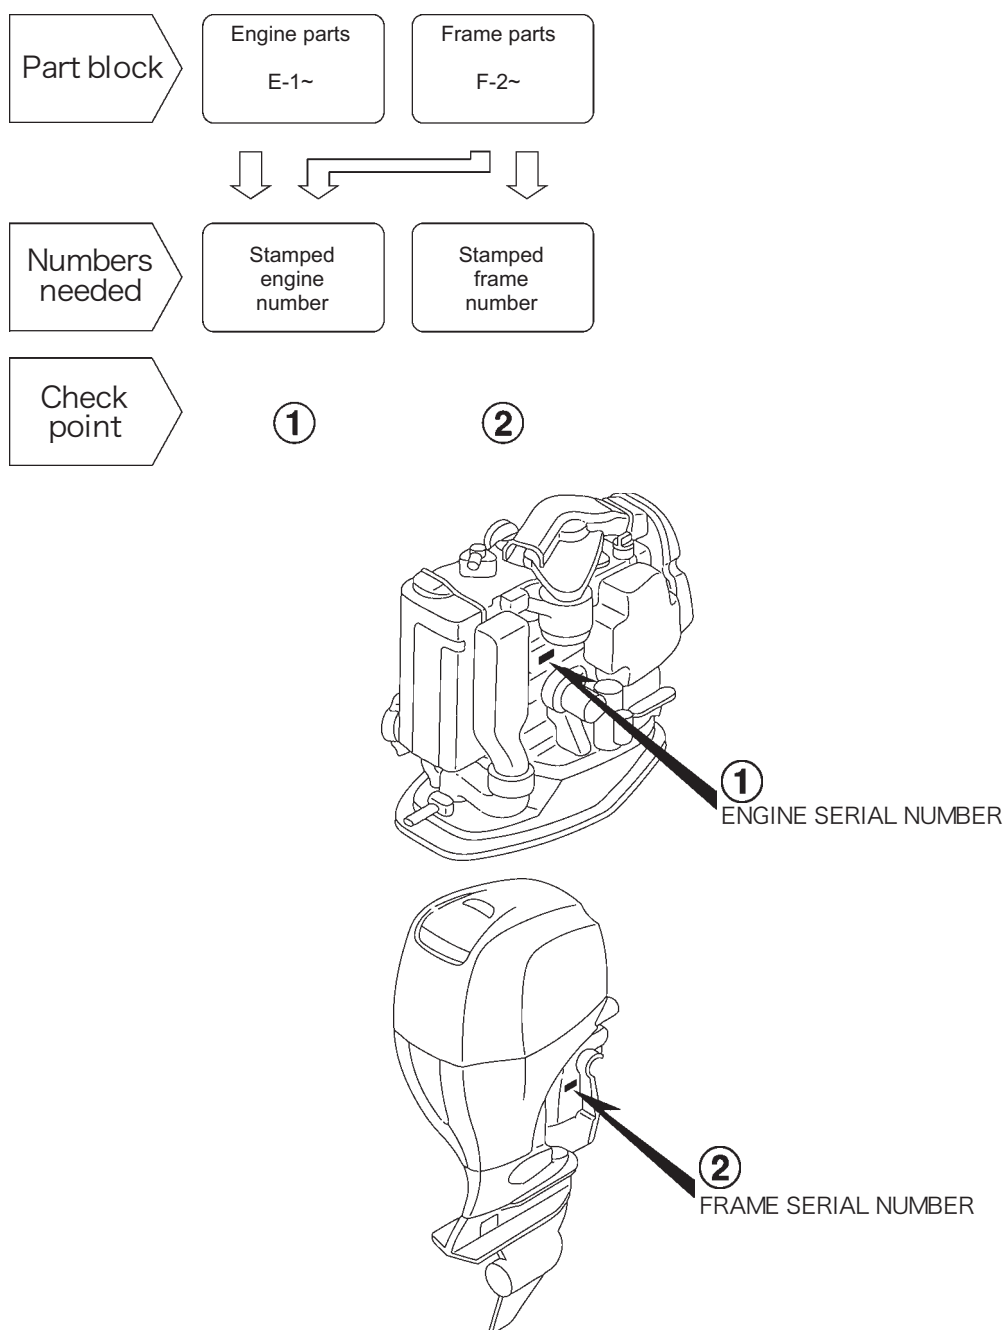

Models, parts catalogue codes and applicable serial numbers

- Models, parts catalogue codes and applicable serial Nos. given in this parts catalogue can be identified as follows.

Model	Type	Parts catalogue type	Engine		Applicable engine serial No.	Applicable frame serial No.
			Model	Type		
BFT 250A	LA	LA	BF 250A	SE	BEBJJ-1000001~	BBJJ-6000001~
	XA	XA				
	XCA	XCA				BBJJ-7000001~

Features of each type

- See the following table for the features of each type. (Items in brackets are optional)


Specifications		Model	BFT 250A		
		Type	LA	XA	XCA
Transom height	508 mm		●		
	635 mm			●	●
Trim tab			●	●	
Counter rotation					●

Fuel hose, general purpose hoses and vinyl hose

- The standard part fuel hose, general purpose hose and vinyl hose may be substituted by the coiled bulk part.
- When ordering the standard part fuel hose, general purpose hose and vinyl hose use the bulk part number written in the parts catalog in brackets () underneath the part name.
- When exchanging the hose, cut and use at the specified length as mentioned in the part name. (For the method of cutting the bulk part, and method of filling out orders etc., please refer to the instructions issued with the bulk part.)

Bulk part number of fuel hose, general purpose hose and vinyl hose.


Example: 95001-75001-50M

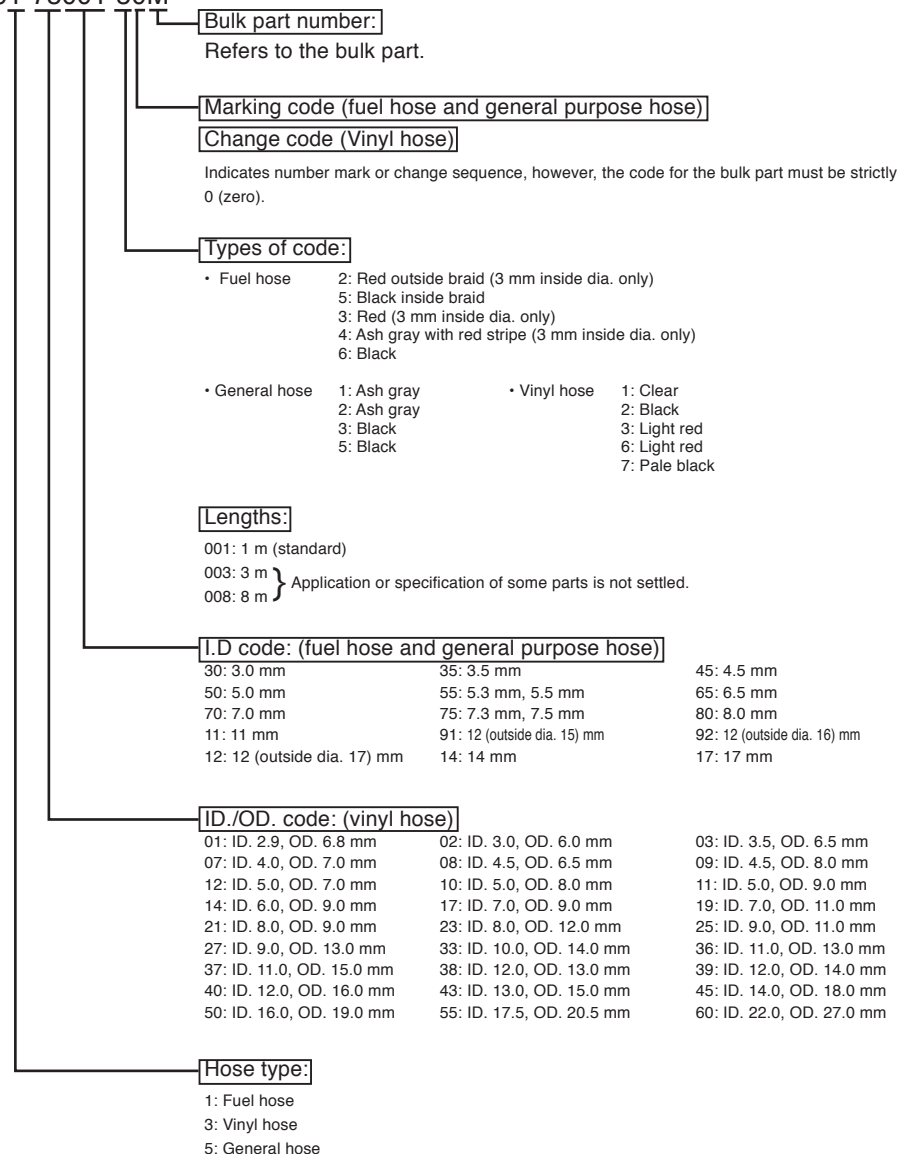


CAUTION: It is DANGEROUS to confuse the fuel hose with the general purpose hose or vinyl hose.

Never use a general purpose hose or vinyl hose in place of a fuel hose or vice versa. Always use the correct bulk part in the parts catalogue, according to the service manual or the instructions issued with the bulk part.


E-1 CYLINDER HEAD COVER

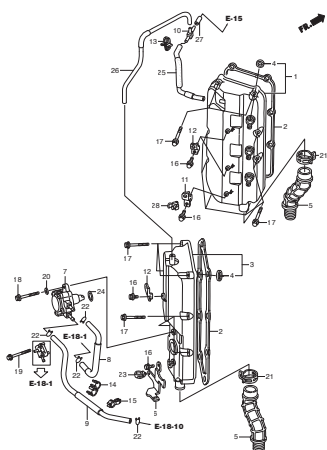


E-3 CYLINDER BLOCK

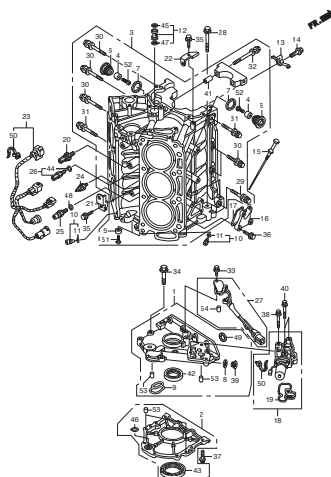


E-3-10 CRANKCASE

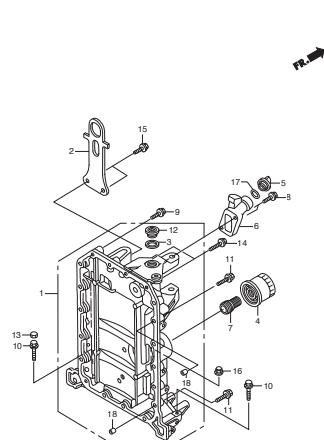


E-4 EXHAUST MANIFOLD/THERMOSTAT

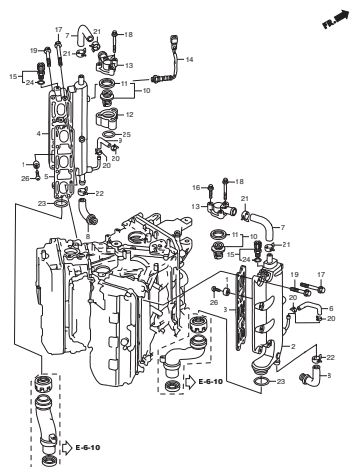


E-5 OIL PUMP/FLYWHEEL

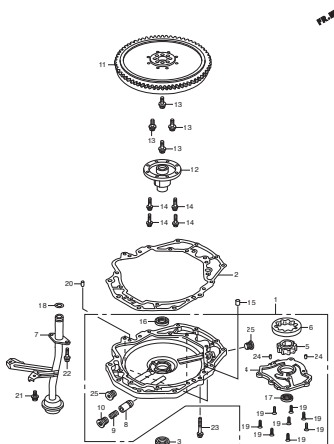


E-6 OIL PAN

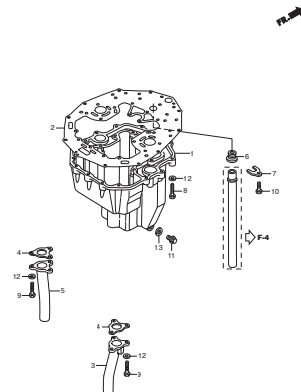


E-6-10 MOUNT CASE

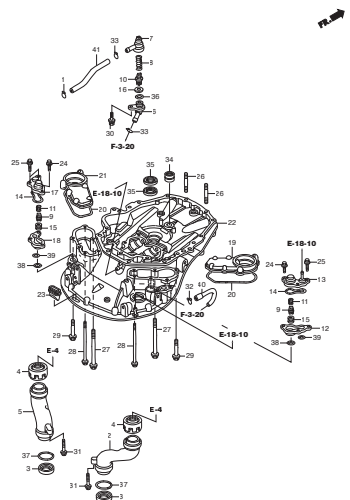


E-6-20 MOUNT CASE BOLT

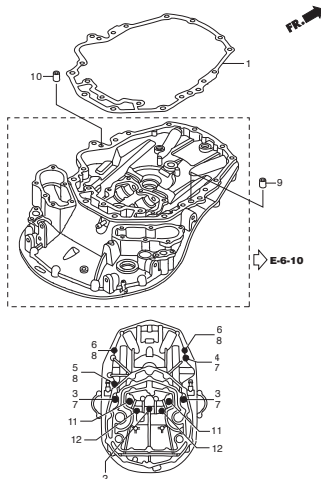


E-9 CYLINDER HEAD

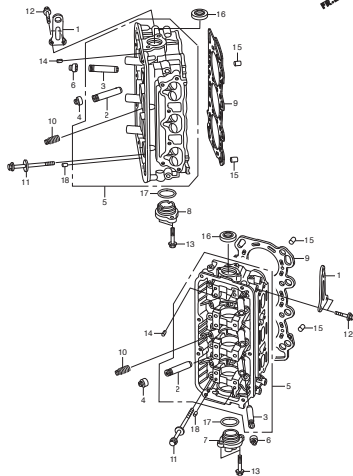


E-9-10 CAMSHAFT/ROCKER ARM

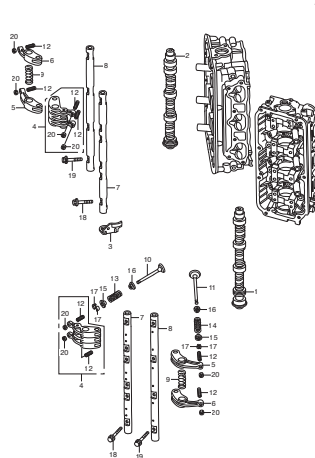


E-13 TIMING BELT

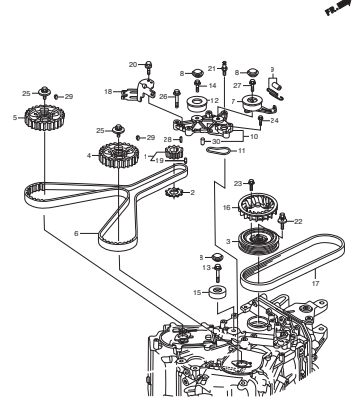


E-13-10 TIMING BELT COVER

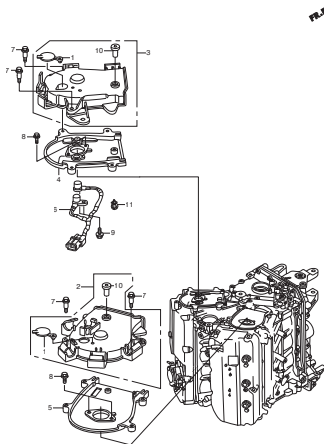


E-14 FUEL PIPE/INJECTOR

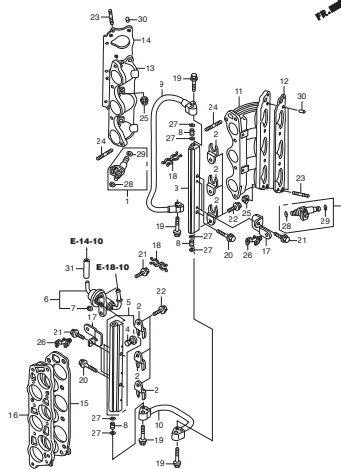


E-14-10 INTAKE MANIFOLD

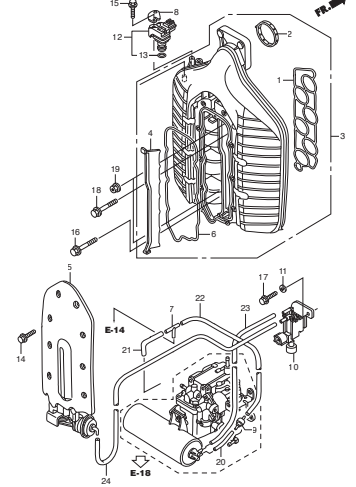


E-15 THROTTLE BODY

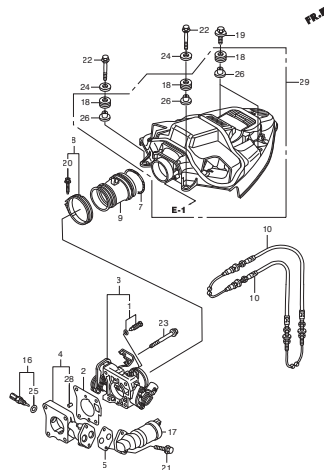


E-18 VAPOR SEPARATOR ASSY

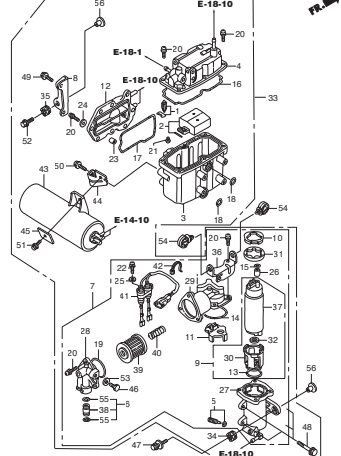


E-18-1 WATER SEPARATOR/FUEL STRAINER

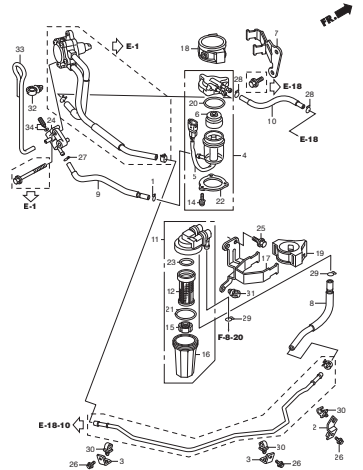


E-18-10 PIPING

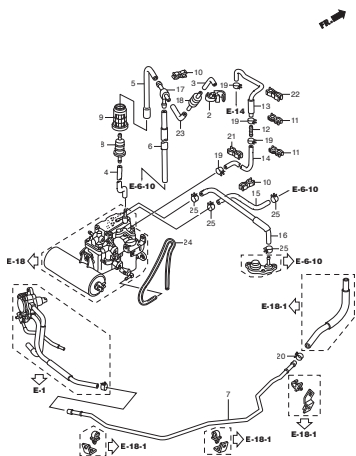


E-19 A.C.GENERATOR

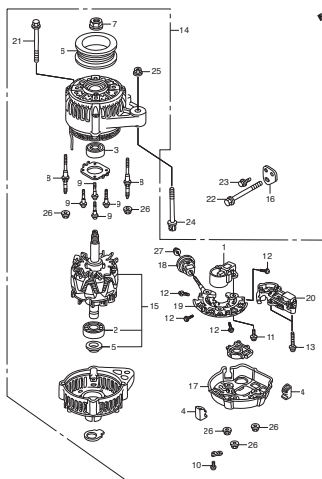


E-20 SPARK PLUG

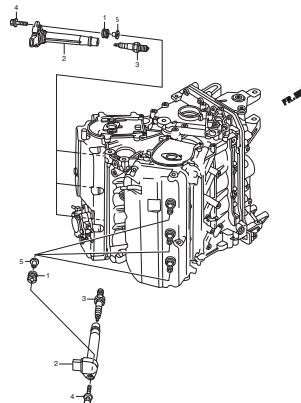


E-20-10 ELECTRONIC CONTROL UNIT

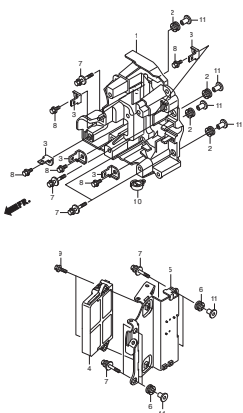


E-21 STARTER MOTOR

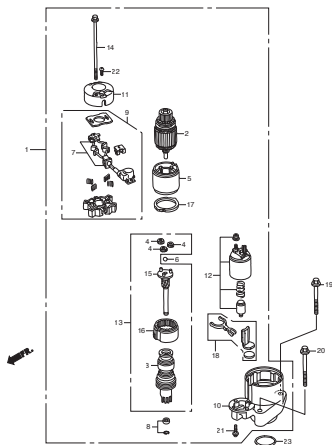


F-2 SHIFT SHAFT

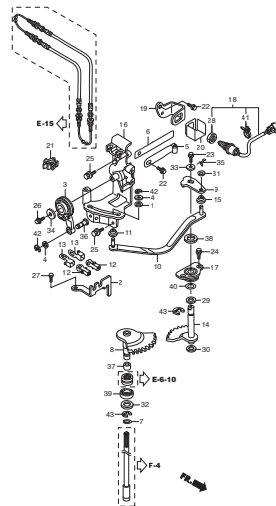


F-3 GEAR CASE

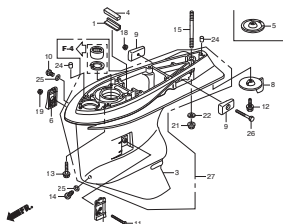


F-3-10 GEAR CASE ASSY

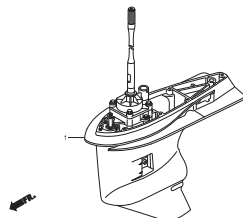


F-3-20 EXTENSION CASE

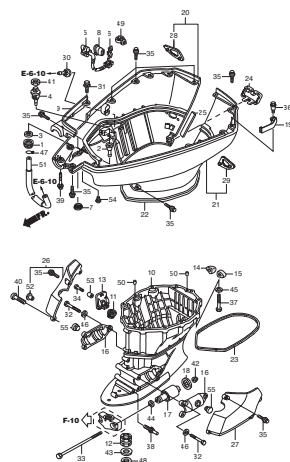


F-4 WATER PUMP/VERTICAL SHAFT

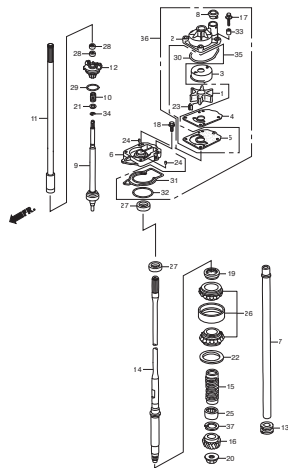


F-5 PROPELLER SHAFT

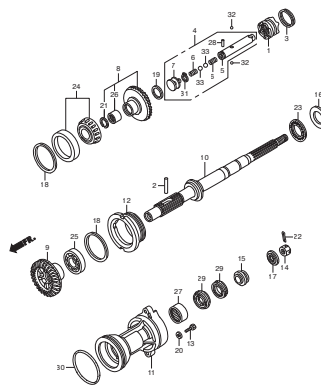


F-5-1 PROPELLER SHAFT (COUNTER ROTATION)

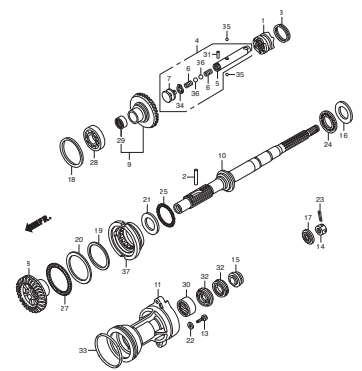


F-6 FUEL TUBE

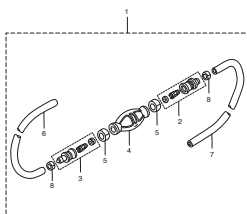


F-7 WIRE HARNESS

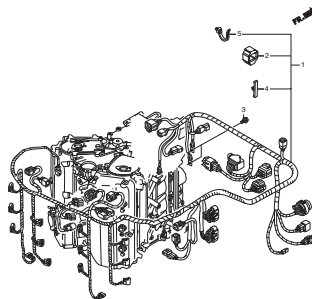


F-7-10 STARTER CABLE

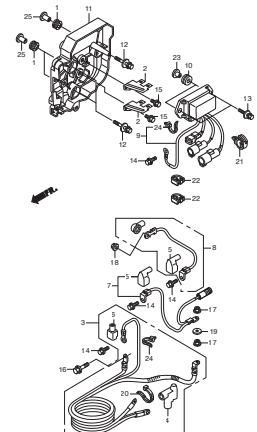


F-7-20 FUSE BOX/RELAY

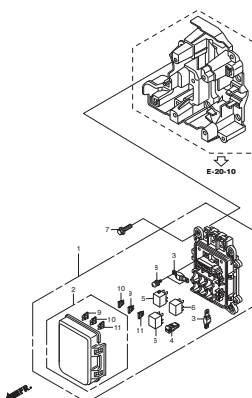


F-8 ENGINE COVER

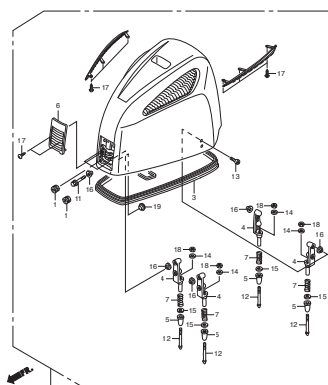


F-8-10 FR.COVER BRACKET/FR.LOCK SHAFT

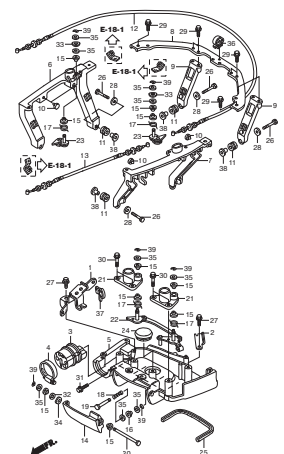


F-8-20 FUEL TUBE (2)

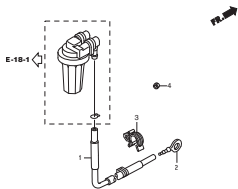


F-10 STERN BRACKET/SWIVEL CASE

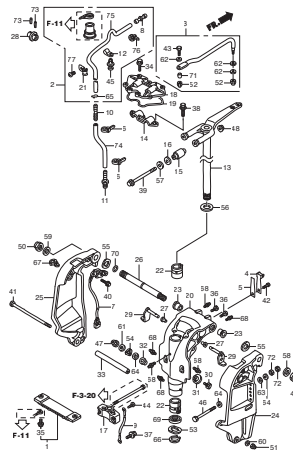


F-11 POWER TRIM-TILT

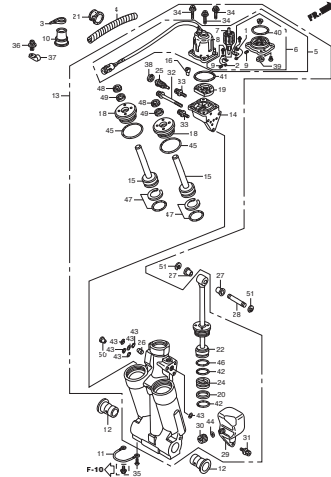


F-12 LABEL

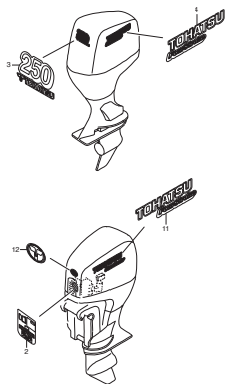


F-13 TOOL

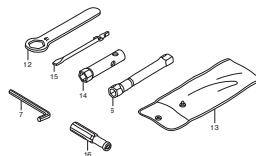


FOP-1 REMOTE CONTROL
(TOP MOUNT SINGLE TYPE) (RIGHT)

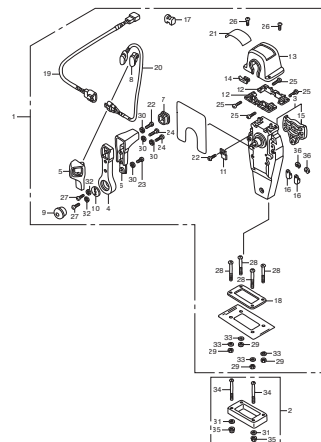


FOP-1-2 REMOTE CONTROL
(TOP MOUNT DUAL TYPE) (RIGHT)









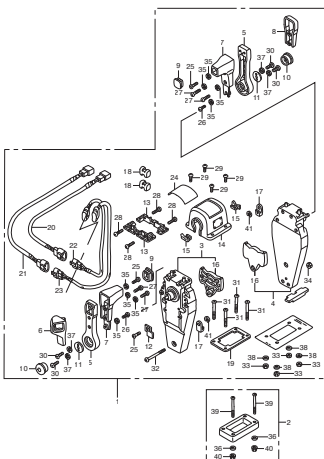


FOP-1-4 REMOTE CONTROL
(FRUSH MOUNT TYPE) (RIGHT)

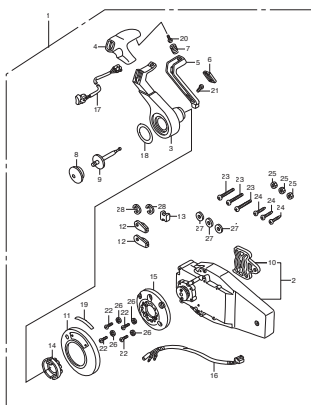



FOP-1-6 REMOTE CONTROL

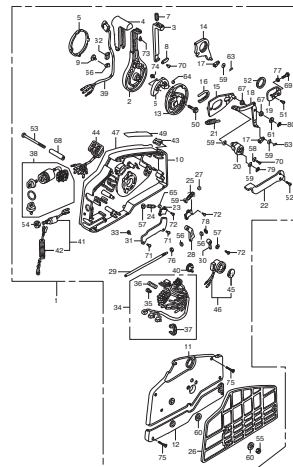

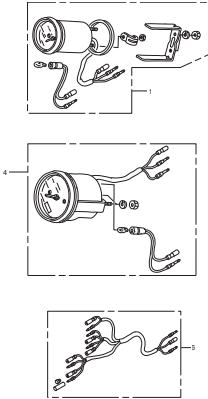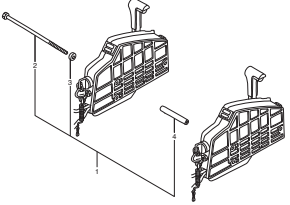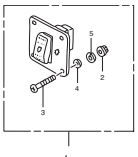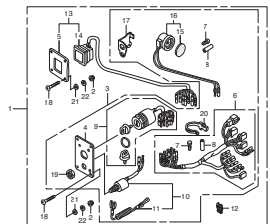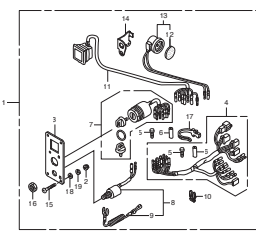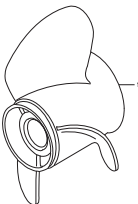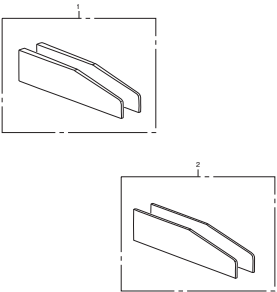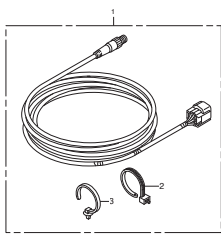
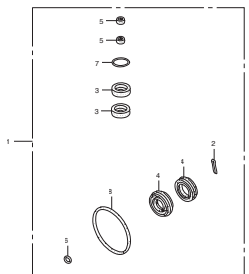
FOP-3 METER 	FOP-5 BOLT KIT 	FOP-6 SWITCH PANEL KIT 
FOP-7 CONTROL PANEL (1) 	FOP-7-1 CONTROL PANEL (2) 	FOP-8 PROPELLER 
FOP-9 TRIM ADJUST PLATE SET 	FOP-10 INTERFACE CABLE KIT 	FOP-12 GEAR CASE KIT 

FOP-13 PANEL INTERFACE CABLE SET


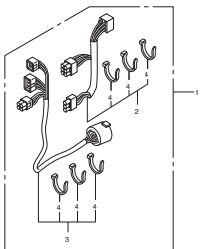


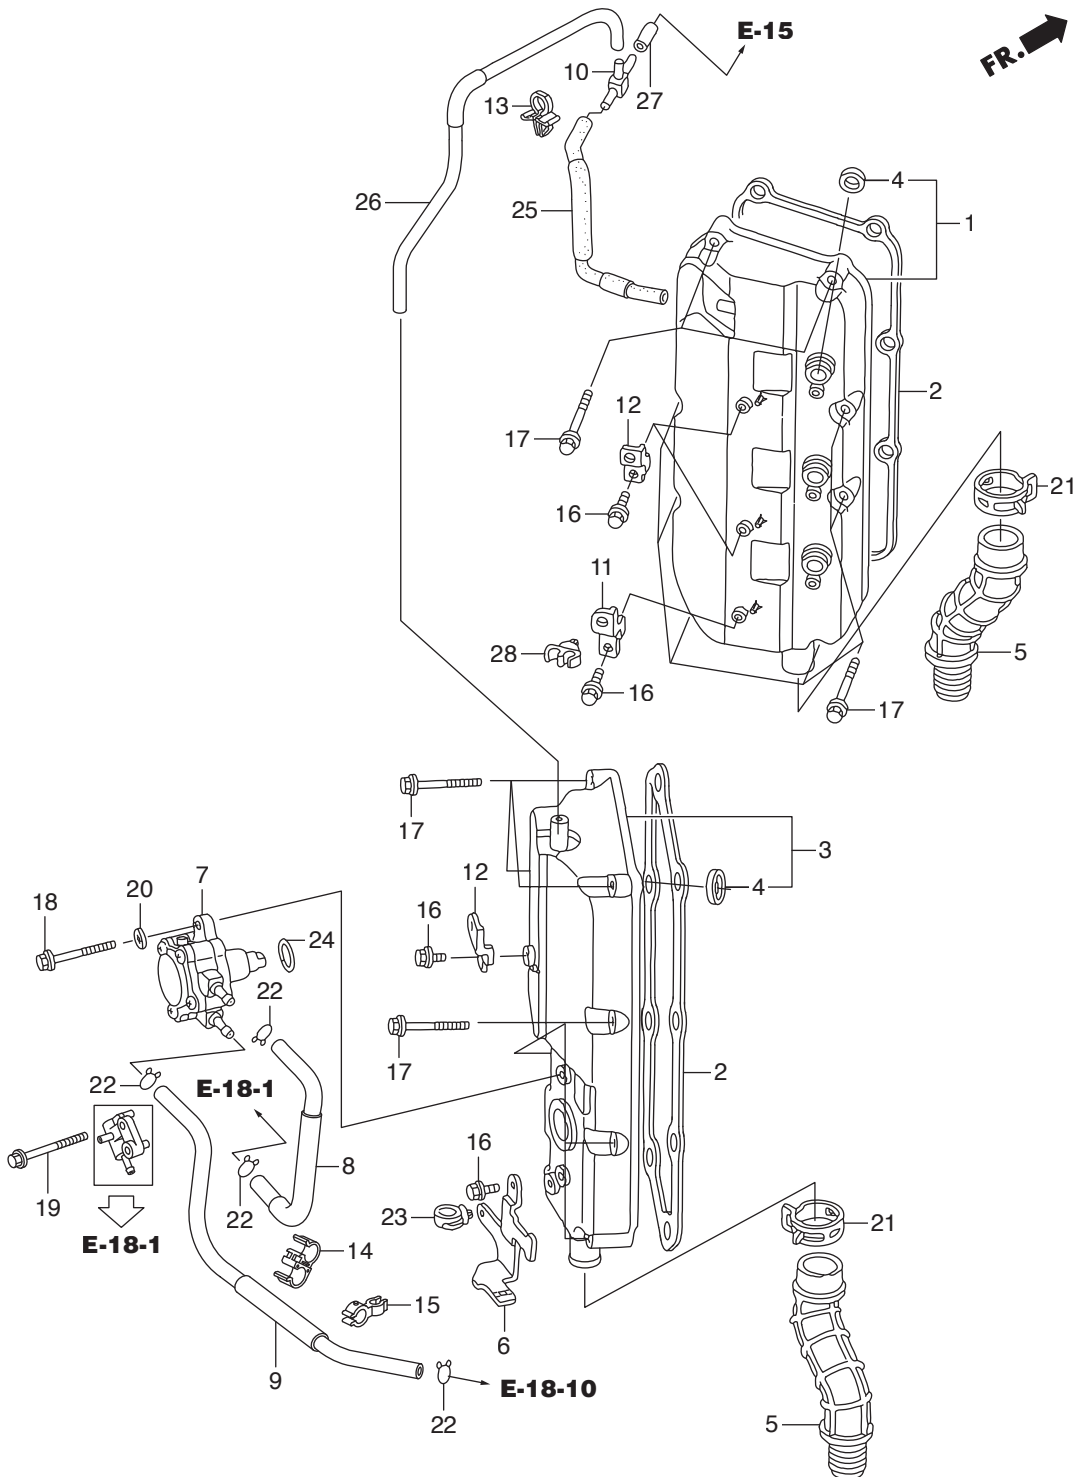


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-1	1	HZY3-12310-405ZA	COVER, R. CYLINDER HEAD	1	*NH8* DARK GRAY
E-1	2	HZY3-12312-000	PACKING, HEAD COVER	2	
E-1	3	HZY3-12320-405ZA	COVER, L. CYLINDER HEAD	1	*NH8* DARK GRAY
E-1	4	HP08-12342-004	SEAL, SPARK PLUG TUBE(NOK)	6	
E-1	5	HZY3-15425-010	TUBE, OIL	2	
E-1	6	HZY3-16203-000	BRACKET, SOLENOID VALVE	1	
E-1	7	HZX2-16700-003	PUMP ASSY., FUEL	1	
E-1	8	HZX2-16870-C00	TUBE COMP., FUEL(C)	1	
E-1	9	HZY3-16895-C00	TUBE COMP. G, FUEL	1	
E-1	10	HMT2-17193-000	T-JOINT	1	
E-1	11	HZW9-32114-730	BRACKET, CLIP B	1	
E-1	12	HZY3-32129-000	BRACKET C, HARNESS CLIP	3	
E-1	13	HHE0-50310-003	CLIP A, WIRE	1	
E-1	14	HSE0-53740-953	CLIP, SENSOR HOSE	1	
E-1	15	HSD9-54316-013	CLIP, SHIFT WIRE	1	
E-1	16	HZW9-90011-000	BOLT, FLANGE, 6X14(CT200)	5	
E-1	17	HZW9-90019-000	BOLT, FLANGE, 6X35	16	
E-1	18	HZY3-90036-000	BOLT, FLANGE, 8X32	1	
E-1	19	HZW4-90126-000	BOLT, FLANGE, 8X45	1	
E-1	20	HZY3-90406-000	WASHER, PLAIN, 8MM	1	
E-1	21	HZY3-90602-020	CLAMP, TUBE(D32.5)	2	
E-1	22	HZV0-90604-000	CLIP, TUBE(B12)	4	
E-1	23	HZB7-90691-003	CLIP, HARNESS	1	
E-1	24	HKT7-91305-003	O-RING, 37X2.4(ARAI)	1	
E-1	25	HZY3-91401-A00	TUBE COMP. A, BREATHER	1	
E-1	26	HZY3-91402-020	TUBE B, BREATHER	1	
E-1	27	HZY3-91403-000	TUBE C, BREATHER	1	
E-1	28	HSK7-91566-003	CLIP D, WASHER TUBE	1	

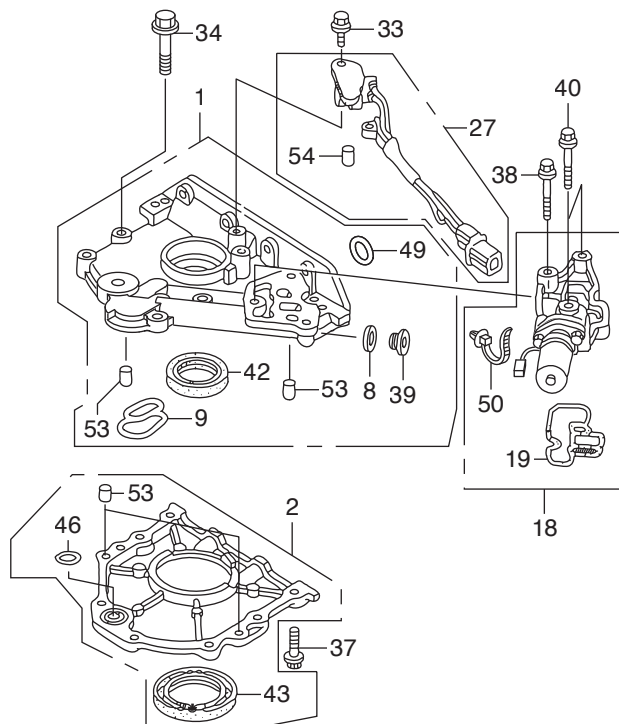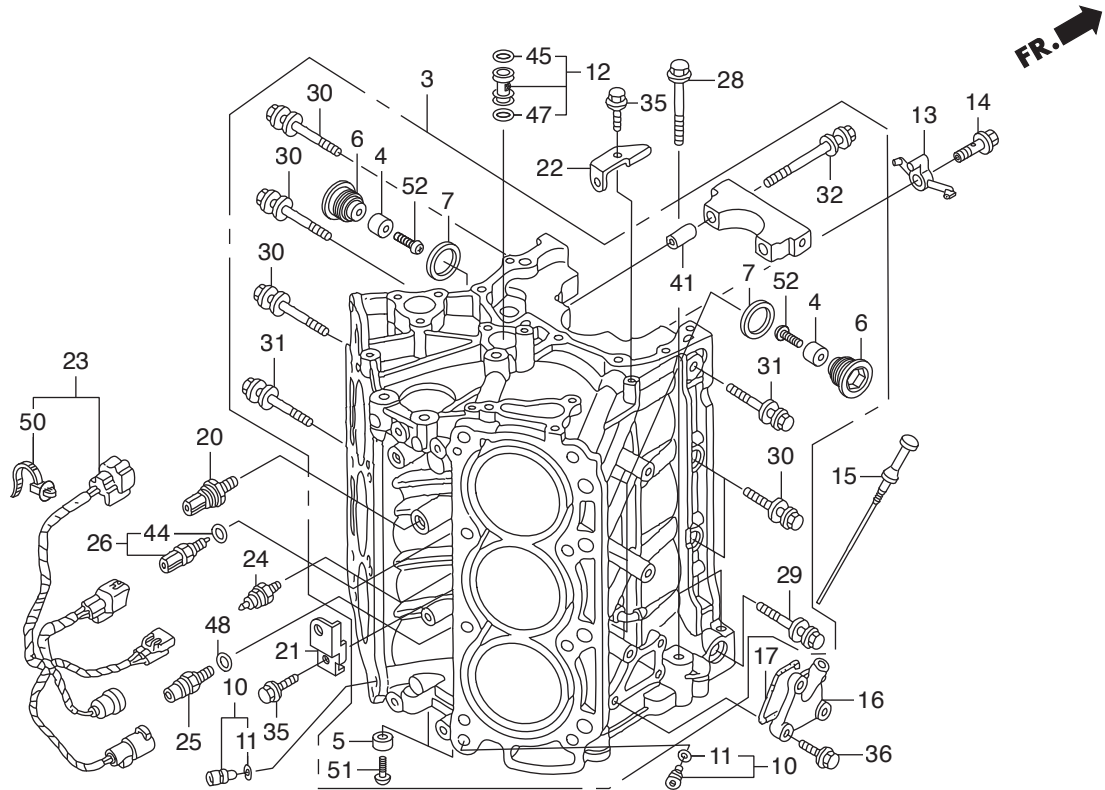


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-3	1	HZY3-11200-010ZA	COVER ASSY., CRANKCASE UPPER	1	*NH8* DARK GRAY
E-3	2	HZY3-11300-C00	CASE ASSY., OIL SEAL	1	
E-3	3	HZX2-12000-405ZA	BLOCK ASSY., CYLINDER	1	*NH8* DARK GRAY
E-3	4	HZV4-12155-A00	METAL, ANODE	6	
E-3	5	HZY3-12155-000	METAL, ANODE	2	
E-3	6	HZY3-12164-000	BOLT, SEALING, 22MM	6	
E-3	7	HZY3-12171-305	WASHER, SEALING, 22MM	6	
E-3	8	HZV5-12214-000	WASHER, SEALING(22MM)	1	
E-3	9	HP8A-15115-A01	PACKING, OIL HOLE	1	
E-3	10	HP8A-15140-A00	ORIFICE ASSY., OIL CONTROL	2	
E-3	11	HP8A-15142-A00	O-RING, 8.8X2.4	2	
E-3	12	HP8A-15150-A00	JOINT ASSY., OIL PIPE	1	
E-3	13	HR70-15280-A00	BODY, OIL JET	3	
E-3	14	HRJA-15290-000	BOLT COMP., OIL JET	3	
E-3	15	HZX2-15655-000	GAUGE COMP., OIL LEVEL	1	
E-3	16	HZY3-15656-000	COVER, OIL LEVEL GAUGE	1	
E-3	17	HZY3-15657-000	PACKING, OIL LEVEL GAUGE	1	
E-3	18	HZY3-15810-003ZA	VALVE ASSY., SPOOL	1	*NH8* DARK GRAY
E-3	19	HZY3-15825-003	FILTER ASSY., SPOOL VALVE	1	
E-3	20	HRNA-30530-A01	SENSOR COMP., KNOCK	1	
E-3	21	HZW9-32114-730	BRACKET, CLIP B	1	
E-3	22	HZY3-32116-000	BRACKET B, HARNESS CLIP	1	
E-3	23	HZY3-32193-C00	CORD, SWITCH	1	
E-3	24	HZW9-35490-003	SWITCH ASSY., OIL PRESSURE	1	
E-3	25	HZY3-35490-004	SWITCH ASSY., OIL PRESSURE	1	
E-3	26	HZY3-35673-003	SENSOR ASSY., WATER	1	TEMPERATURE
E-3	27	HZY3-35700-003	SENSOR ASSY., CRANK	1	
E-3	28	HZY3-90001-000	BOLT, FLANGE, 12X95	2	
E-3	29	HZY3-90006-003	BOLT-WASHER, 10X109	1	

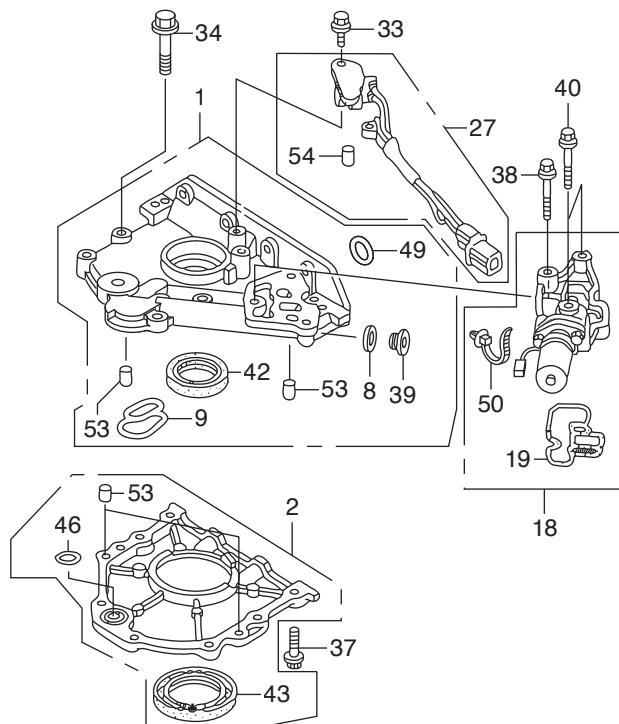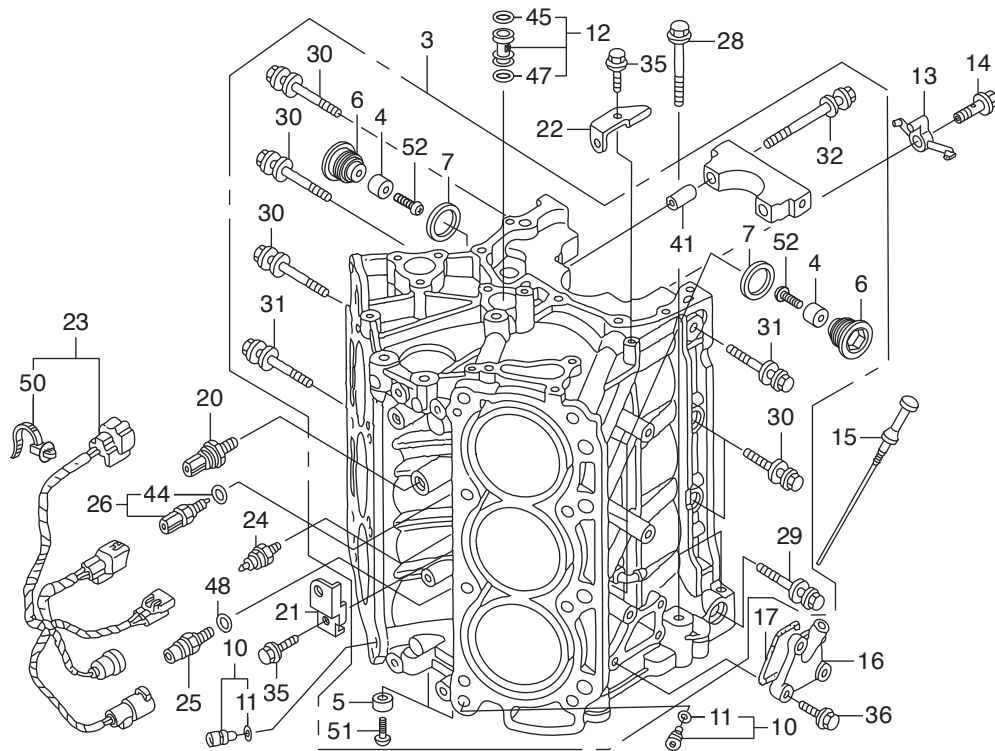


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-3	30	HZY3-90008-003	BOLT-WASHER, 10X60	5	
E-3	31	HZY3-90009-003	BOLT-WASHER, 10X80	2	
E-3	32	HRCA-90014-A01	BOLT-WASHER, 11X105	8	
E-3	33	HZY3-90017-000	BOLT, FLANGE, 6X16	1	
E-3	34	HZW9-90019-000	BOLT, FLANGE, 6X35	7	
E-3	35	HZY3-90021-000	BOLT, FLANGE, 6X14	2	
E-3	36	HZY3-90028-000	BOLT, FLANGE, 6X18	4	
E-3	37	HZY3-90030-000	BOLT, FLANGE, 6X22	8	
E-3	38	HZY3-90038-000	BOLT, FLANGE, 8X75	1	
E-3	39	HZV5-90081-010	BOLT, SEALING, 22MM	1	
E-3	40	HZW4-90156-000	BOLT, FLANGE, 8X50	2	
E-3	41	HPH7-90715-000	DOWEL PIN, 13X37	8	
E-3	42	HZY3-91212-003	OIL SEAL, 41X66X8	1	
E-3	43	HPNA-91214-014	OIL SEAL, 80X98X10(ARAI)	1	
E-3	44	HPNA-91307-003	O-RING, 9.5X1.9	1	
E-3	45	HP8A-91308-A01	O-RING, 18.3X3.5	1	
E-3	46	HPK1-91308-003	O-RING, 26.2X2.4(NOK)	1	
E-3	47	HP8A-91309-A01	O-RING, 16.3X3.5	1	
E-3	48	HPR3-91319-003	O-RING, 13X1.5(ARAI)	1	
E-3	49	HP0X-91321-003	O-RING, 25X2.4(NOK)	1	
E-3	50	HS0A-91541-003	CLIP, HARNESS BAND(BLACK)	2	(145MM)
E-3	51	HCO-93500-05016-4J	SCREW, PAN, 5X16	2	
E-3	52	HCO-93500-05020-4J	SCREW, PAN, 5X20	6	
E-3	53	HCO-94301-06100	DOWEL PIN, 6X10	4	
E-3	54	HCO-94303-05080	DOWEL PIN, 5X8	1	

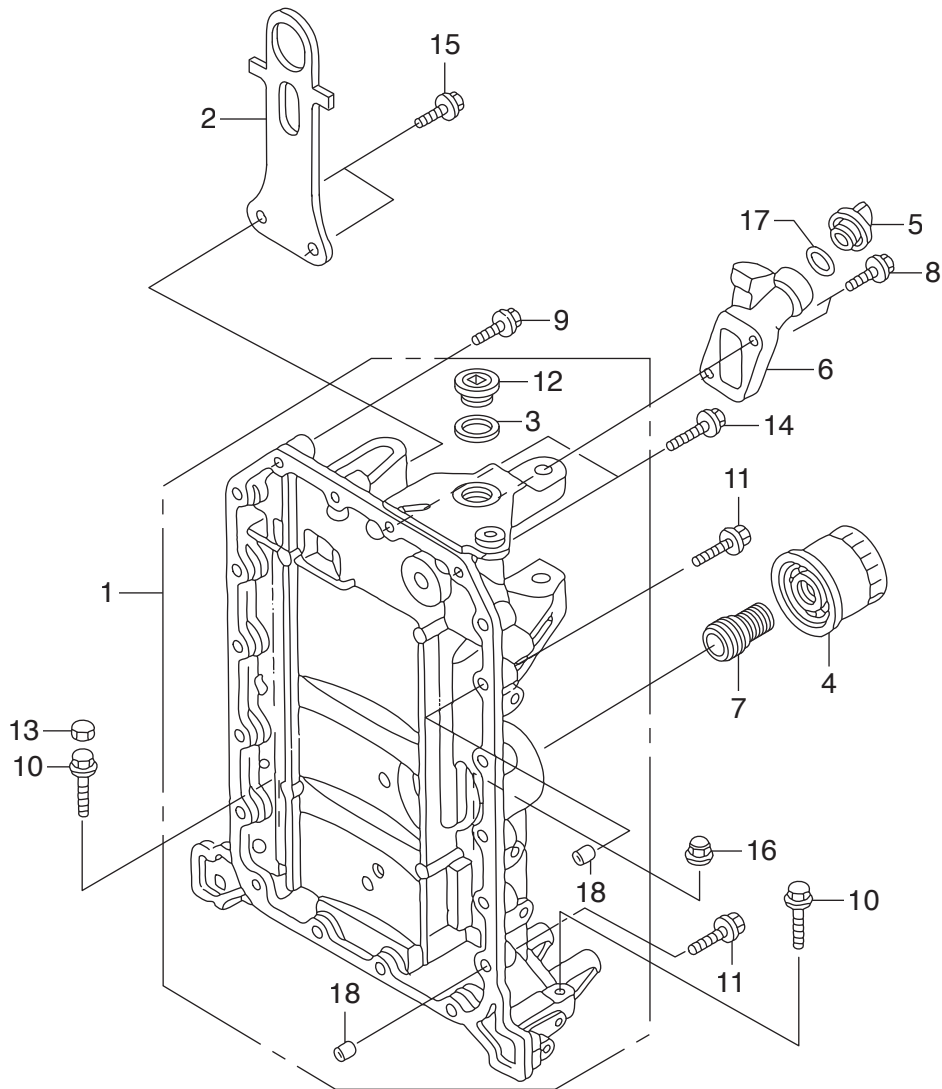FR. 


FR. →

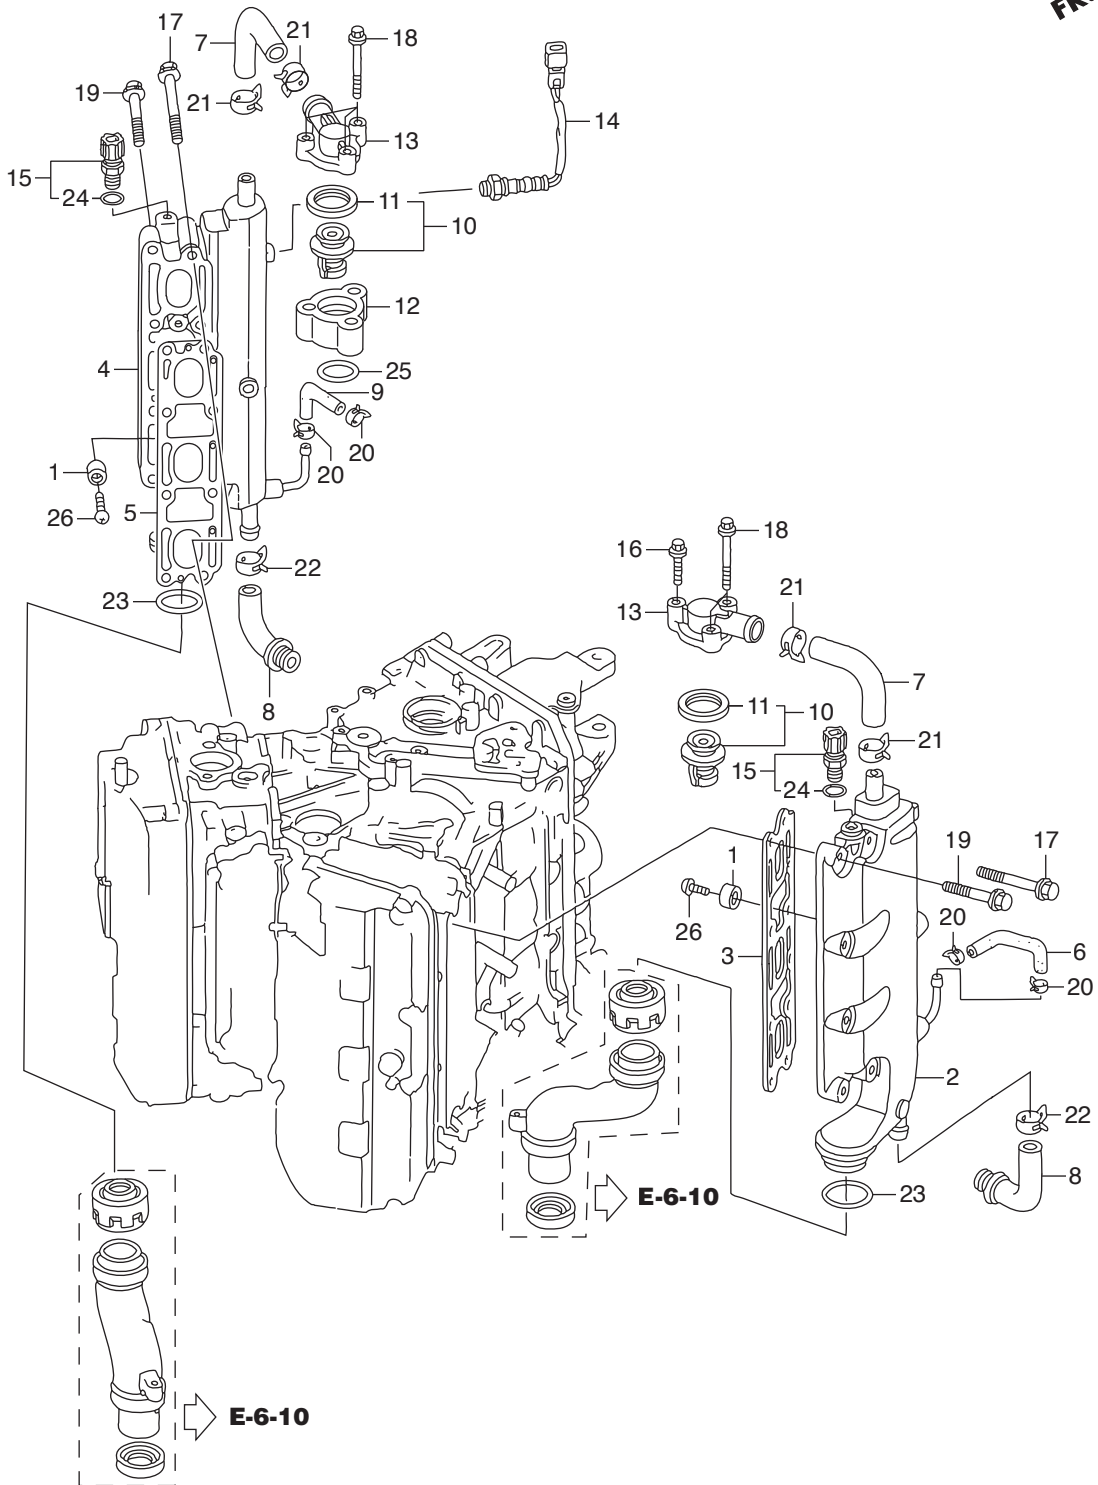


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-4	1	HZV5-12155-000	METAL, ANODE	4	
E-4	2	HZY3-18110-010ZA	MANIFOLD COMP., R. EX.	1	*NH8* DARK GRAY
E-4	3	HZY3-18115-003	GASKET, R. EX. MANIFOLD	1	
E-4	4	HZY3-18120-C01ZA	MANIFOLD COMP., L. EX.	1	*NH8* DARK GRAY
E-4	5	HZY3-18125-003	GASKET, L. EX. MANIFOLD	1	
E-4	6	HZY3-19255-000	TUBE, R. WATER RETURN	1	
E-4	7	HZY3-19256-010	TUBE, WATER RELIEF	2	
E-4	8	HZY3-19257-000	TUBE, WATER	2	
E-4	9	HZY3-19261-000	TUBE, L. WATER RETURN	1	
E-4	10	HZX2-19300-003	THERMOSTAT ASSY.	2	
E-4	11	HZX2-19303-003	RUBBER, RING	2	
E-4	12	HZX2-19313-000ZA	SPACER, THERMOSTAT COVER	1	*NH8* DARK GRAY
E-4	13	HZX2-19315-000ZA	COVER, THERMOSTAT	2	*NH8* DARK GRAY
E-4	14	HZY3-35655-C01	SENSOR, OXYGEN	1	
E-4	15	HZY3-35673-003	SENSOR ASSY., WATER	2	TEMPERATURE
E-4	16	HZW9-90019-000	BOLT, FLANGE, 6X35	1	
E-4	17	HZY3-90027-000	BOLT, FLANGE, 8X60	8	
E-4	18	HZY3-90034-000	BOLT, FLANGE, 6X60	5	
E-4	19	HZW4-90155-000	BOLT, FLANGE, 8X40	8	
E-4	20	HZY3-90601-030	CLAMP, TUBE(D10.5)	4	
E-4	21	HZY3-90603-020	CLAMP, TUBE(D29)	4	
E-4	22	HZY3-90604-020	CLAMP, TUBE(D21)	2	
E-4	23	HZY3-91301-003	O-RING, 66.4X3.1	2	
E-4	24	HPNA-91307-003	O-RING, 9.5X1.9	2	
E-4	25	HSD4-91356-952	O-RING, 31.5X2.4(ARAI)	1	
E-4	26	HCO-93500-06018-4J	SCREW, PAN, 6X18	4	

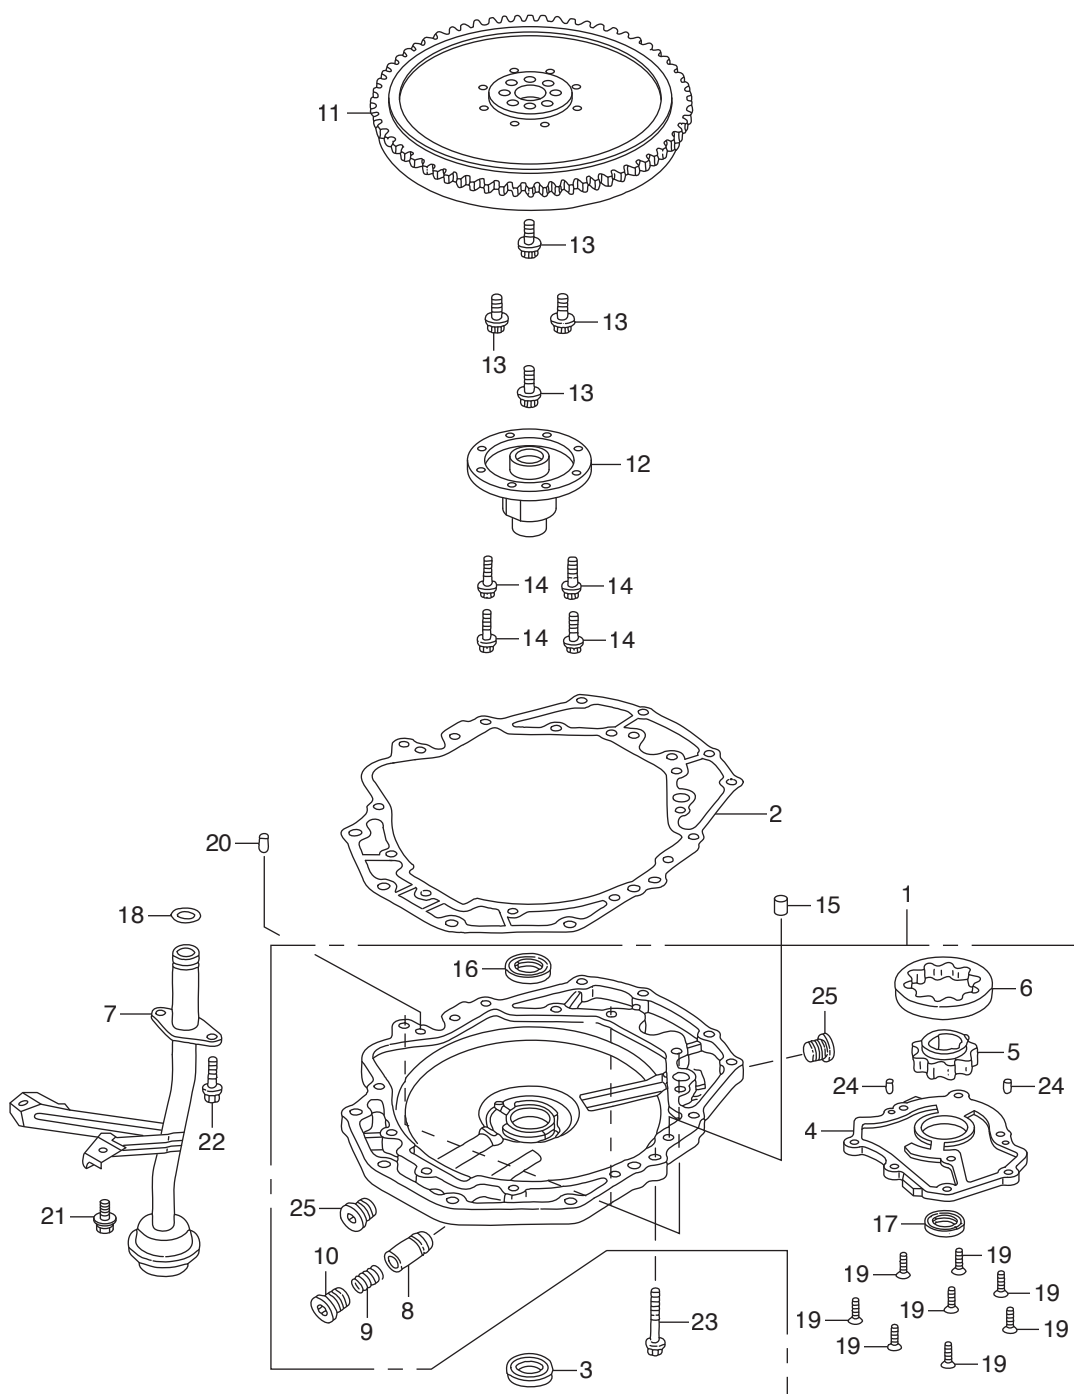FR. 


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-5	1	HZY3-15100-000ZA	PUMP ASSY., OIL	1	*NH8* DARK GRAY
E-5	2	HZY3-15112-013	PACKING, OIL PUMP BODY	1	
E-5	3	HZY3-15113-000	RUBBER, OIL PUMP	1	
E-5	4	HZY3-15121-000	COVER, OIL PUMP	1	
E-5	5	HZY3-15131-405	ROTOR, OIL PUMP INNER	1	
E-5	6	HZY3-15132-405	ROTOR, OIL PUMP OUTER	1	
E-5	7	HZY3-15220-020	STRAINER COMP., OIL	1	
E-5	8	HPE0-15231-000	VALVE, RELIEF	1	
E-5	9	HPG6-15232-000	SPRING, RELIEF VALVE	1	
E-5	10	HPC6-15233-000	BOLT, SEALING, 18MM	1	
E-5	11	HZX2-31110-000ZA	FLYWHEEL COMP.	1	*TBLACK* BLACK
E-5	12	HZY3-31116-000	BOSS, FLYWHEEL	1	
E-5	13	HZX2-90001-000	BOLT, 12MM	8	
E-5	14	HZW5-90002-013	BOLT, SPECIAL, 8MM	8	
E-5	15	HPW5-90701-000	DOWEL PIN, 14X15	1	
E-5	16	HZW5-91201-003	OIL SEAL, 46X60X9	1	
E-5	17	HP01-91212-003	OIL SEAL, 31X46X7(NOK)	1	
E-5	18	HPC6-91324-000	O-RING, 20.6X2.6	1	
E-5	19	HCO-93600-06016-0A	SCREW, FLAT, 6X16	8	
E-5	20	HCO-94302-10160	PIN B, DOWEL, 10X16	1	
E-5	21	HCO-95701-06014-09	BOLT, FLANGE, 6X14	2	
E-5	22	HCO-95701-06018-09	BOLT, FLANGE, 6X18	2	
E-5	23	HCO-95701-08030-09	BOLT, FLANGE, 8X30	4	
E-5	24	HCO-96220-50080	ROLLER, 5X8	2	
E-5	25	HZV5-90081-010	BOLT, SEALING, 22MM	2	

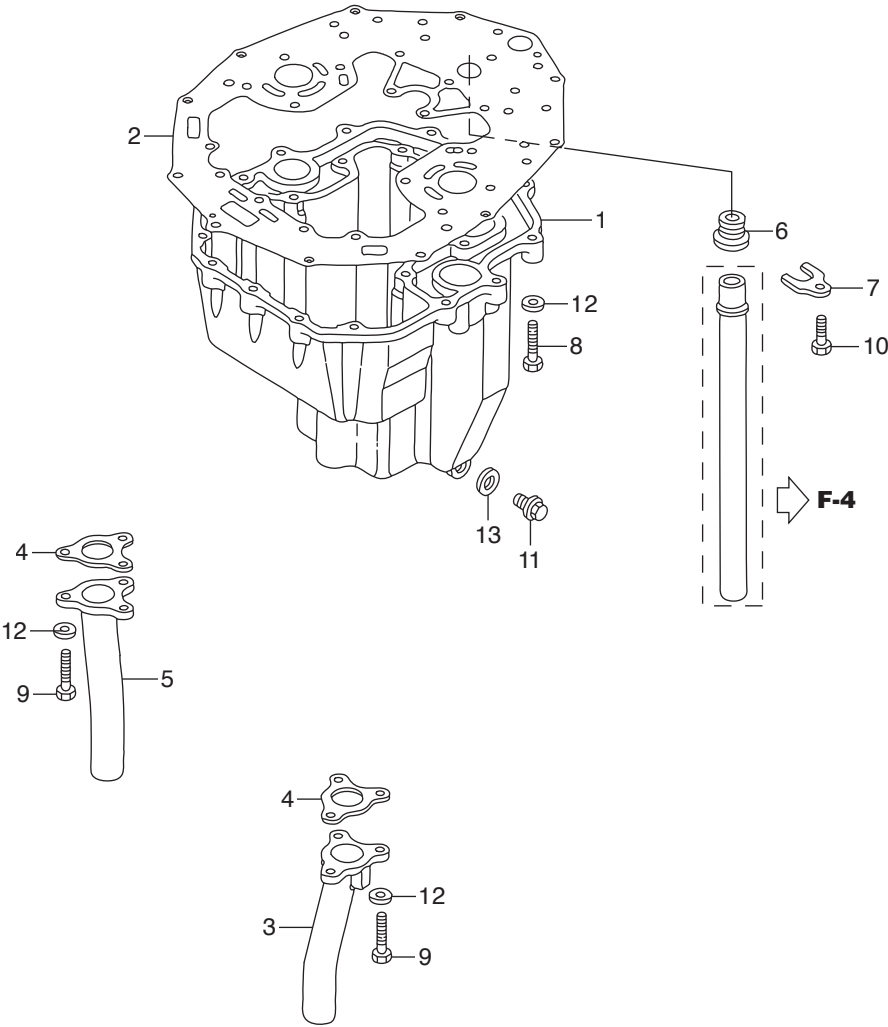



[illegible]

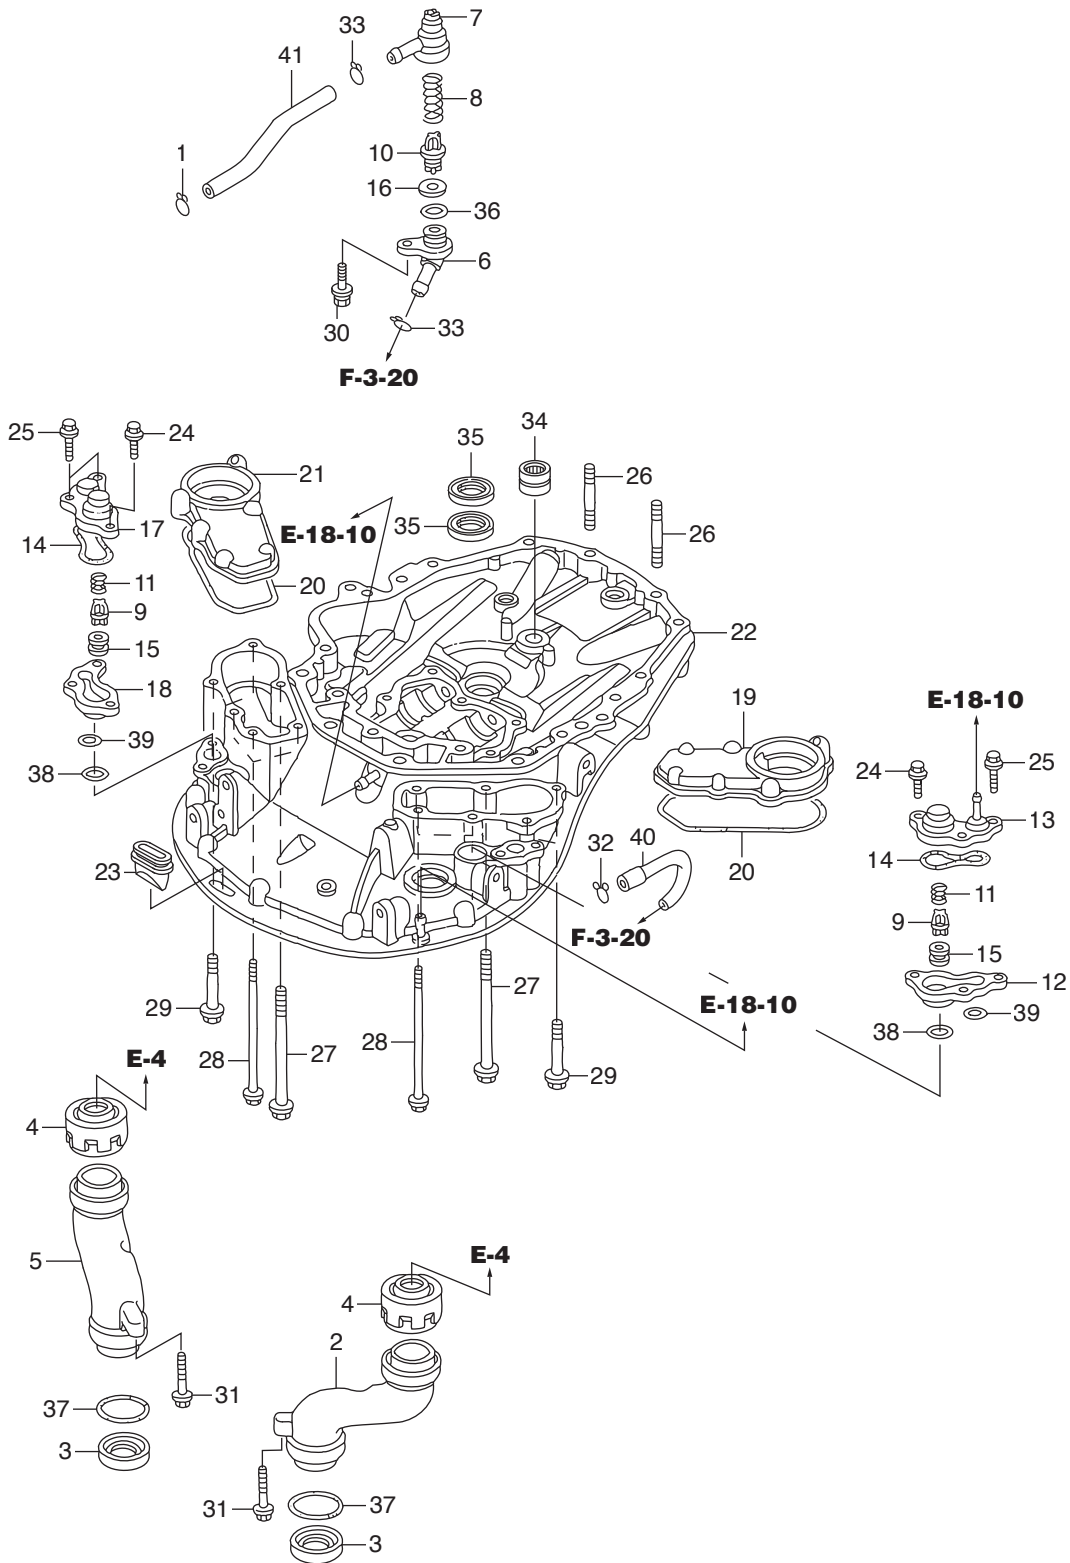FR. 


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-6-10	1	HGHB-16163-610	CLIP, TUBE	1	
E-6-10	2	HZY3-18141-A00ZA	GUIDE, R. EX.	1	*TGRAY* GRAY
E-6-10	3	HZY3-18148-003	SEAL, EXHAUST GUIDE	2	
E-6-10	4	HZY3-18149-A01	SEAL B, EX. GUIDE	2	
E-6-10	5	HZY3-18151-A00ZA	GUIDE, L. EX.	1	*TGRAY* GRAY
E-6-10	6	HZY3-19277-000ZA	COVER, FLUSH VALVE	1	*NH8* DARK GRAY
E-6-10	7	HZY3-19278-000	CASE, FLUSH VALVE	1	
E-6-10	8	HZW9-19279-000	SPRING, FLUSH VALVE	1	
E-6-10	9	HZW5-19291-000	VALVE, RELIEF	2	
E-6-10	10	HZW9-19291-000	VALVE, FLASH	1	
E-6-10	11	HZW5-19292-000	SPRING, RELIEF VALVE	2	
E-6-10	12	HZY3-19294-000ZB	SPACER, R. RELIEF VALVE	1	*TGRAY* GRAY
E-6-10	13	HZY3-19295-000	COVER, R. RELIEF VALVE	1	
E-6-10	14	HZY3-19296-000	PACKING, RELIEF VALVE COVER	2	
E-6-10	15	HZW5-19297-000	PACKING, RELIEF VALVE	2	
E-6-10	16	HZW9-19297-000	PACKING, FLASH VALVE	1	
E-6-10	17	HZY3-19297-000	COVER, L. RELIEF VALVE	1	
E-6-10	18	HZY3-19298-000ZB	SPACER, L. RELIEF VALVE	1	*TGRAY* GRAY
E-6-10	19	HZY3-19361-000	COVER, R. WATER JACKET	1	
E-6-10	20	HZY3-19362-000	PACKING, WATER JACKET COVER	2	
E-6-10	21	HZY3-19366-000	COVER, L. WATER JACKET	1	
E-6-10	22	HZY3-23170-030ZA	CASE COMP., MOUNT	1	*NH8* DARK GRAY
E-6-10	23	HZY3-23173-010	RUBBER, MOUNT CASE SEAL	1	
E-6-10	24	HZY3-90030-000	BOLT, FLANGE, 6X22	2	
E-6-10	25	HZY3-90031-000	BOLT, FLANGE, 6X32	4	
E-6-10	26	HZY3-90045-000	BOLT, STUD, 10X45	2	
E-6-10	27	HZY3-90046-000	BOLT, FLANGE, 8X100	2	
E-6-10	28	HZY3-90047-000	BOLT, WASHER, 6X121	6	
E-6-10	29	HZY3-90049-000	BOLT, FLANGE, 8X30	4	

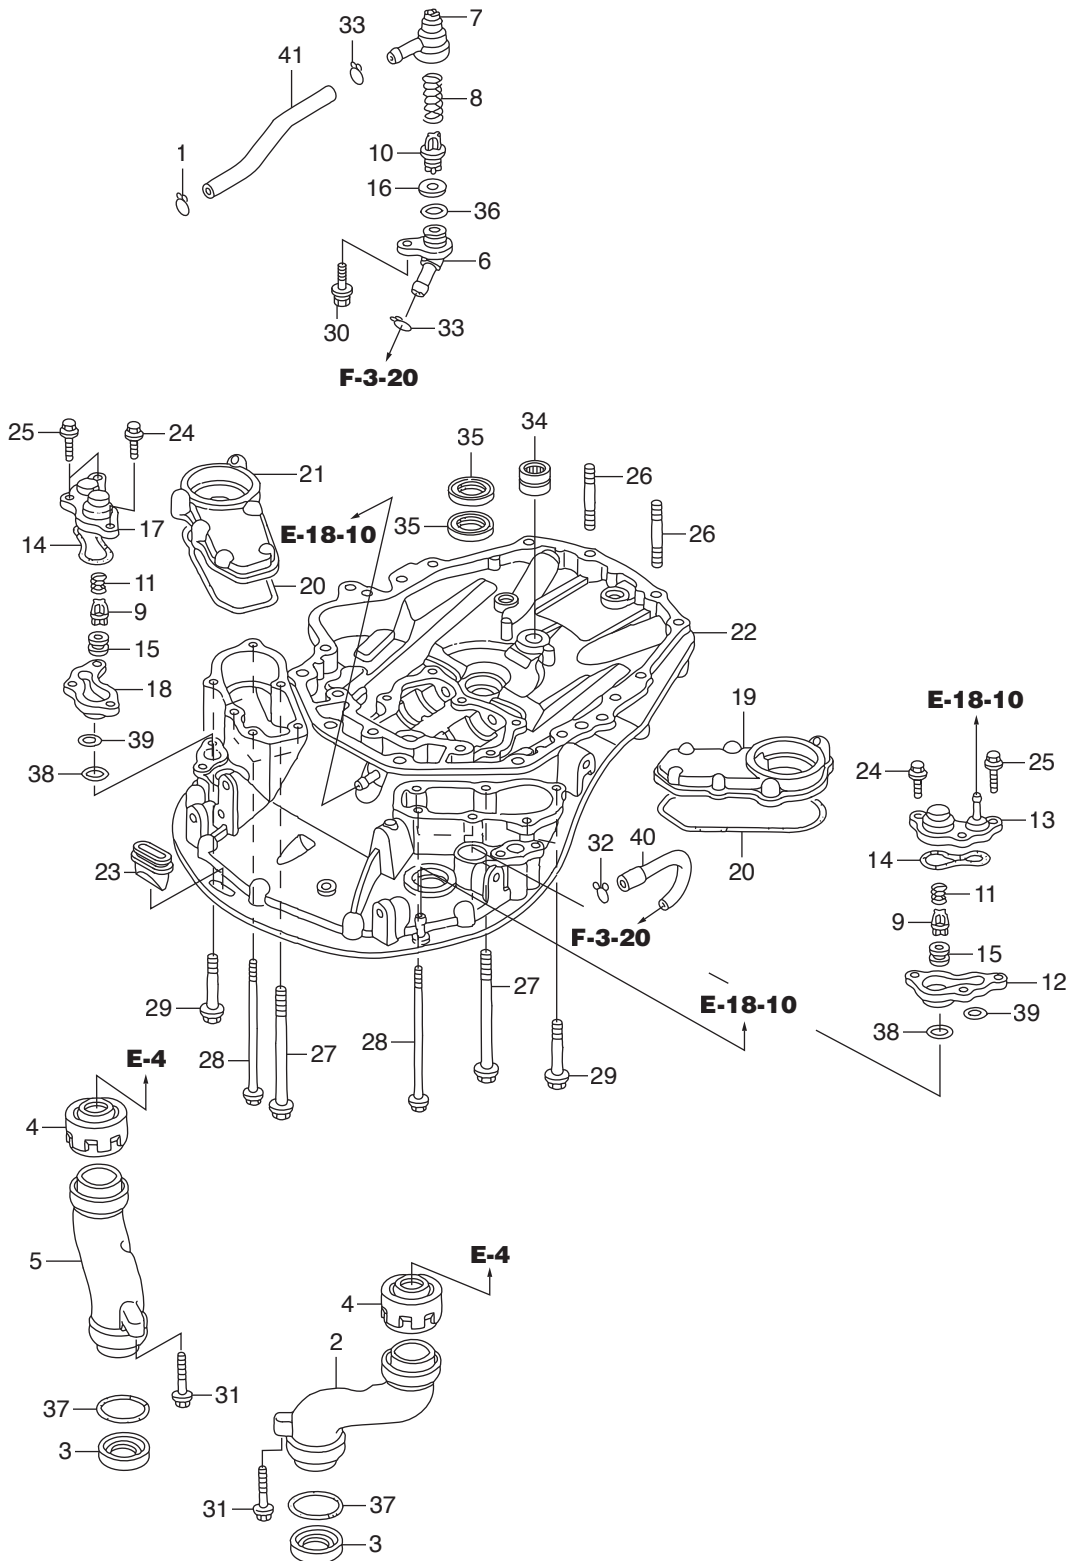FR. 

[illegible]

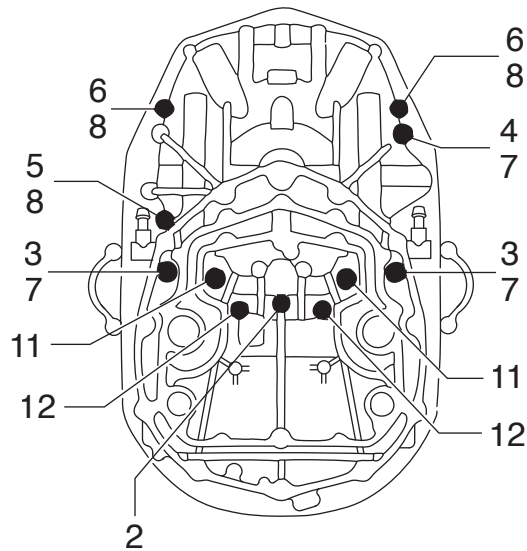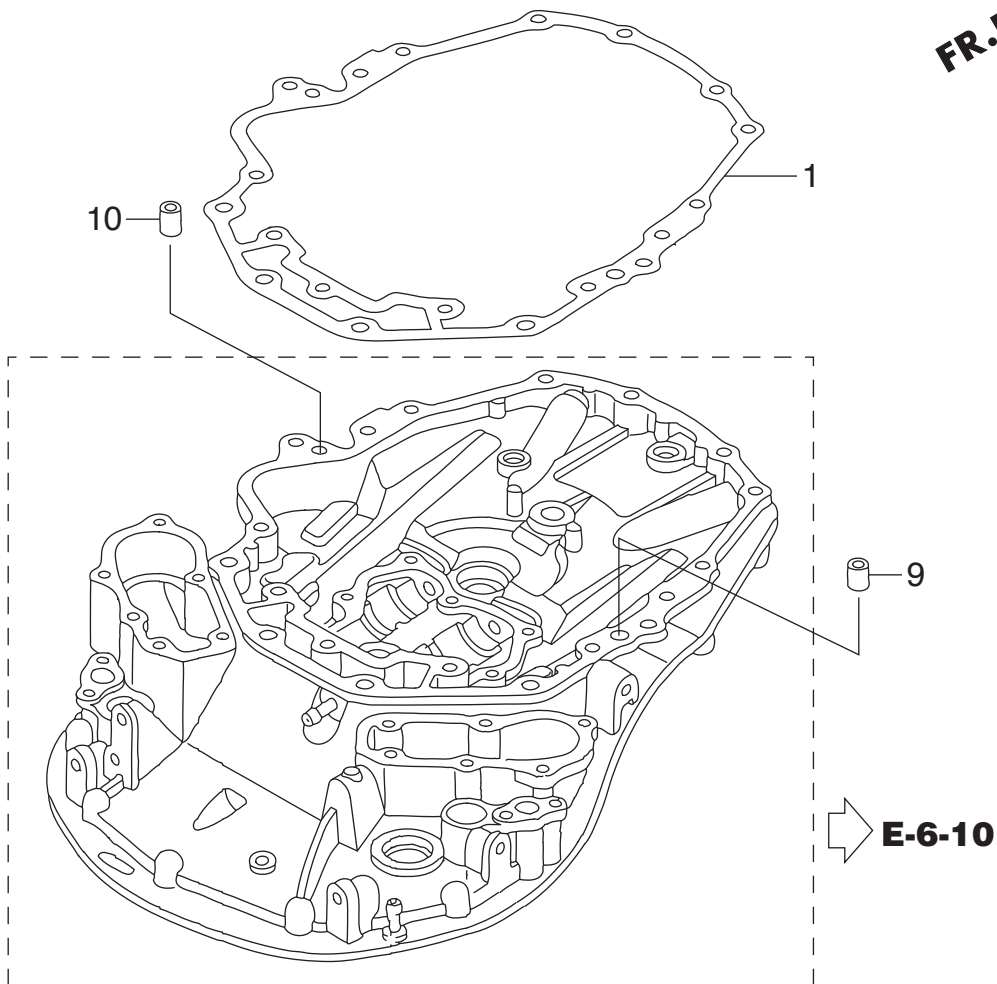
FR. 


[illegible]

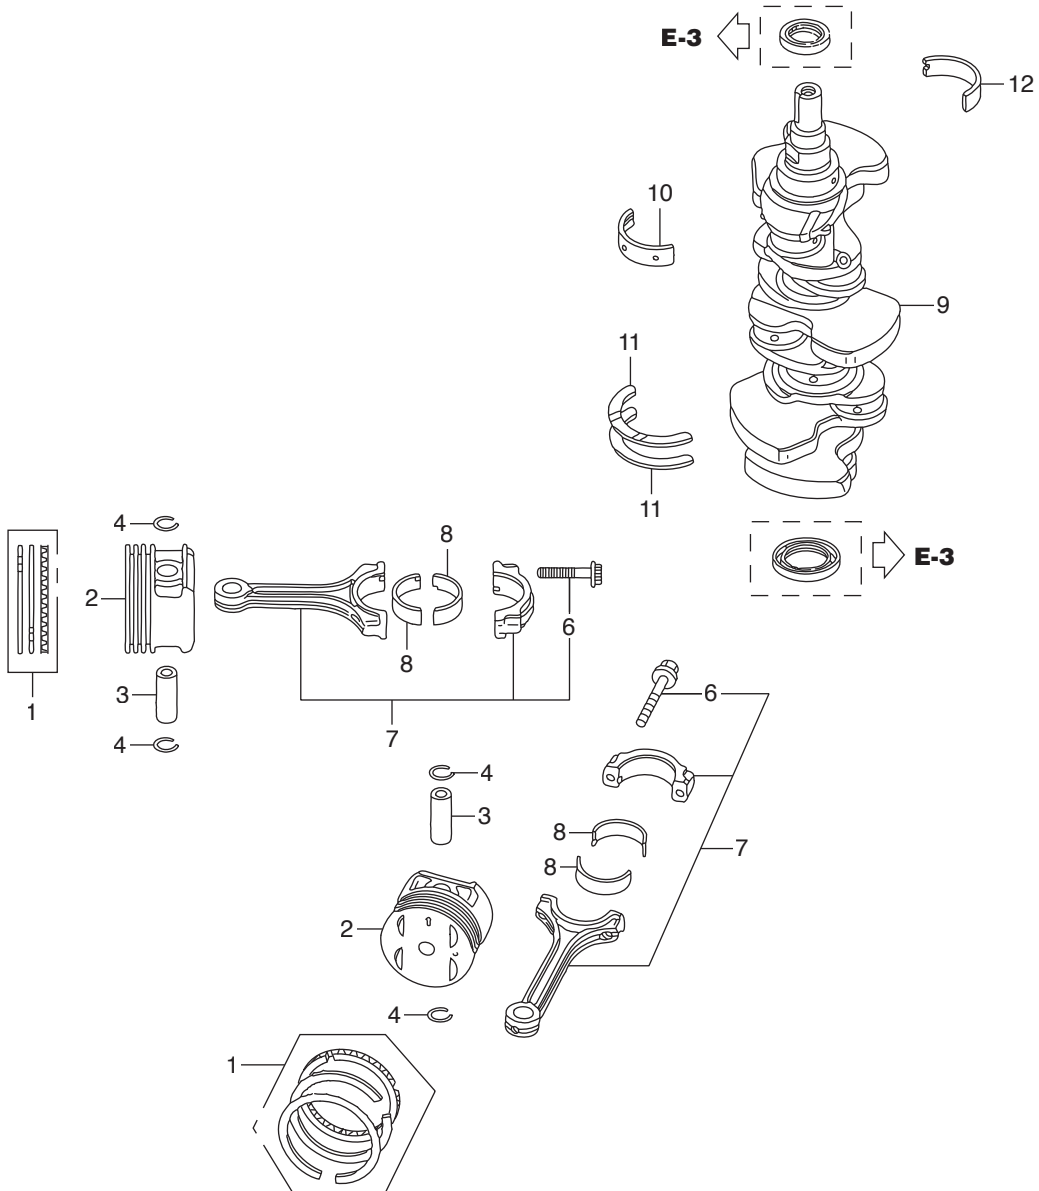FR. 


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-7	1	HZX2-13010-000	RING SET, PISTON(STD.)(RIKEN)	6	
E-7	2	HZX2-13101-000	PISTON	6	
E-7	3	HPEA-13111-000	PIN, PISTON	6	
E-7	4	HP5A-13115-000	CLIP, PISTON PIN	12	
E-7	6	HP8A-13204-A01	BOLT, CONNECTING ROD	12	
E-7	7	HRKG-13210-000	ROD COMP., CONNECTING	6	
E-7	8	HRYE-13211-A01	BEARING A, CONNECTING ROD	12	(BLACK)(TAIHO)
E-7		HRYE-13212-A01	BEARING B, CONNECTING ROD	12	(BROWN)(TAIHO)
E-7		HRYE-13213-A01	BEARING C, CONNECTING ROD	12	(GREEN)(TAIHO)
E-7		HRYE-13214-A01	BEARING D, CONNECTING ROD	12	(YELLOW)(TAIHO)
E-7		HRYE-13215-A01	BEARING E, CONNECTING ROD	12	(PINK)(TAIHO)
E-7	9	HRKG-13310-000	CRANKSHAFT COMP.	1	
E-7	10	HZX2-13321-003	BEARING A, MAIN UPPER(BLACK)	4	(TAIHO)
E-7		HZX2-13322-003	BEARING B, MAIN UPPER(BROWN)	4	(TAIHO)
E-7		HZX2-13323-003	BEARING C, MAIN UPPER(GREEN)	4	(TAIHO)
E-7		HZX2-13324-003	BEARING D, MAIN UPPER(YELLOW)	4	(TAIHO)
E-7		HZX2-13325-003	BEARING E, MAIN UPPER(PINK)	4	(TAIHO)
E-7		HZX2-13326-003	BEARING F, MAIN UPPER(RED)	4	(TAIHO)
E-7	11	HZY3-13331-A03	WASHER, THRUST	2	
E-7	12	HZX2-13341-003	BEARING A, MAIN LOWER(BLACK)	4	(TAIHO)
E-7		HZX2-13342-003	BEARING B, MAIN LOWER(BROWN)	4	(TAIHO)
E-7		HZX2-13343-003	BEARING C, MAIN LOWER(GREEN)	4	(TAIHO)
E-7		HZX2-13344-003	BEARING D, MAIN LOWER(YELLOW)	4	(TAIHO)
E-7		HZX2-13345-003	BEARING E, MAIN LOWER(PINK)	4	(TAIHO)
E-7		HZX2-13346-003	BEARING F, MAIN LOWER(RED)	4	(TAIHO)

FR. ➔

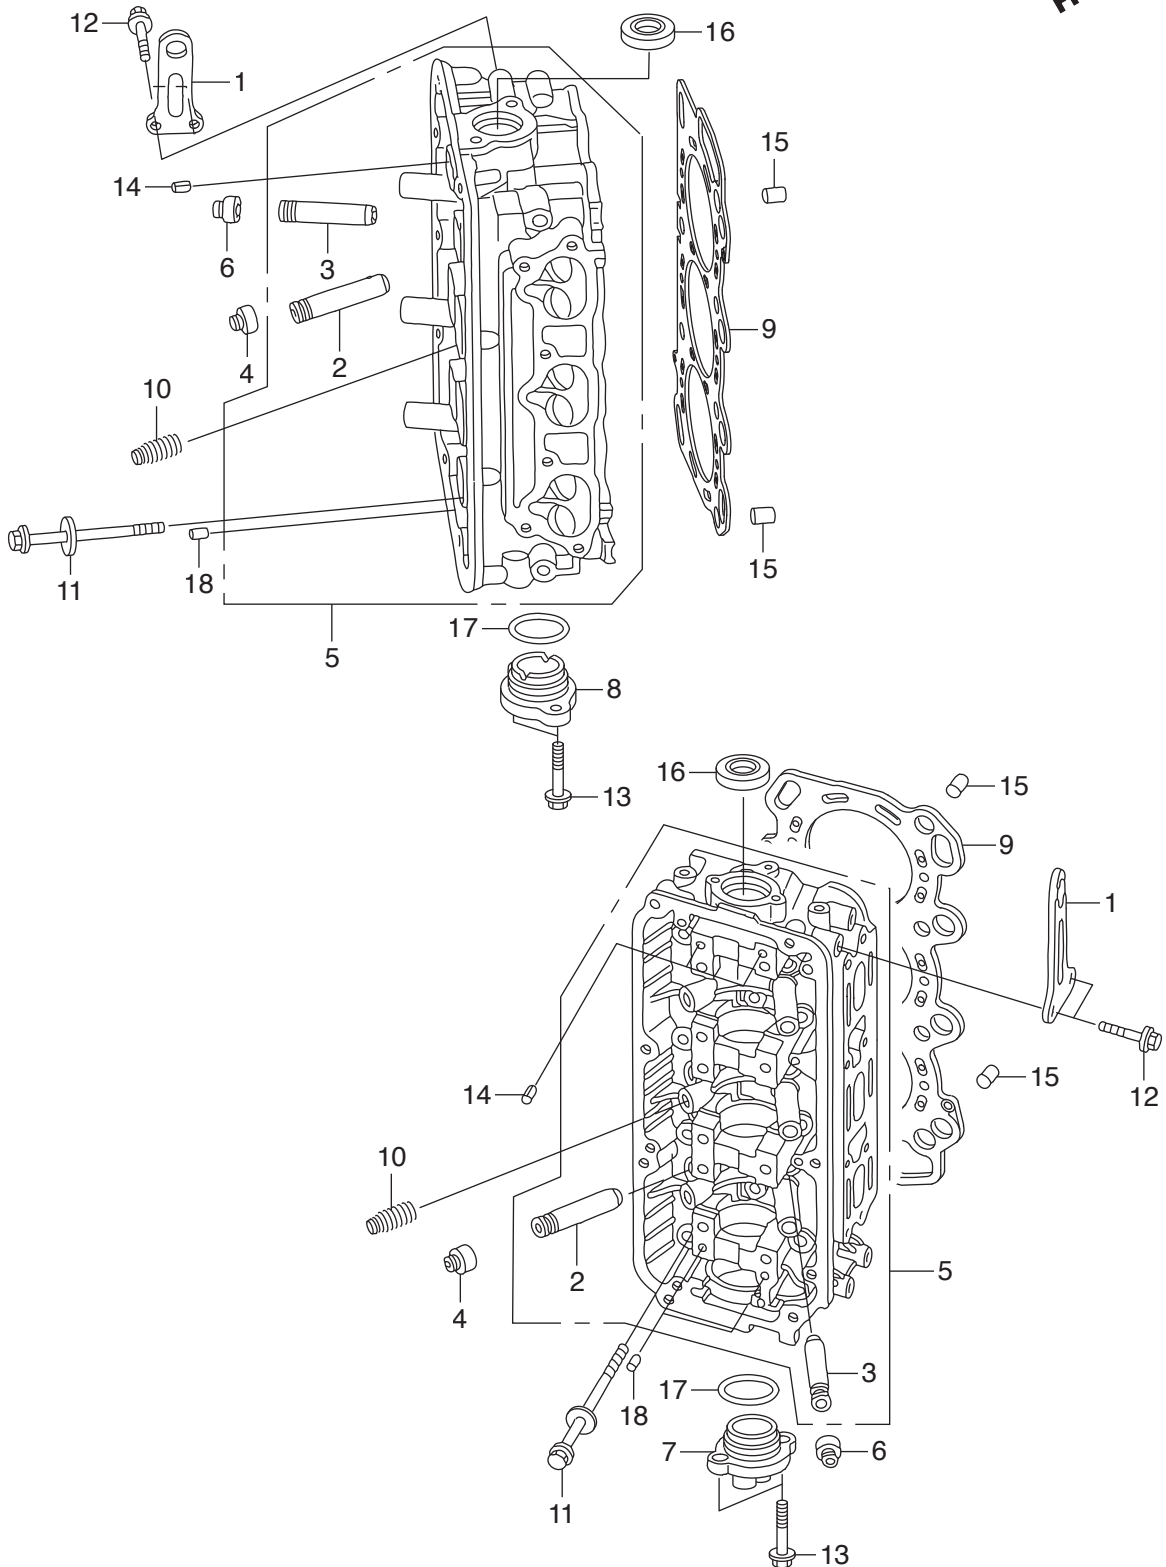

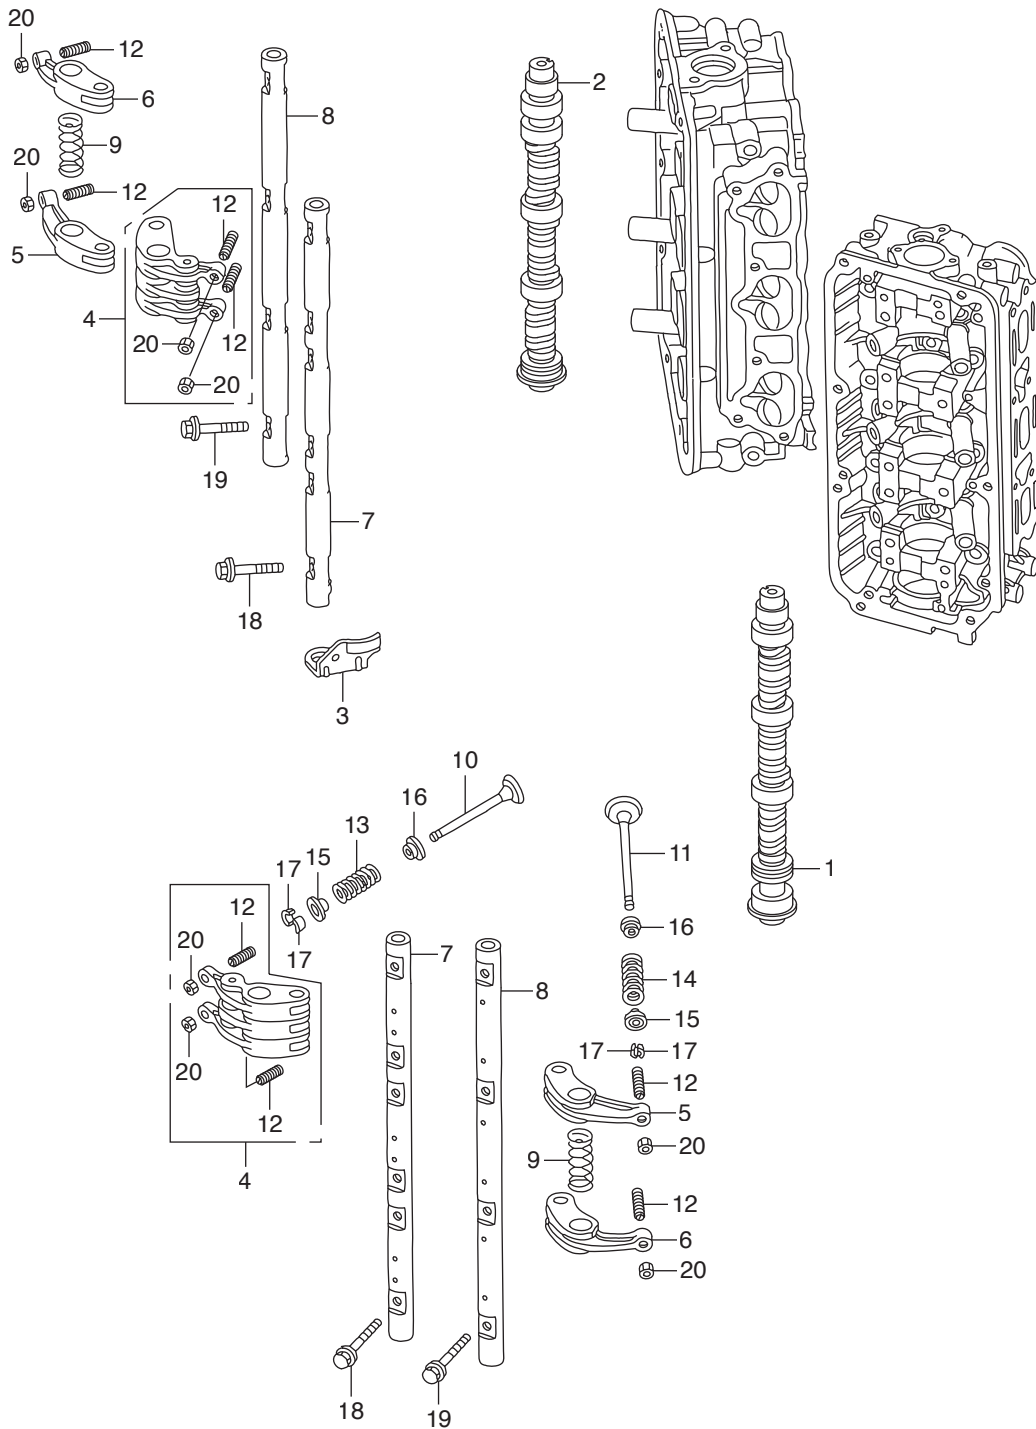
FR. 

[illegible]

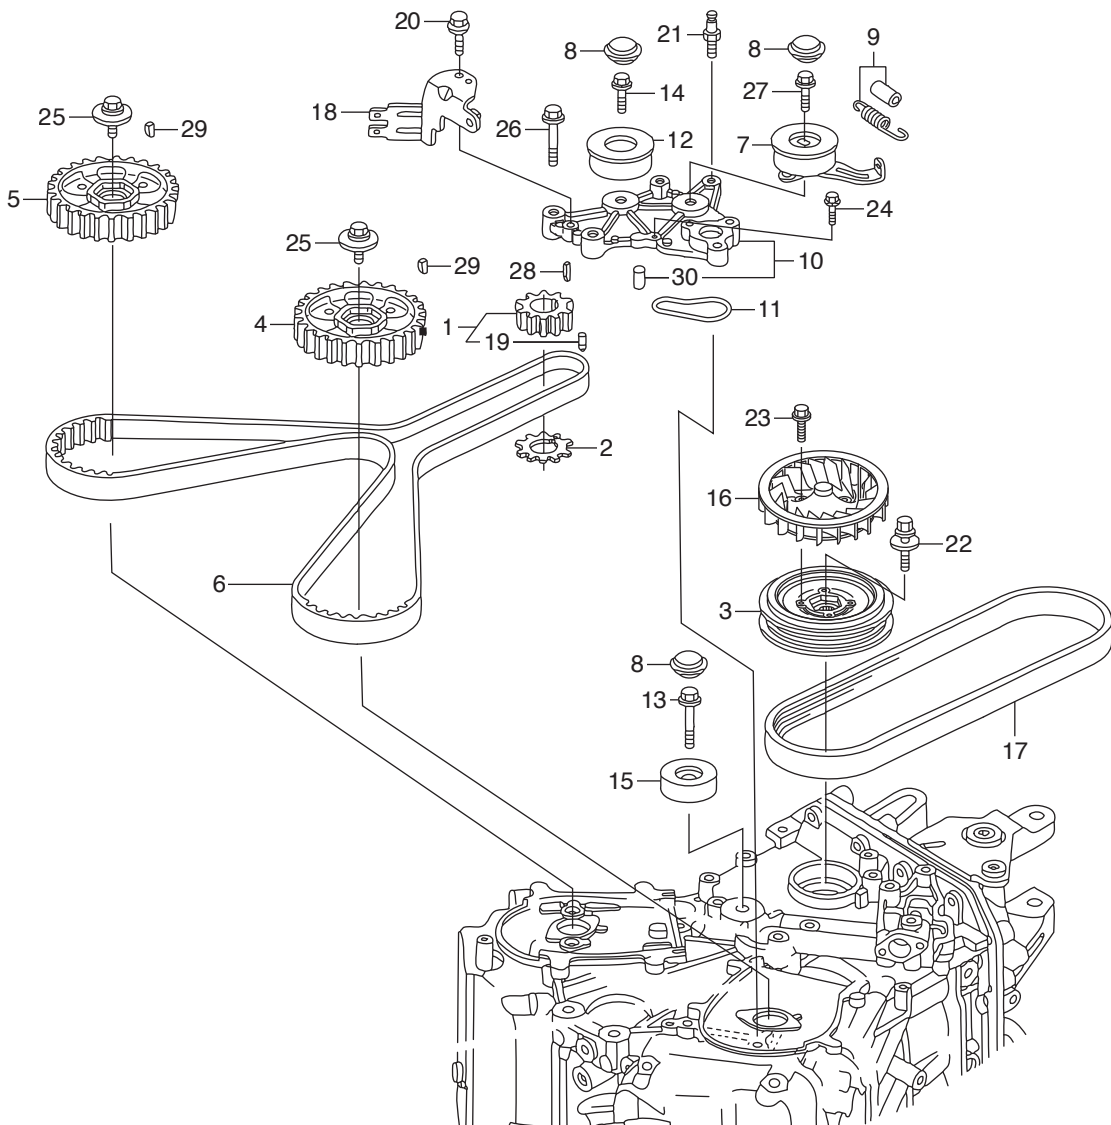
FR. 

Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-13	1	HZY3-13621-C01	PULLEY, TIMING BELT DRIVE	1	
E-13	2	HZY3-13622-C00	PLATE, TIMING BELT GUIDE	1	
E-13	3	HZX2-13811-000	PULLEY, CRANKSHAFT	1	
E-13	4	HZY3-14261-C00	PULLEY COMP., R. TIMING BELT	1	DRIVEN
E-13	5	HZY3-14270-C00	PULLEY COMP., L. TIMING BELT	1	DRIVEN
E-13	6	HP8A-14400-A01	BELT, TIMING(197YU26 B-333)	1	
E-13	7	HZY3-14510-003	TENSIONER COMP., TIMING BELT	1	
E-13	8	HZY3-14515-000	CAP, TIMING BELT TENSIONER	3	
E-13	9	HZY3-14520-000	SPRING COMP., TIMING BELT	1	ADJUSTING
E-13	10	HZX2-14526-405ZA	BASE COMP., TIMING BELT	1	TENSIONER *NH8* DARK GRAY
E-13	11	HZY3-14529-000	O-RING, TIMING BELT TENSIONER	1	BASE
E-13	12	HZY3-14550-003	IDLER, TIMING BELT(KOYO SEIKO)	1	
E-13	13	HP8A-14551-A01	BOLT, IDLER	1	
E-13	14	HZY3-14553-003	BOLT, TIMING BELT IDLER A	1	
E-13	15	HZY3-14555-003	IDLER B, TIMING BELT	1	
E-13	16	HZX2-19511-000	FAN, COOLING	1	
E-13	17	HZY3-31638-003	BELT, A.C. GENERATOR	1	(6PK745 M-180)
E-13	18	HZY3-32111-010	BRACKET, COUPLER D	1	
E-13	19	HZV0-41122-000	PIN, VERTICAL SHAFT	1	
E-13	20	HZW9-90011-000	BOLT, FLANGE, 6X14(CT200)	1	
E-13	21	HZV5-90012-013	BOLT, TIMING BELT ADJUSTING	1	SPRING
E-13	22	HRJA-90017-003	BOLT-WASHER, 16X49	1	
E-13	23	HZY3-90017-000	BOLT, FLANGE, 6X16	4	
E-13	24	HZY3-90030-000	BOLT, FLANGE, 6X22	1	
E-13	25	HP8A-90031-A01	BOLT-WASHER, 12X35	2	
E-13	26	HZY3-90039-000	BOLT, FLANGE, 10X40	3	
E-13	27	HZY3-90040-000	BOLT, FLANGE, 10X43	1	
E-13	28	HRCA-90704-A00	KEY, 4.5X24	1	
E-13	29	HZY3-90741-000	KEY, SPECIAL	2	

FR. →

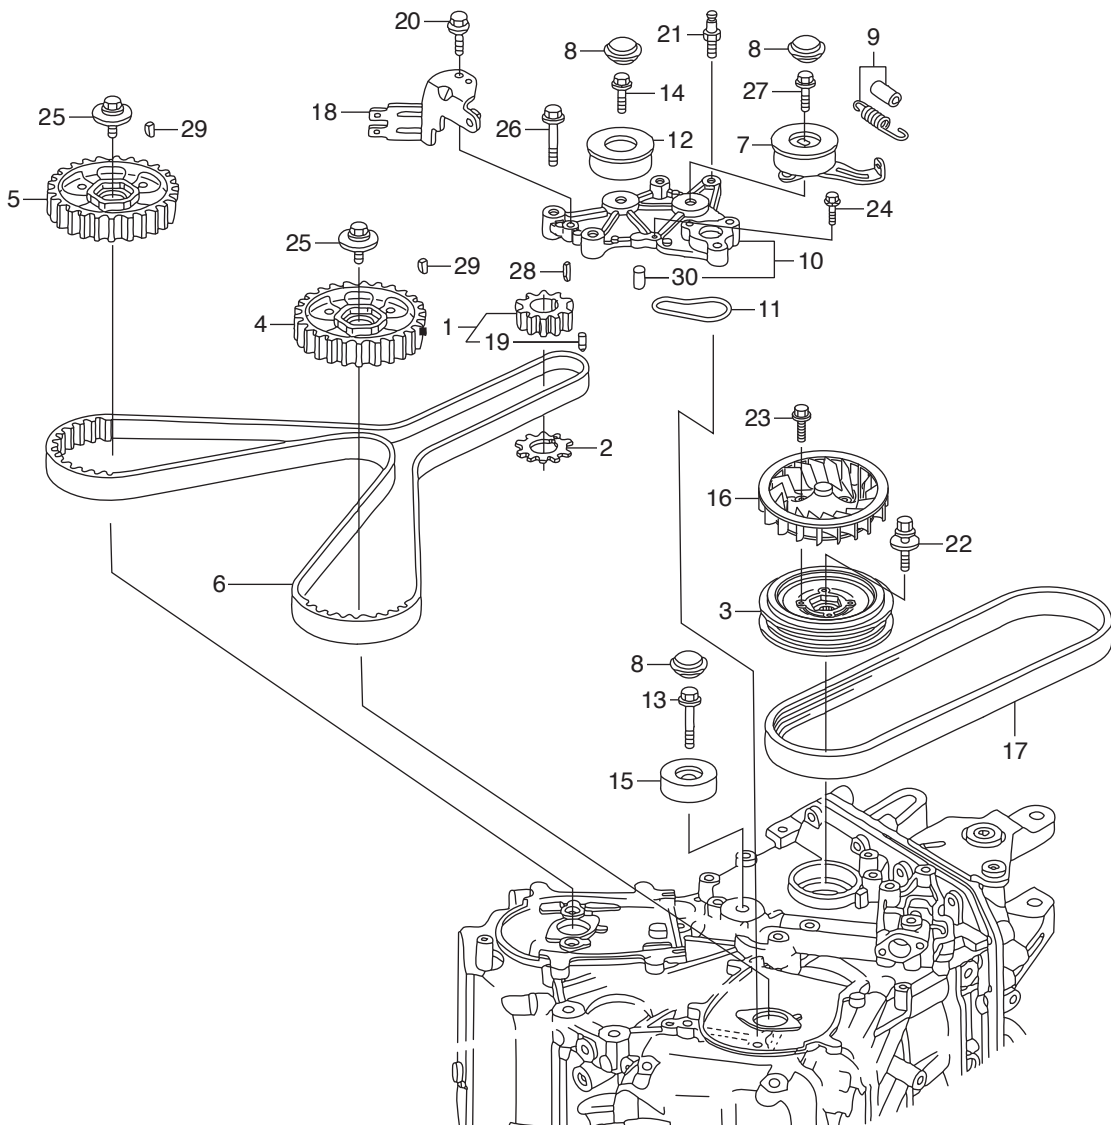


[illegible]

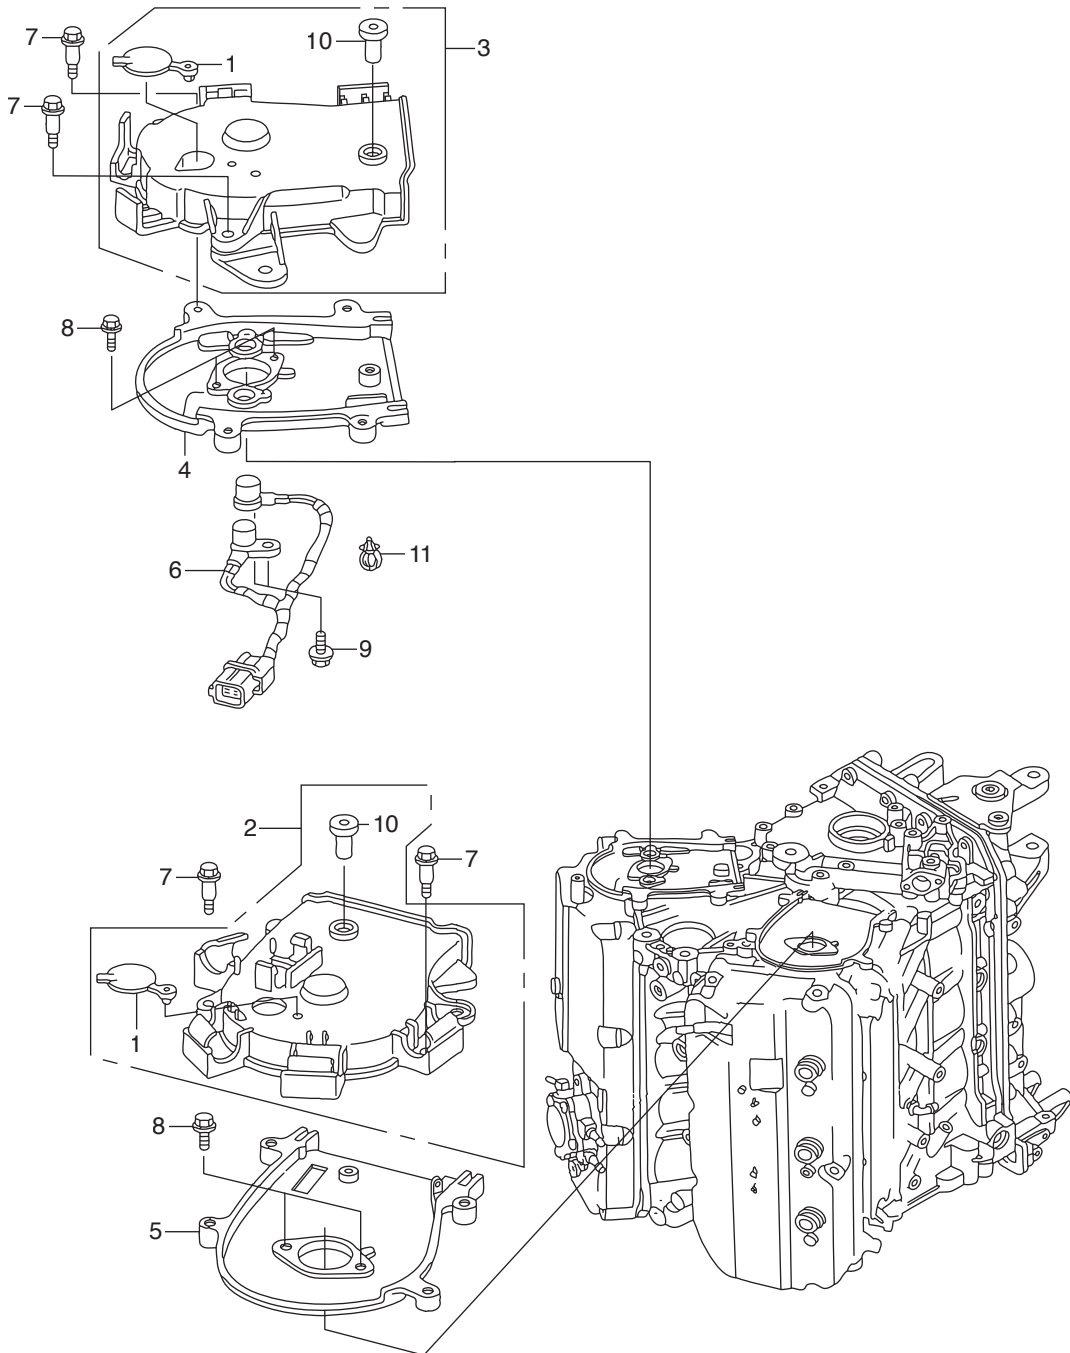FR. 


[illegible]

FR. →

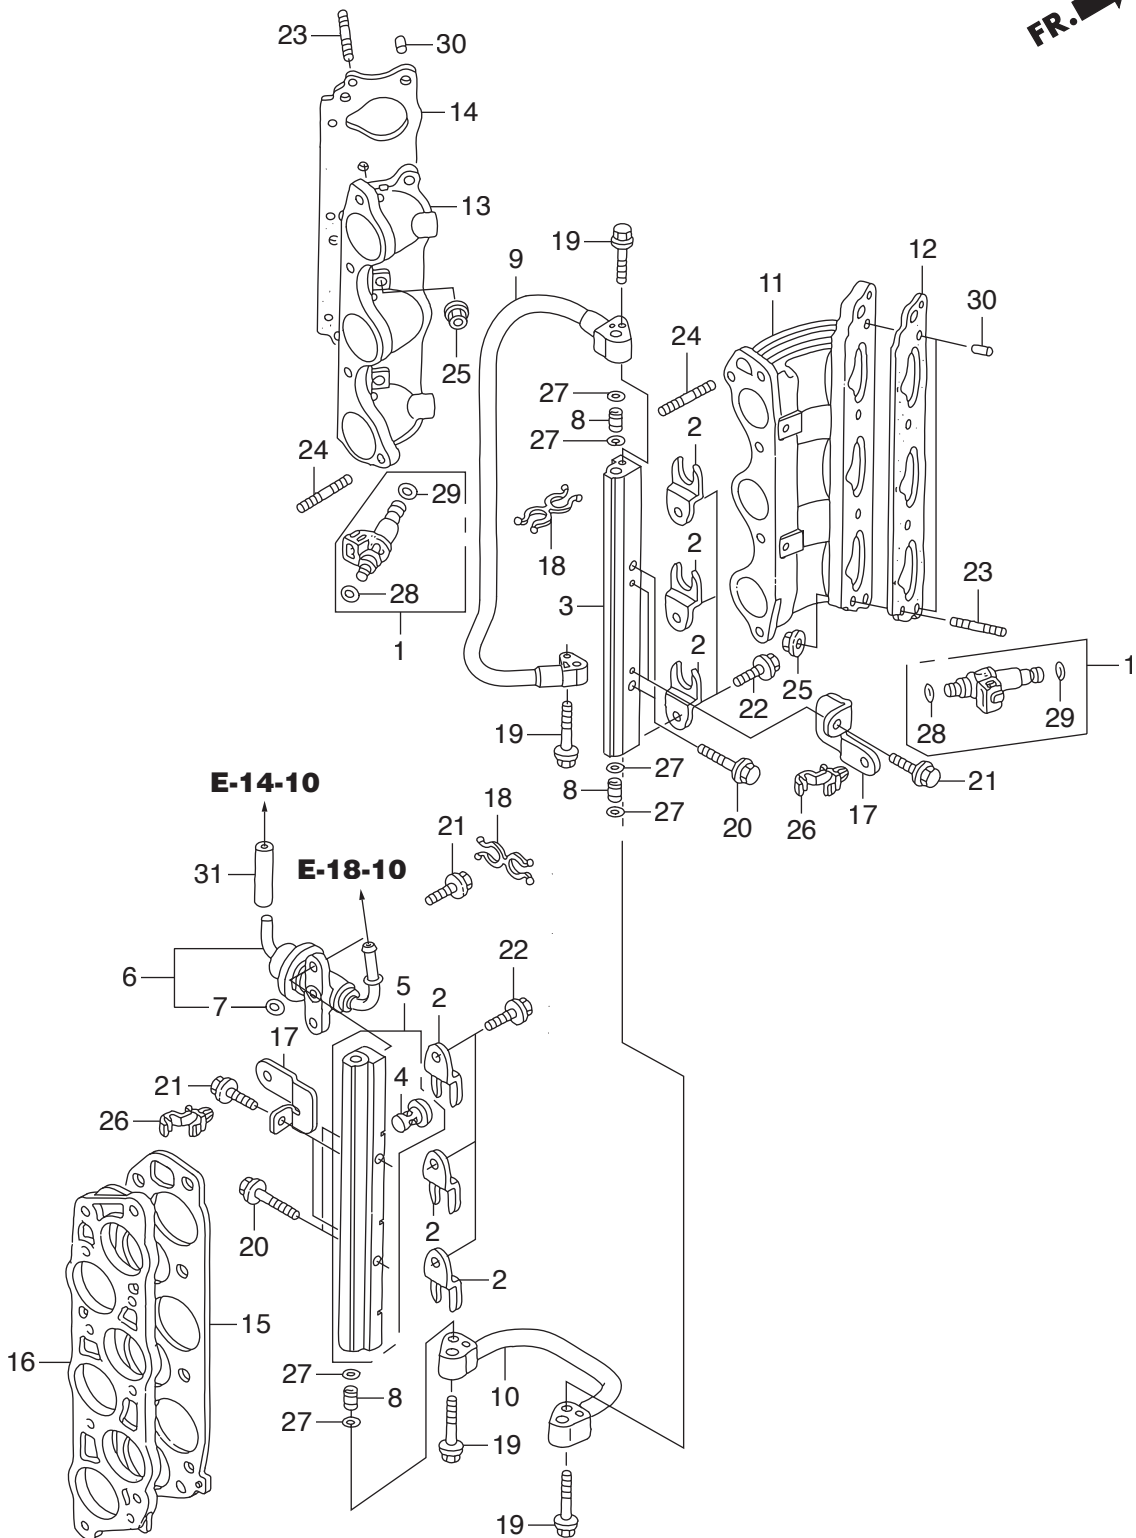


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-14	1	HZY6-16450-003	INJECTOR ASSY., FUEL	6	
E-14	2	HZY3-16451-000	CLIP, INJECTOR	6	
E-14	3	HZY3-16611-A00	PIPE, R. FUEL	1	
E-14	4	HP5G-16614-003	MESH, FUEL FILTER	1	
E-14	5	HZY3-16620-A00	PIPE COMP., L. FUEL	1	
E-14	6	HZY3-16740-A01	REGULATOR ASSY., PRESSURE	1	
E-14	7	HPG7-16741-005	O-RING, PRESSURE REGULATOR	1	
E-14	8	HZY3-16752-A00	JOINT, FUEL PIPE	3	
E-14	9	HZY3-16755-003	HOSE COMP., FUEL	1	
E-14	10	HZY3-16757-003	HOSE COMP., FUEL JOINT	1	
E-14	11	HZY3-17051-A00	BASE, R. INJECTOR	1	
E-14	12	HRCA-17055-A01	GASKET, FR. INJECTOR BASE	1	
E-14	13	HZY3-17061-A00	BASE, L. INJECTOR	1	
E-14	14	HRCA-17065-A01	GASKET, RR. INJECTOR BASE	1	
E-14	15	HP8E-17105-A01	GASKET, INTAKE MANIFOLD	1	
E-14	16	HZY3-17108-000	SPACER, INTAKE MANIFOLD	1	
E-14	17	HZY3-32112-000	BRACKET, HARNESS CLIP A	4	
E-14	18	HSJ6-78419-003	CLIP D, SPEEDOMETER CABLE	2	
E-14	19	HZW9-90016-000	BOLT, FLANGE, 6X25	4	
E-14	20	HZW9-90019-000	BOLT, FLANGE, 6X35	4	
E-14	21	HZY3-90021-000	BOLT, FLANGE, 6X14	6	
E-14	22	HZY3-90042-000	BOLT, FLANGE, 6X10	6	
E-14	23	HZY3-90043-000	BOLT, STUD, 8X28	8	
E-14	24	HZY3-90044-000	BOLT, STUD, 8X45	2	
E-14	25	HZY3-90205-000	NUT, FLANGE, 8MM	8	
E-14	26	HSB2-90650-003	CLIP, WIRE HARNESS, 10MM	4	
E-14	27	HMJ0-91301-003	O-RING, 7.8X1.9(ARAI)	6	
E-14	28	HPLC-91301-000	O-RING, 7.47X3.6	6	
E-14	29	HPNA-91302-003	O-RING, 7.45X3.61(NOK)	6	


FR. →

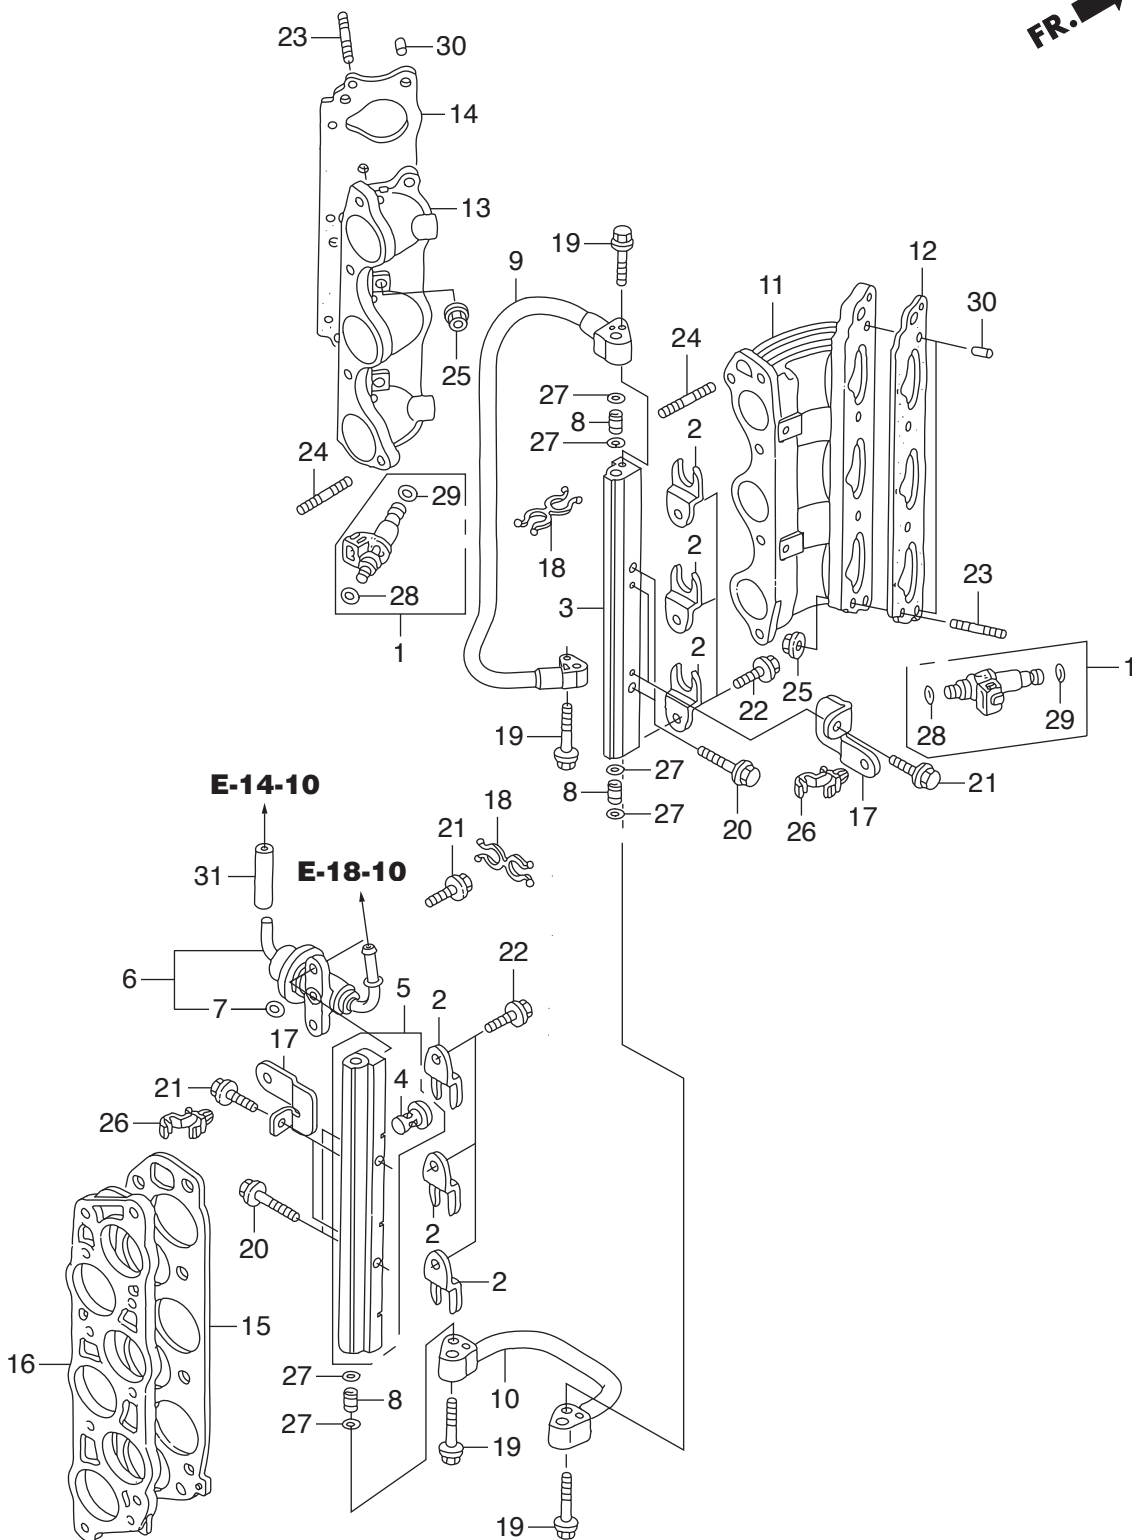


[illegible]

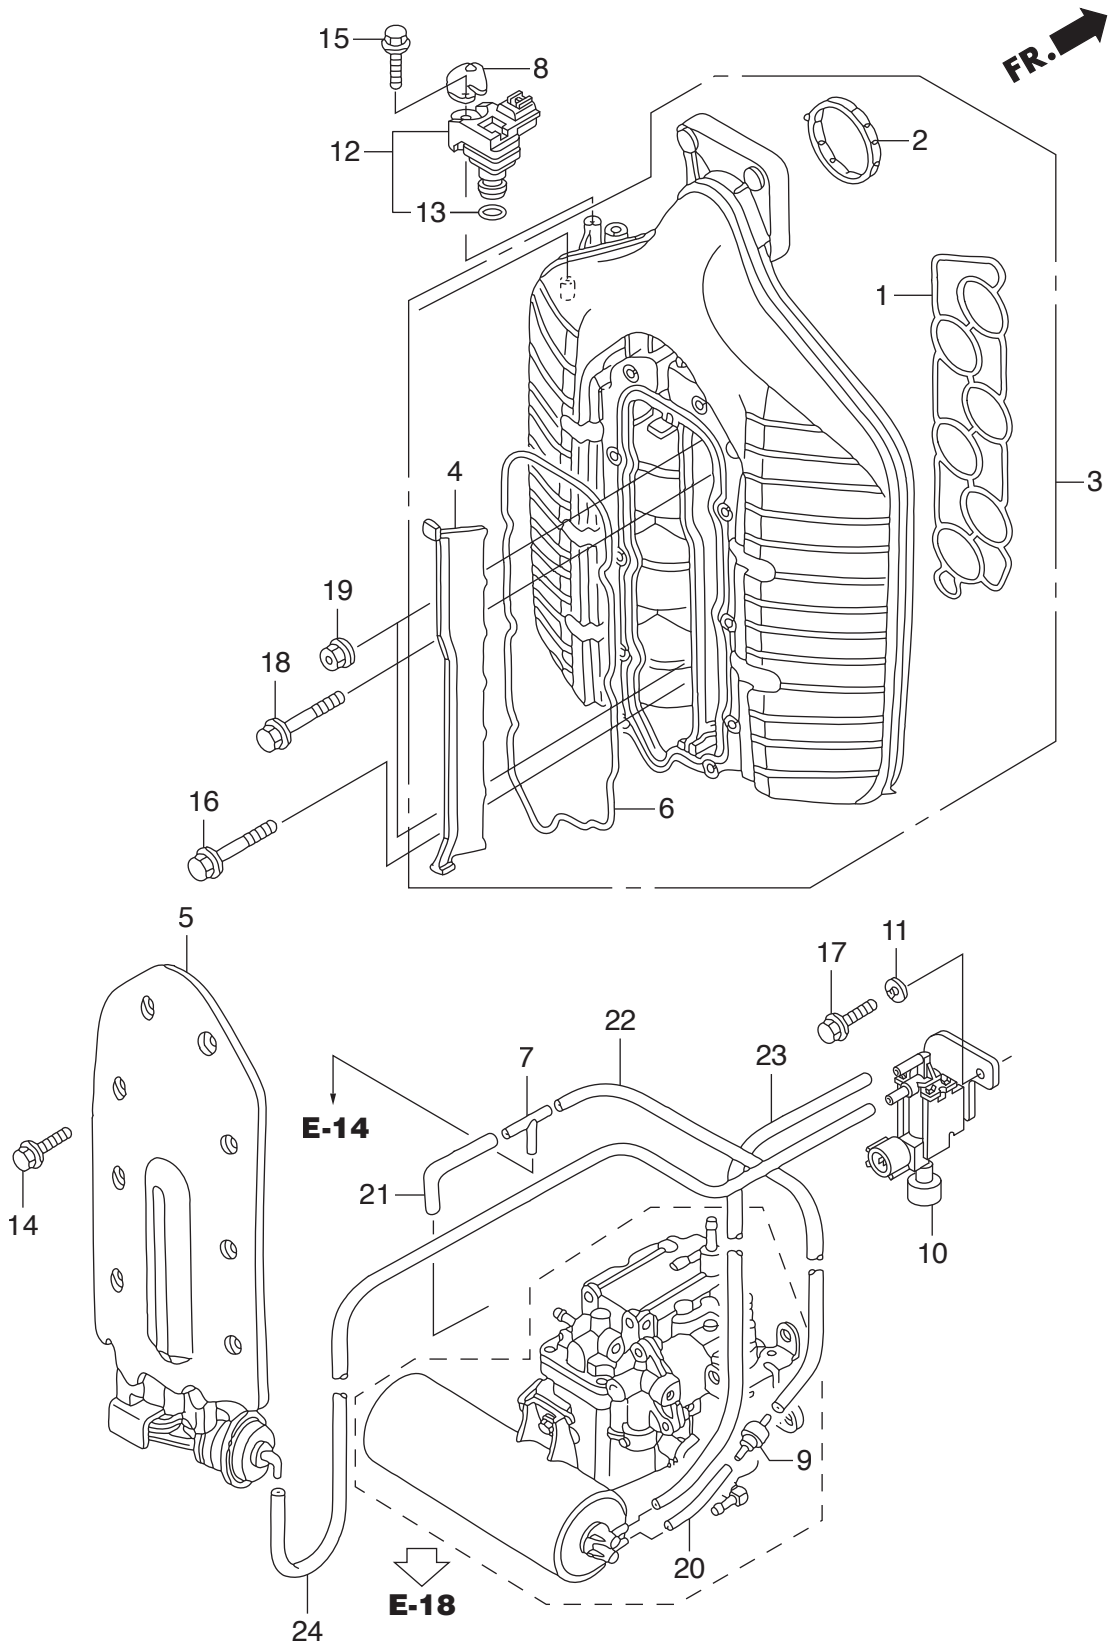


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-14-10	1	HZY3-17105-004	GASKET, INTAKE MANIFOLD	1	
E-14-10	2	HZY3-17109-004	PACKING, THROTTLE BODY	1	
E-14-10	3	HZY3-17110-003	MANIFOLD COMP., INTAKE	1	
E-14-10	4	HZY3-17113-003	PLATE, INTAKE MANIFOLD CENTER	1	
E-14-10	5	HZY3-17130-003ZA	COVER COMP., INTAKE MANIFOLD	1	*NH8* DARK GRAY
E-14-10	6	HZY3-17138-004	PACKING, INTAKE MANIFOLD UP	1	COVER
E-14-10	7	HMG9-17201-000	JOINT A, VACUUM TUBE	1	
E-14-10	8	HZY3-32128-000	BRACKET, SENSOR CORD	1	
E-14-10	9	HPM4-36145-004	VALVE, CHECK	1	
E-14-10	10	HZY3-36163-003	VALVE ASSY., AIR BYPASS	1	
E-14-10	11	HP8D-36165-J00	WASHER, CONICAL SPRING(5)	1	
E-14-10	12	HRNA-37830-A01	SENSOR ASSY., MAP	1	
E-14-10	13	HPGK-37835-A01	O-RING	1	
E-14-10	14	HZY3-90023-000	BOLT, FLANGE, 6X22	10	
E-14-10	15	HZY3-90029-000	BOLT-WASHER, 5X18	1	
E-14-10	16	HZY3-90031-000	BOLT, FLANGE, 6X32	1	
E-14-10	17	HZY3-90058-000	BOLT, FLANGE, 5X10	1	
E-14-10	18	HZW4-90156-000	BOLT, FLANGE, 8X50	7	
E-14-10	19	HZY3-90205-000	NUT, FLANGE, 8MM	2	
E-14-10	20	HCO-95001-35040-40	TUBE, FUEL, 3.5X40	1	(HC-95001-35001-60M)
E-14-10	21	HCO-95001-35130-40	TUBE, FUEL, 3.5X130	1	(HC-95001-35001-60M)
E-14-10	22	HCO-95001-35540-40	TUBE, FUEL, 3.5X540	1	(HC-95001-35001-60M)
E-14-10	23	HCO-95001-35590-60	TUBE, FUEL, 3.5X590	1	(HC-95001-35001-60M)
E-14-10	24	HCO-95001-35600-40	TUBE, FUEL, 3.5X600	1	(HC-95001-35001-60M)

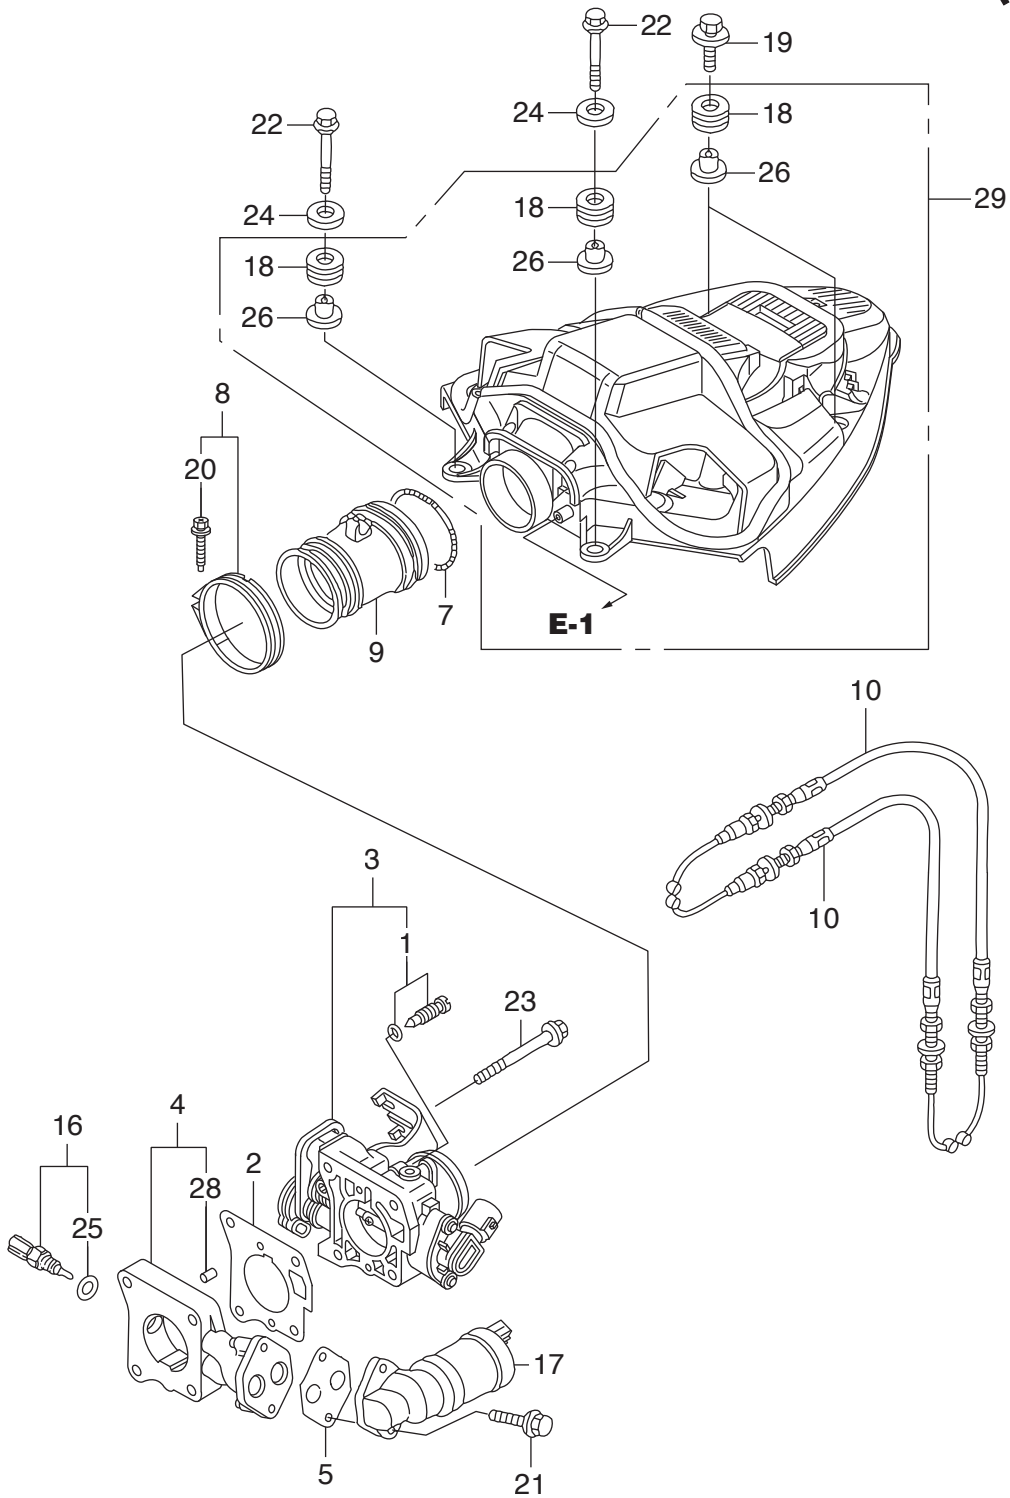FR. 


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-15	1	HZY3-16016-003	SCREW SET	1	
E-15	2	HZY3-16176-000	GASKET, THROTTLE BODY	1	
E-15	3	HZY3-16400-A01	THROTTLE BODY ASSY.	1	
E-15	4	HZX2-16404-000	SPACER, THROTTLE BODY	1	
E-15	5	HZY3-16405-000	GASKET, EAC VALVE	1	
E-15	7	HPY3-17249-000	SPRING, AIR FLOW TUBE	1	
E-15	8	HZY9-17315-000	BAND, AIR FLOW	1	
E-15	9	HZX2-17374-000	GROMMET, SILENCER	1	
E-15	10	HZY3-17910-013	CABLE COMP., THROTTLE	2	
E-15	16	HZW5-35665-003	SENSOR ASSY., AIR TEMP	1	
E-15	17	HZY3-36550-003	VALVE ASSY., EAC	1	
E-15	18	HZV5-40102-000	GROMMET, UNDER CASE	4	
E-15	19	HZW1-90013-000	BOLT-WASHER, 6X25	2	
E-15	20	HZY9-90017-000	BOLT-WASHER, 5X30	1	
E-15	21	HZY3-90030-000	BOLT, FLANGE, 6X22	2	
E-15	22	HZY3-90034-000	BOLT, FLANGE, 6X60	2	
E-15	23	HZY3-90037-000	BOLT, FLANGE, 8X65	4	
E-15	24	HZY3-90508-000	WASHER, PLAIN, 6MM	2	
E-15	25	HP0A-91303-A02	O-RING	1	
E-15	26	HZV5-91553-010	COLLAR, C.D.I. UNIT CASE	4	
E-15	28	HCO-94301-06100	DOWEL PIN, 6X10	2	
E-15	29	HZX2-19540-010	COVER ASSY., COOLING FAN	1	

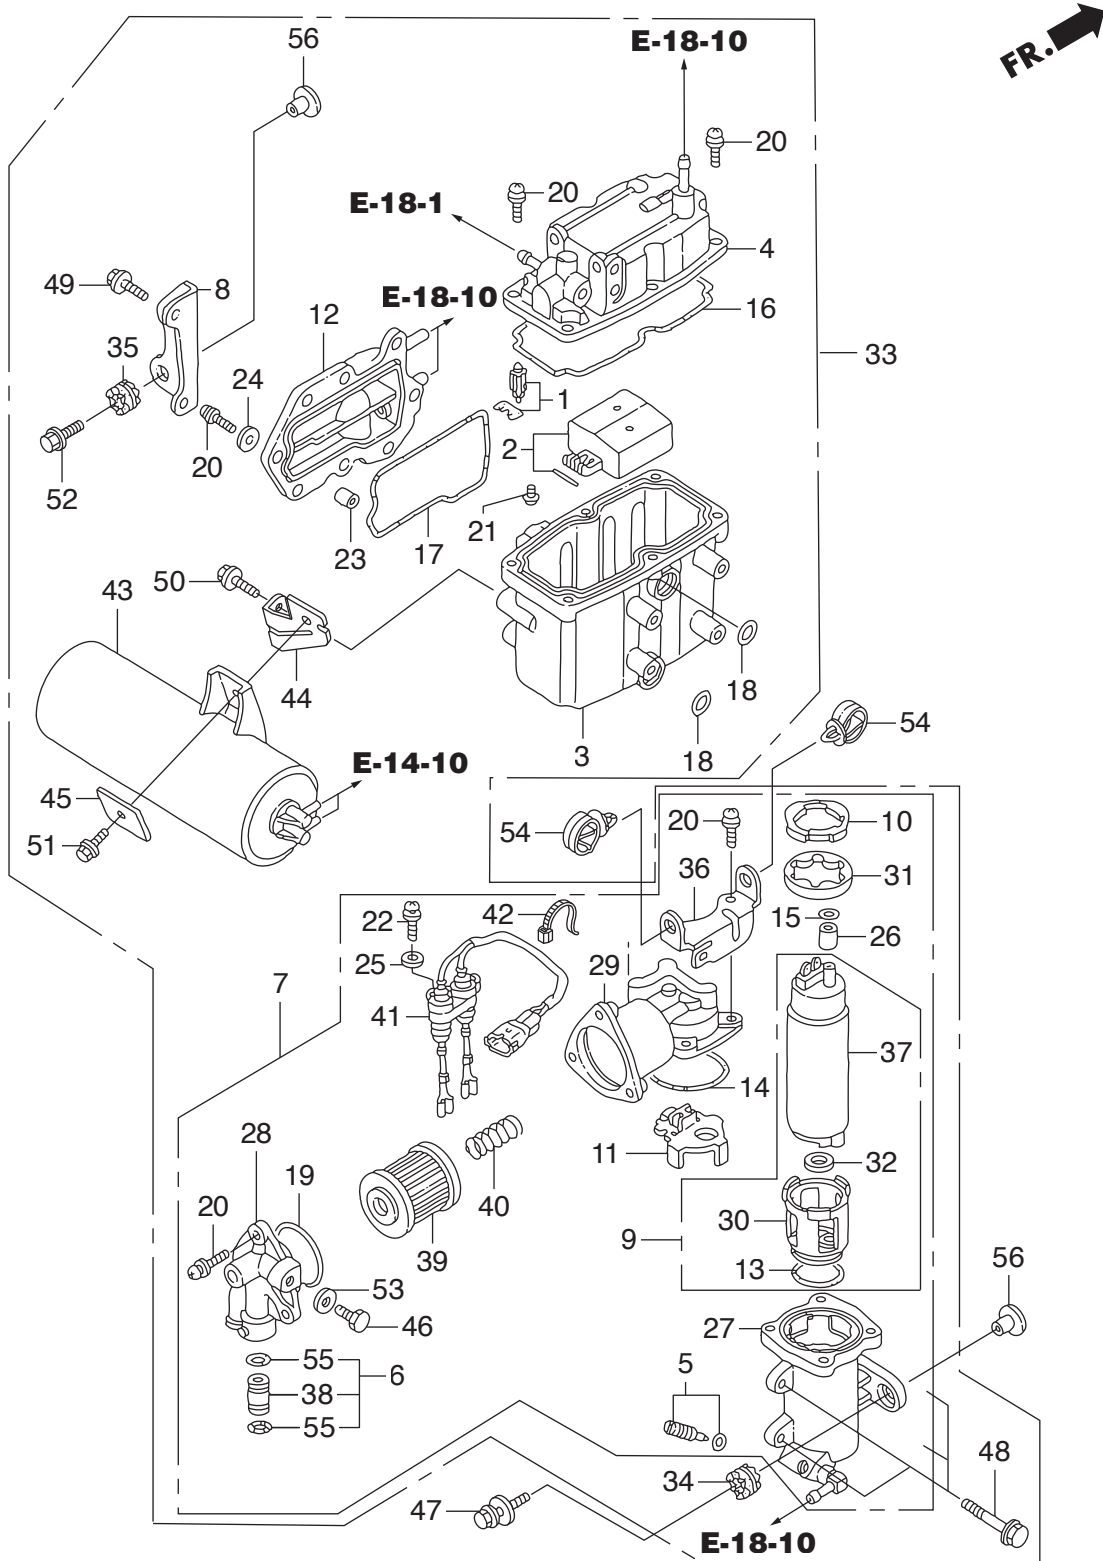


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-18	1	HZY3-16011-A01	VALVE SET, FLOAT	1	
E-18	2	HZY3-16013-000	FLOAT SET	1	
E-18	3	HZY3-16015-000	BODY	1	
E-18	4	HZX2-16020-003	COVER COMP.	1	
E-18	5	HZY3-16024-000	SCREW SET, DRAIN	1	
E-18	6	HZY3-16026-000	JOINT SET	1	
E-18	7	HZX2-16030-003	PUMP UNIT SET A, FUEL	1	
E-18	8	HZY3-16031-010	STAY, PLATE	1	
E-18	9	HZY3-16036-003	PUMP UNIT SET B, FUEL	1	
E-18	10	HZY3-16041-000	PLATE	1	
E-18	11	HZY3-16042-000	HOLDER	1	
E-18	12	HZY3-16061-000	COVER, WATER JACKET	1	
E-18	13	HZY3-16072-000	O-RING	1	
E-18	14	HZY3-16073-000	O-RING	1	
E-18	15	HZY3-16074-000	O-RING	1	
E-18	16	HZY3-16075-000	O-RING	1	
E-18	17	HZY3-16076-000	O-RING	1	
E-18	18	HZY3-16077-000	O-RING	2	
E-18	19	HZY3-16078-000	O-RING	1	
E-18	20	HZW5-16081-010	SCREW-WASHER	21	
E-18	21	HZY3-16082-000	SCREW, PAN	2	
E-18	22	HZY3-16083-000	SCREW, WASHER	1	
E-18	23	HZW5-16086-000	COLLAR	8	
E-18	24	HZW5-16087-000	WASHER, PLAIN	8	
E-18	25	HZY3-16087-000	WASHER, PLAIN	1	
E-18	26	HZY3-16088-000	COLLAR	1	
E-18	27	HZX2-16701-003	CASE COMP., PUMP	1	
E-18	28	HZY3-16708-000	COVER, PUMP	1	
E-18	29	HZW5-16715-023	COVER, PUMP(A)	1	

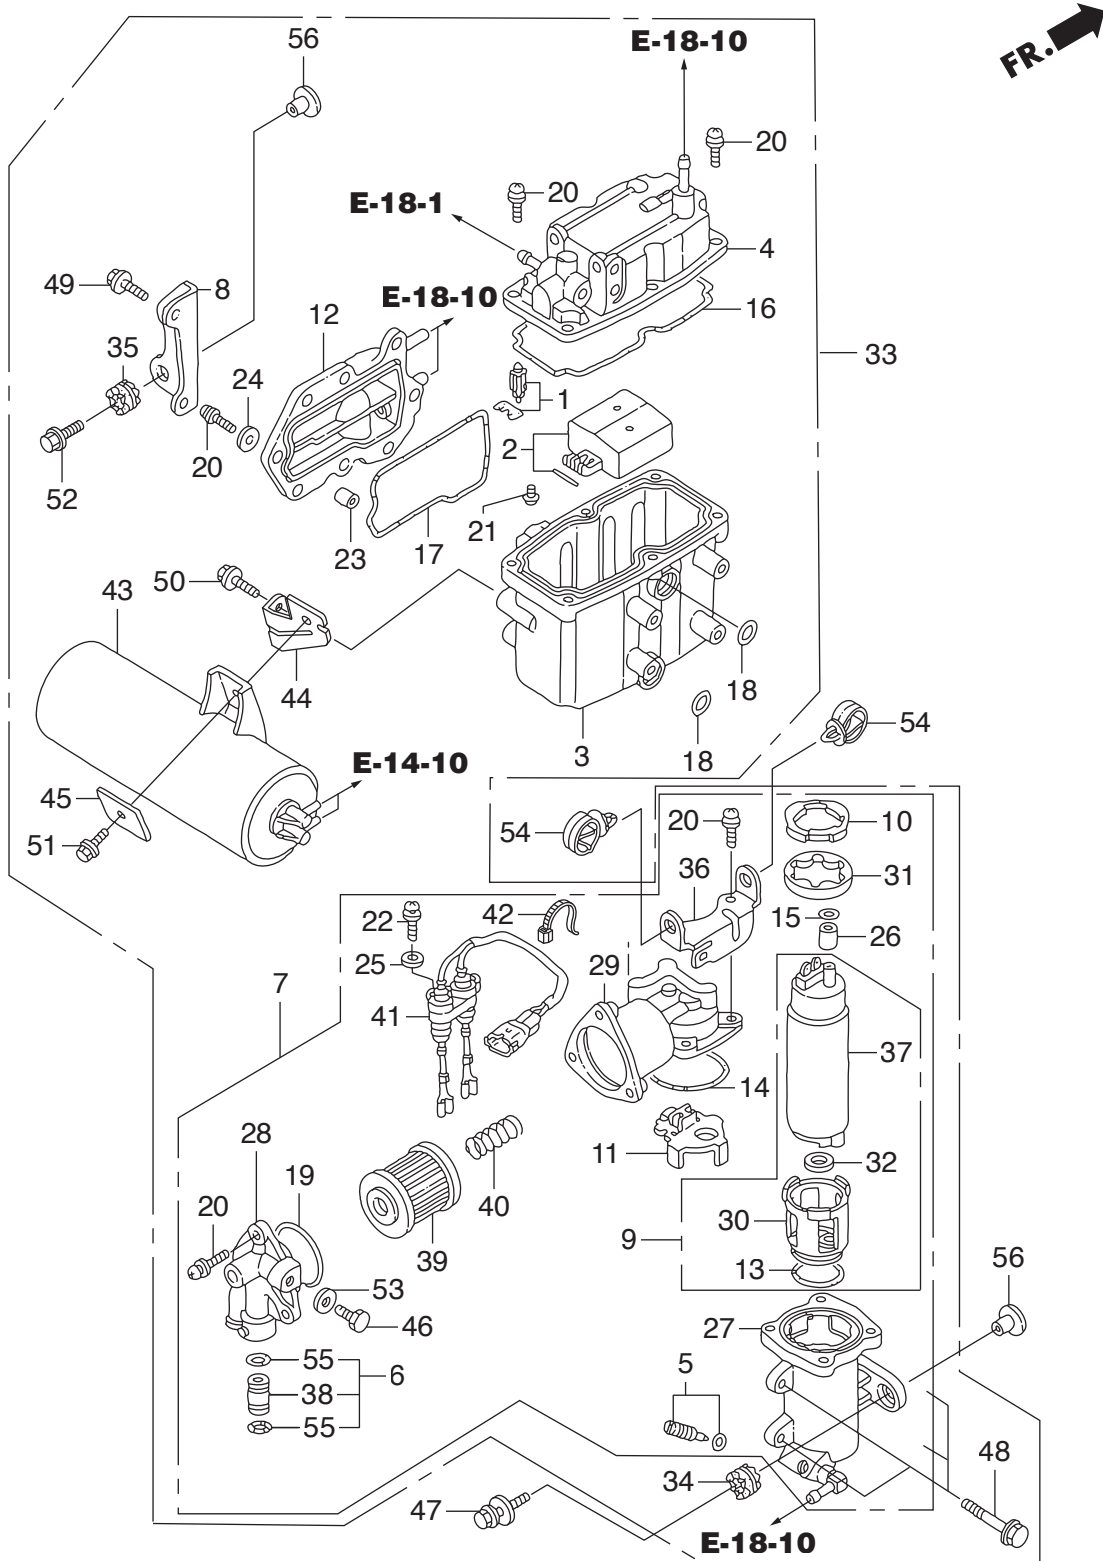


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-18	30	HZY6-16718-013	INSULATOR COMP.	1	
E-18	31	HZY3-16721-000	INSULATOR	1	
E-18	32	HZY6-16723-003	RING	1	
E-18	33	HZX2-16730-003	SEPARATOR ASSY., VAPOR	1	
E-18	34	HZW5-16733-000	GROMMET, VAPOR SEPARATOR	1	
E-18	35	HZY3-16733-000	GROMMET, VAPOR SEPARATOR	2	
E-18	36	HZY3-16734-000	STAY, PLATE	1	
E-18	37	HZY3-16735-004	PUMP UNIT, FUEL	1	
E-18	38	HZY3-16752-000	JOINT, FUEL PIPE	1	
E-18	39	HZY3-16911-010	SCREEN COMP., FUEL STRAINER	1	
E-18	40	HZY3-16913-000	SPRING, SET	1	
E-18	41	HZX2-32166-003	HARNESS COMP.	1	
E-18	42	HZW5-32168-003	BAND	1	
E-18	43	HPR7-36361-A01	TANK COMP., VACUUM	1	
E-18	44	HZY3-36362-000	STAY, VACUUM TANK	1	
E-18	45	HZY3-36620-000	PLATE	1	
E-18	46	HPP4-90009-E01	BOLT, SEALING, 6MM	1	
E-18	47	HZW1-90014-000	BOLT-WASHER, 8X35	1	
E-18	48	HZW9-90016-000	BOLT, FLANGE, 6X25	4	
E-18	49	HZY3-90017-000	BOLT, FLANGE, 6X16	2	
E-18	50	HZY3-90021-000	BOLT, FLANGE, 6X14	2	
E-18	51	HZY3-90050-000	BOLT, FLANGE, 6X12	1	
E-18	52	HZY3-90054-000	BOLT, FLANGE, 8X35	2	
E-18	53	HPD6-90430-003	WASHER, SEALING, 6MM	1	
E-18	54	HZB7-90691-003	CLIP, HARNESS	2	
E-18	55	HMJ0-91301-003	O-RING, 7.8X1.9(ARAI)	2	
E-18	56	HZW1-91554-000	COLLAR, 8.5X14.5	3	

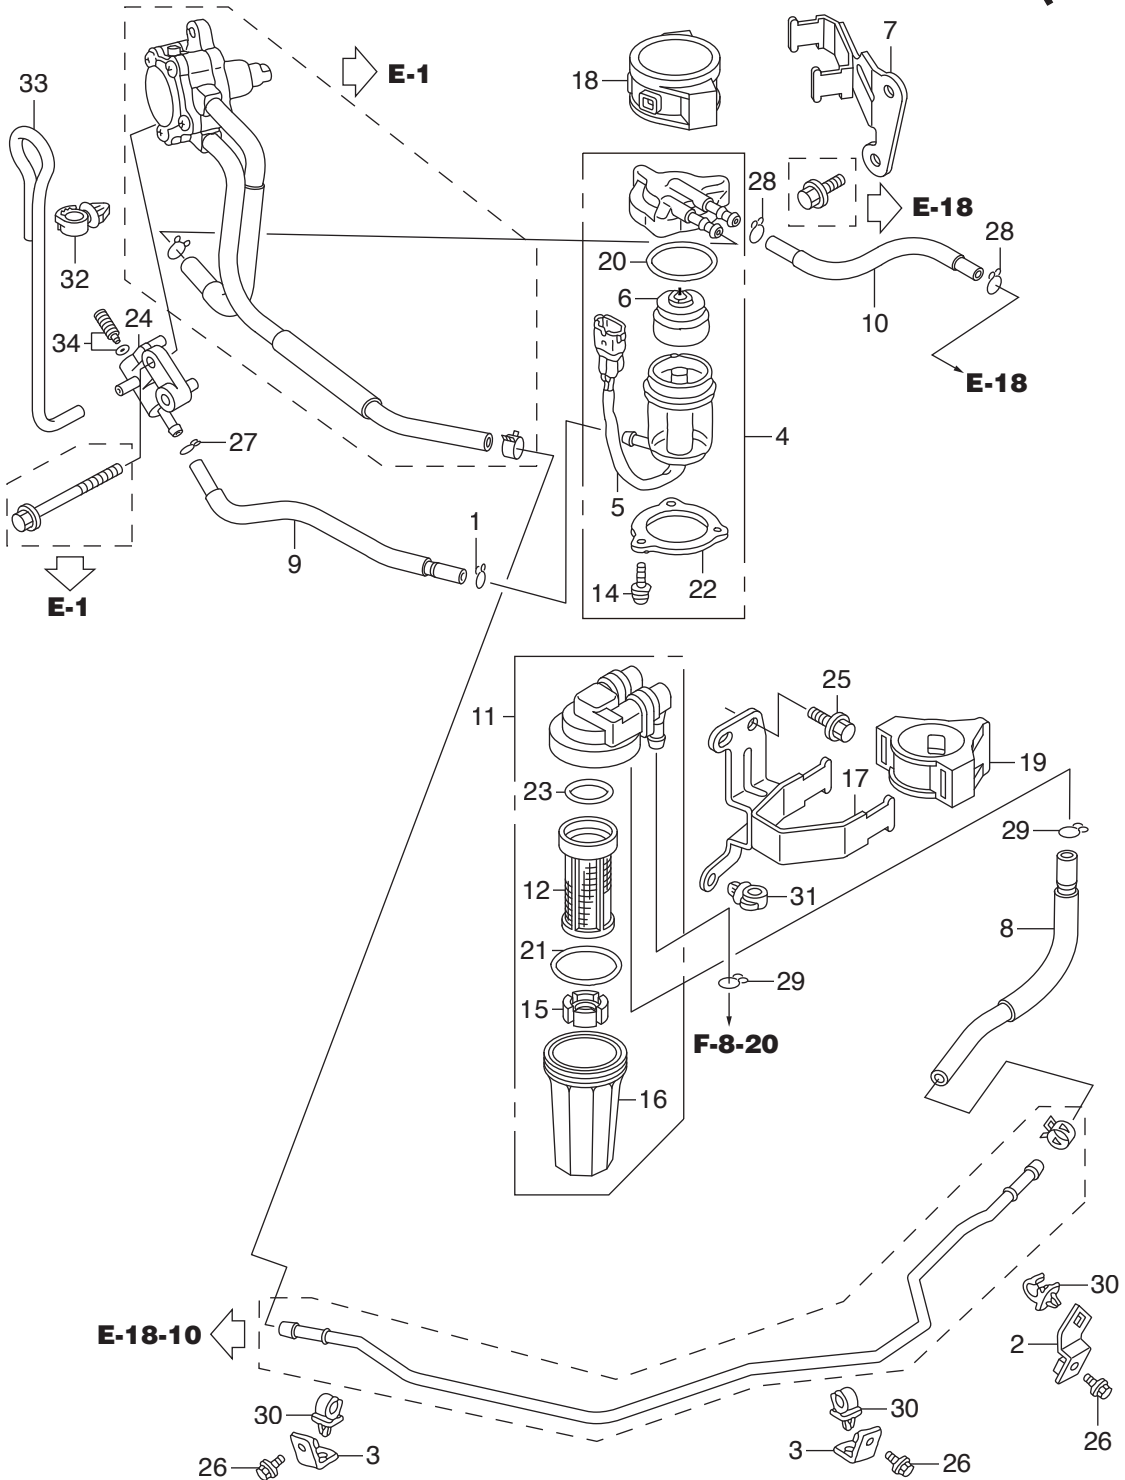
FR. 

Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-18-1	1	HGHB-16163-600	CLIP, TUBE	1	
E-18-1	2	HZY3-16753-000	STAY, FUEL PIPE A	1	
E-18-1	3	HZY3-16754-000	STAY, FUEL PIPE B	2	
E-18-1	4	HZX2-16800-003	SEPARATOR ASSY., WATER	1	
E-18-1	5	HZX2-16805-003	CUP SET, WATER SEPARATOR	1	
E-18-1	6	HZY3-16807-003	BUFFER, PLATE	1	
E-18-1	7	HZX2-16814-000	STAY, WATER SEPARATOR	1	
E-18-1	8	HZX2-16860-C00	TUBE COMP. B, FUEL	1	
E-18-1	9	HZX2-16880-C00	TUBE COMP. D, FUEL	1	
E-18-1	10	HZX2-16890-C00	TUBE COMP. E, FUEL	1	
E-18-1	11	HZX2-16900-003	STRAINER ASSY., FUEL	1	
E-18-1	12	HZZ5-16901-003	FILTER	1	
E-18-1	14	HZY3-16904-003	SCREW, PAN, 5X12	3	
E-18-1	15	HZZ5-16906-003	FLOAT	1	
E-18-1	16	HZX2-16912-003	CUP	1	
E-18-1	17	HZX2-16914-000	STAY, FUEL STRAINER	1	
E-18-1	18	HZY3-16915-010	SUSPENSION, STRAINER	1	
E-18-1	19	HZZ5-16915-000	SUSPENSION, STRAINER	1	
E-18-1	20	HZY3-16918-003	O-RING	1	
E-18-1	21	HZZ5-16918-003	O-RING	1	
E-18-1	22	HZY3-16919-003	PLATE	1	
E-18-1	23	HZZ5-16919-003	O-RING	1	
E-18-1	24	HZX2-16940-003	COCK ASSY., FUEL DRAIN	1	
E-18-1	25	HZW9-90014-000	BOLT, FLANGE, 6X10	2	
E-18-1	26	HZY3-90056-000	BOLT, FLANGE, 6X12	3	
E-18-1	27	H921-90602-000	CLIP, TUBE(B8)	1	
E-18-1	28	HZV0-90604-000	CLIP, TUBE(B12)	2	
E-18-1	29	HZV4-90605-000	CLIP, TUBE(B12.5)	2	
E-18-1	30	HKG4-90659-000	CLAMP, WIRE, 8MM	3	

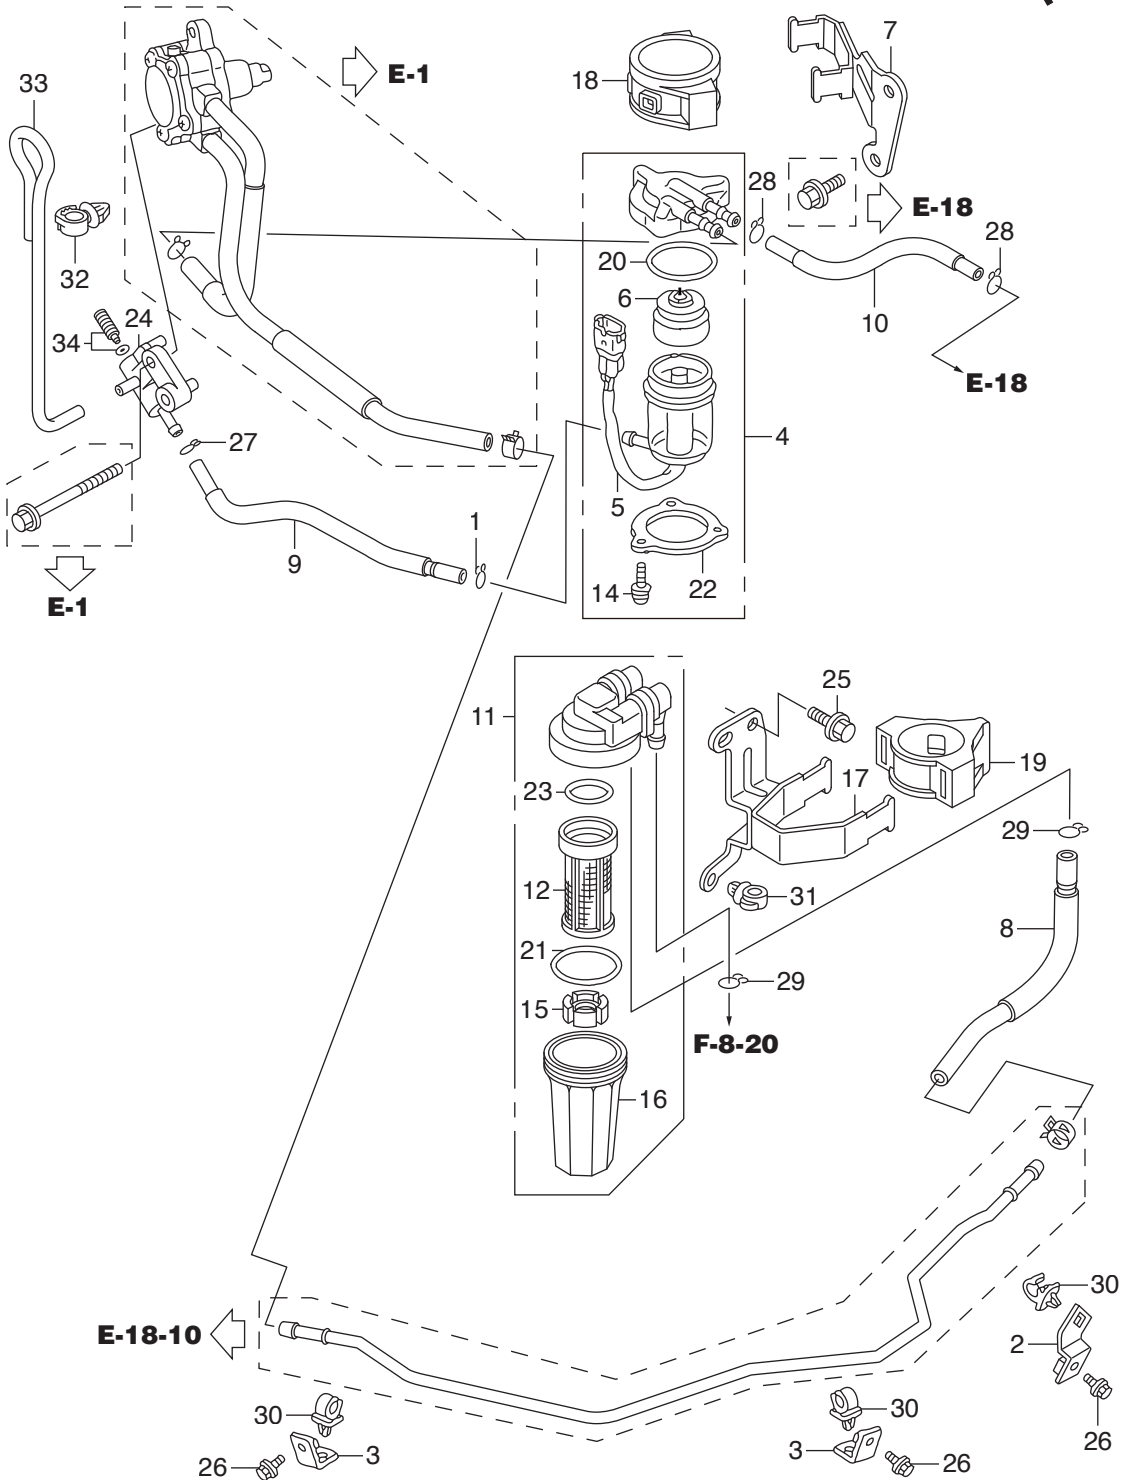
FR. 

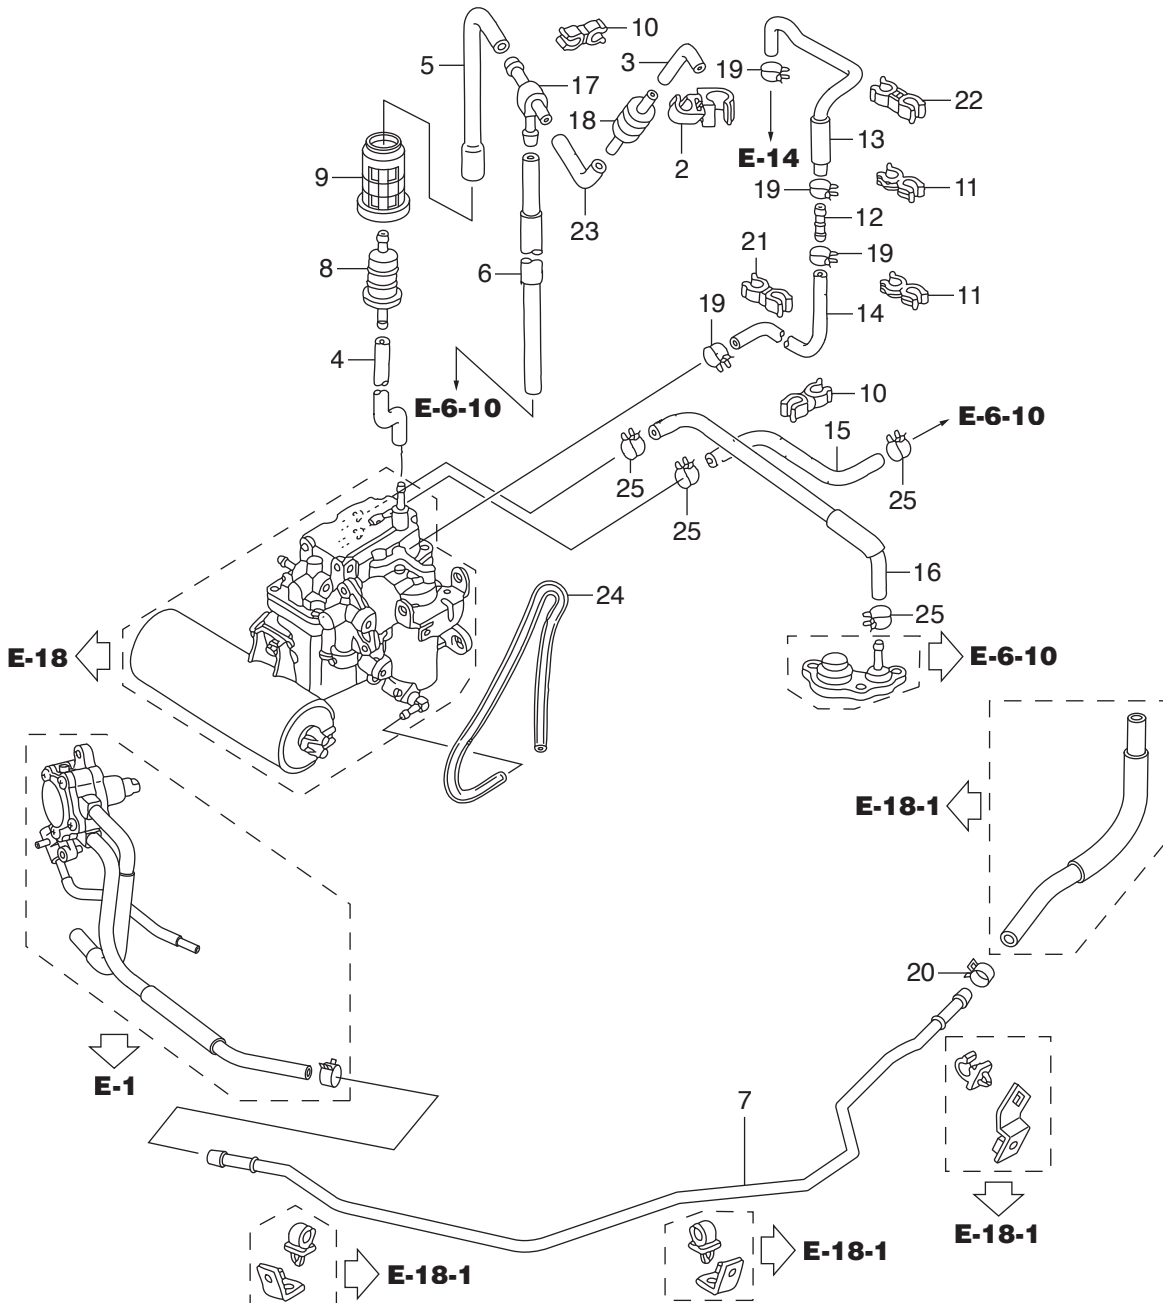FR. 



Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-18-10	2	HZY3-16193-A00	CLAMP, CHECK VALVE	1	
E-18-10	3	HZY3-16196-A00	TUBE, CHECK VALVE	1	
E-18-10	4	HZY3-16197-000	TUBE A, AIR VENT	1	
E-18-10	5	HZY3-16198-A00	TUBE B, AIR VENT	1	
E-18-10	6	HZY3-16199-A00	TUBE COMP., AIR VENT	1	
E-18-10	7	HZY3-16751-000	PIPE, FUEL	1	
E-18-10	8	H759-16911-003	STRAINER, FUEL PUMP	1	
E-18-10	9	HZW5-16915-000	SUSPENSION, STRAINER	1	
E-18-10	10	HVM0-16965-771	CLAMP, HOSE	2	
E-18-10	11	HKY7-17450-740	CLIP, TUBE	2	
E-18-10	12	HZY3-17721-000	JOINT, FUEL RETURN	1	
E-18-10	13	HZY3-17723-A01	HOSE A, PRESSURE REGULATOR	1	RETURN
E-18-10	14	HZY3-17724-010	HOSE B, PRESSURE REGULATOR	1	RETURN
E-18-10	15	HZY3-19258-010	TUBE, WATER IN.	1	
E-18-10	16	HZY3-19259-000	TUBE, WATER OUTLET	1	
E-18-10	17	HZY6-19269-000	T-JOINT	1	
E-18-10	18	HZY6-36135-003	VALVE, CHECK	1	
E-18-10	19	HZW5-90601-030	CLAMP, TUBE(D10.7)	4	
E-18-10	20	HZV0-90604-000	CLIP, TUBE(B12)	1	
E-18-10	21	HMB1-90655-921	CLIP, WIRE	1	
E-18-10	22	HSL0-91592-A51	CLAMP, FUEL TUBE	1	
E-18-10	23	HCO-95001-35055-40	TUBE, FUEL, 3.5X55	1	(HC-95001-35001-60M)
E-18-10	24	HCO-95003-05060-31	TUBE, VINYL, 3.5X6.5X600	1	(HC-95003-05001-60M)
E-18-10	25	HZY3-90601-030	CLAMP, TUBE(D10.5)	4	

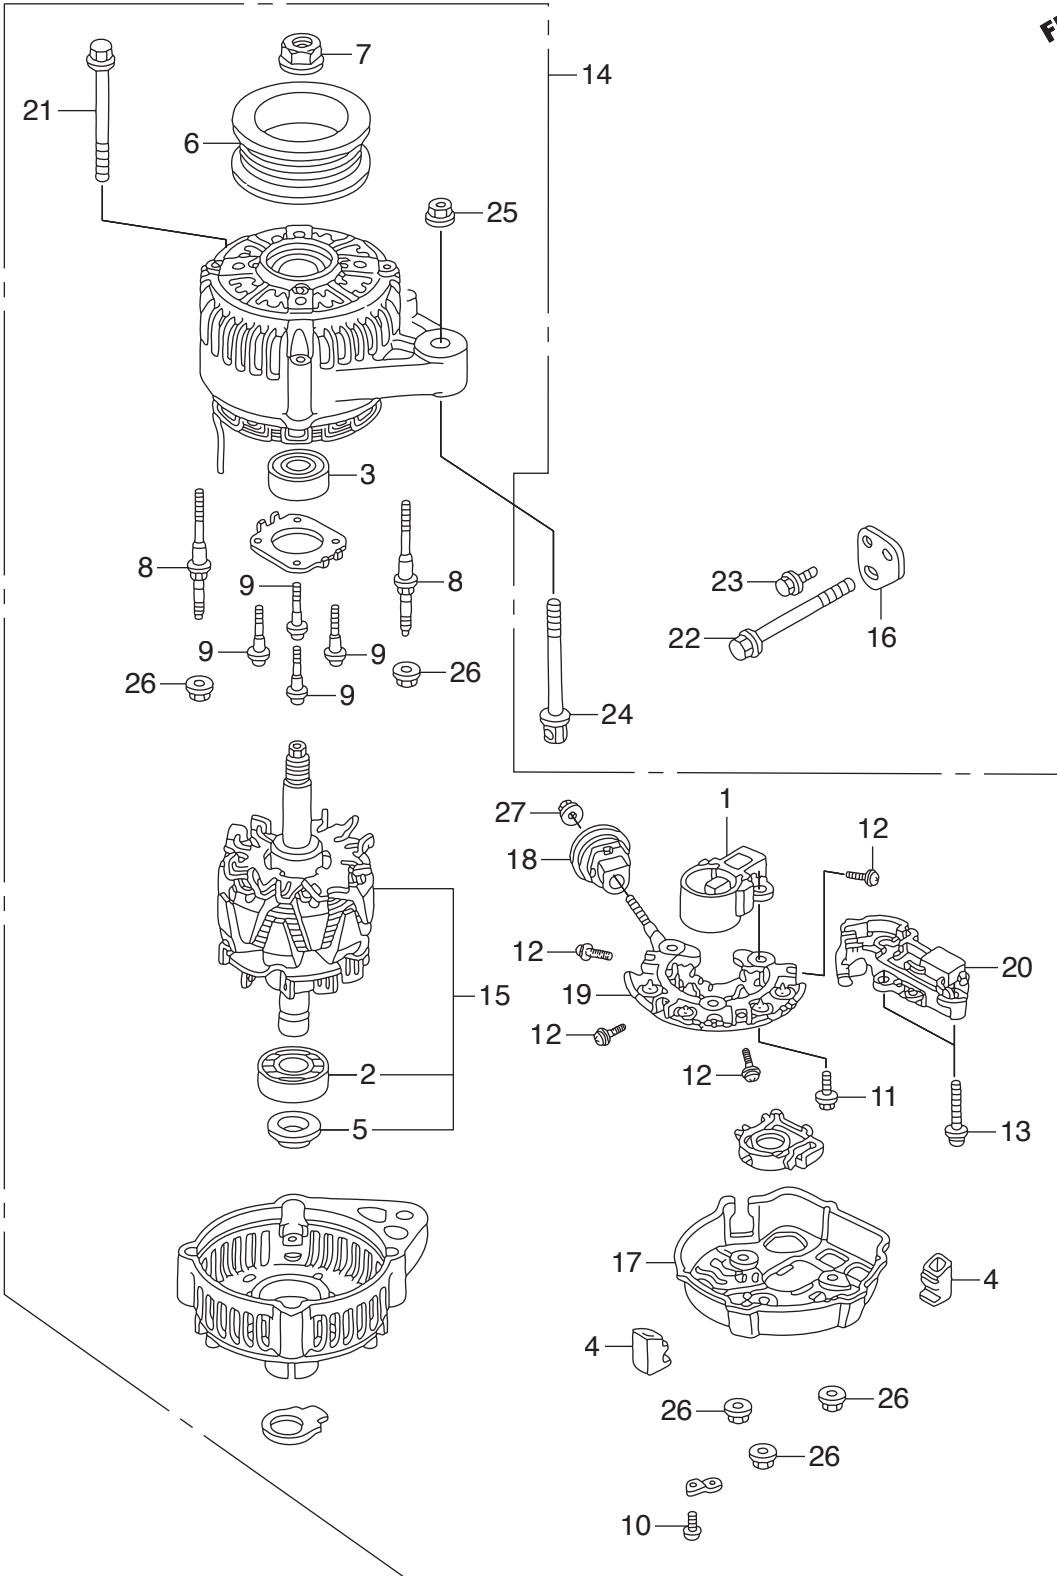FR. 


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
E-19	1	HPR7-31105-A01	HOLDER ASSY., BRUSH	1	
E-19	2	HPT0-31111-003	BEARING, RR. GENERATOR	1	
E-19	3	HPT0-31114-013	BEARING, FR. GENERATOR	1	
E-19	4	HPT0-31118-003	BUSH, INSULATION	4	
E-19	5	HPD1-31138-004	COVER, BEARING	1	
E-19	6	HP13-31141-003	PULLEY	1	
E-19	7	HPD1-31142-004	NUT, PULLEY LOCK	1	
E-19	8	HPD1-31145-004	BOLT, STUD, 6X68	4	
E-19	9	HPT0-31146-003	SCREW	4	
E-19	10	HP13-31147-003	SCREW	1	
E-19	11	HPT0-31147-003	SCREW-WASHER	3	
E-19	12	HP13-31148-003	SCREW, WAVE WASHER	4	
E-19	13	HPT0-31148-003	SCREW, WAVE WASHER	2	
E-19	14	HZY3-31630-003	GENERATOR ASSY., A.C.	1	
E-19	15	HZY3-31631-003	ROTOR ASSY.	1	
E-19	16	HZY3-31637-000	STAY, A.C. GENERATOR	1	
E-19	17	HZY3-31639-003	END COVER, RR.	1	
E-19	18	HZY3-31694-003	BUSH, INSULATION	1	
E-19	19	HZY3-31710-003	RECTIFIER ASSY.	1	
E-19	20	HZY3-31750-003	REGULATOR ASSY.	1	
E-19	21	HZX2-90002-000	BOLT, FLANGE, 10X90	1	
E-19	22	HZW5-90011-010	BOLT, SPECIAL ADJUSTER	1	
E-19	23	HZY3-90017-000	BOLT, FLANGE, 6X16	1	
E-19	24	HZY3-90055-000	BOLT, TENSIONER	1	
E-19	25	HZW5-90203-010	NUT, FLANGE, 8MM	1	
E-19	26	HPD1-90231-014	NUT-WASHER, 5MM	7	
E-19	27	HCO-94001-06080-0S	NUT, HEX., 6MM	1	

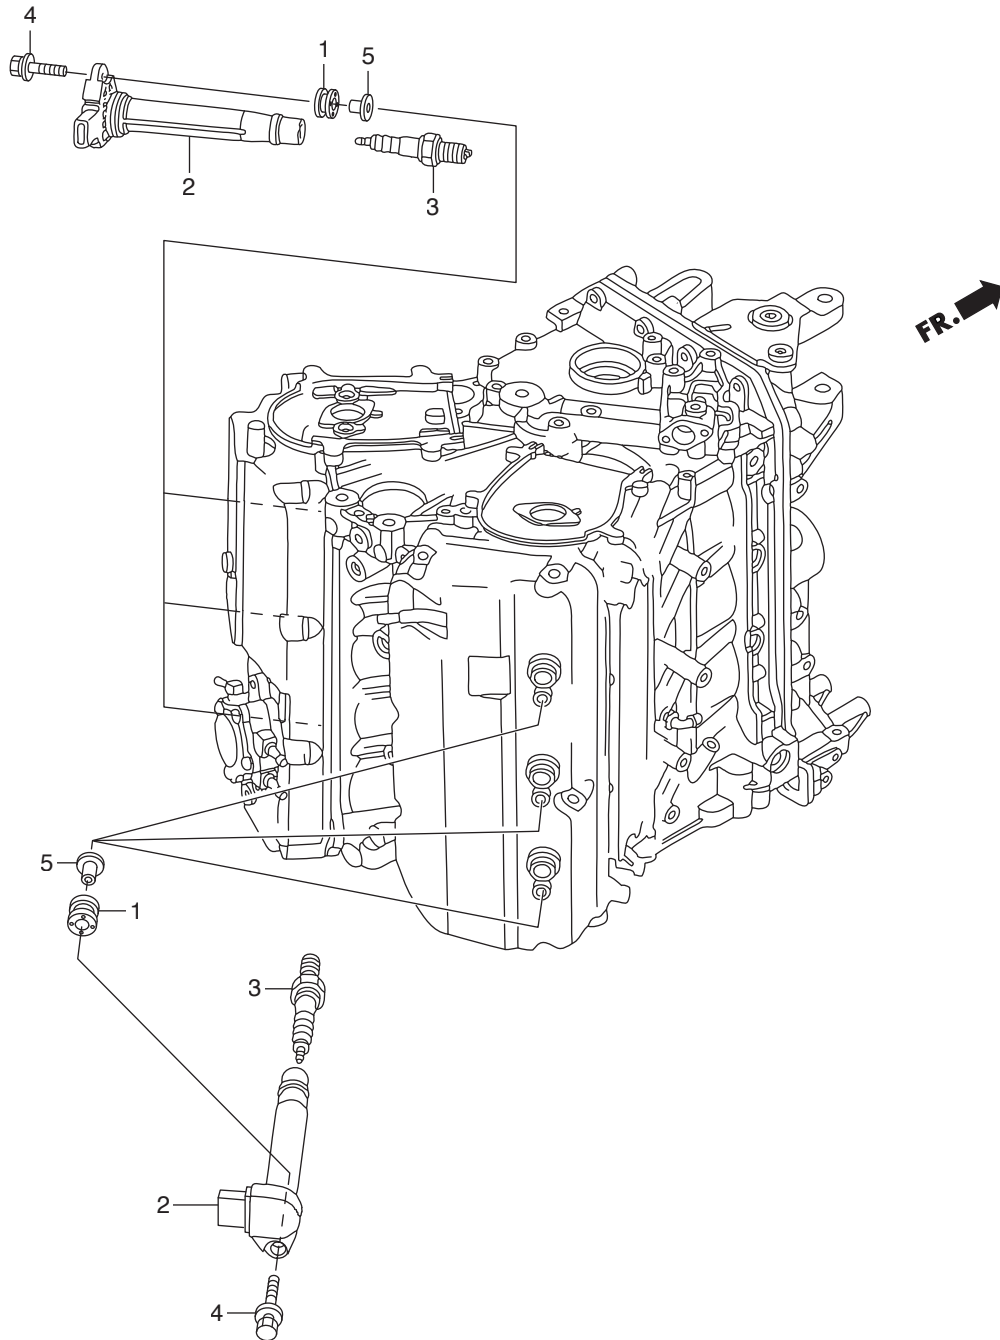


[illegible]

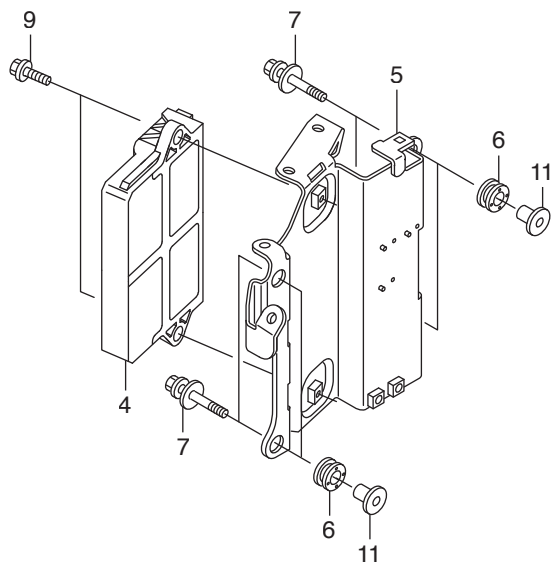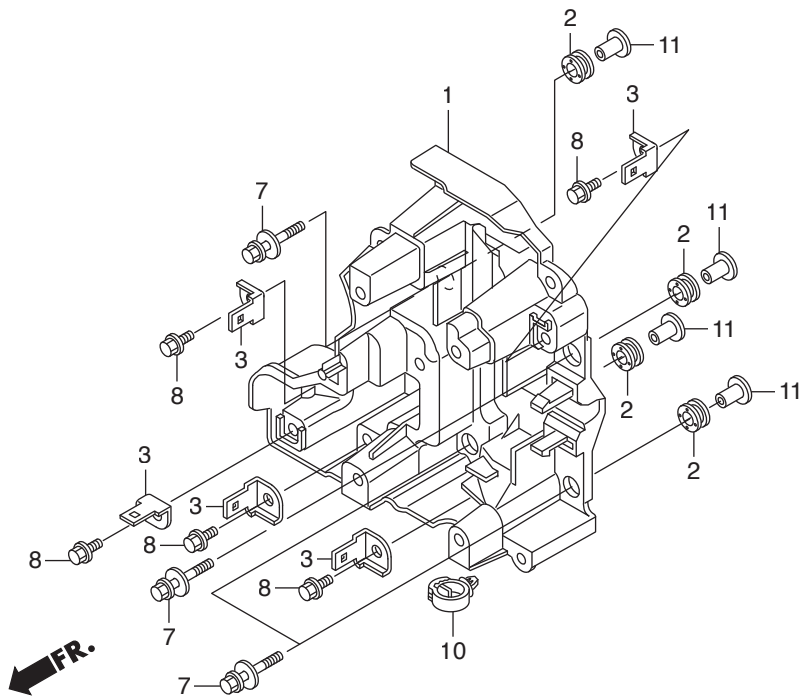


[illegible]

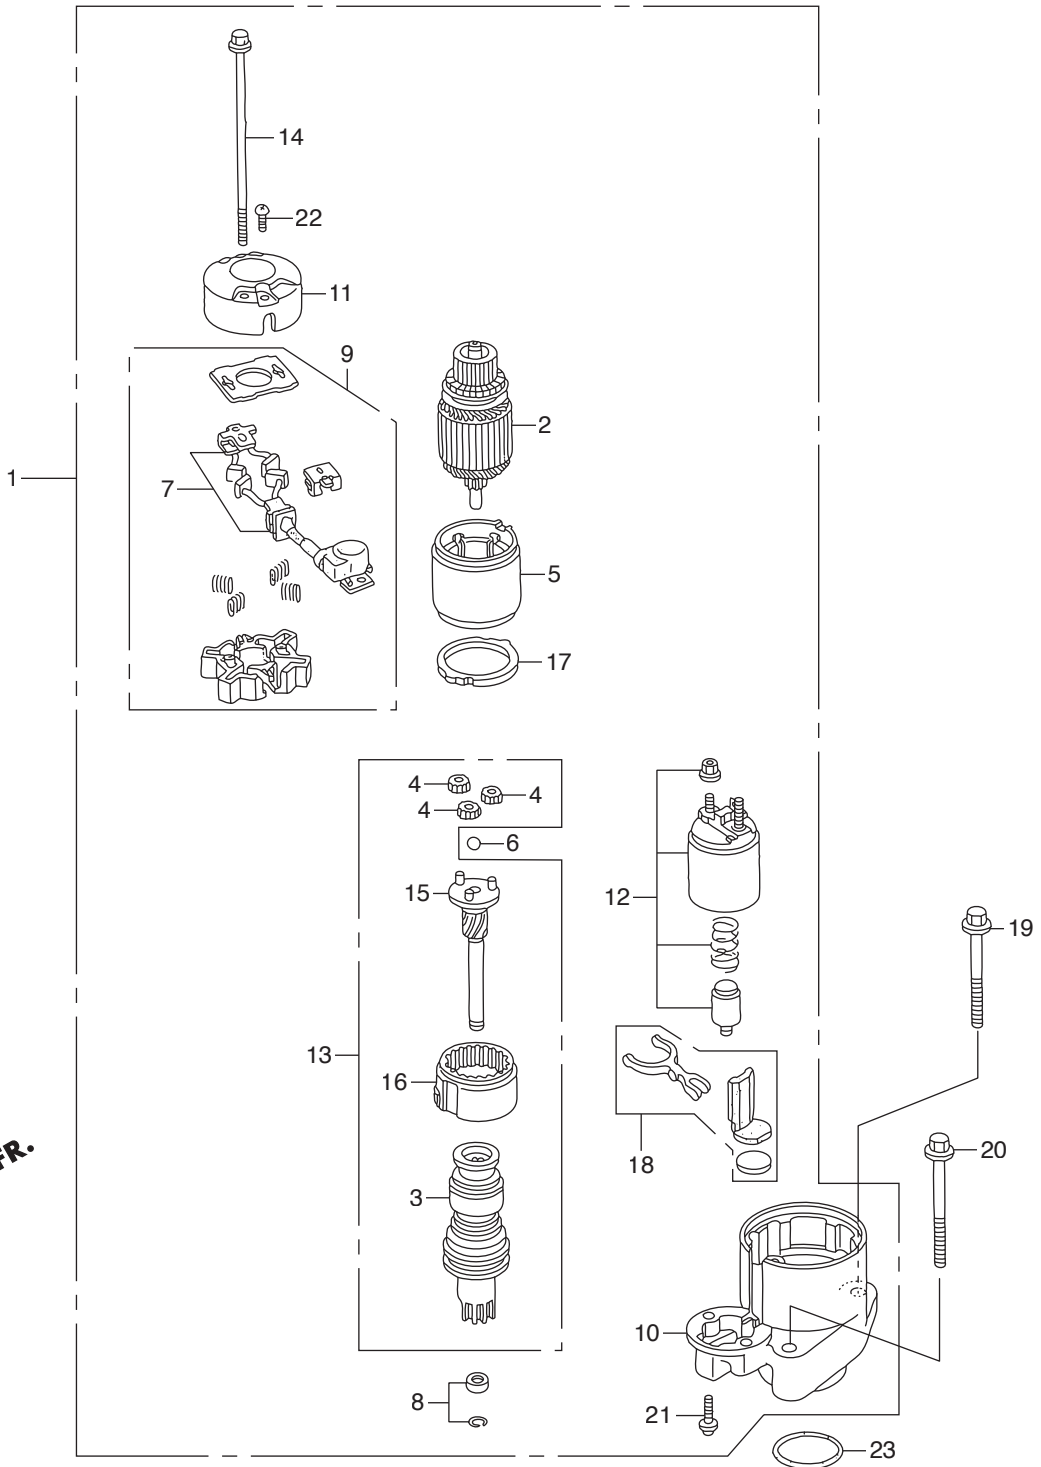


Ref.No.		Part No.	Description	Q'ty	Remarks
				BFT250A	
E-21	1	HZY3-31200-003	MOTOR ASSY., STARTER	1	
E-21	2	HP5A-31201-005	ROTOR COMP.	1	
E-21	3	HZY3-31207-003	CLUTCH COMP., OVERRUNNING	1	
E-21	4	HPY3-31215-004	GEAR ASSY., PLANETARY	3	
E-21	5	HZY3-31216-003	YOKE COMP.	1	
E-21	6	HPY3-31218-004	BALL, STEEL	1	
E-21	7	HZW1-31226-004	BRUSH SET	1	
E-21	8	HZW1-31229-004	STOPPER SET, SLEEVE	1	
E-21	9	HZW1-31231-004	HOLDER COMP., BRUSH	1	
E-21	10	HZY3-31235-003	BRACKET, FR.	1	
E-21	11	HZY3-31236-003	BRACKET, RR.	1	
E-21	12	HZY3-31240-003	SWITCH ASSY., MAGNET	1	
E-21	13	HZY3-31242-003	SHAFT ASSY., CLUTCH	1	
E-21	14	HP5A-31243-005	BOLT A, THROUGH	2	
E-21	15	HZY3-31246-003	SHAFT ASSY., GEAR	1	
E-21	16	HZY3-31247-003	GEAR ASSY., INTERNAL	1	
E-21	17	HZY3-31249-003	PACKING	1	
E-21	18	HZY3-31250-003	LEVER SET	1	
E-21	19	HZY3-90002-000	BOLT, FLANGE, 10X90	1	
E-21	20	HZY3-90003-000	BOLT, FLANGE, 10X110	1	
E-21	21	HZW1-90106-004	SCREW, PAN, 6X22(SPECIAL)	2	
E-21	22	HZW1-90107-004	SCREW, PAN, 5X8	2	
E-21	23	HZY3-91303-000	O-RING, 59.4X3.1	1	

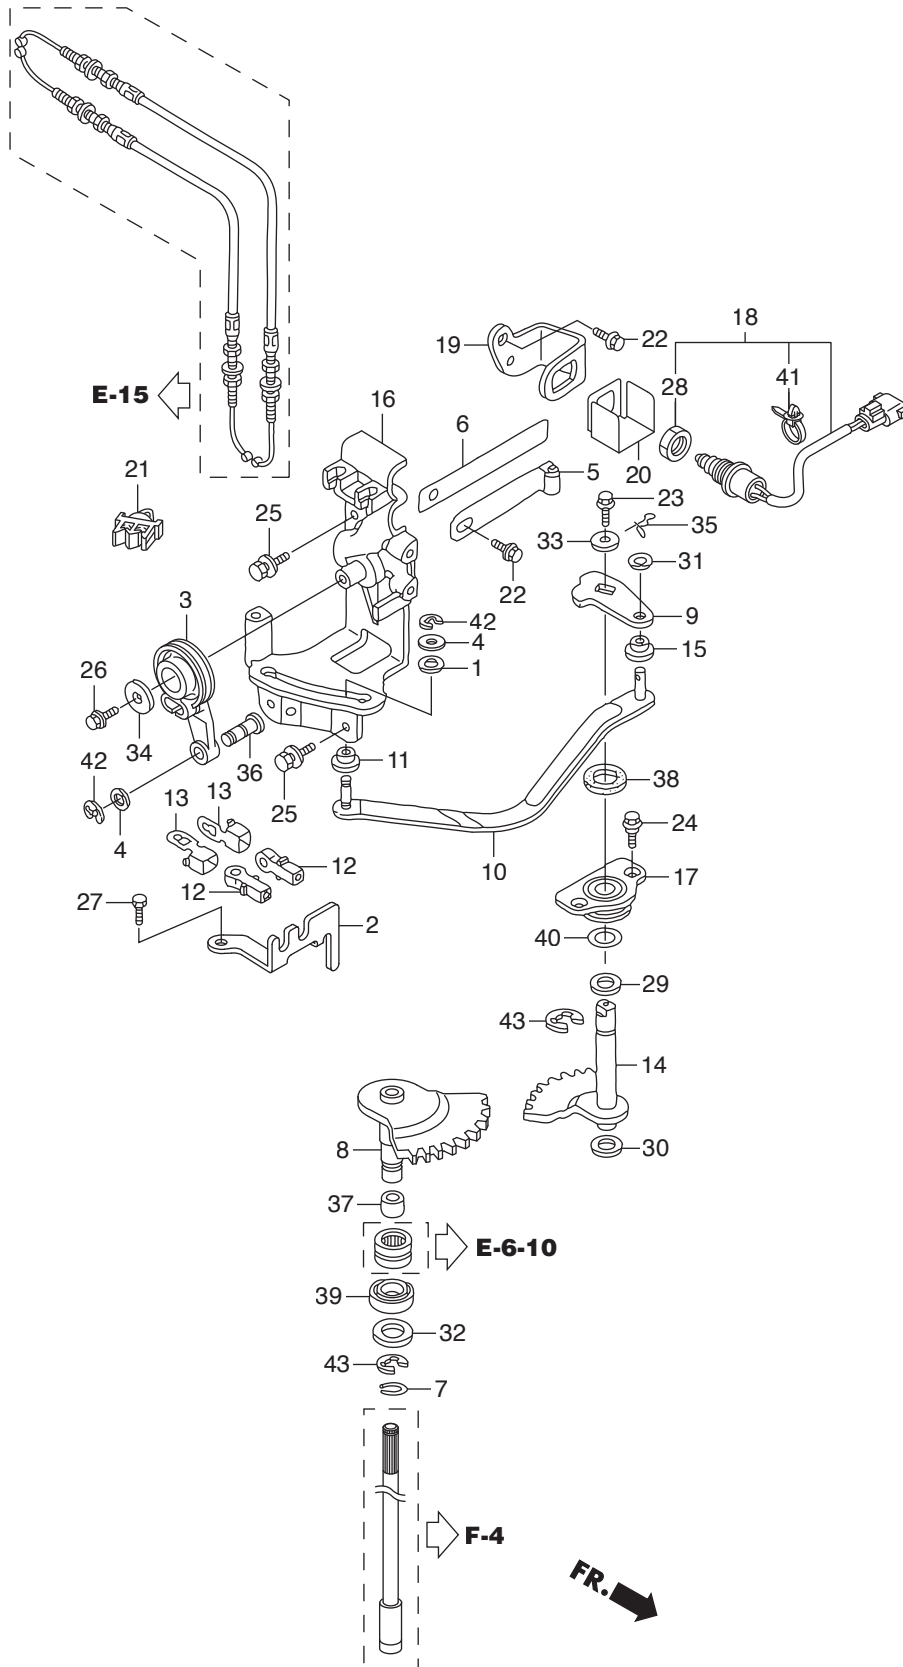


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-2	1	HKN5-17224-670	WASHER, AIR CLEANER COVER	1	SETTING
F-2	2	HZY3-17877-000	PLATE, REMOTE CONTROL CABLE	1	
F-2	3	HZY3-17931-000	ARM, THROTTLE	1	
F-2	4	H921-17936-000	WASHER, PIVOT	2	
F-2	5	HZW1-24210-010	SPRING COMP., CLICK	1	
F-2	6	HZY3-24221-000	SPRING, CLICK ASSIST	1	
F-2	7	HZW1-24327-000	RING, STOPPER	1	
F-2	8	HZY3-24610-A00	SHAFT COMP., SHIFT(A)	1	
F-2	9	HZY3-24612-010	ARM, SHIFT	1	
F-2	10	HZY3-24613-000	ROD, LINK	1	
F-2	11	HZY3-24617-000	COLLAR, SHIFT SLIDER	1	
F-2	12	HZY3-24618-000	PIVOT, SHIFT	2	
F-2	13	HZY3-24619-000	PLATE, LOCK	2	
F-2	14	HZY3-24620-000	SHAFT COMP., SHIFT(B)	1	
F-2	15	HZY3-24623-000	BUSH, SHIFT ARM	1	
F-2	16	HZY3-24628-000	BRACKET, SHIFT LINK	1	
F-2	17	HZW1-24629-000	HOLDER, SEAL	1	
F-2	18	HZX2-35470-013	SWITCH ASSY., NEUTRAL	1	
F-2	19	HZY3-35476-010	BRACKET, NEUTRAL SWITCH	1	
F-2	20	HZY3-35477-000	COVER, NEUTRAL SWITCH	1	
F-2	21	HS0X-46392-A01	CLIP, BRAKE PIPE	1	
F-2	22	HZW9-90011-000	BOLT, FLANGE, 6X14(CT200)	2	
F-2	23	HZY3-90017-000	BOLT, FLANGE, 6X16	1	
F-2	24	HZW5-90023-000	BOLT, FLANGE, 6X11	2	
F-2	25	HZX2-90101-C00	BOLT-WASHER, 6X16	3	
F-2	26	HZW9-90102-000	BOLT, FLANGE, 6X12	1	
F-2	27	HZV4-90127-000	BOLT, HEX., 6X16	1	
F-2	28	HZV5-90302-003	NUT, HEX., 20MM	1	
F-2	29	HHA0-90402-000	WASHER, THRUST, 14MM	1	


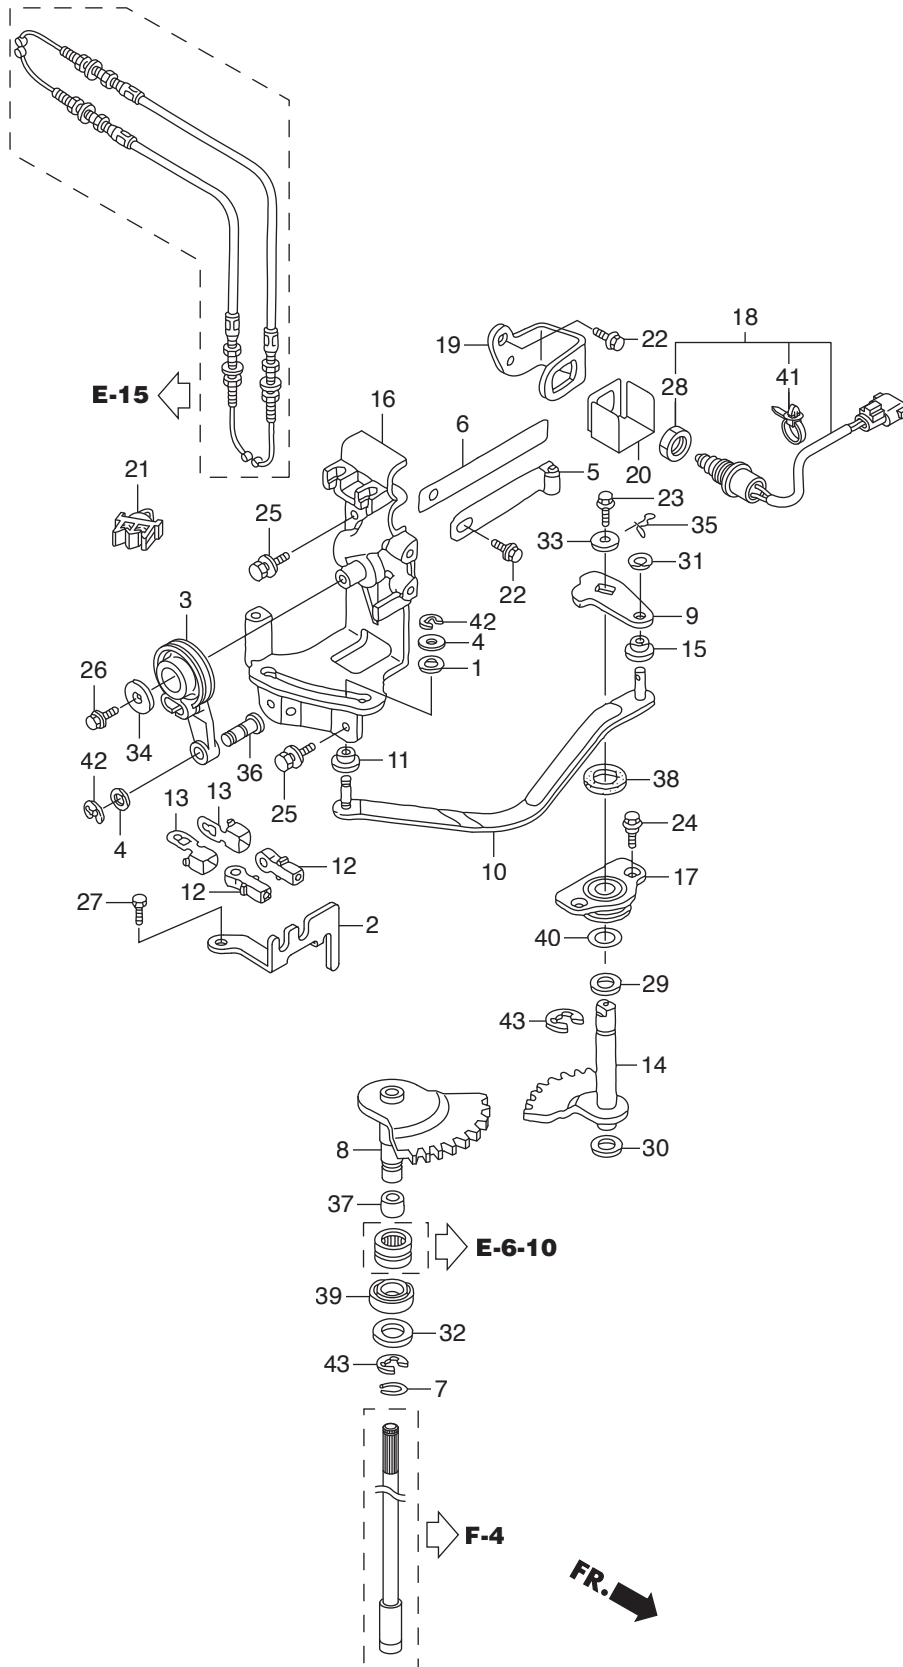


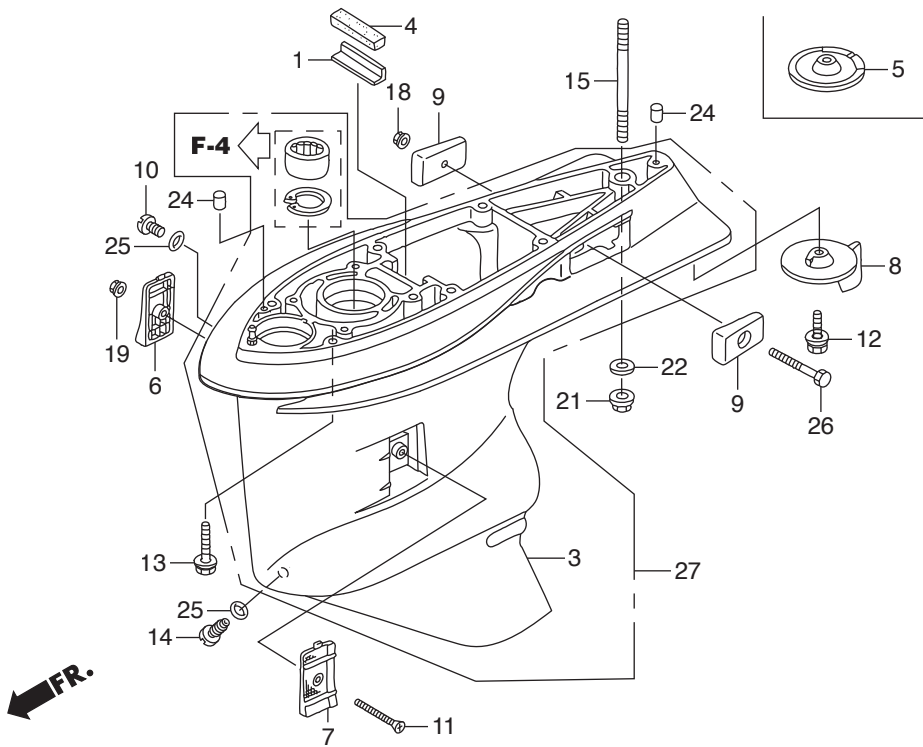



Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-3	1	HZW1-19286-B00	PLATE, RUBBER SETTING	1	
F-3	3	HZX2-41101-C01ZC	CASE, GEAR	1	*T107* BAY BLUE
F-3	4	HZW1-41102-B00	GROMMET, GEAR CASE	1	
F-3	5	HZX2-41102-E00ZC	COVER, GEAR CASE	1	*T107* BAY BLUE XCA
F-3	6	HZY3-41104-C01	SCREEN, R. WATER	1	
F-3	7	HZY3-41105-C01	SCREEN, L. WATER	1	
F-3	8	HZX2-41107-C00ZC	TAB, TRIM	1	*T107* BAY BLUE LA,XA
F-3	9	HZW1-41109-B00	METAL COMP., ANODE	2	
F-3	10	HZW9-90101-003	BOLT, OIL CHECK	1	
F-3	11	HZZ0-90101-000	SCREW, FLAT, 5X55	1	
F-3	12	HZY6-90103-000	BOLT-WASHER, 10X32	1	
F-3	13	HZX2-90107-C00	BOLT-WASHER, 10X47	6	
F-3	14	HZY3-90120-000	BOLT, DRAIN PLUG	1	
F-3	15	HZY3-90124-000	BOLT, STUD, 12X40	1	
F-3	18	HZY1-90205-000	NUT, SELF-LOCK, 6MM	1	
F-3	19	HZV4-90302-000	NUT, SELF-LOCK, 5MM	1	
F-3	21	HZW1-90308-003	NUT, SELF-LOCK, 12MM	1	
F-3	22	HZV5-90559-000	WASHER, PLAIN, 12MM	1	
F-3	24	HZV5-90756-000	DOWEL PIN, 6X10	2	
F-3	25	HZW4-91301-003	O-RING, 6.9X1.45	2	
F-3	26	HCO-92101-06055-4J	BOLT, HEX., 6X55	1	
F-3	27	HZX2-41110-305ZB	CASE COMP., GEAR	1	*T107* BAY BLUE

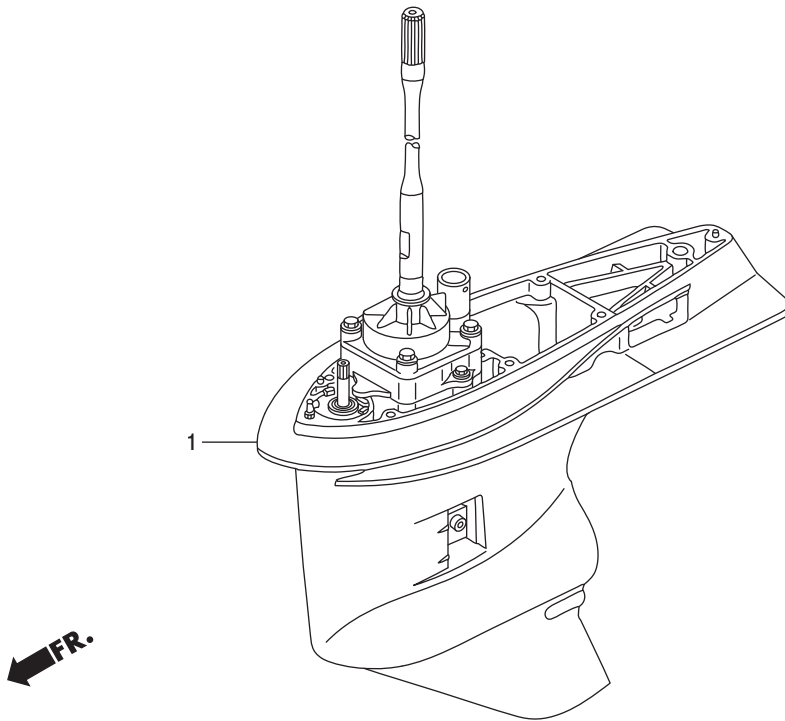


[illegible]

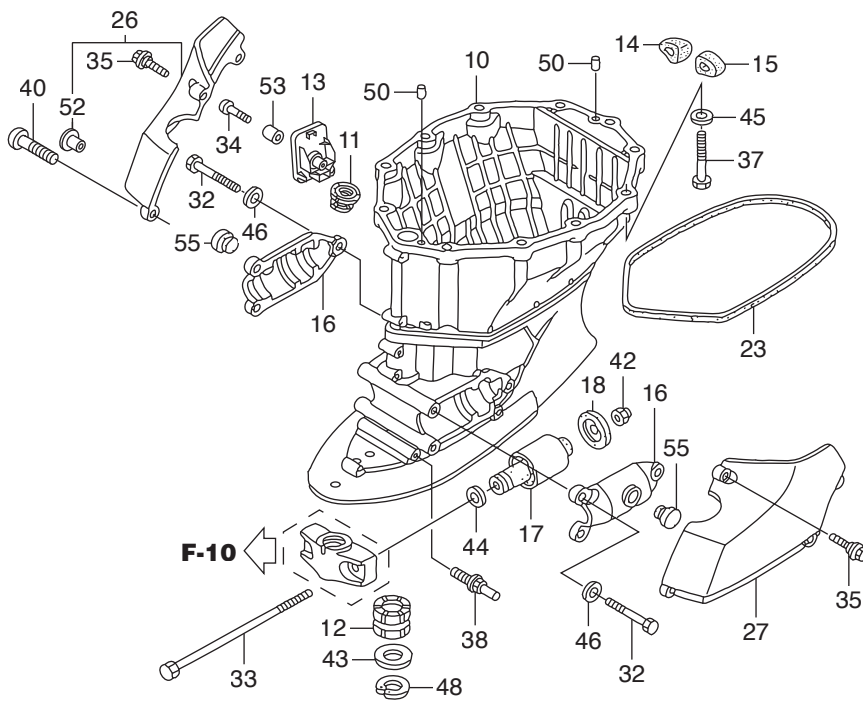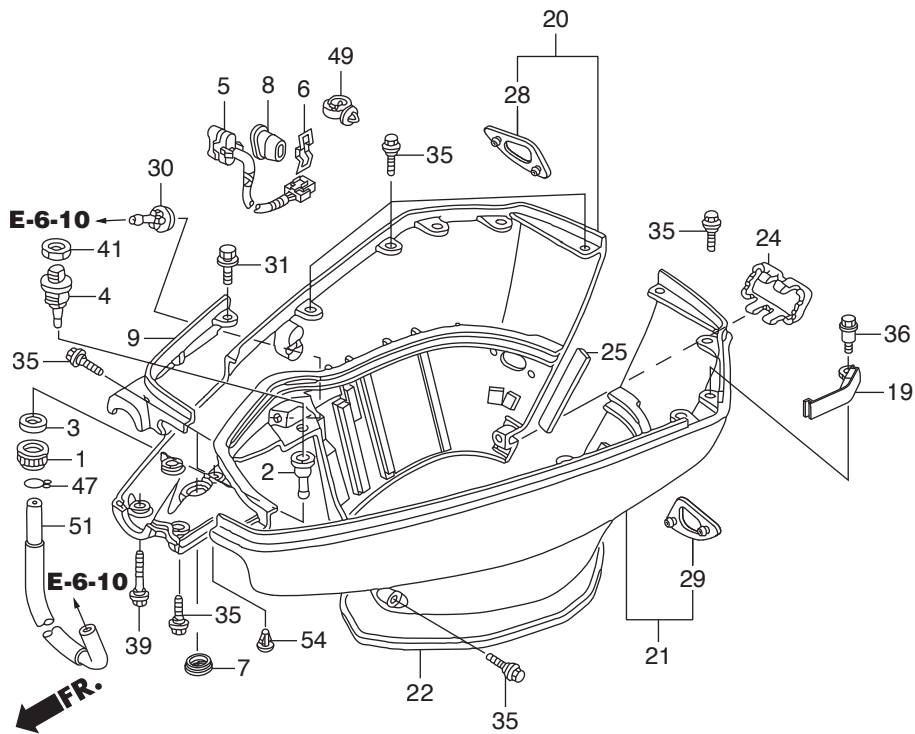


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-3-20	1	HZY3-19270-000	NUT, WATER MOUTH	1	
F-3-20	2	HZY3-19271-000	JOINT, WATER HOSE	1	
F-3-20	3	HZY3-19272-000	SEAT, WATER MOUTH	1	
F-3-20	4	HZY3-19289-000	CAP, WATER JOINT	1	
F-3-20	5	HZY3-35640-013	SWITCH ASSY., POWER TILT	1	
F-3-20	6	HZY3-35645-000	STAY, POWER TILT SWITCH	1	
F-3-20	7	HZV5-40107-000	GROMMET, UNDER CASE(C)	1	
F-3-20	8	HZY3-40114-010	GROMMET, POWER TILT SWITCH	1	
F-3-20	9	HZY3-40151-000ZC	COVER, FR. SEPARATE	1	*T107* BAY BLUE
F-3-20	10	HZY3-40201-020ZC	CASE, EXTENSION	1	*T107* BAY BLUE LA
F-3-20		HZY3-40201-612ZC	CASE, EXTENSION	1	*T107* BAY BLUE XA,XCA
F-3-20	11	HZW1-40209-000	RUBBER, DRAIN PLUG	1	
F-3-20	12	HZY3-40210-610	BUSH COMP., VERTICAL SHAFT	1	XA,XCA
F-3-20	13	HZY3-40212-010ZC	COVER, DRAIN PLUG(L)	1	*T107* BAY BLUE LA
F-3-20		HZY3-40212-611ZC	COVER, DRAIN PLUG(XL)	1	*T107* BAY BLUE XA,XCA
F-3-20	14	HZY3-40225-010	SEAL, R. IDOL PORT	1	
F-3-20	15	HZY3-40226-010	SEAL, L. IDOL PORT	1	
F-3-20	16	HZY3-50111-020	HOUSING, LOWER MOUNTING	2	
F-3-20	17	HZY3-50155-000	MOUNT COMP., LOWER RUBBER	2	
F-3-20	18	HZY3-50157-010	STOPPER, LOWER MOUNT	2	
F-3-20	19	HZY3-63347-C00	COVER, PLUG MAINTENANCE	1	
F-3-20	20	HZX2-63710-C00ZB	COVER COMP., R. UNDER ENGINE	1	*T107* BAY BLUE
F-3-20	21	HZX2-63715-C00ZB	COVER COMP., L. UNDER ENGINE	1	*T107* BAY BLUE
F-3-20	22	HZY3-63718-000	SEAL A, COVER UNDER	1	
F-3-20	23	HZX2-63719-C00	SEAL B, COVER UNDER	1	
F-3-20	24	HZY3-63722-010ZC	CAP, UNDER COVER	1	*T107* BAY BLUE
F-3-20	25	HZY3-63728-000	SEAL C, UNDER COVER	1	
F-3-20	26	HZY3-63731-A03ZC	COVER, R. LOWER MOUNTING	1	*T107* BAY BLUE LA
F-3-20		HZY3-63731-A12ZC	COVER, R. LOWER MOUNTING	1	*T107* BAY BLUE XA,XCA

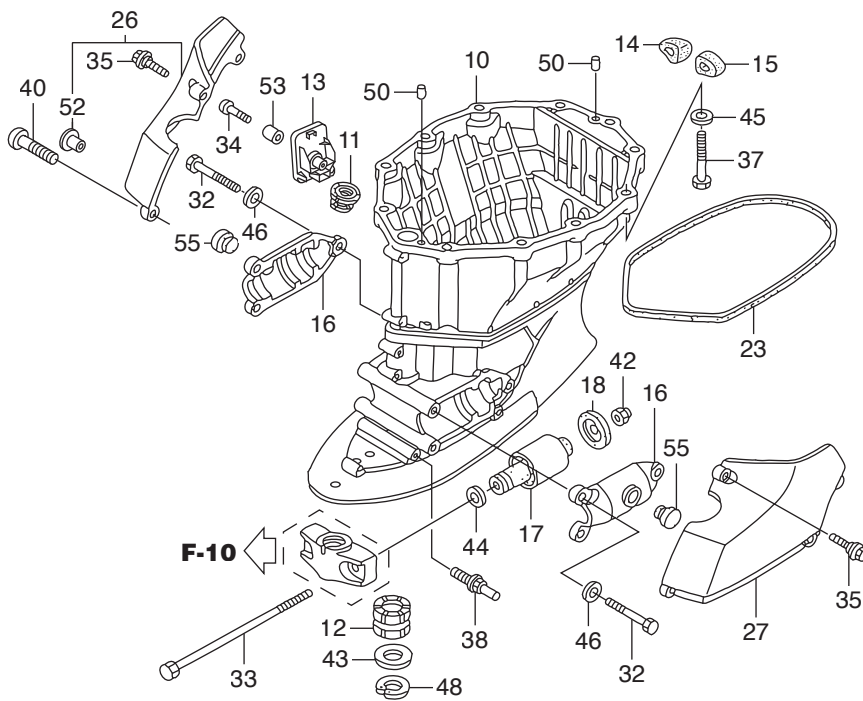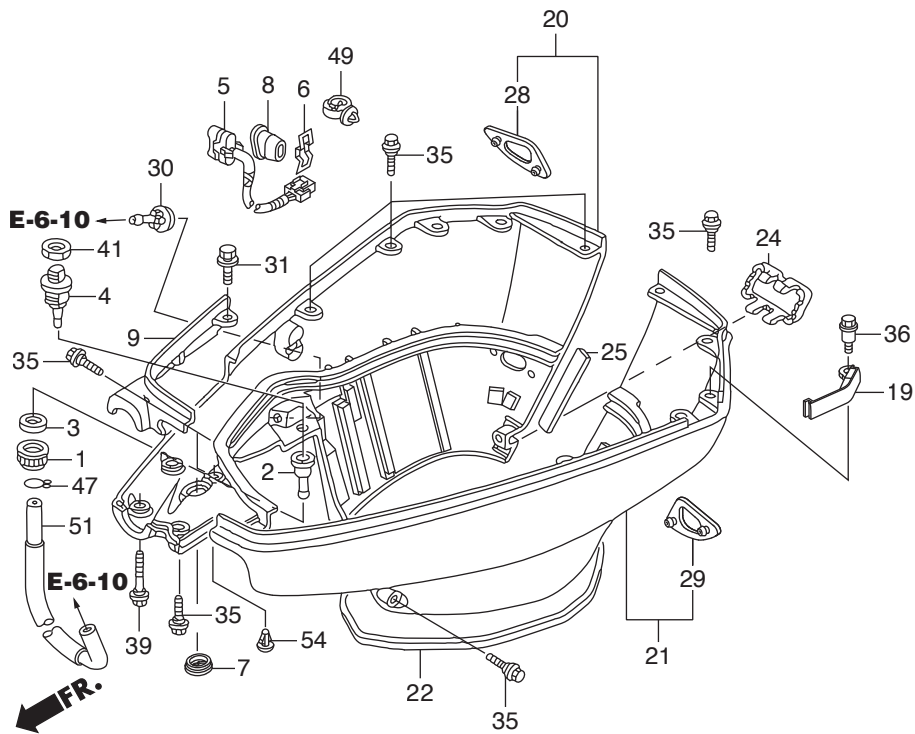

Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-3-20	27	HZY3-63736-A03ZC	COVER, L. LOWER MOUNTING	1	*T107* BAY BLUE LA
F-3-20		HZY3-63736-A12ZC	COVER, R. LOWER MOUNTING	1	*T107* BAY BLUE XA,XCA
F-3-20	28	HZY3-63751-C00	GROMMET, R. IDLE PORT	1	
F-3-20	29	HZY3-63756-C00	GROMMET, L. IDLE PORT	1	
F-3-20	30	HZV5-82873-003	GROMMET, WATER CHECK	1	
F-3-20	31	HZX2-90102-C00	BOLT-WASHER, 6X25	2	
F-3-20	32	HZY3-90102-A00	BOLT, HEX., 10X35	6	
F-3-20	33	HZY3-90105-010	BOLT, HEX., 14X180	2	
F-3-20	34	HZV5-90110-000	SCREW, SPECIAL, 6X35	1	
F-3-20	35	HZY3-90111-000	BOLT, SPECIAL, 6X17	26	
F-3-20	36	HZY3-90113-C00	BOLT, SPECIAL, 6X22	1	
F-3-20	37	HZY3-90122-000	BOLT, HEX., 12X50	11	
F-3-20	38	HZY3-90129-A00	BOLT, SPECIAL, 6X12	2	
F-3-20	39	HZY3-90132-000	BOLT, SPECIAL, 6X37	2	
F-3-20	40	HZY3-90134-000	SCREW-WASHER, 6X40	1	LA
F-3-20		HCO-93500-06025-4J	SCREW, PAN, 6X25	1	XA,XCA
F-3-20	41	H921-90302-000	NUT, HEX., 16MM	1	
F-3-20	42	HZY3-90302-000	NUT, SELF-LOCK, 14MM	2	
F-3-20	43	HZY3-90503-610	WASHER, 30MM	1	XA,XCA
F-3-20	44	HZY3-90511-000	WASHER, PLAIN, 14MM	2	
F-3-20	45	HZV5-90559-000	WASHER, PLAIN, 12MM	11	
F-3-20	46	HZV5-90563-000	WASHER, PLAIN, 10MM	6	
F-3-20	47	HZV4-90605-000	CLIP, TUBE(B12.5)	1	
F-3-20	48	HZY3-90652-000	CIRCLIP, INTERNAL, 43	1	XA,XCA
F-3-20	49	HSA0-90683-003	CLIP, WIRE HARNESS, 25MM	1	
F-3-20	50	HZV5-90756-000	DOWEL PIN, 6X10	2	
F-3-20	51	HZY3-91451-000	TUBE, WATER JOINT	1	
F-3-20	52	HZY3-91552-000	COLLAR, 6.2X10X25.5	1	LA
F-3-20		HZY6-91553-000	COLLAR, DISTANCE, 6.5X9X5	1	XA,XCA

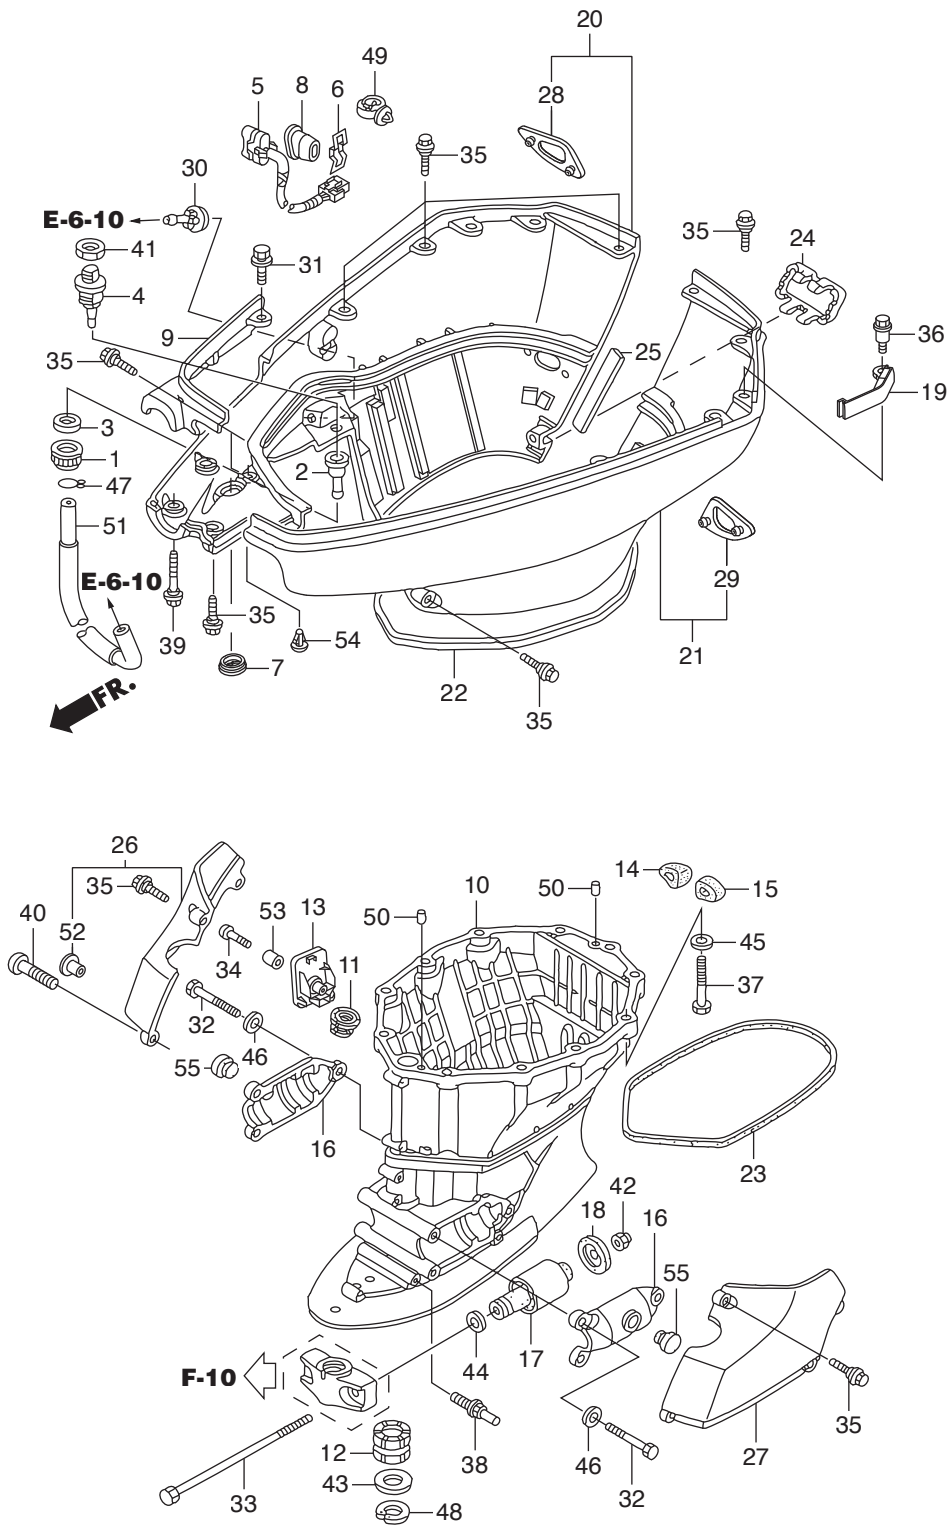


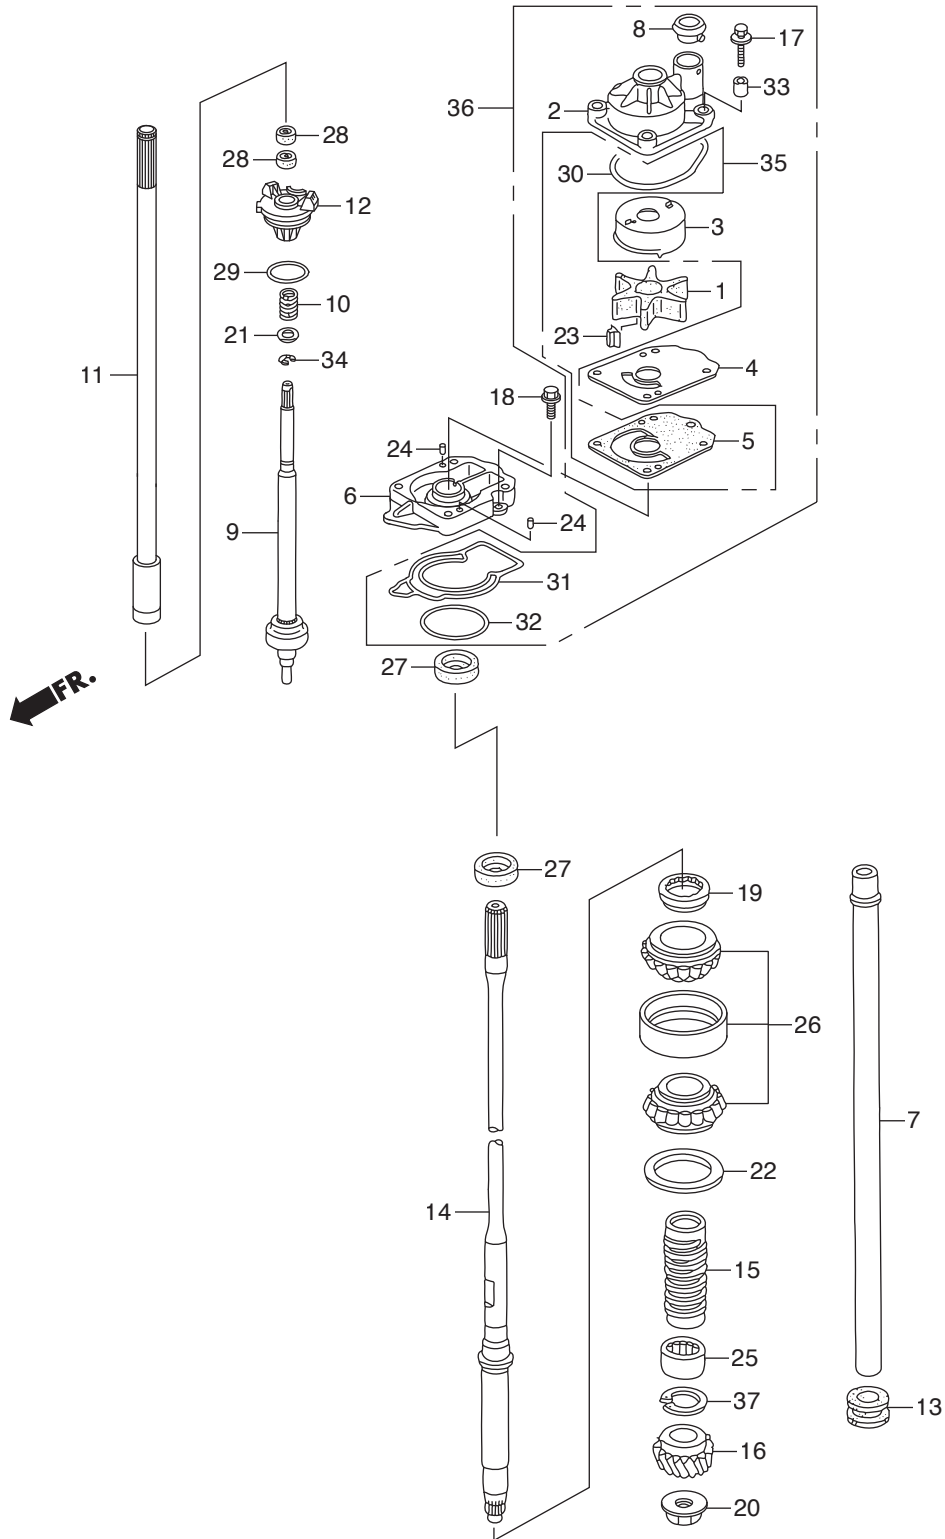


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-4	1	HZY3-19210-003	IMPELLER, PUMP	1	
F-4	2	HZY3-19221-010	HOUSING, IMPELLER	1	
F-4	3	HZY3-19223-000	LINER, PUMP	1	
F-4	4	HZY3-19231-000	COVER, IMPELLER	1	
F-4	5	HZX2-19234-C00	GASKET B, IMPELLER	1	
F-4	6	HZX2-19241-C00	HOUSING, WATER PUMP	1	
F-4	7	HZY3-19251-000	TUBE, WATER(L)	1	LA
F-4		HZY3-19251-611	TUBE, WATER(XL)	1	XA,XCA
F-4	8	HZY3-19253-000	RING, WATER TUBE SEAL	1	
F-4	9	HZY3-24310-C00	ROD COMP., SHIFT	1	LA,XA
F-4		HZY3-24310-E00	ROD COMP., SHIFT	1	(COUNTER ROTATION) XCA
F-4	10	HZY3-24318-000	SPRING, SHIFT ROD	1	
F-4	11	HZY6-24320-000	ROD COMP. A, SHIFT(L)	1	LA
F-4		HZY6-24320-610	ROD COMP. A, SHIFT(XL)	1	XA,XCA
F-4	12	HZW1-24343-B02	HOLDER, SHIFT ROD	1	
F-4	13	HZY3-40204-000	GROMMET, EXTENSION CASE	1	
F-4	14	HZX2-41112-C00	SHAFT, VERTICAL(L)	1	LA
F-4		HZX2-41112-C10	SHAFT, VERTICAL(XL)	1	XA,XCA
F-4	15	HZY3-41116-000	SLINGER, OIL	1	
F-4	16	HZX2-41131-C00	GEAR, PINION	1	LA,XA
F-4		HZX2-41131-E00	GEAR, PINION(COUNTER ROTATION)	1	XCA
F-4	17	HZX2-90105-C00	BOLT, WASHER, 8X60	4	
F-4	18	HHW1-90215-671	BOLT, FLANGE, 6X16	1	
F-4	19	HZX2-90301-C00	NUT, LOCK, 68MM	1	
F-4	20	HZX2-90303-C00	NUT, HEX., 18MM	1	
F-4	21	H723-90472-000	WASHER, PLAIN, 12MM	1	
F-4	22	HZX2-90518-C00	SHIM A, GEAR(0.10)	1	
F-4		HZX2-90519-C00	SHIM B, GEAR(0.15)	1	
F-4		HZX2-90520-C00	SHIM C, GEAR(0.30)	1	




[illegible]

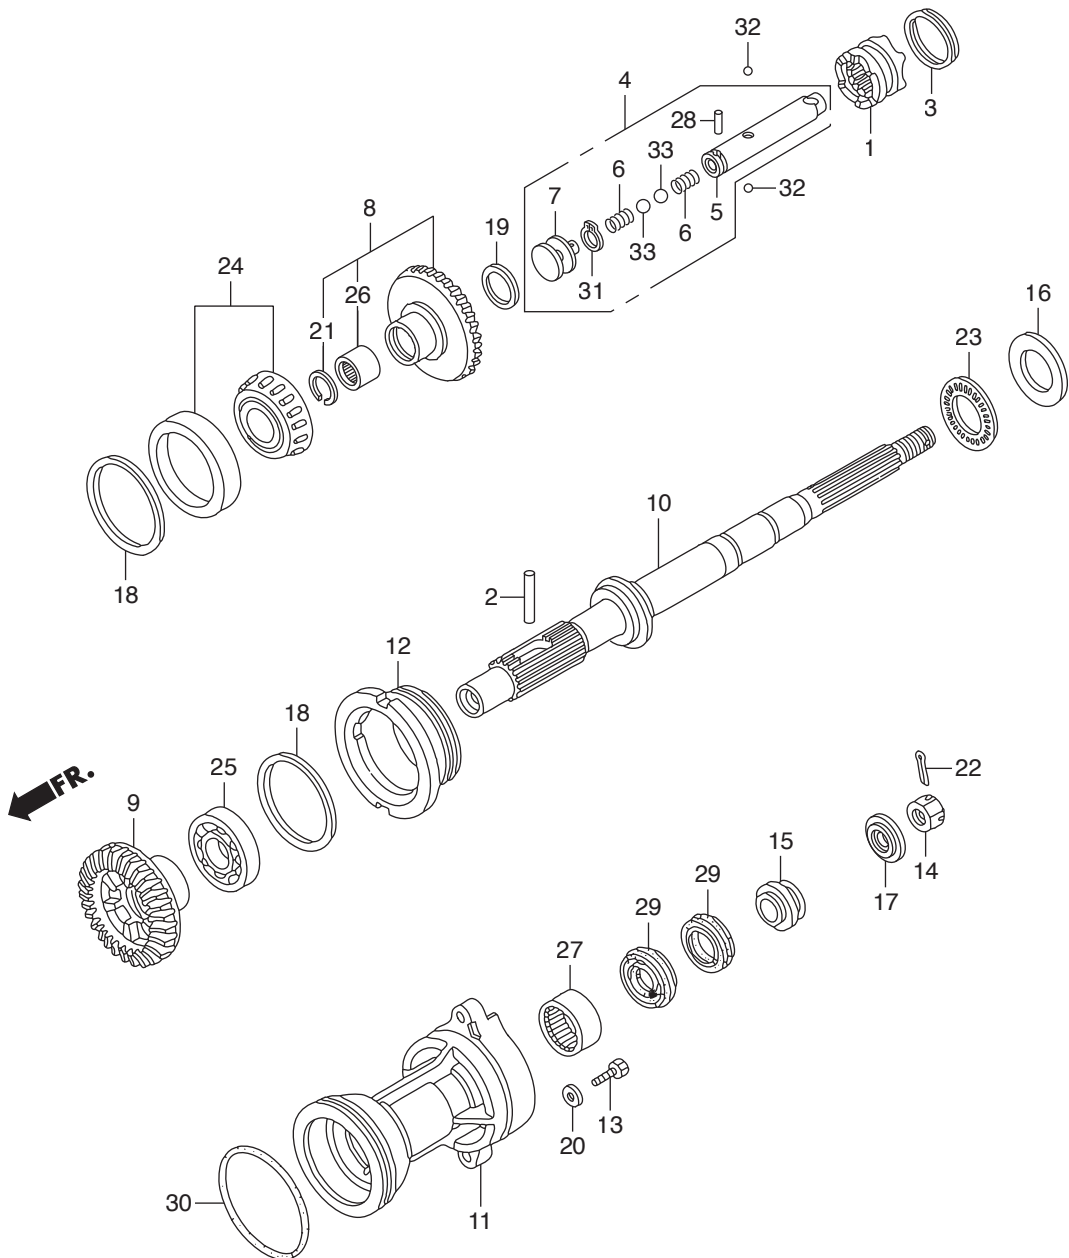


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-5	1	HZX2-24101-C00	SHIFTER, CLUTCH	1	LA,XA
F-5	2	HZY3-24102-000	PIN, SHIFTER, 8X50	1	LA,XA
F-5	3	HZY3-24103-000	RING, CROSS PIN	1	LA,XA
F-5	4	HZY3-24113-A01	SLIDER COMP., SHIFT	1	LA,XA
F-5	5	HZY3-24122-A01	SLIDER, SHIFT	1	LA,XA
F-5	6	HZY3-24123-000	SPRING, SHIFT	2	LA,XA
F-5	7	HZY3-24124-310	PLATE, SHIFT	1	LA,XA
F-5	8	HZX2-41140-C00	GEAR COMP., BEVEL(FORWARD)	1	(24T) LA,XA
F-5	9	HZX2-41151-C00	GEAR, BEVEL(REVERSE)(24T)	1	LA,XA
F-5	10	HZX2-41161-C00	SHAFT, PROPELLER	1	LA,XA
F-5	11	HZX2-41201-C00ZC	HOLDER, PROPELLER SHAFT	1	*T107* BAY BLUE LA,XA
F-5	12	HZX2-41202-C00	HOLDER, BEARING	1	LA,XA
F-5	13	HZY3-90123-000	BOLT, HEX., 12X45	2	LA,XA
F-5	14	HZW1-90301-B00	NUT, CASTLE, 18MM	1	LA,XA
F-5	15	HZY3-90506-000	WASHER, PROPELLER THRUST	1	LA,XA
F-5	16	HZW5-90509-711	WASHER, THRUST BEARING	1	LA,XA
F-5	17	HZY3-90512-000	WASHER, PROPELLER	1	LA,XA
F-5	18	HZX2-90528-C00	SHIM A, BEVEL(0.10)	2	LA,XA
F-5		HZX2-90529-C00	SHIM B, BEVEL(0.15)	2	LA,XA
F-5		HZX2-90530-C00	SHIM C, BEVEL(0.30)	2	LA,XA
F-5		HZX2-90531-C00	SHIM D, BEVEL(0.50)	2	LA,XA
F-5	19	HZY3-90548-000	SHIM A, THRUST(2.75)	1	LA,XA
F-5		HZY3-90549-000	SHIM B, THRUST(2.80)	1	LA,XA
F-5		HZY3-90550-000	SHIM C, THRUST(2.85)	1	LA,XA
F-5		HZY3-90551-000	SHIM D, THRUST(2.90)	1	LA,XA
F-5		HZY3-90552-000	SHIM E, THRUST(2.95)	1	LA,XA
F-5		HZY3-90553-000	SHIM F, THRUST(3.00)	1	LA,XA
F-5		HZY3-90554-000	SHIM G, THRUST(3.05)	1	LA,XA
F-5		HZY3-90555-000	SHIM H, THRUST(3.10)	1	LA,XA

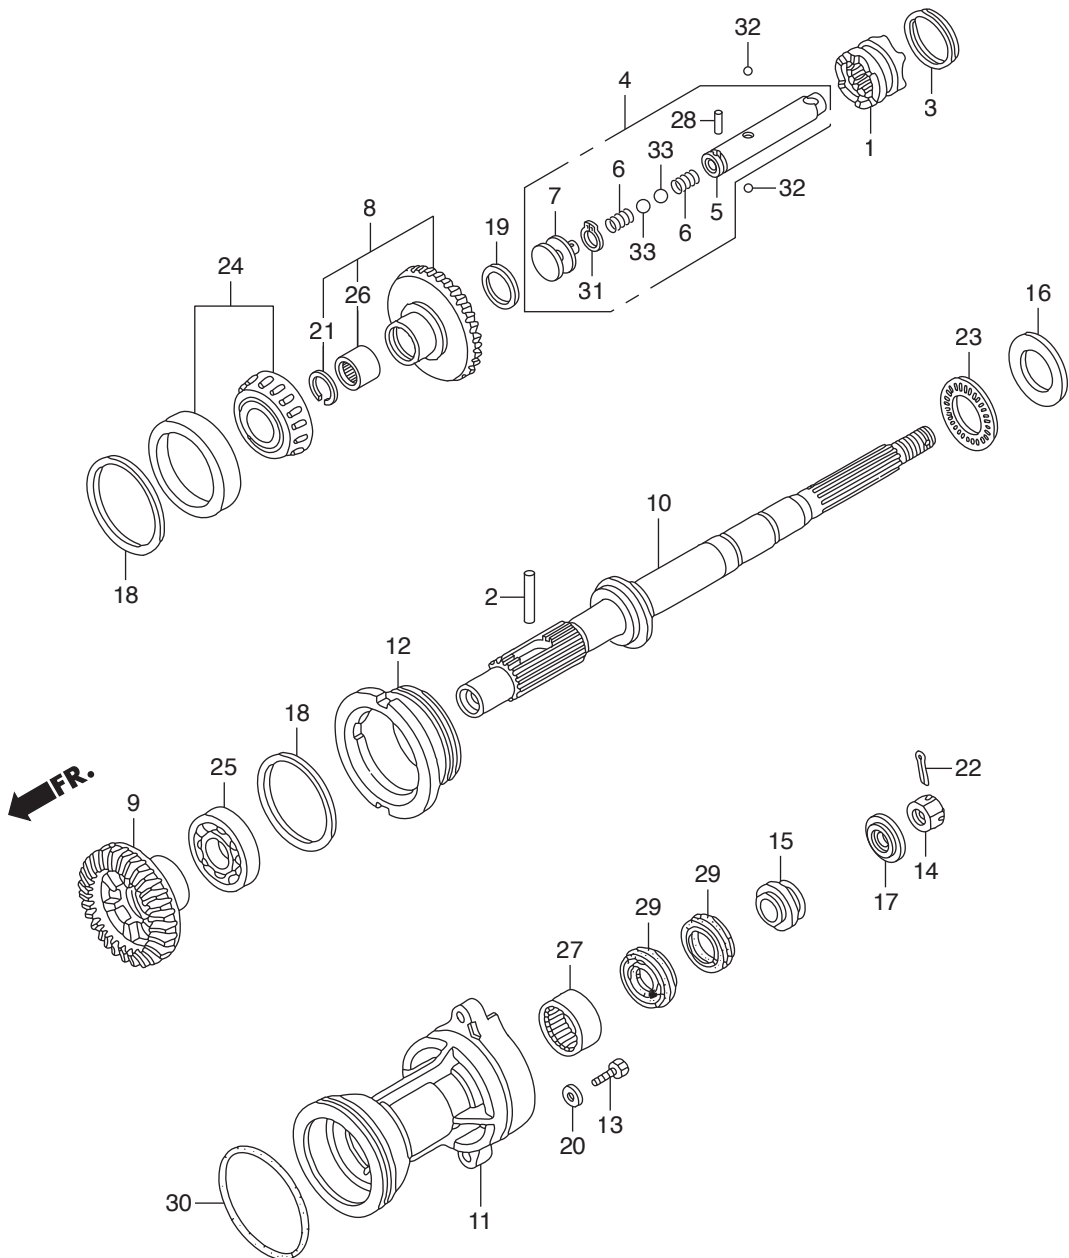

[illegible]

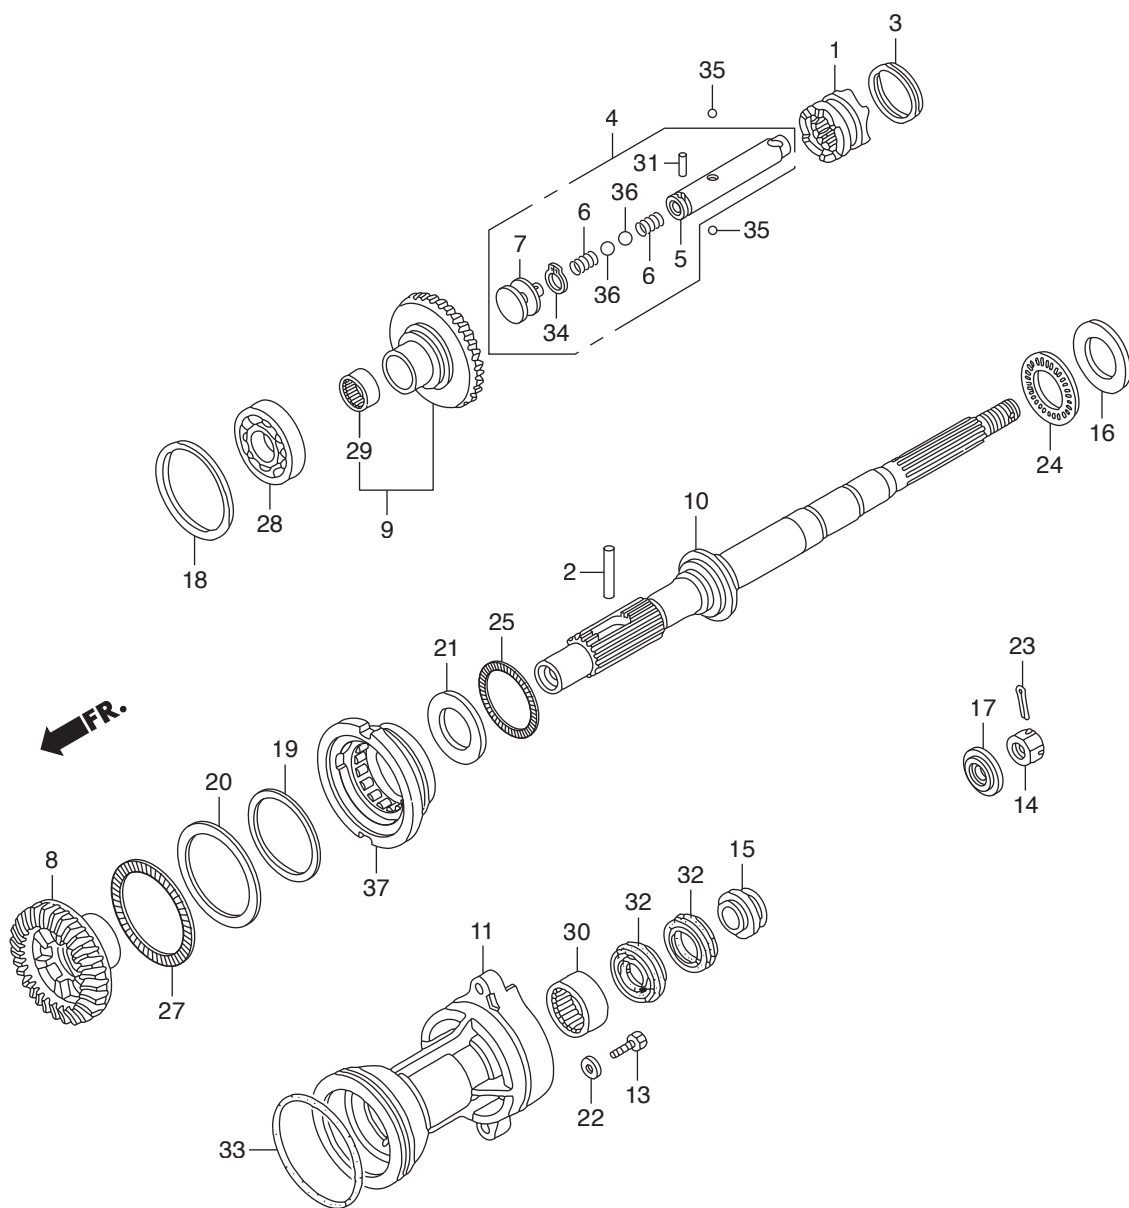



Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-5-1	1	HZX2-24101-C00	SHIFTER, CLUTCH	1	XCA
F-5-1	2	HZY3-24102-000	PIN, SHIFTER, 8X50	1	XCA
F-5-1	3	HZY3-24103-000	RING, CROSS PIN	1	XCA
F-5-1	4	HZY3-24113-A01	SLIDER COMP., SHIFT	1	XCA
F-5-1	5	HZY3-24122-A01	SLIDER, SHIFT	1	XCA
F-5-1	6	HZY3-24123-000	SPRING, SHIFT	2	XCA
F-5-1	7	HZY3-24124-310	PLATE, SHIFT	1	XCA
F-5-1	8	HZX2-41141-E00	GEAR, BEVEL(FORWARD)(24T)	1	(COUNTER ROTATION) XCA
F-5-1	9	HZX2-41150-E00	GEAR COMP., BEVEL(REVERSE)	1	(24T)(COUNTER ROTATION) XCA
F-5-1	10	HZX2-41161-E00	SHAFT, PROPELLER	1	XCA
F-5-1	11	HZX2-41201-C00ZC	HOLDER, PROPELLER SHAFT	1	*T107* BAY BLUE XCA
F-5-1	13	HZY3-90123-000	BOLT, HEX., 12X45	2	XCA
F-5-1	14	HZW1-90301-B00	NUT, CASTLE, 18MM	1	XCA
F-5-1	15	HZY3-90506-000	WASHER, PROPELLER THRUST	1	XCA
F-5-1	16	HZW5-90509-711	WASHER, THRUST BEARING	1	XCA
F-5-1	17	HZY3-90512-000	WASHER, PROPELLER	1	XCA
F-5-1	18	HZX2-90528-C00	SHIM A, BEVEL(0.10)	1	XCA
F-5-1		HZX2-90529-C00	SHIM B, BEVEL(0.15)	1	XCA
F-5-1		HZX2-90530-C00	SHIM C, BEVEL(0.30)	1	XCA
F-5-1		HZX2-90531-C00	SHIM D, BEVEL(0.50)	1	XCA
F-5-1	19	HZX2-90528-E00	SHIM A, BEVEL(0.10)	1	(COUNTER ROTATION) XCA
F-5-1		HZX2-90529-E00	SHIM B, BEVEL(0.15)	1	(COUNTER ROTATION) XCA
F-5-1		HZX2-90530-E00	SHIM C, BEVEL(0.30)	1	(COUNTER ROTATION) XCA
F-5-1		HZX2-90531-E00	SHIM D, BEVEL(0.50)	1	(COUNTER ROTATION) XCA
F-5-1	20	HZX2-90541-E01	WASHER, THRUST, 85X110X2	1	XCA
F-5-1	21	HZX2-90542-E01	WASHER, THRUST, 48X74X3	1	(COUNTER ROTATION) XCA
F-5-1	22	HZV5-90559-000	WASHER, PLAIN, 12MM	2	XCA
F-5-1	23	HZW1-90758-B00	PIN, SPLIT, 4.0	1	XCA
F-5-1	24	HPT2-91005-N01	BEARING, THRUST(F)	1	XCA

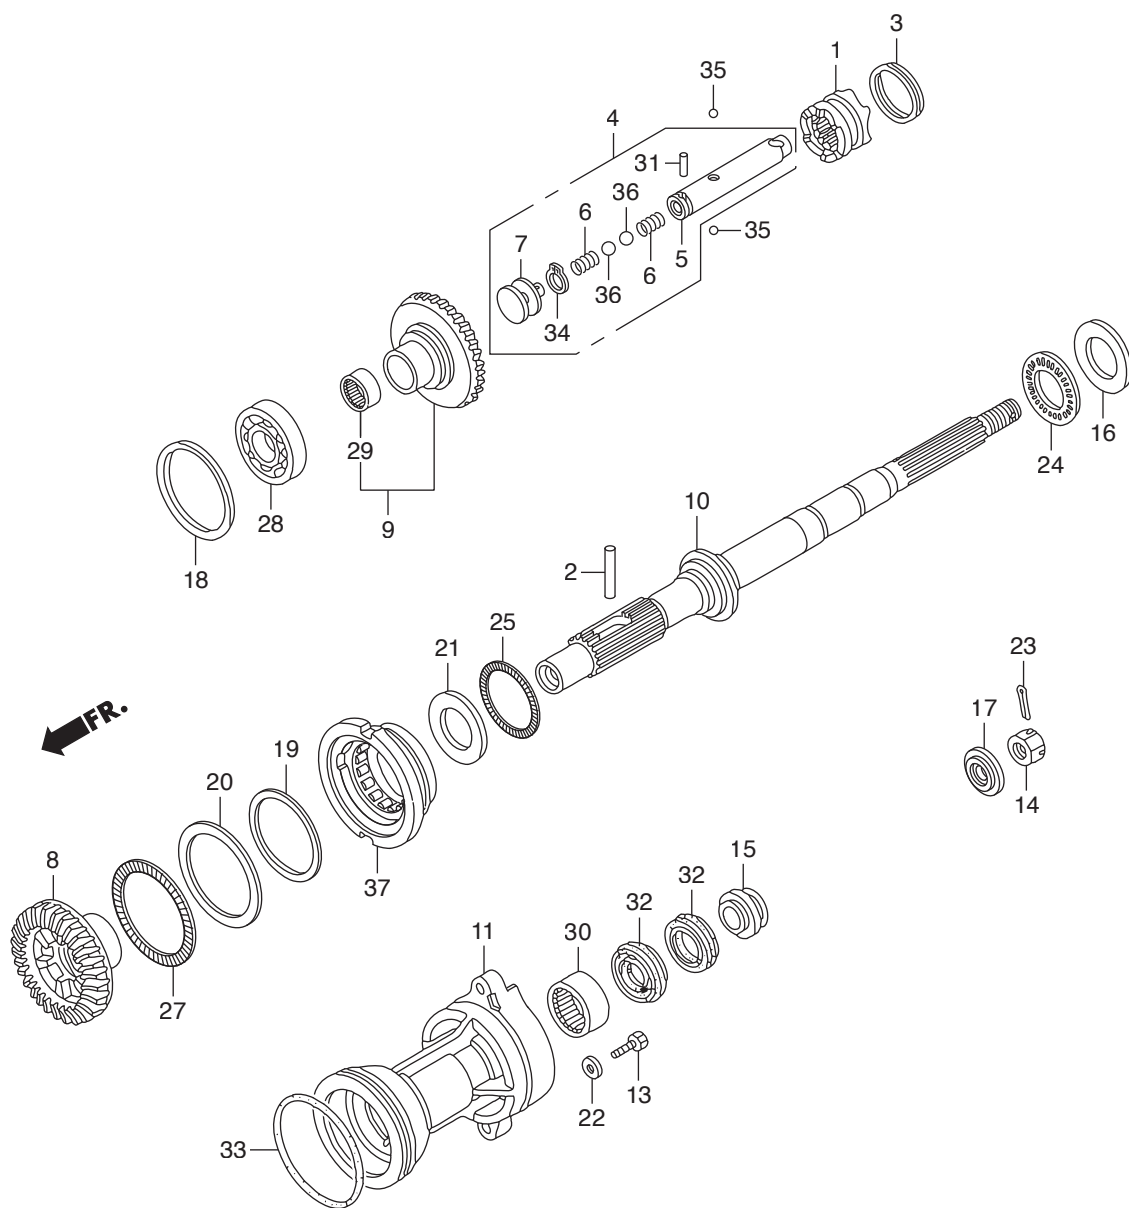



ZX2TF0501

[illegible]

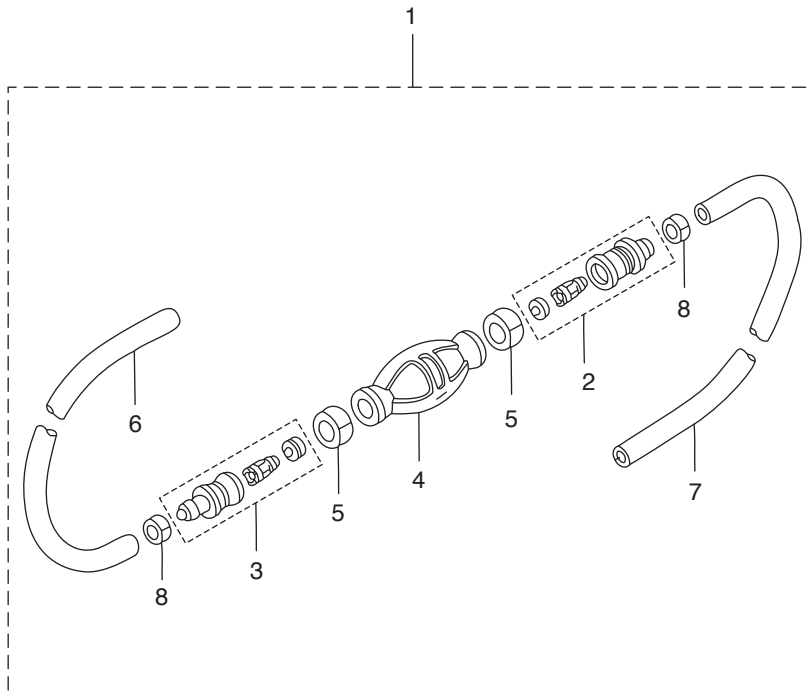


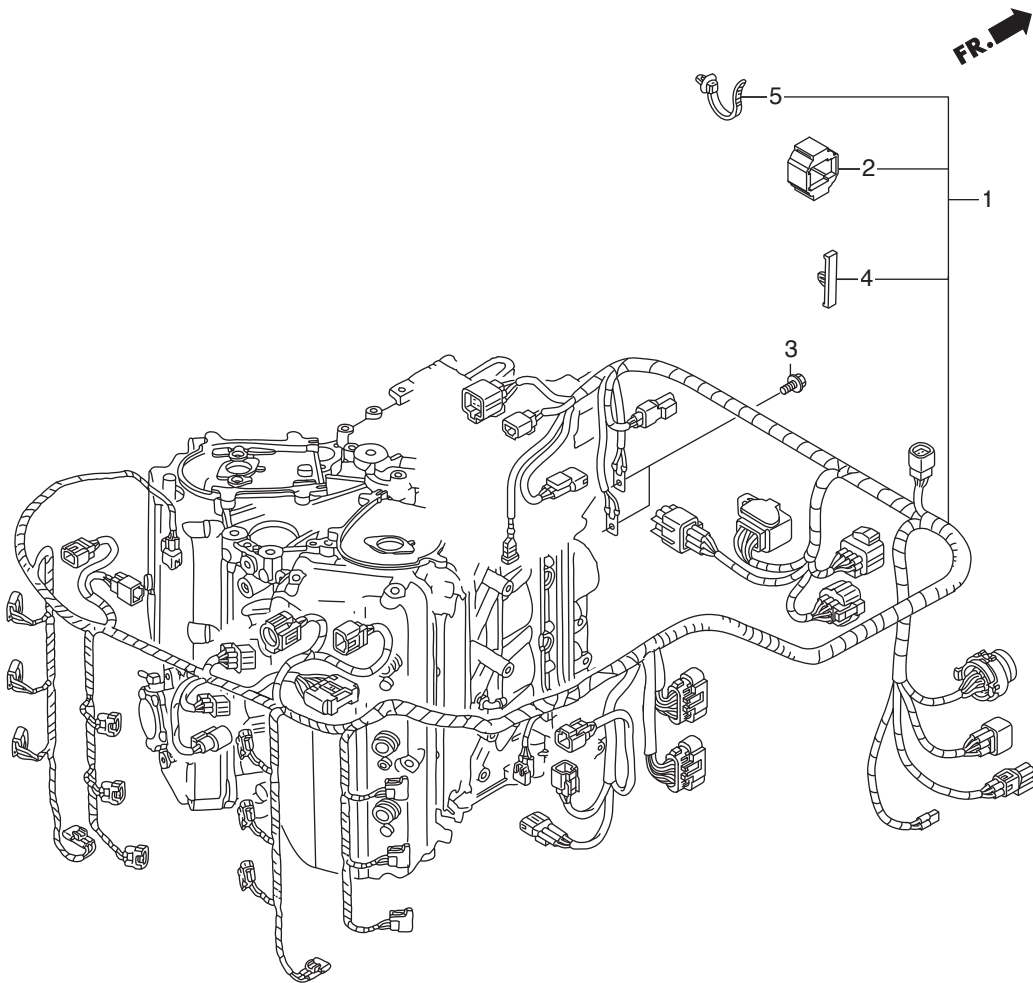


[illegible]

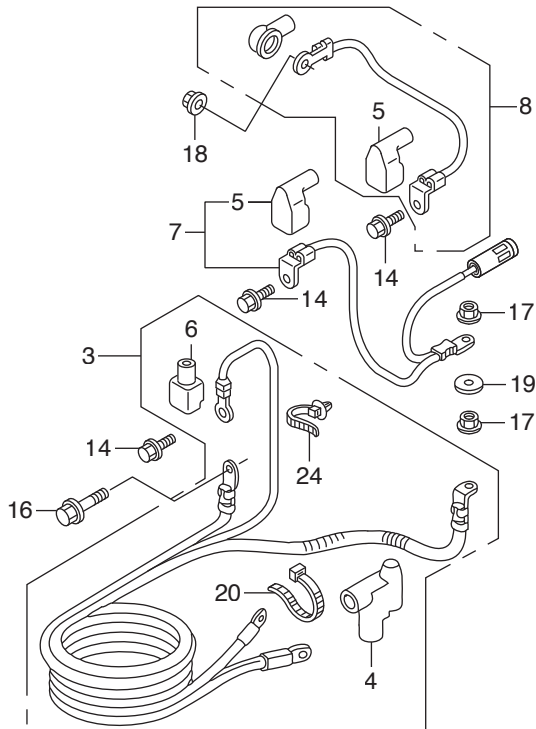
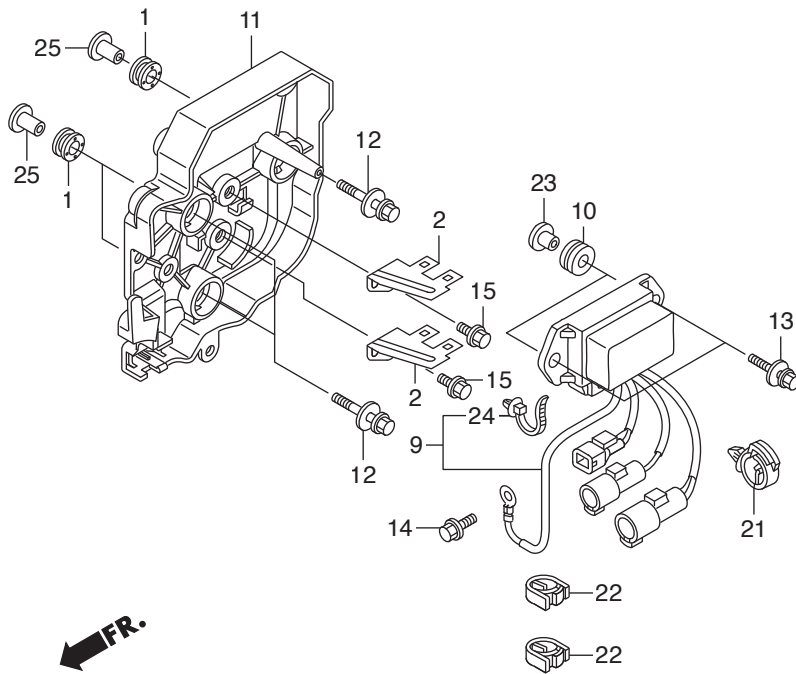


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-7-10	1	HZY9-30419-003	GROMMET, ELECTRONIC PARTS CASE	3	
F-7-10	2	HZY9-32103-000	BRACKET C, COUPLER	2	
F-7-10	3	HZX2-32410-000	CABLE ASSY., STARTER	1	
F-7-10	4	HZY3-32411-003	COVER, STARTER TERMINAL	1	
F-7-10	5	HZX2-32414-300	COVER B, TERMINAL(L)	2	
F-7-10	6	HZY6-32414-640	COVER B, TERMINAL	1	
F-7-10	7	HZX2-32415-000	CABLE ASSY., POWER TILT RELAY	1	
F-7-10	8	HZX2-32435-000	CORD, A.C. GENERATOR	1	
F-7-10	9	HZX2-38550-003	RELAY ASSY., POWER TILT	1	
F-7-10	10	HZW1-38551-000	GROMMET, RELAY	2	
F-7-10	11	HZX2-38552-000	CASE, POWER TILT RELAY	1	
F-7-10	12	HZW2-90003-000	BOLT-WASHER, 6X27(CT200)	3	
F-7-10	13	HZW1-90013-000	BOLT-WASHER, 6X25	2	
F-7-10	14	HZW9-90013-000	BOLT, FLANGE, 6X12	4	
F-7-10	15	HZW9-90014-000	BOLT, FLANGE, 6X10	2	
F-7-10	16	HZY3-90107-000	BOLT, FLANGE, 8X18	1	
F-7-10	17	HZW1-90203-000	NUT-WASHER, 8MM	2	
F-7-10	18	HZY3-90304-000	NUT-WASHER, 6MM	1	
F-7-10	19	HZY3-90405-000	WASHER, PLAIN, 8MM	1	
F-7-10	20	HSB2-90620-003	BAND, WIRE HARNESS	1	
F-7-10	21	H763-90681-A01	CLIP, WIRE HARNESS	1	
F-7-10	22	HZX2-90683-003	CLIP, WIRE HARNESS	2	
F-7-10	23	HZZ5-91501-000	COLLAR, MOUNTING(6MM)	2	
F-7-10	24	HS0A-91541-003	CLIP, HARNESS BAND(BLACK)	4	(145MM)
F-7-10	25	HZV5-91553-010	COLLAR, C.D.I. UNIT CASE	3	


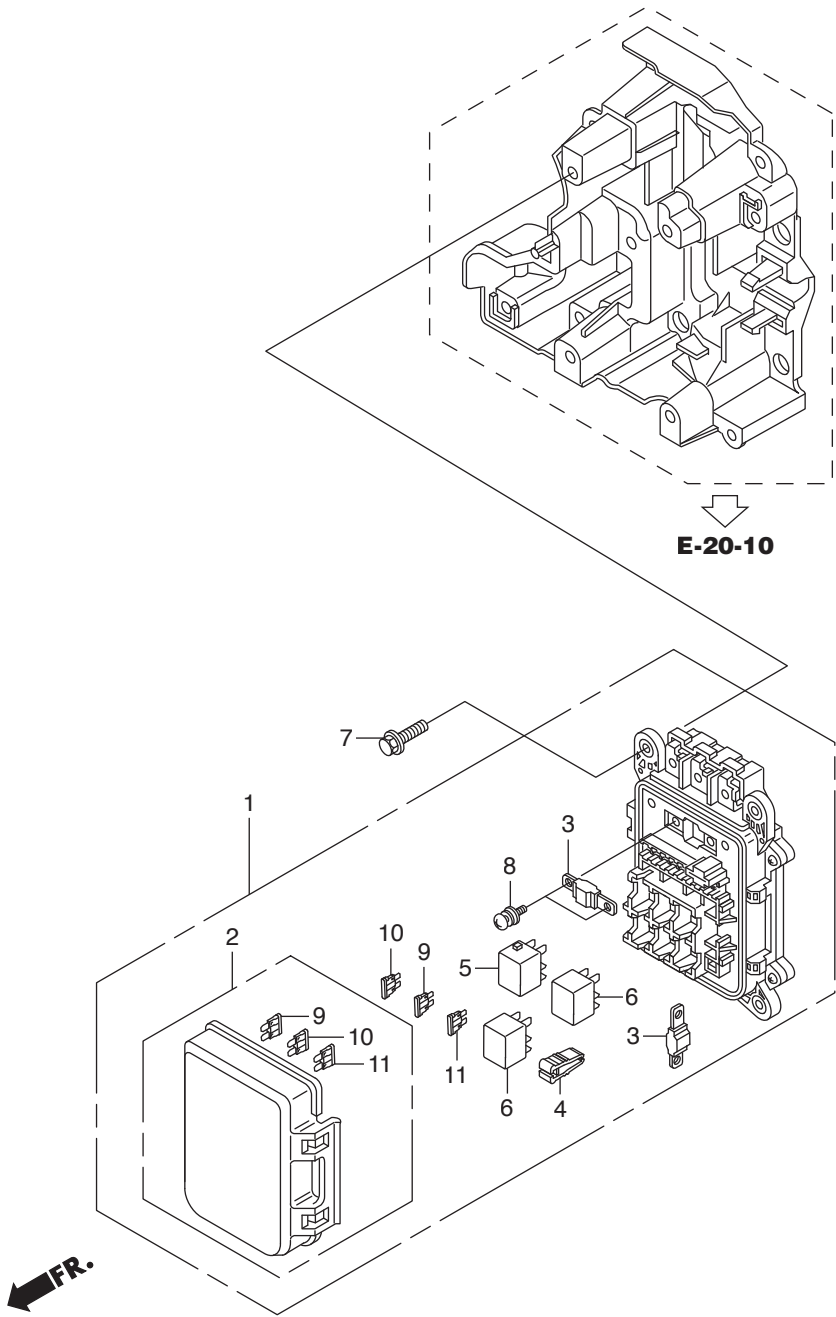


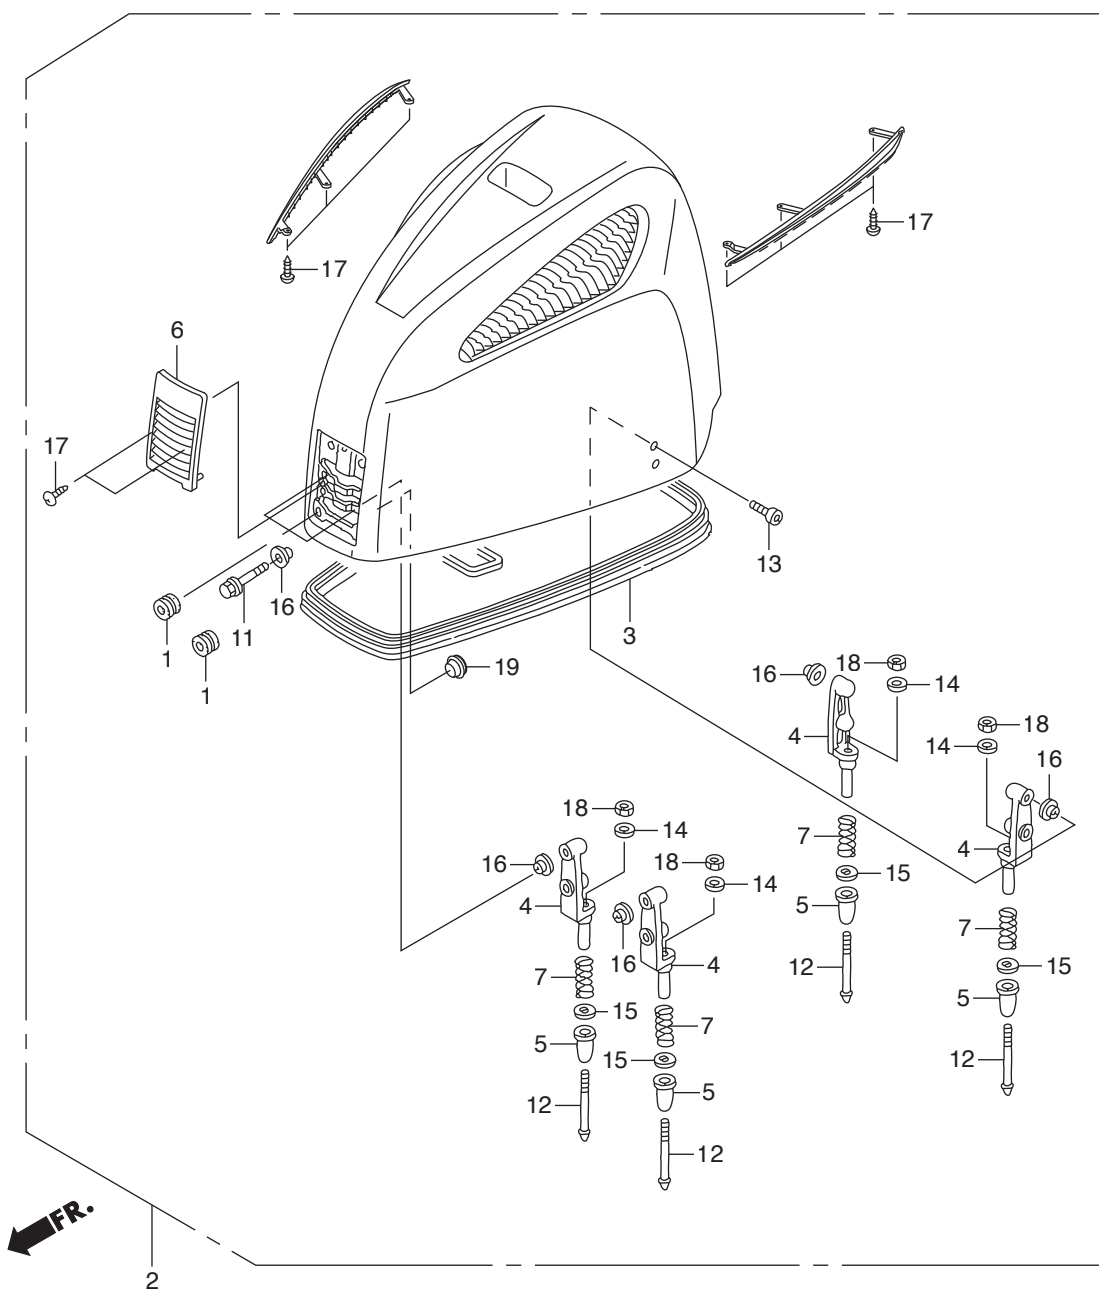


[illegible]

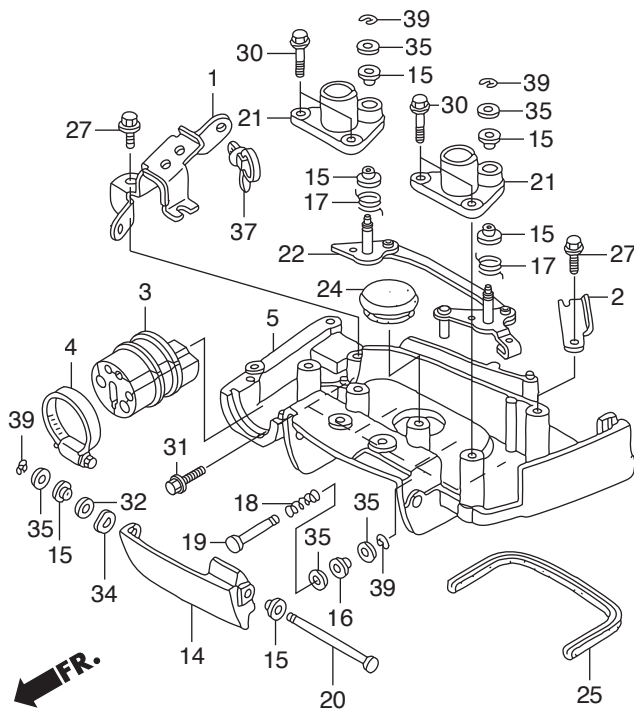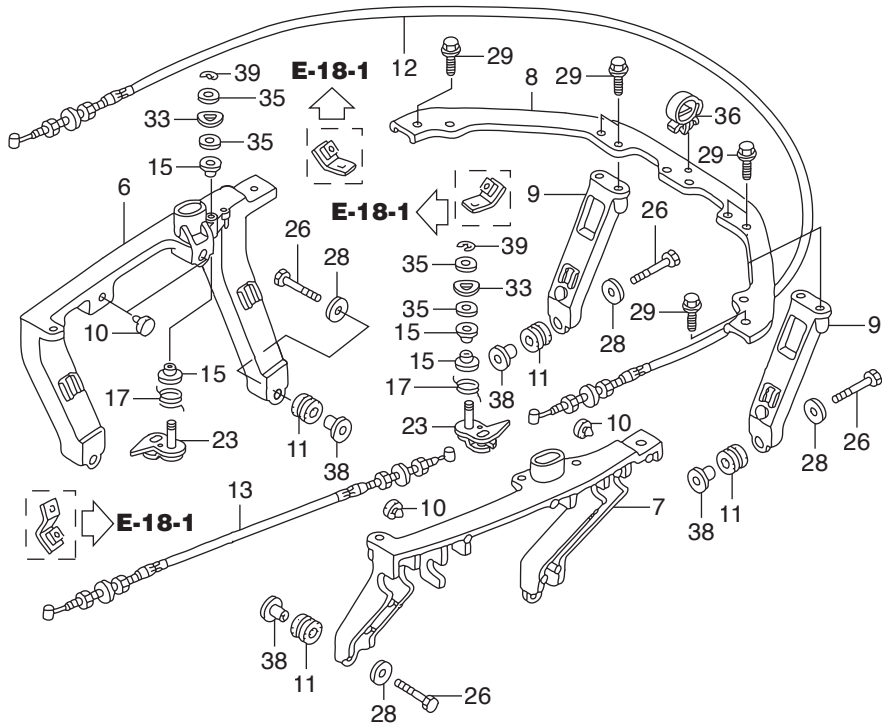


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-8-10	1	HZY3-32419-A00	BRACKET, CABLE	1	
F-8-10	2	HZY3-32421-000	PLATE, STARTER CABLE	1	
F-8-10	3	HZY3-40105-C01	GROMMET A, UNDER CASE	1	
F-8-10	4	HZY3-40119-003	BAND, UNDER CASE GROMMET	1	
F-8-10	5	HZY3-40154-000ZA	BRACKET, FR. COVER	1	*NH8* DARK GRAY
F-8-10	6	HZY3-40155-000	BRACKET, R. SIDE COVER	1	
F-8-10	7	HZY3-40157-000	BRACKET, L. SIDE COVER	1	
F-8-10	8	HZY3-40158-000	BRACKET A, RR. COVER	1	
F-8-10	9	HZY3-40159-000	BRACKET B, RR. COVER	2	
F-8-10	10	H196-47117-000	RUBBER, STOPPER	4	
F-8-10	11	H121-51640-730	RUBBER, FR. CARRIER CUSHION	6	
F-8-10	12	HZY3-60180-C01	CABLE COMP. A, COVER LOCK	1	
F-8-10	13	HZY3-60185-C01	CABLE COMP. B, COVER LOCK	1	
F-8-10	14	HZY3-63201-000ZC	LEVER, COVER LOCK	1	*T107* BAY BLUE
F-8-10	15	HZY3-63205-000	BUSH A, COVER LOCK	10	
F-8-10	16	HZY3-63208-000	BUSH B, COVER LOCK	1	
F-8-10	17	HZY3-63212-000	SPRING, COVER LOCK HOOK	4	
F-8-10	18	HZY3-63223-000	SPRING, LOCK LEVER RETURN	1	
F-8-10	19	HZY3-63224-000	SHAFT, COVER OPEN	1	
F-8-10	20	HZY3-63225-000	SHAFT, FR. LOCK	1	
F-8-10	21	HZY3-63226-000	HOLDER, STRIKER	2	
F-8-10	22	HZY3-63230-C00	LOCK ASSY., FR.	1	
F-8-10	23	HZX2-63260-C00	LOCK COMP., SIDE	2	
F-8-10	24	HZC0-63515-700	CAP, L. SIDE COVER	1	
F-8-10	25	HZY3-63729-003	SEAL D, UNDER COVER	1	
F-8-10	26	HZV5-90009-000	BOLT, HEX., 8X35	6	
F-8-10	27	HZY3-90021-000	BOLT, FLANGE, 6X14	2	
F-8-10	28	HML0-90101-720	WASHER, PLAIN, 8MM	6	
F-8-10	29	HZW9-90102-000	BOLT, FLANGE, 6X12	6	

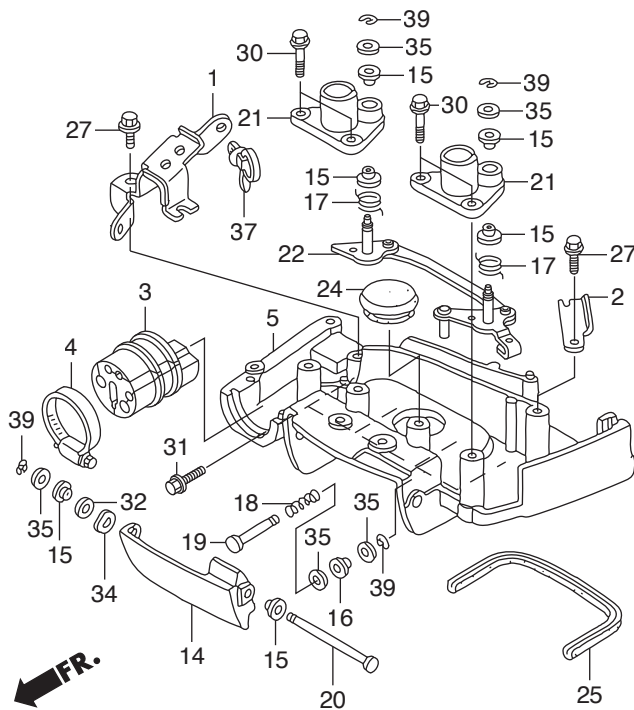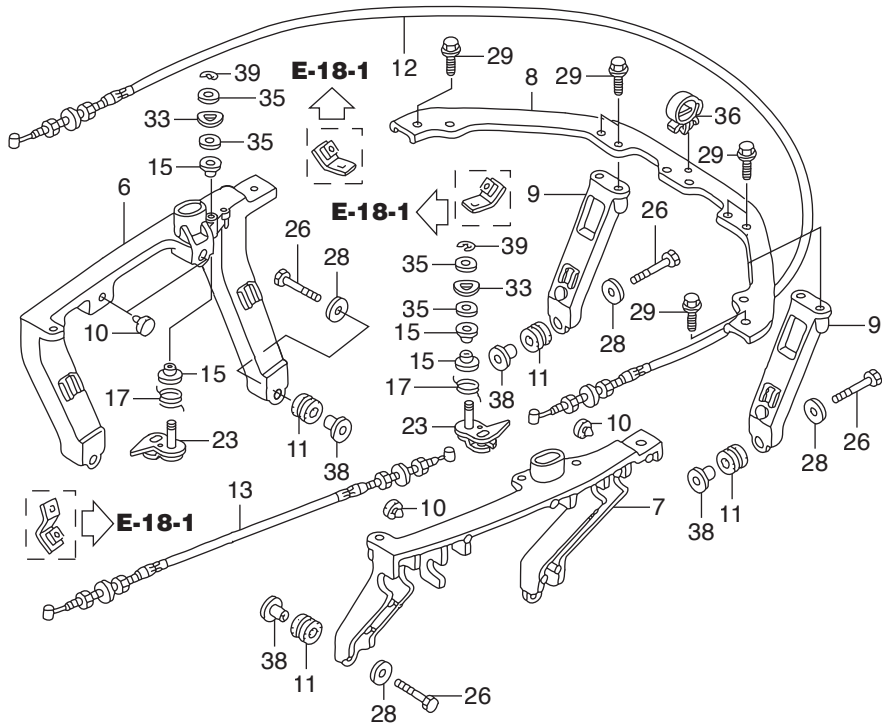


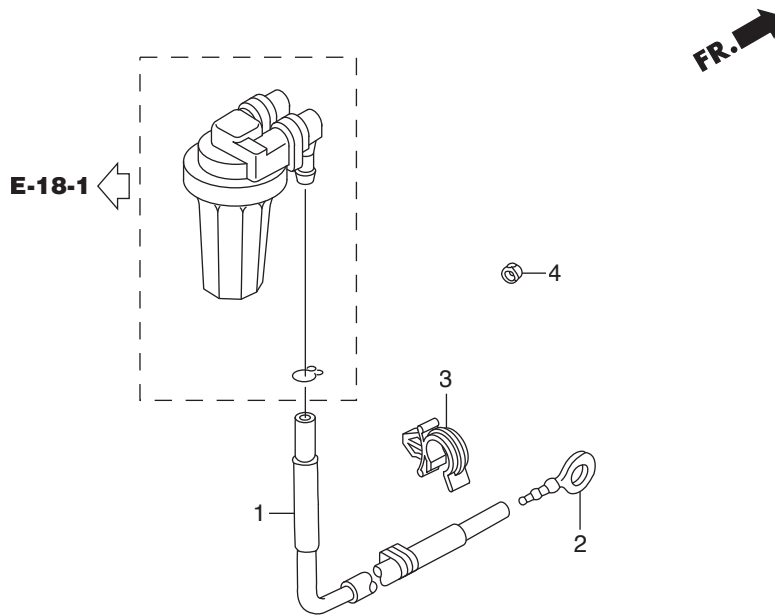


[illegible]

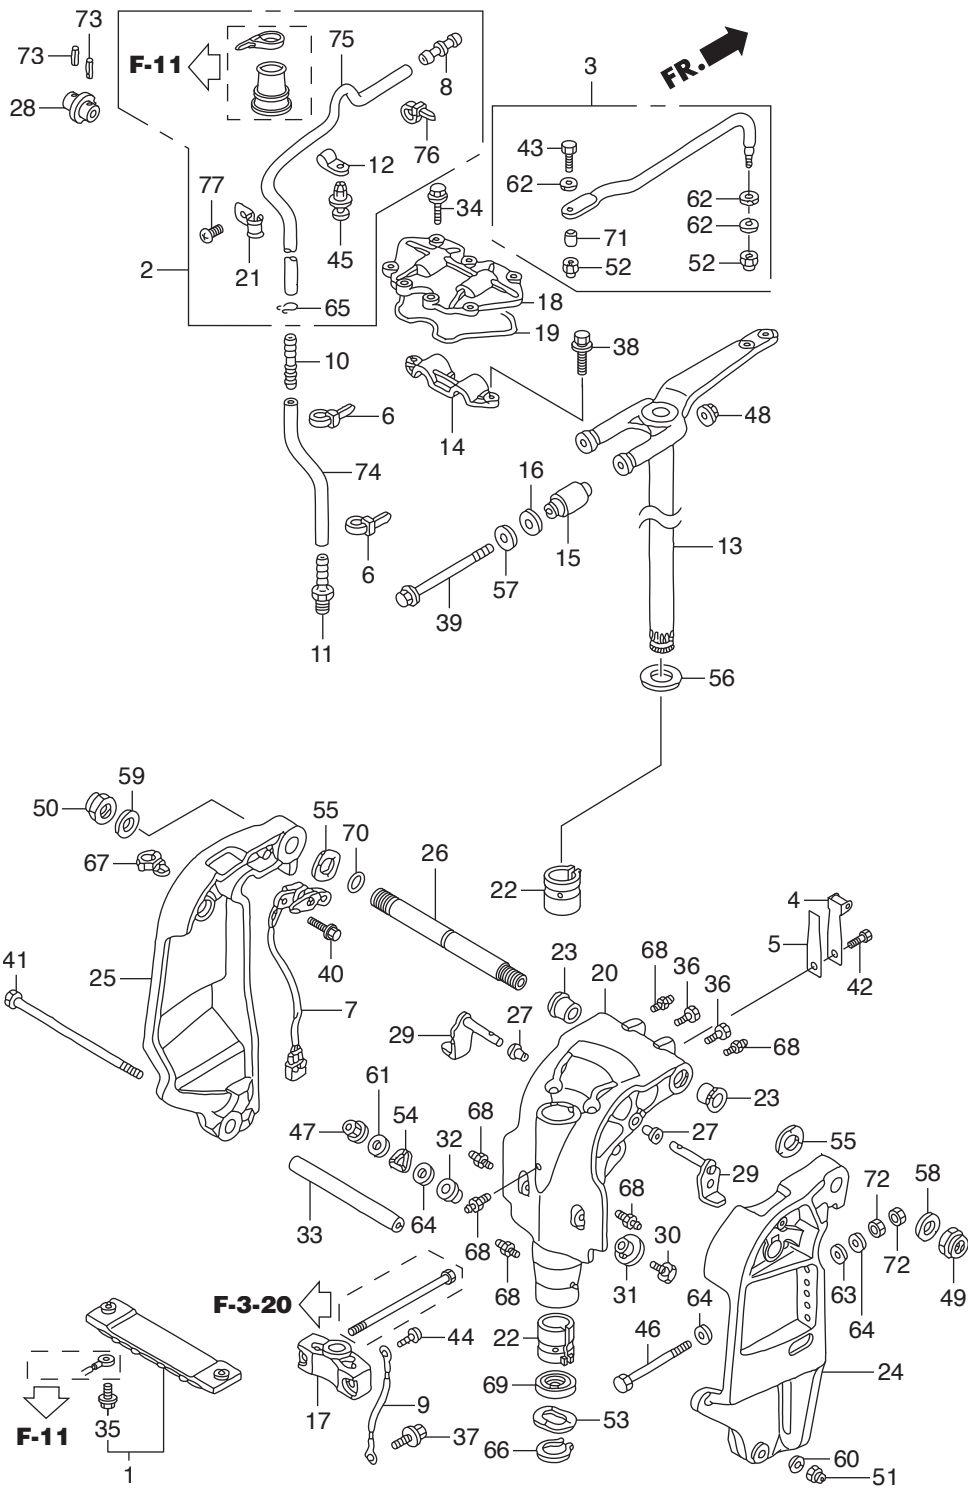


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-10	1	HZW1-06411-020	METAL KIT, ANODE	1	
F-10	2	HZY3-06412-000	TUBE KIT, SPEED SENSOR	1	
F-10	3	HZY3-06532-U00	ROD KIT, STEERING	1	
F-10	4	HZV1-24210-010	SPRING COMP., CLICK	1	
F-10	5	HZV4-24221-010	SPRING, CLICK ASSIST	1	
F-10	6	HKM3-32161-003	BAND, WIRE	2	
F-10	7	HZY3-35660-003	SENSOR ASSY., TRIM ANGLE	1	
F-10	8	H663-38562-920	JOINT B, WASHER TUBE(MITSUBA)	1	
F-10	9	HZY3-40219-013	WIRE, LEAD(1.5X116MM)	1	
F-10	10	HZV5-41171-000	END, NIPPLE	1	
F-10	11	HZV5-41172-000	NIPPLE, SENSOR	1	
F-10	12	HZY3-41179-A00	CLAMPER, SENSOR TUBE	2	
F-10	13	HZY3-50100-A01	FRAME COMP., MOUNTING(L)	1	LA
F-10		HZY3-50100-A11	FRAME COMP., MOUNTING(XL)	1	XA,XCA
F-10	14	HZY3-50109-000	HOUSING, UPPER MOUNTING	1	
F-10	15	HZY3-50151-000	MOUNT COMP., UPPER RUBBER	2	
F-10	16	HZY3-50153-000	RUBBER, UPPER MOUNT STOPPER	2	
F-10	17	HZY3-50161-000ZD	HOUSING, LOWER CENTER MOUNTING	1	*T107* BAY BLUE LA
F-10		HZY3-50161-610	HOUSING, LOWER CENTER MOUNTING	1	(XL) XA,XCA
F-10	18	HZY3-50166-000	COVER, UPPER MOUNT	1	
F-10	19	HZY3-50168-000	SEAL, UPPER MOUNT COVER	1	
F-10	20	HZY3-50201-C01ZD	CASE, SWIVEL	1	*T107* BAY BLUE LA
F-10		HZY3-50201-C11ZC	CASE, SWIVEL	1	*T107* BAY BLUE XA,XCA
F-10	21	HZY3-50209-A00	CLAMP, TUBE	2	
F-10	22	HZY3-50211-000	LINER, SWIVEL CASE	2	
F-10	23	HZY3-50214-000	BUSH, SWIVEL CASE	2	
F-10	24	HZY3-50301-030ZC	BRACKET, R. STERN	1	*T107* BAY BLUE
F-10	25	HZY3-50311-020ZC	BRACKET, L. STERN	1	*T107* BAY BLUE
F-10	26	HZY3-50381-000	SHAFT, TILTING	1	

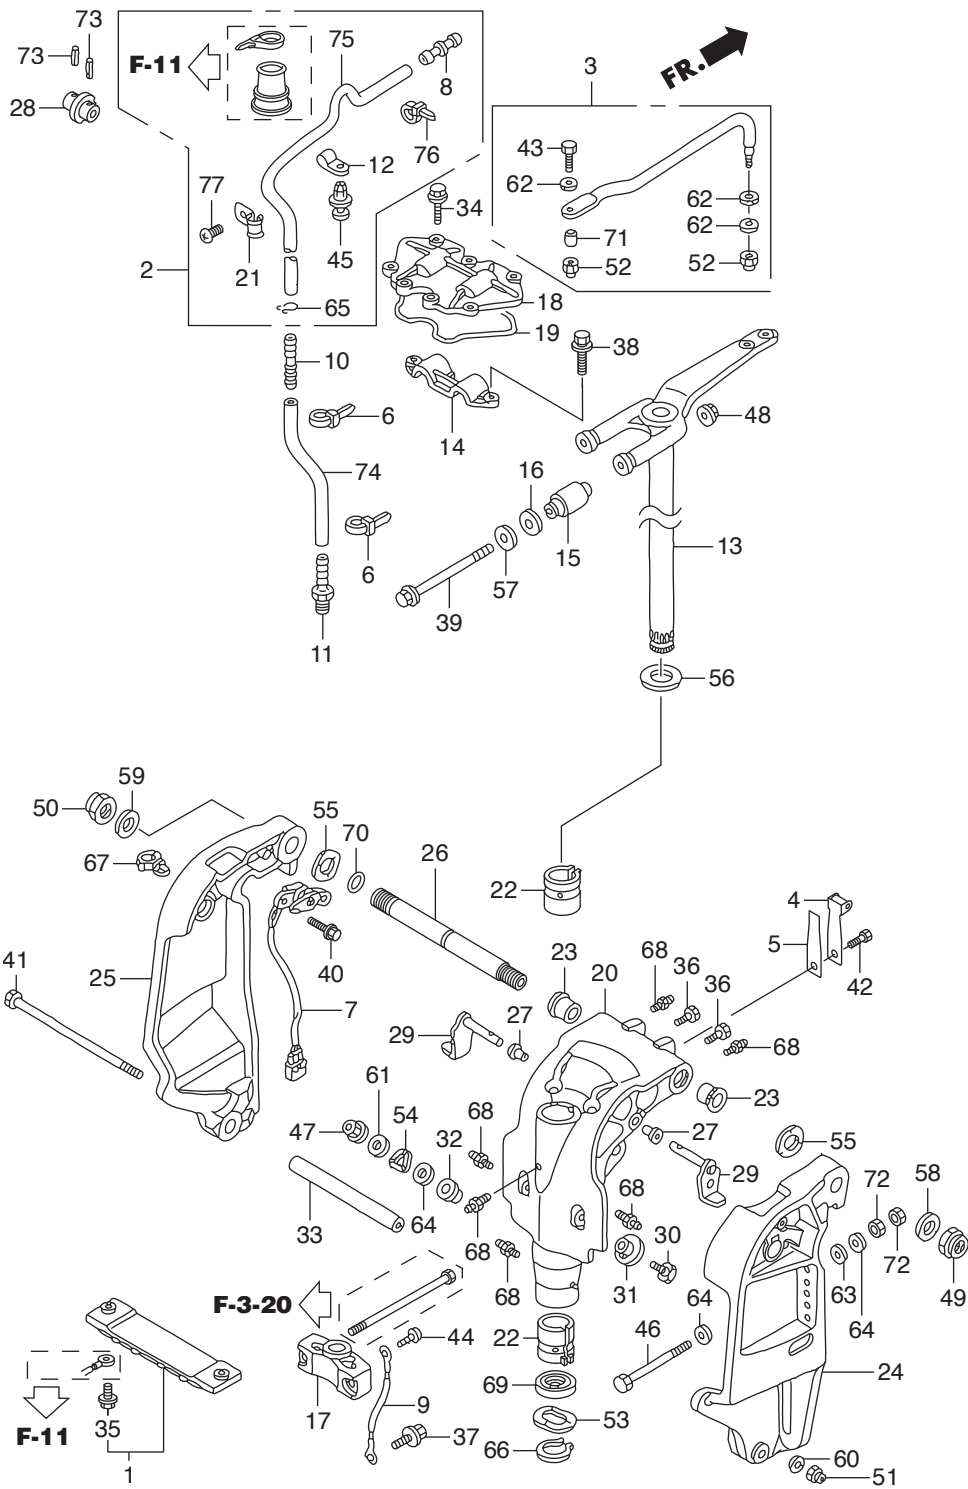


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-10	27	HZY3-50522-000	BUSH, TILT ARM	2	
F-10	28	HZY3-50527-000	BRACKET, TILTING	1	
F-10	29	HZY3-50529-000	STOPPER, TILT	2	
F-10	30	HZY3-56516-A00	RECEIVER, THRUST	2	
F-10	31	HZY3-56518-A00	BUSH A, THRUST RECEIVE	2	
F-10	32	HZY3-56519-A00	BUSH B, THRUST RECEIVE	2	
F-10	33	HZW1-56539-000	COLLAR, LOWER CYLINDER	1	
F-10	34	HZW9-90005-000	BOLT, FLANGE, 6X20	7	
F-10	35	HZW9-90009-000	BOLT, FLANGE, 6X23	2	
F-10	36	HZW1-90102-000	BOLT, 1/4-28UNF	2	
F-10	37	HZW9-90103-010	BOLT, FLANGE, 6X12	1	
F-10	38	HZY6-90103-000	BOLT-WASHER, 10X32	3	
F-10	39	HZY3-90104-010	BOLT, HEX., 12X200	2	
F-10	40	HZW9-90105-000	BOLT, FLANGE, 6X20	2	
F-10	41	HZW1-90108-000	BOLT, HEX., 10X235	1	
F-10	42	H881-90110-000	BOLT, HEX., 6X14	1	
F-10	43	HZY3-90117-000	BOLT, 3/8-24UNF	1	
F-10	44	HZV5-90119-000	SCREW, PAN, 6X8	1	
F-10	45	HZV5-90127-003	SCREW, RIVET, 5X10	2	
F-10	46	HZX2-90129-000	BOLT, HEX., 12X130	6	
F-10	47	HZY1-90205-000	NUT, SELF-LOCK, 6MM	2	
F-10	48	HZW5-90302-003	NUT, FLANGE, 12MM	2	
F-10	49	HZV5-90304-013	NUT, SELF-LOCK(7/8-14UNF)	1	
F-10	50	HZW1-90304-013	NUT, SELF-LOCK(25X2.0)	1	
F-10	51	HZW4-90306-003	NUT, FLANGE, 10MM	1	
F-10	52	HZV5-90307-003	NUT, SELF-LOCK(3/8-24UNF)	2	
F-10	53	HZV5-90501-000	WASHER, WAVE, 40MM	1	
F-10	54	HZY3-90501-A00	WASHER, WAVE, 12MM	2	
F-10	55	HZV5-90502-000	WASHER, WAVE, 26MM	2	

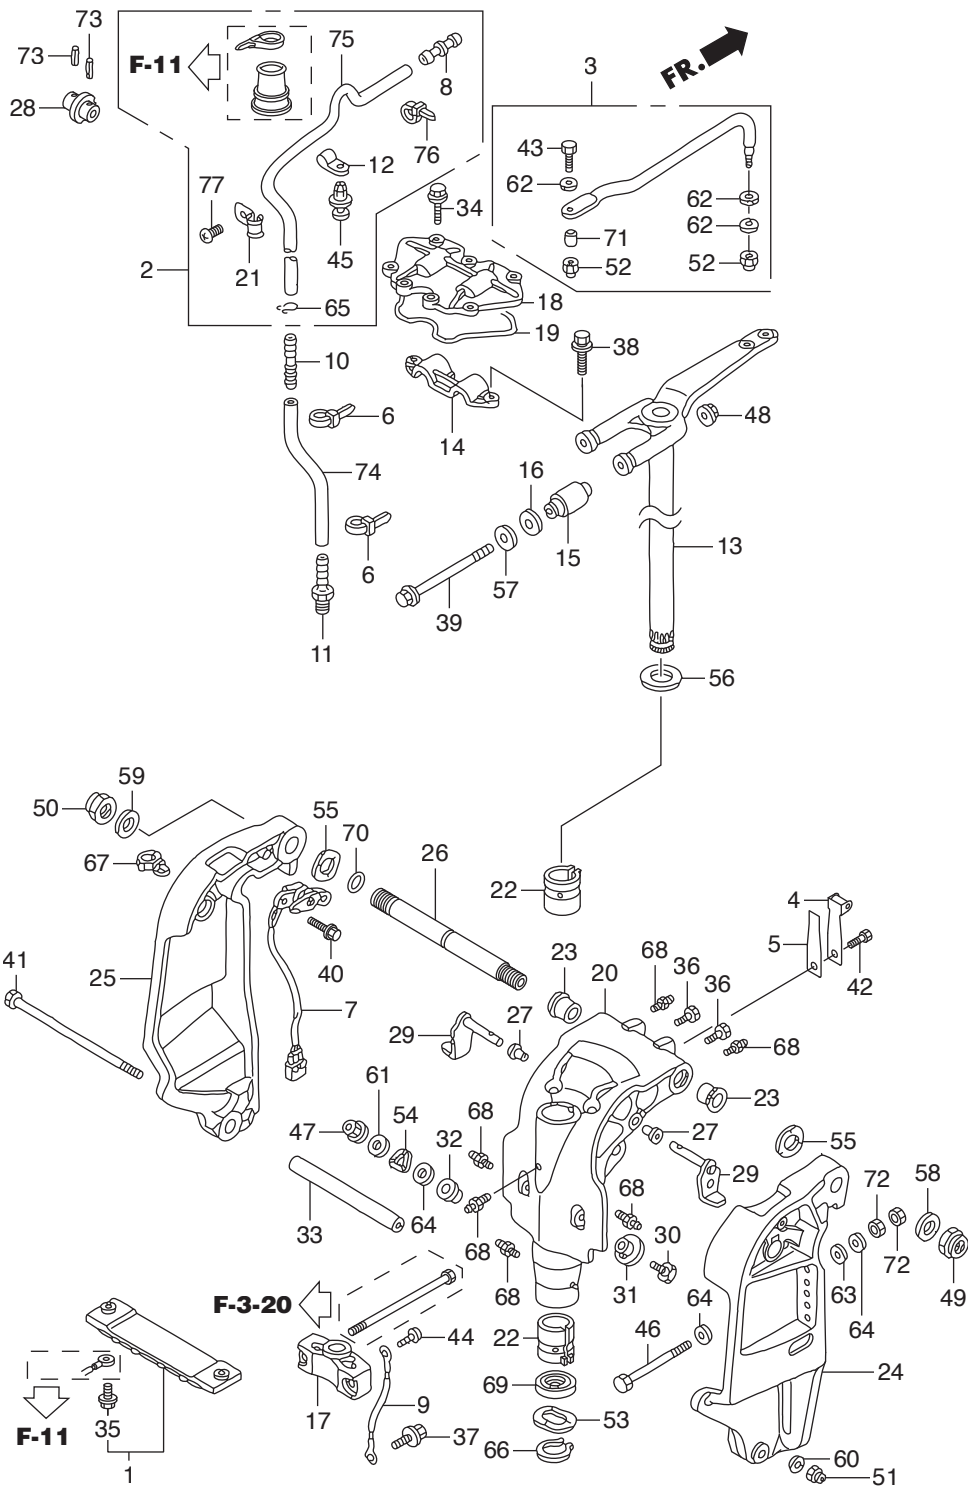



Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-10	56	HZV5-90504-000	WASHER, THRUST, 34MM	1	
F-10	57	HZY3-90504-A00	WASHER, UPPER MOUNTING STOPPER	2	
F-10	58	HZY3-90509-000	WASHER, 7/8INCH	1	
F-10	59	HZY3-90510-000	WASHER, 25MM	1	
F-10	60	H921-90511-000	WASHER, PLAIN, 10MM	1	
F-10	61	HZV4-90512-000	WASHER, PLAIN, 6MM	2	
F-10	62	HZV4-90514-000	WASHER, 10MM	3	
F-10	63	HZV5-90552-000	WASHER, PLAIN, 12MM	6	
F-10	64	HZV5-90559-000	WASHER, PLAIN, 12MM	14	
F-10	65	H921-90602-000	CLIP, TUBE(B8)	1	
F-10	66	HZV5-90651-000	CIRCLIP, EXTERNAL, 39MM	1	
F-10	67	H763-90681-A01	CLIP, WIRE HARNESS	1	
F-10	68	HZV7-90951-010	NIPPLE, GREASE	6	
F-10	69	HZV5-91256-003	OIL SEAL, 39.5X52X6(ARA1)	1	
F-10	70	HZV5-91352-000	O-RING, 15.54X2.26	1	
F-10	71	HZY3-91560-000	COLLAR, STEERING ROD	1	
F-10	72	HCO-94001-12490-0S	NUT, HEX., 12MM	12	
F-10	73	HCO-94305-30203	PIN, SPRING, 3X20	2	
F-10	74	HCO-95005-50200-30	TUBE, 5X200	1	(HC-95005-50001-30M)
F-10	75	HCO-95005-50950-30	TUBE, 5X950	1	(HC-95005-50001-30M)
F-10	76	HKM3-32161-003	BAND, WIRE	1	
F-10	77	HZV5-90119-000	SCREW, PAN, 6X8	2	

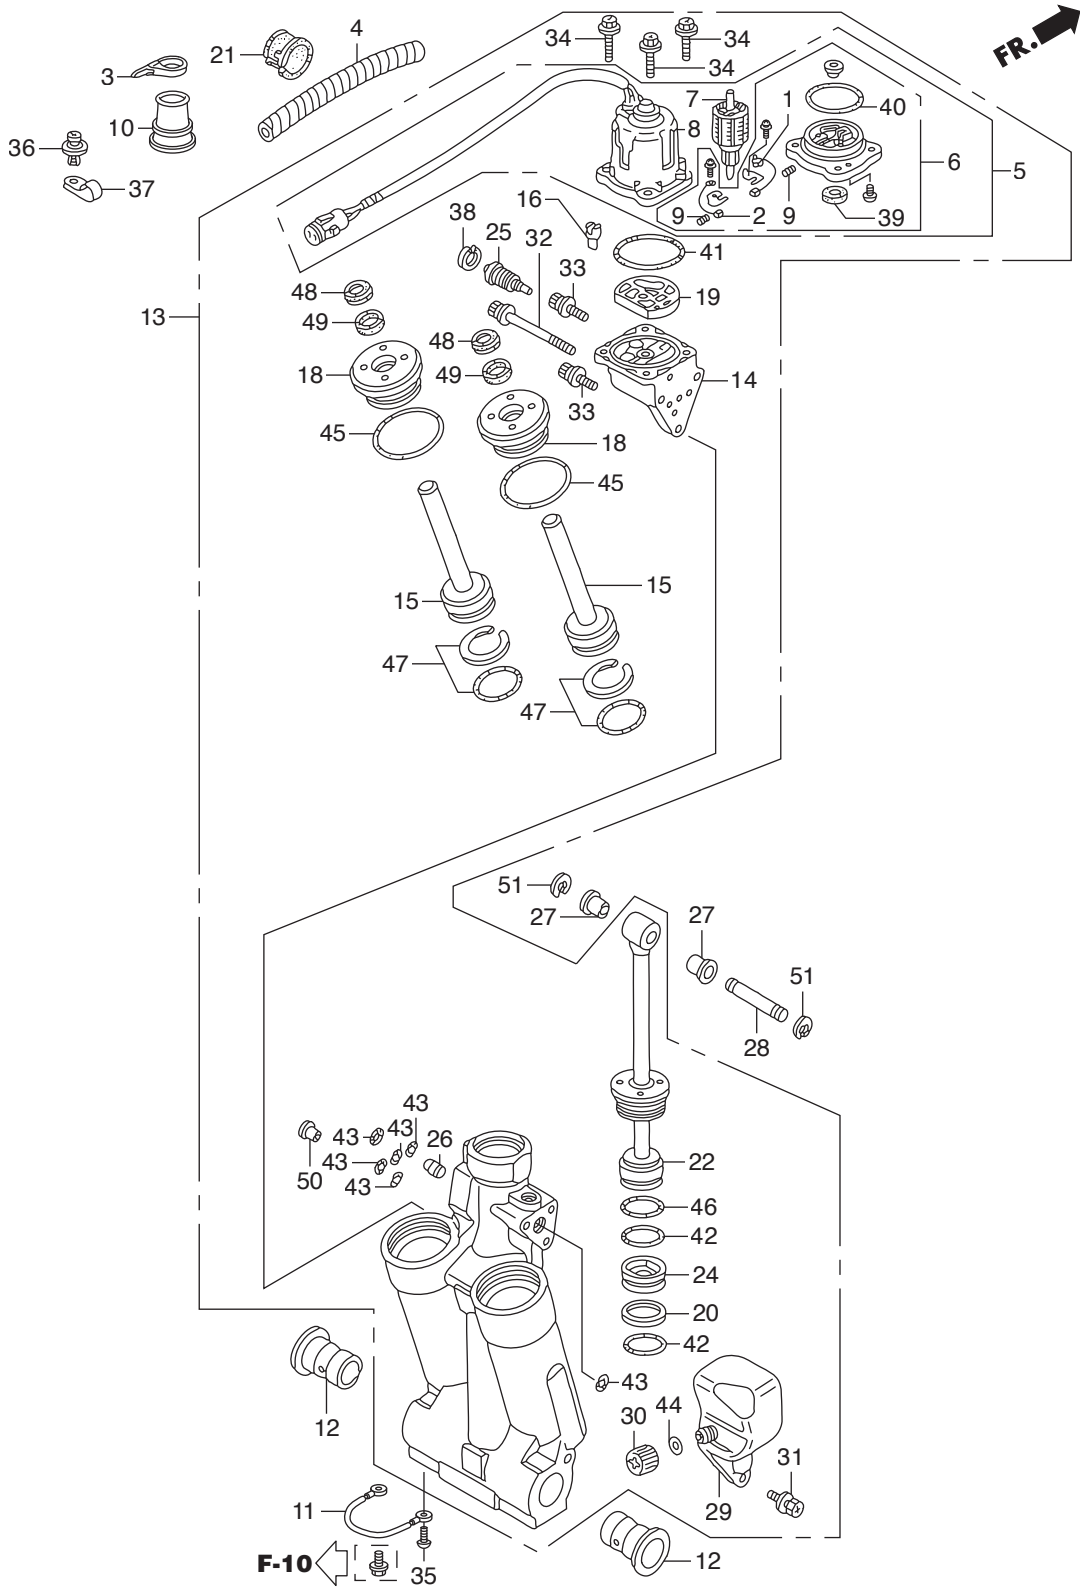


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
F-11	1	HZY3-30280-003	BREAKER ASSY.	1	
F-11	2	HZY3-31106-003	BRUSH ASSY.	1	
F-11	3	HMG9-35701-950	BAND(BLACK 3.5X140)	1	
F-11	4	HZW1-36104-003	TUBE, SPIRAL(12X14.6)	1	
F-11	5	HZX2-36120-003	MOTOR ASSY., POWER TILT	1	
F-11	6	HZY3-36122-013	BRACKET ASSY.	1	
F-11	7	HZY3-36123-013	ARMATURE COMP.	1	
F-11	8	HZX2-36129-003	YOKE ASSY.	1	
F-11	9	HZV5-36136-821	SPRING, MOTOR	2	
F-11	10	HZW1-40107-700	GROMMET, UNDER CASE(C)	2	
F-11	11	HZY3-40219-013	WIRE, LEAD(1.5X116MM)	1	
F-11	12	HZV5-50214-003	BUSH, SWIVEL CASE	2	
F-11	13	HZX2-56000-013	TRIM-TILT ASSY., POWER	1	
F-11	14	HZY3-56100-013	PUMP ASSY.	1	
F-11	15	HZW1-56110-701	ROD COMP., PISTON(B)	2	
F-11	16	HZW1-56113-701	JOINT, DRIVE	1	
F-11	18	HZY9-56115-003	GUIDE COMP., ROD	2	
F-11	19	HZW1-56116-701	FILTER B	1	
F-11	20	HZV5-56117-821	RING, BACK UP	1	
F-11	21	HZV5-56118-820	BUSH, MOTOR CODE	1	
F-11	22	HZY3-56120-013	ROD COMP., PISTON	1	
F-11	24	HZW1-56130-702	PISTON COMP., FREE	1	
F-11	25	HZY3-56170-013	VALVE COMP., MANUAL	1	
F-11	26	HZW1-56180-701	VALVE COMP., RESERVOIR	1	
F-11	27	HZV5-56513-000	BUSH, LOWER CYLINDER	2	
F-11	28	HZY3-56532-000	PIN, UPPER CYLINDER	1	
F-11	29	HZW1-56851-703	TANK, OIL	1	
F-11	30	HZW1-56860-701	CAP COMP., OIL TANK	1	
F-11	31	HZW1-90113-702	BOLT, RECESSED	3	

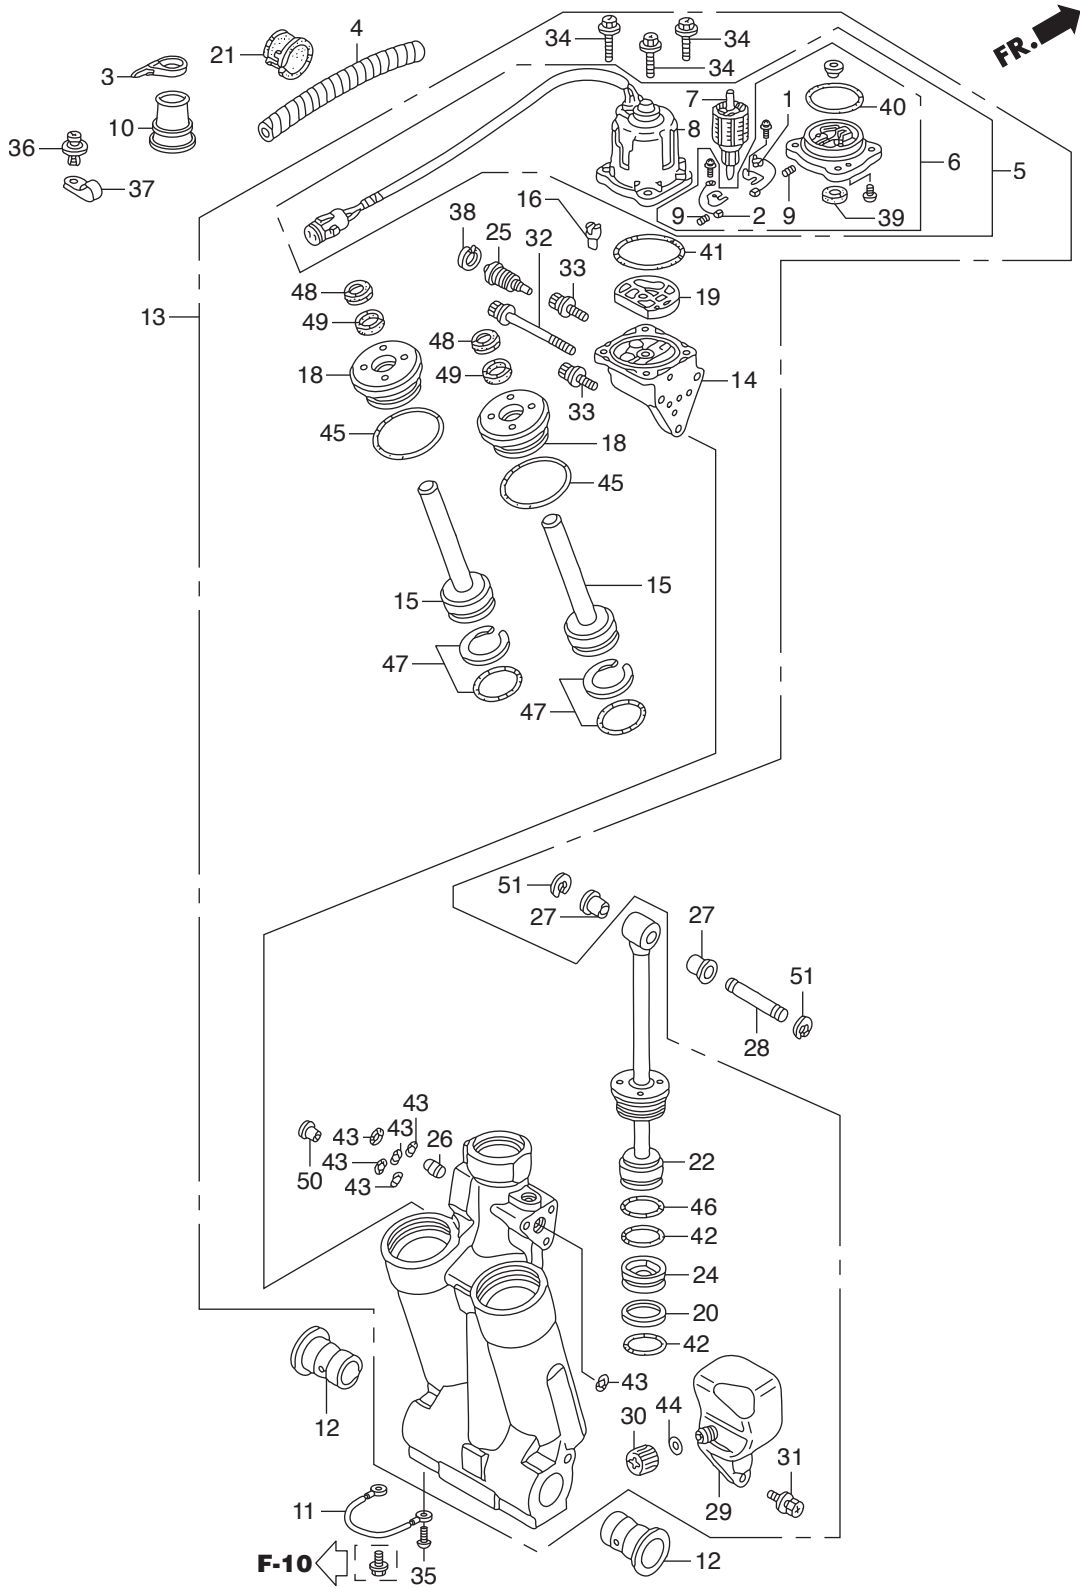


[illegible]

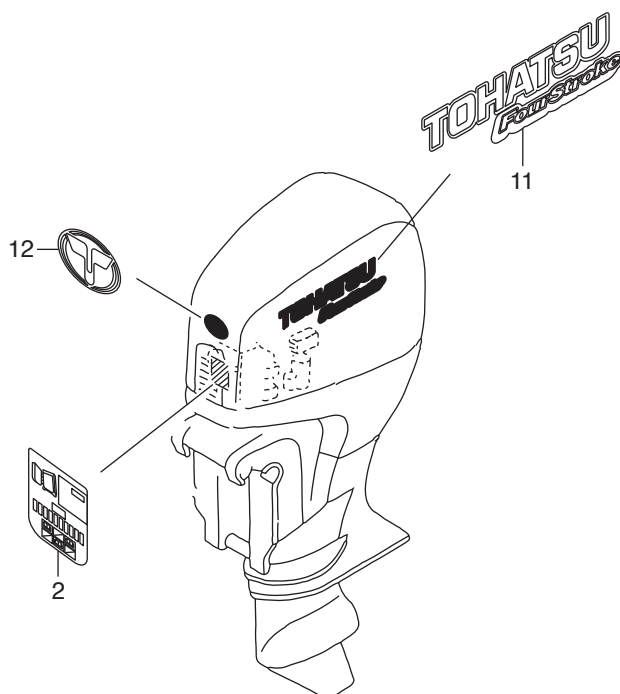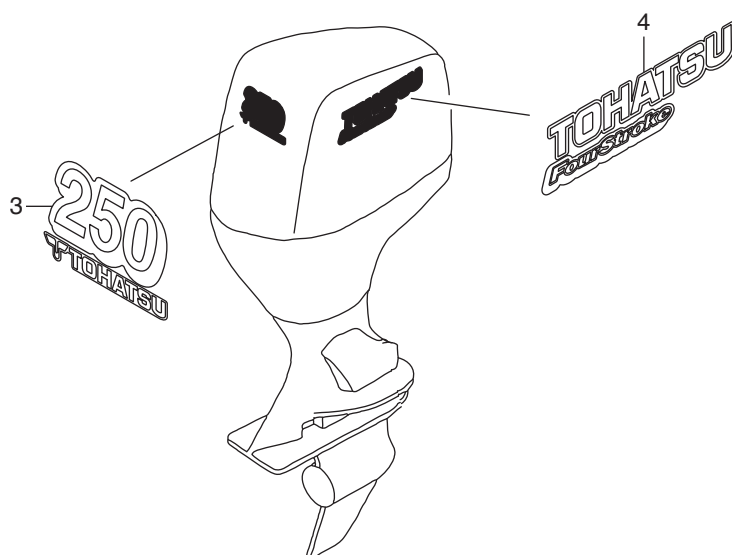


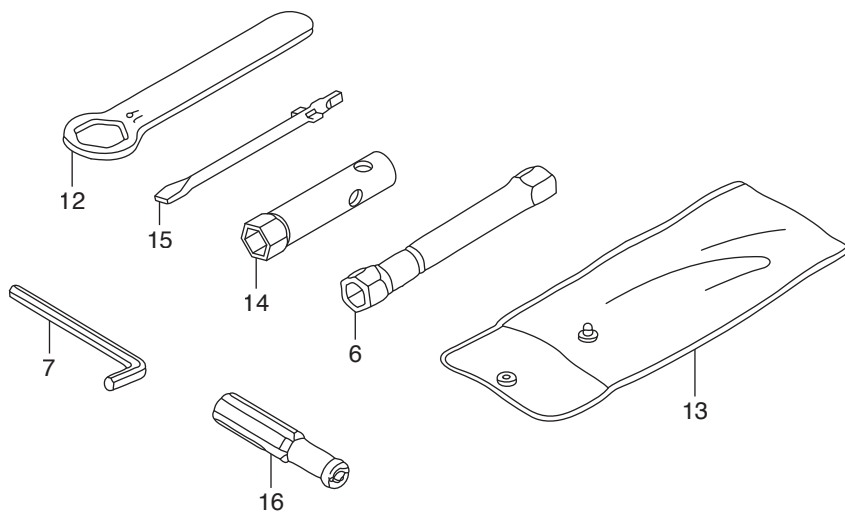


[illegible]

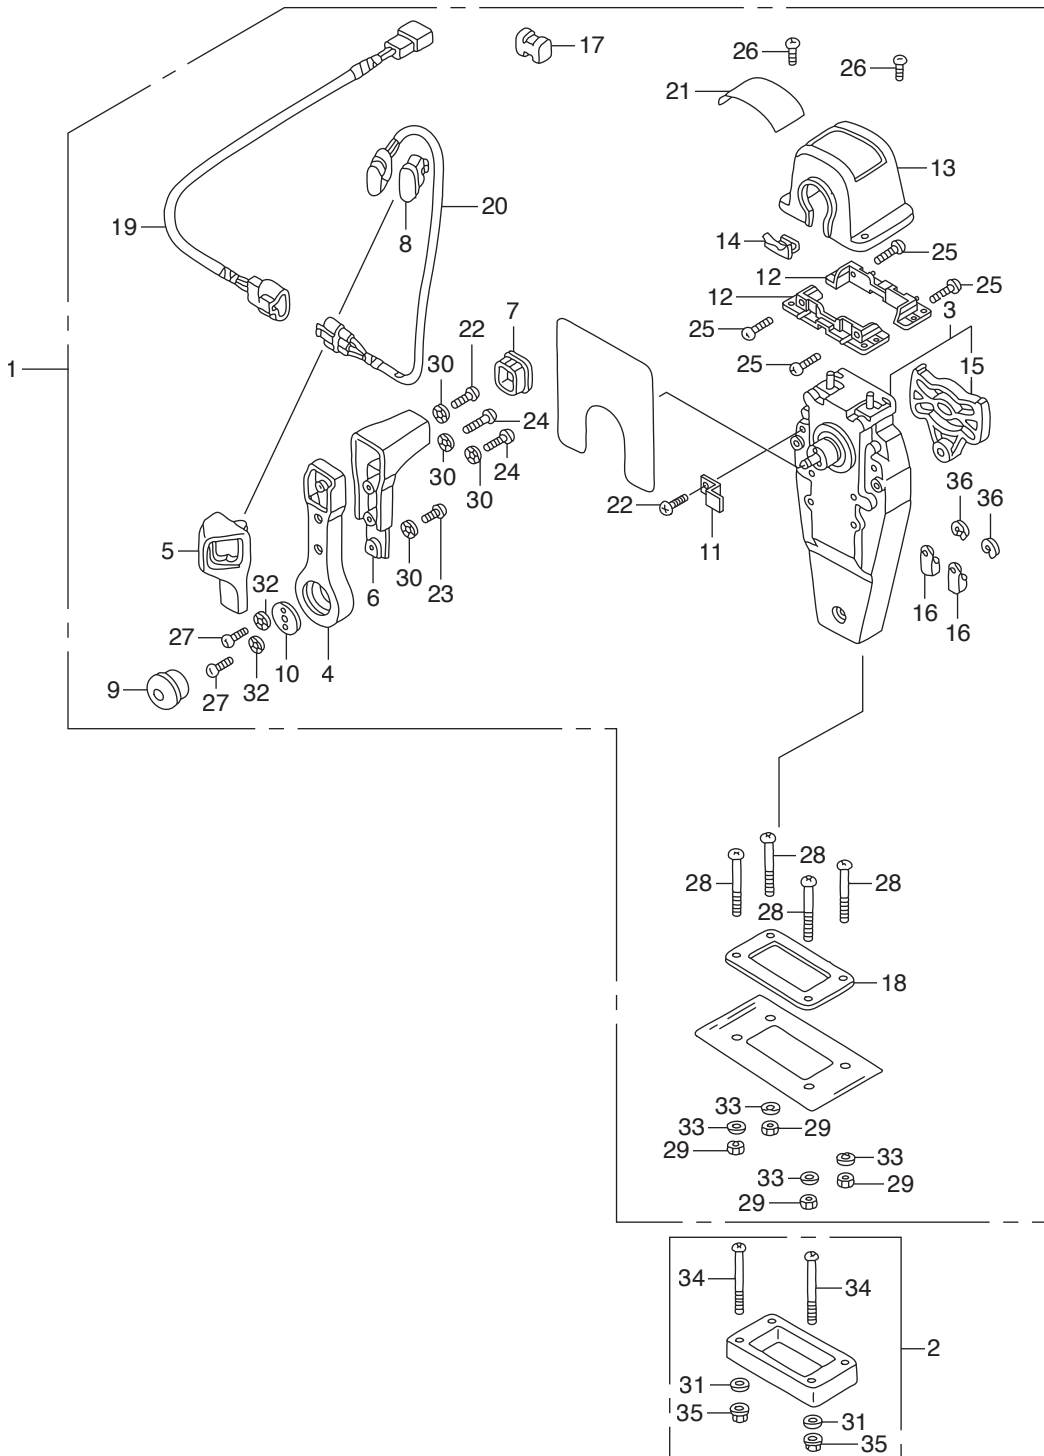


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
FOP-1	1	HZZ3-06240-R30	BOX KIT, REMOTE CONTROL	1	(TOP MOUNT SINGLE)(R.)
FOP-1	2	HZW5-06241-U00	SPACER KIT, REMOTE CONTROL BOX	1	(TOP MOUNT SINGLE)
FOP-1	3	HZW5-24810-U01	HOUSING ASSY., L. INNER	1	(TOP MOUNT)
FOP-1	4	HZW5-24811-U01	HANDLE, REMOTE CONTROL	1	
FOP-1	5	HZW5-24812-U01	COVER, L. GRIP	1	
FOP-1	6	HZW5-24813-U01	GRIP, REMOTE CONTROL HANDLE	1	
FOP-1	7	HZW5-24814-U01	CAP, GRIP	1	
FOP-1	8	HZW5-24815-U01	CAP, SWITCH	1	
FOP-1	9	HZW5-24816-U01	BUTTON, THROTTLE	1	
FOP-1	10	HZW5-24817-U01	PLATE, HANDLE	1	
FOP-1	11	HZW5-24818-U01	PLATE, CABLE CLAMP	1	
FOP-1	12	HZW5-24819-U01	BRACKET, REMOTE CONTROL	2	HOUSING
FOP-1	13	HZZ3-24820-R11	HOUSING COMP., REMOTE CONTROL	1	BOX
FOP-1	14	HZW5-24825-U01	HOUSING, LEAD	1	
FOP-1	15	HZW5-24826-U01	PLATE, DWELL	1	
FOP-1	16	HZW5-24831-U01	TERMINAL, CABLE	2	
FOP-1	17	HZW5-24832-U01	SPACER, CABLE CLAMP	1	
FOP-1	18	HZW5-24834-U01	PACKING, SINGLE	1	
FOP-1	19	HZW7-32530-U00	SUB HARNESS ASSY., POWER	1	TRIM-TILT(A)
FOP-1	20	HZW5-35370-U02	SWITCH ASSY., POWER TRIM-TILT	1	(A)
FOP-1	21	HZZ3-87703-R81	MARK, REMOTE CONTROL(SINGLE)	1	
FOP-1	22	HZW5-90101-U00	SCREW, PAN, 5X16	2	
FOP-1	23	HZW5-90102-U00	SCREW, PAN, 5X10	1	
FOP-1	24	HZW5-90103-U01	SCREW, PAN, 5X20	2	
FOP-1	25	HZW5-90104-U00	SCREW, PAN, 5X18	4	
FOP-1	26	HZW5-90105-U01	SCREW, PAN, 4X10	2	
FOP-1	27	HZW5-90106-U00	SCREW, PAN, 6X18	2	
FOP-1	28	HZW5-90107-U00	SCREW, PAN, 5X40	4	
FOP-1	29	HZW5-90301-U00	NUT, HEX., 5MM	4	

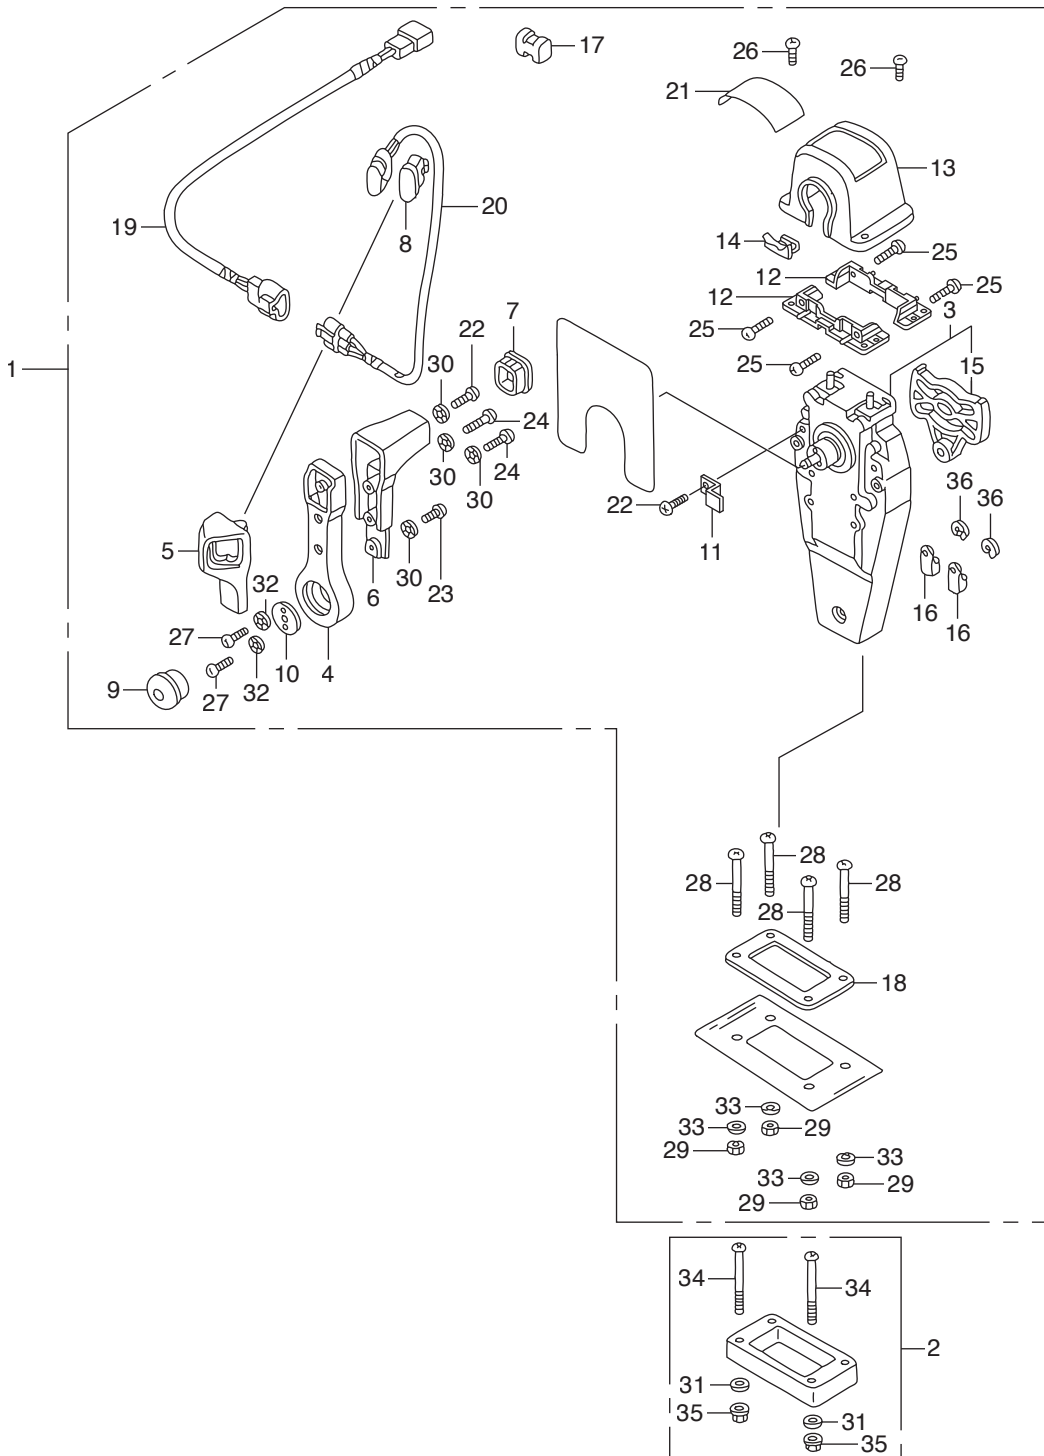


[illegible]

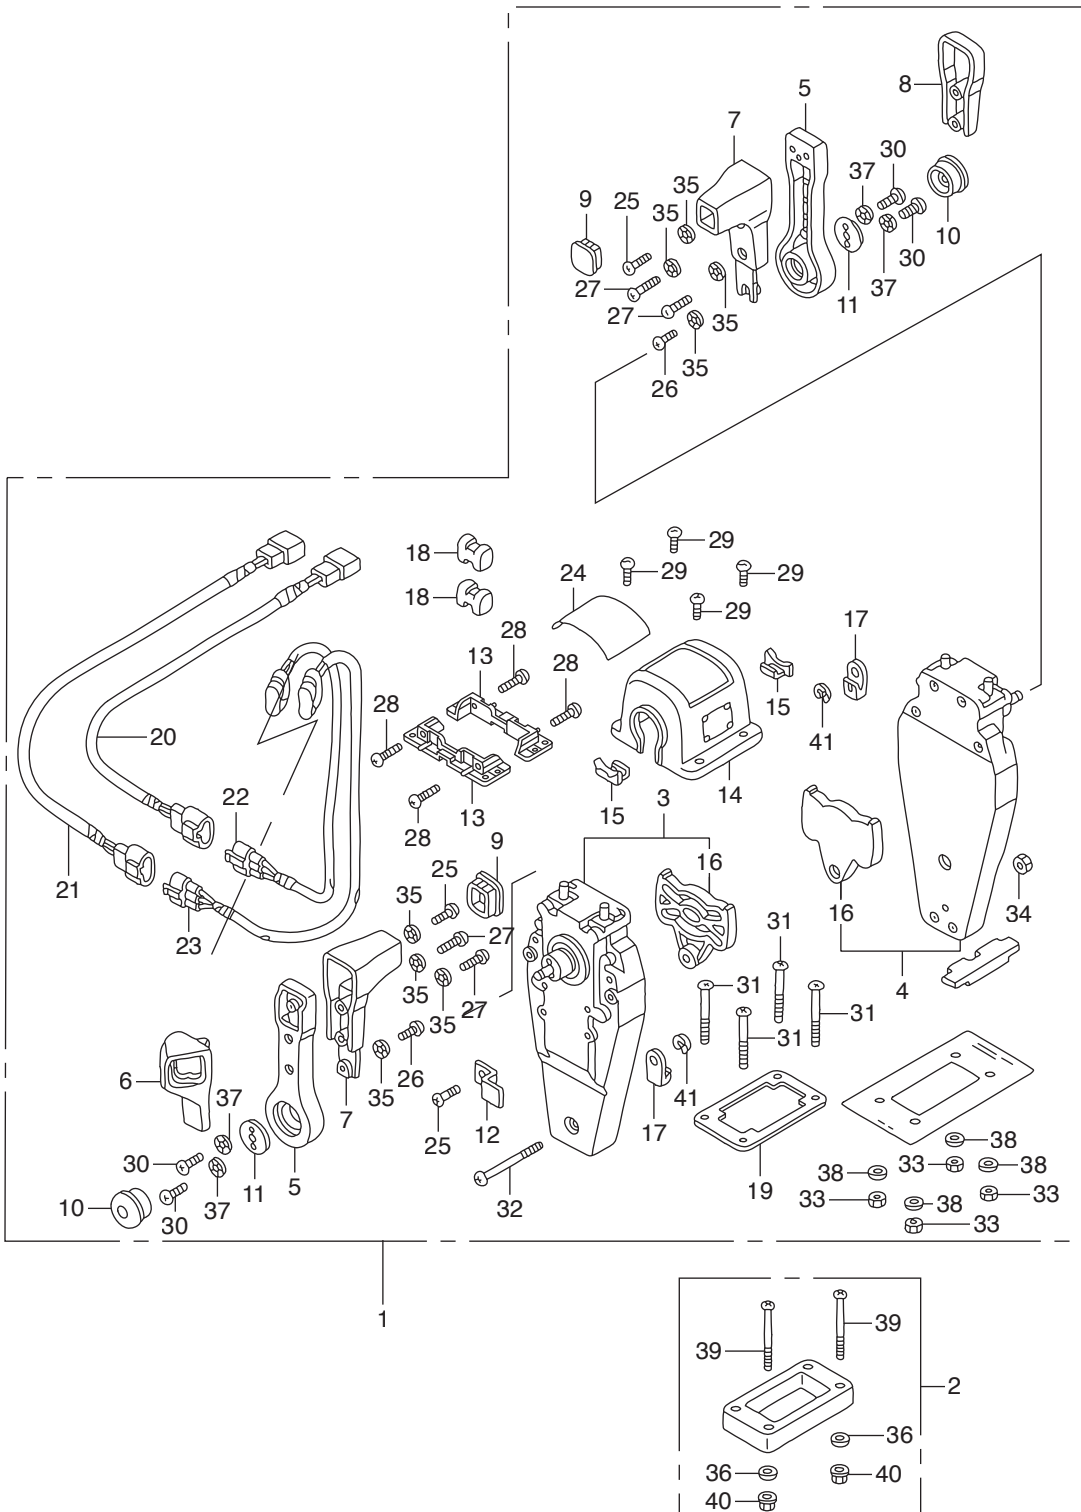


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
FOP-1-2	1	HZZ3-06240-R60	BOX KIT, REMOTE CONTROL	1	(TOP MOUNT DUAL)(R.)
FOP-1-2	2	HZW5-06241-U10	SPACER KIT, REMOTE CONTROL BOX	1	(TOP MOUNT DUAL)
FOP-1-2	3	HZW5-24810-U01	HOUSING ASSY., L. INNER	1	(TOP MOUNT)
FOP-1-2	4	HZW5-24810-U11	HOUSING ASSY., R. INNER	1	(TOP MOUNT)
FOP-1-2	5	HZW5-24811-U01	HANDLE, REMOTE CONTROL	2	
FOP-1-2	6	HZW5-24812-U01	COVER, L. GRIP	1	
FOP-1-2	7	HZW5-24813-U01	GRIP, REMOTE CONTROL HANDLE	2	
FOP-1-2	8	HZW5-24813-U21	COVER, DUAL GRIP	1	
FOP-1-2	9	HZW5-24814-U01	CAP, GRIP	2	
FOP-1-2	10	HZW5-24816-U01	BUTTON, THROTTLE	2	
FOP-1-2	11	HZW5-24817-U01	PLATE, HANDLE	2	
FOP-1-2	12	HZW5-24818-U01	PLATE, CABLE CLAMP	1	
FOP-1-2	13	HZW5-24819-U01	BRACKET, REMOTE CONTROL	2	HOUSING
FOP-1-2	14	HZZ3-24820-R21	HOUSING COMP., REMOTE CONTROL	1	BOX(DUAL)
FOP-1-2	15	HZW5-24825-U01	HOUSING, LEAD	2	
FOP-1-2	16	HZW5-24826-U01	PLATE, DWELL	2	
FOP-1-2	17	HZW5-24831-U01	TERMINAL, CABLE	4	
FOP-1-2	18	HZW5-24832-U01	SPACER, CABLE CLAMP	2	
FOP-1-2	19	HZW5-24834-U21	PACKING, DUAL	1	
FOP-1-2	20	HZW7-32530-U00	SUB HARNESS ASSY., POWER	1	TRIM-TILT(A)
FOP-1-2	21	HZW7-32530-U10	SUB HARNESS ASSY., POWER	1	TRIM-TILT(B)
FOP-1-2	22	HZW5-35370-U02	SWITCH ASSY., POWER TRIM-TILT	1	(A)
FOP-1-2	23	HZW5-35370-U12	SWITCH ASSY., POWER TRIM-TILT	1	(B)
FOP-1-2	24	HZZ3-87703-R01	MARK, REMOTE CONTROL(DUAL)	1	
FOP-1-2	25	HZW5-90101-U00	SCREW, PAN, 5X16	3	
FOP-1-2	26	HZW5-90102-U00	SCREW, PAN, 5X10	2	
FOP-1-2	27	HZW5-90103-U01	SCREW, PAN, 5X20	4	
FOP-1-2	28	HZW5-90104-U00	SCREW, PAN, 5X18	4	
FOP-1-2	29	HZW5-90105-U01	SCREW, PAN, 4X10	4	

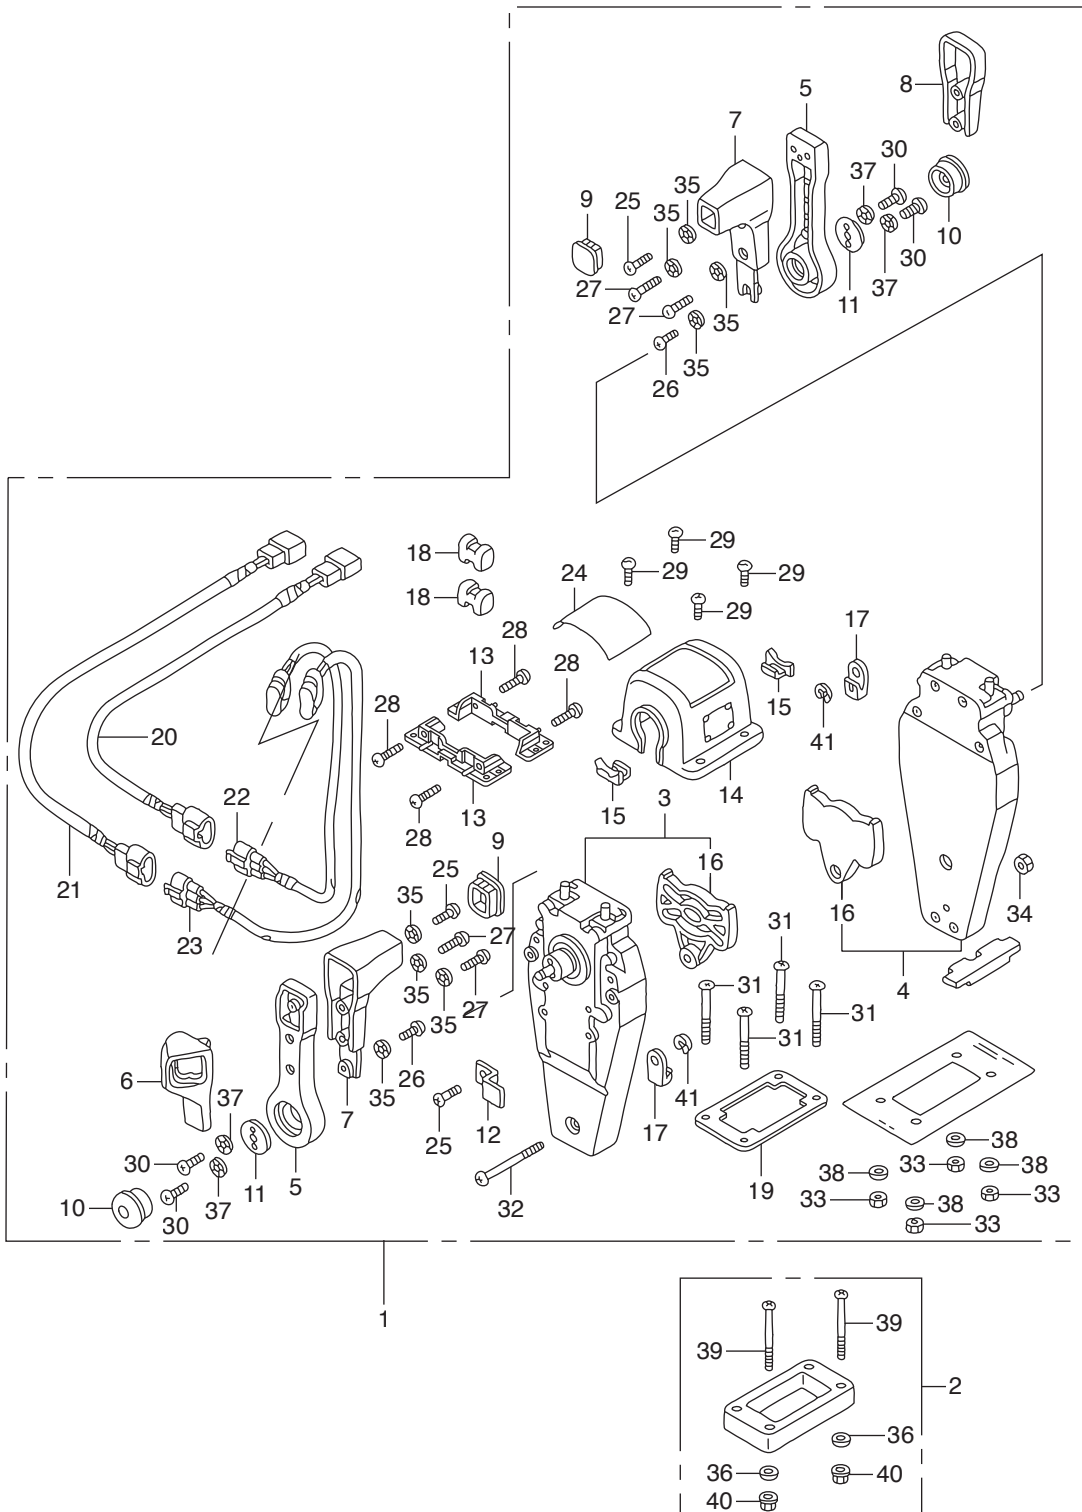


[illegible]

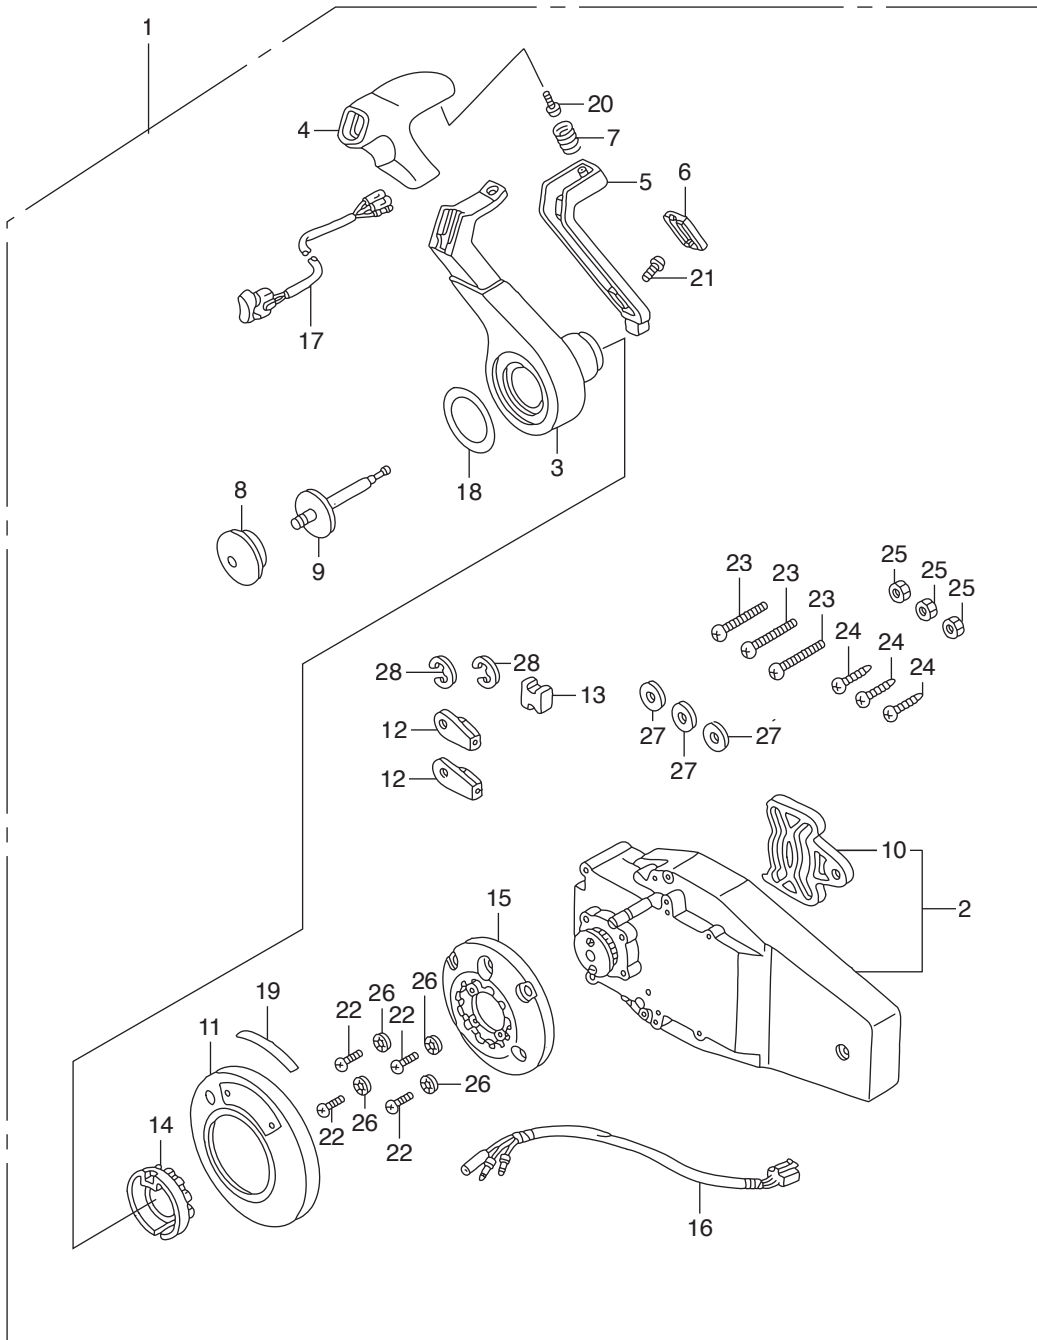


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
FOP-1-4	1	HZZ3-06240-R40	BOX KIT, REMOTE CONTROL	1	(FLUSH MOUNT)(R.)
FOP-1-4	2	HZW7-24810-U01	HOUSING ASSY., R. INNER	1	(FLUSH MOUNT)
FOP-1-4	3	HZW7-24811-U01	HANDLE, REMOTE CONTROL	1	
FOP-1-4	4	HZW7-24812-U01	COVER, GRIP	1	
FOP-1-4	5	HZW7-24813-U01	ARM, NEUTRAL LOCK	1	
FOP-1-4	6	HZW7-24814-U01	COVER, LOCK ARM	1	
FOP-1-4	7	HZW7-24815-U01	SPRING, NEUTRAL LOCK ARM	1	
FOP-1-4	8	HZW5-24816-U01	BUTTON, THROTTLE	1	
FOP-1-4	9	HZW7-24817-U01	SHAFT, THROTTLE BUTTON	1	
FOP-1-4	10	HZW5-24826-U01	PLATE, DWELL	1	
FOP-1-4	11	HZZ3-24830-R41	COVER ASSY.	1	
FOP-1-4	12	HZW5-24831-U01	TERMINAL, CABLE	2	
FOP-1-4	13	HZW5-24832-U01	SPACER, CABLE CLAMP	1	
FOP-1-4	14	HZW7-24832-U01	HOLDER, NEUTRAL LOCK	1	
FOP-1-4	15	HZW7-24833-U01	BASE	1	
FOP-1-4	16	HZW7-32530-U20	SUB HARNESS ASSY., POWER	1	TRIM-TILT(C)
FOP-1-4	17	HZW7-35370-U02	SWITCH ASSY., POWER TRIM-TILT	1	(C)
FOP-1-4	18	HZZ3-87701-R40	MARK, HANDLE FLUSH MOUNT	1	
FOP-1-4	19	HZW7-87703-U00	MARK, FLUSH MOUNT	1	
FOP-1-4	20	HZW5-90101-U00	SCREW, PAN, 5X16	1	
FOP-1-4	21	HZW7-90101-U01	SCREW, TRUSS, 4X12	1	
FOP-1-4	22	HZW7-90102-U01	SCREW, PAN, 5X30	4	
FOP-1-4	23	HZW7-90103-U01	SCREW, PAN, 6X35	3	
FOP-1-4	24	HZW7-90104-U01	SCREW, TAPPING, 6X30	3	
FOP-1-4	25	HZW7-90301-U01	NUT, HEX., 6MM	3	
FOP-1-4	26	HZW5-90501-U00	WASHER, LOCK, 5MM	4	
FOP-1-4	27	HZW7-90502-U00	WASHER, PLAIN, 6MM	3	
FOP-1-4	28	HCO-94540-06029	E-RING, 6MM	2	

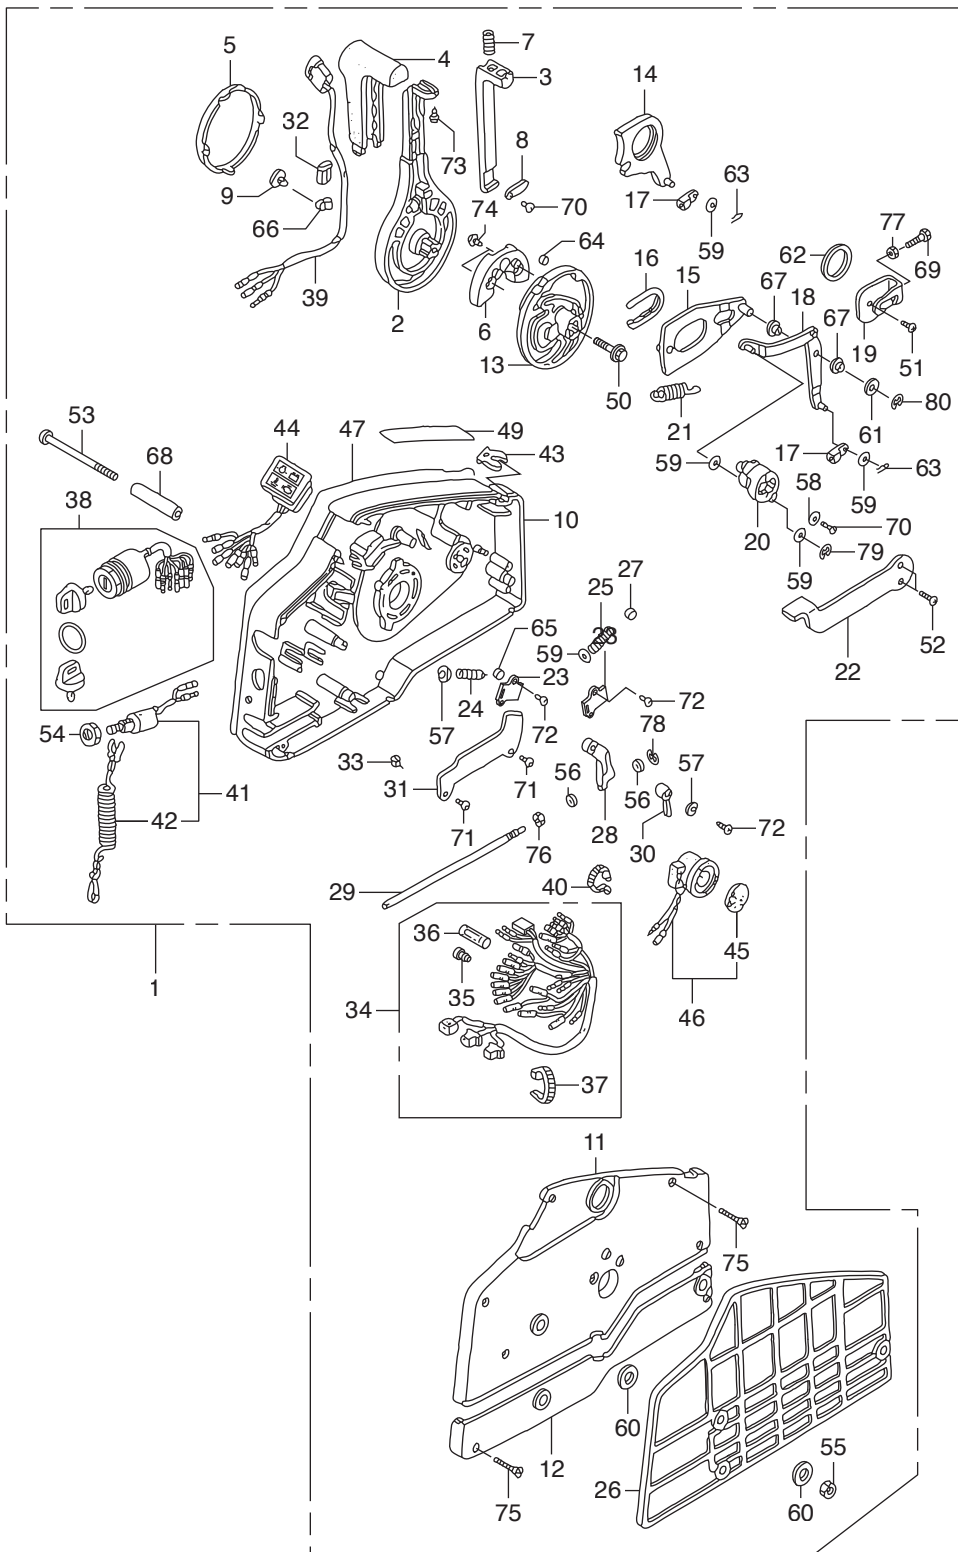




Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
FOP-1-6	1	HZZ3-24800-R00	BOX ASSY., REMOTE CONTROL(EU)	1	
FOP-1-6	2	HZV5-24811-010	HANDLE, REMOTE CONTROL	1	
FOP-1-6	3	HZV5-24812-000	LEVER, HANDLE LOCK	1	
FOP-1-6	4	HZV5-24813-000	GRIP, REMOTE CONTROL HANDLE	1	
FOP-1-6	5	HZV5-24814-010	CAP, HANDLE	1	
FOP-1-6	6	HZV5-24815-010	BLOCK, NEUTRAL LOCK	1	
FOP-1-6	7	HZV5-24816-000	SPRING, REMOTE CONTROL HANDLE	1	
FOP-1-6	8	HZV5-24817-000	PLATE, LEVER SETTING	1	
FOP-1-6	9	HZV5-24818-003	CLAMP, HARNESS	1	
FOP-1-6	10	HZV5-24820-010	HOUSING COMP., REMOTE CONTROL	1	BOX(A)
FOP-1-6	11	HZV5-24830-010	HOUSING COMP., REMOTE CONTROL	1	BOX(B)
FOP-1-6	12	HZV5-24836-000	HOUSING, REMOTE CONTROL BOX(C)	1	
FOP-1-6	13	HZV5-24841-000	WHEEL, CONTROL	1	
FOP-1-6	14	HZV5-24845-000	ARM COMP., SHIFT LINK	1	
FOP-1-6	15	HZV5-24850-000	PLATE COMP., SLIDING	1	
FOP-1-6	16	HZV5-24854-000	COLLAR, SLIDING PLATE	1	
FOP-1-6	17	HZV5-24855-000	PIVOT, SHIFT	2	
FOP-1-6	18	HZV5-24860-000	ARM COMP., LINK JOINT	1	
FOP-1-6	19	HZV5-24865-000	BRACKET, LINK JOINT	1	
FOP-1-6	20	HZV5-24875-000	WHEEL, ACCELERATOR	1	
FOP-1-6	21	HZV5-24876-000	SPRING, ACCELERATOR WHEEL	1	
FOP-1-6	22	HZV5-24878-000	LEVER, IDLE	1	
FOP-1-6	23	HZV5-24881-000	PLATE, SPRING SETTING	2	
FOP-1-6	24	HZV5-24883-000	SPRING, SHIFT CLICK	1	
FOP-1-6	25	HZV5-24884-000	SPRING, CHOKE RETURN	1	
FOP-1-6	26	HZV5-24885-000	SPACER, REMOTE CONTROL BOX	1	
FOP-1-6	27	HZV5-24887-000	SPACER, CLICK SPRING	1	
FOP-1-6	28	HZV5-24891-000	BLOCK, THROTTLE FRICTION	1	
FOP-1-6	29	HZV5-24892-000	BOLT, FRICTION	1	

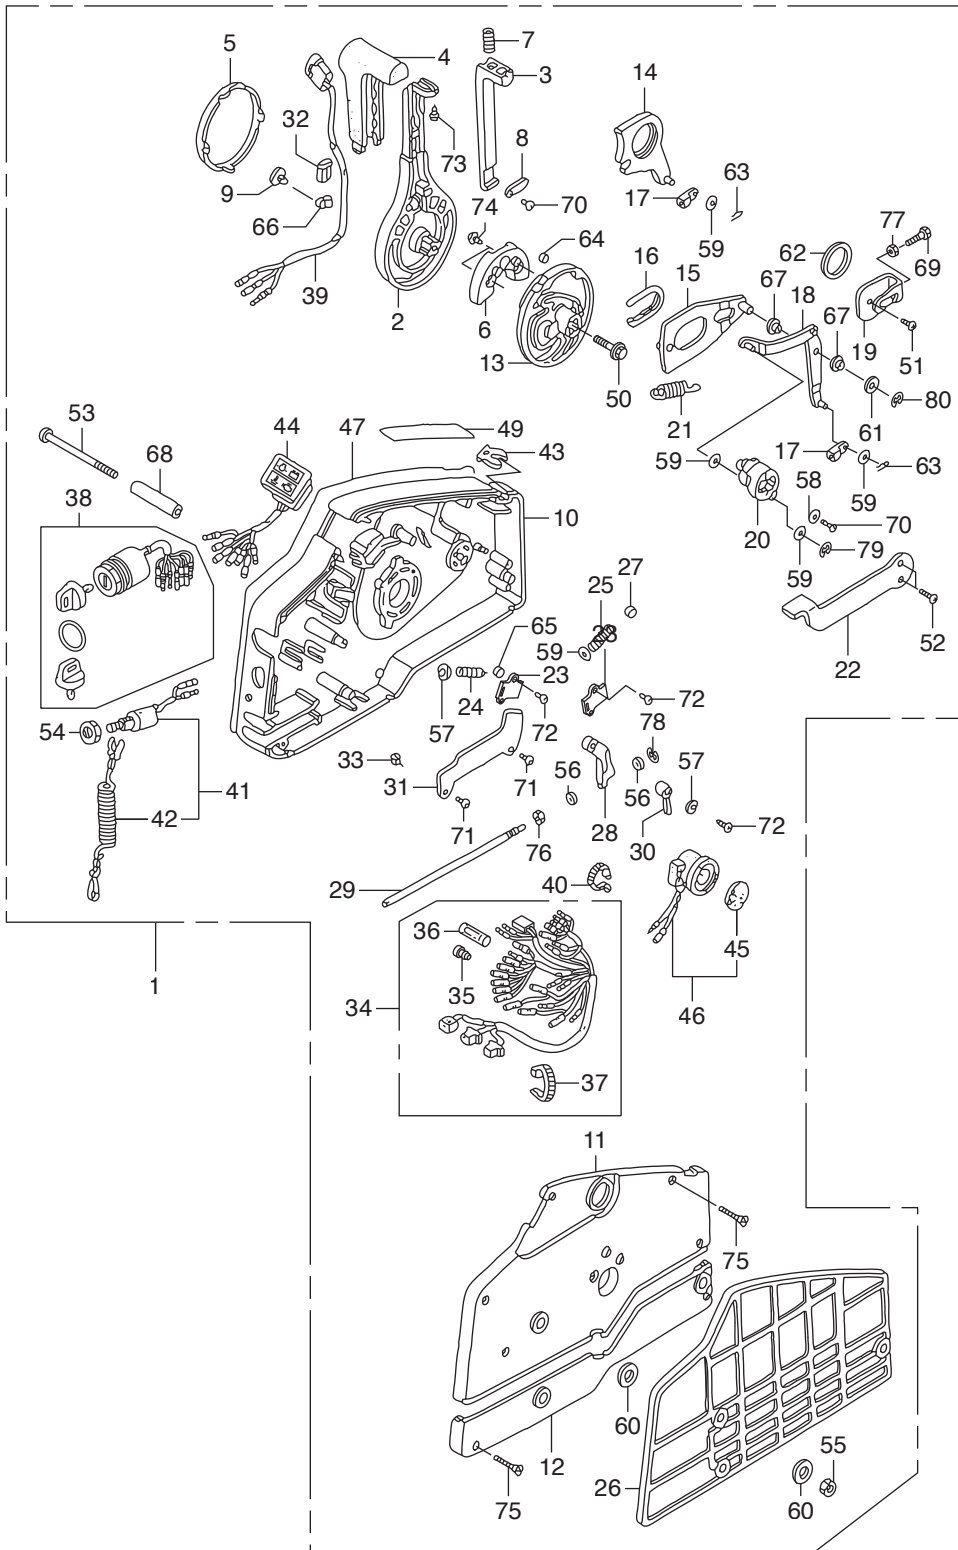


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
FOP-1-6	30	HZV5-24894-000	SPACER, NEUTRAL SWITCH	1	
FOP-1-6	31	HZV5-24895-000	CLAMP, POWER TILT CORD	1	
FOP-1-6	32	HZV5-24897-000	PIPE, HARNESS GUIDE	1	
FOP-1-6	33	HZV5-24898-000	SPACER, CABLE CLAMP	1	
FOP-1-6	34	HZZ5-32530-000	CABLE ASSY., REMOTE CONTROL(B)	1	
FOP-1-6	35	HZV5-32823-003	PLUG, INNER CONNECTOR	7	
FOP-1-6	36	HZV5-32824-003	PLUG, OUTER CONNECTOR	1	
FOP-1-6	37	H952-32901-770	TIE, CABLE(NATURAL)(2.4X92)	1	
FOP-1-6	38	HZZ3-35100-R11	SWITCH ASSY., COMBINATION	1	
FOP-1-6	39	HZV5-35370-823	SWITCH ASSY., POWER TRIM-TILT	1	
FOP-1-6	40	HMG9-35701-950	BAND(BLACK 3.5X140)	1	
FOP-1-6	41	HZV5-36180-033	SWITCH ASSY., EMERGENCY STOP	1	
FOP-1-6	42	HZV4-36182-651	CORD COMP., EMERGENCY	1	
FOP-1-6	43	HZV4-36187-652	CLIP, EMERGENCY LOCK	1	
FOP-1-6	44	HZZ5-37210-013	LAMP ASSY., INDICATION	1	
FOP-1-6	45	H341-38403-672	PLATE, WINKER BUZZER	1	
FOP-1-6	46	HZV5-38410-003	BUZZER COMP., WARNING	1	
FOP-1-6	47	HZZ3-87701-R00	PLATE, REMOTE CONTROL	1	
FOP-1-6	49	HZW9-87702-800	MARK, FAST IDLE	1	
FOP-1-6	50	HZW9-90008-000	BOLT, FLANGE, 8X35	1	
FOP-1-6	51	HMM4-90105-000	SCREW, PAN, 6X10	1	
FOP-1-6	52	HZW4-90108-000	SCREW, FLAT, 5X12	2	
FOP-1-6	53	HZV5-90125-000	SCREW, 6X95	3	
FOP-1-6	54	H921-90302-000	NUT, HEX., 16MM	1	
FOP-1-6	55	HZV4-90304-000	NUT, HEX., 6MM	3	
FOP-1-6	56	HZW4-90401-000	WASHER, PLAIN, 4MM	2	
FOP-1-6	57	HZW4-90402-000	WASHER, PLAIN, 5MM	2	
FOP-1-6	58	HZV4-90502-000	WASHER, PLAIN, 5MM	1	
FOP-1-6	59	H921-90504-010	WASHER, PLAIN, 6MM	5	

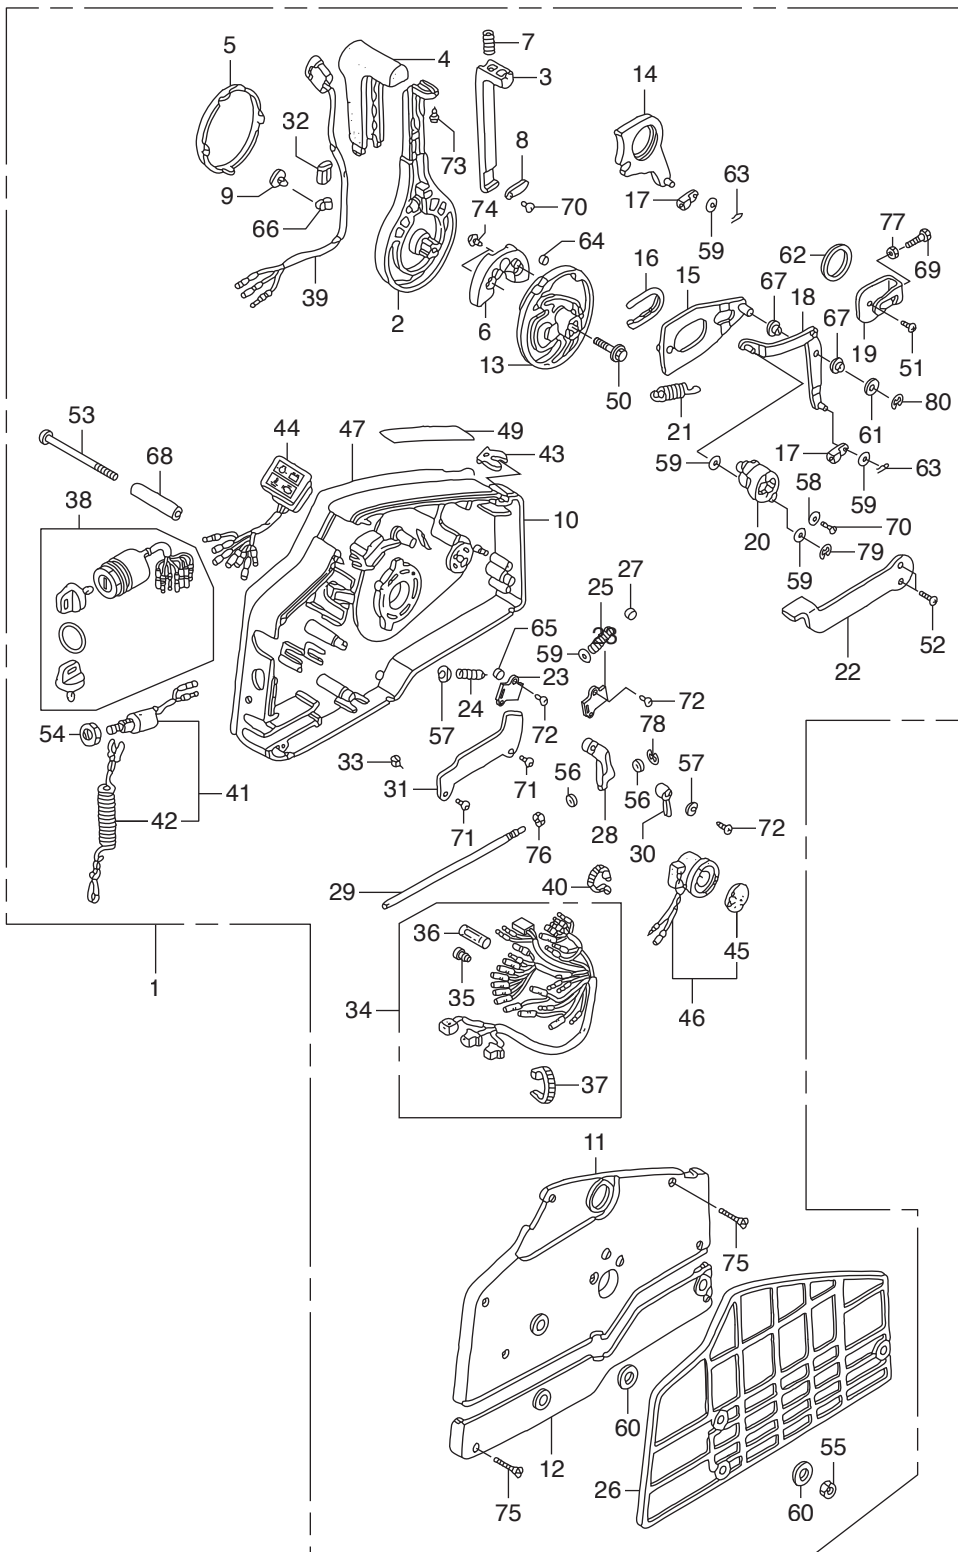


Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
FOP-1-6	60	H921-90512-010	WASHER, 6MM	6	
FOP-1-6	61	H921-90518-000	WASHER, PLAIN, 8MM	1	
FOP-1-6	62	HZV5-90557-000	WASHER, 28MM	1	
FOP-1-6	63	HZV5-90751-000	PIN, LOCK, 6MM	2	
FOP-1-6	64	HZV5-90772-000	PIN, 6X6	1	
FOP-1-6	65	HZV5-91151-000	ROLLER, CLICK	1	
FOP-1-6	66	HSB6-91475-000	CLIP, WIRE HARNESS(6.3MM)	1	
FOP-1-6	67	HZV5-91567-000	COLLAR, LINK JOINT	2	
FOP-1-6	68	HZV5-91570-000	COLLAR, DISTANCE, 6X10X43.5	3	
FOP-1-6	69	HCO-92101-05016-4J	BOLT, HEX., 5X16	1	
FOP-1-6	70	HCO-93500-05010-4J	SCREW, PAN, 5X10	2	
FOP-1-6	71	HCO-93901-250J0	SCREW, TAPPING, 5X8	2	
FOP-1-6	72	HCO-93901-251J0	SCREW, TAPPING, 5X10	3	
FOP-1-6	73	HCO-93901-252J0	SCREW, TAPPING, 5X12	1	
FOP-1-6	74	HCO-93903-262J0	SCREW, TAPPING, 6X16	2	
FOP-1-6	75	HCO-93905-255J0	SCREW, TAPPING, 5X25	7	
FOP-1-6	76	HCO-94001-06490-0S	NUT, HEX., 6MM	1	
FOP-1-6	77	HCO-94002-05490-0S	NUT, HEX., 5MM	1	
FOP-1-6	78	HCO-94540-03029	E-RING, 3MM	1	
FOP-1-6	79	HCO-94540-04029	E-RING, 4MM	1	
FOP-1-6	80	HCO-94540-07029	E-RING, 7MM	1	

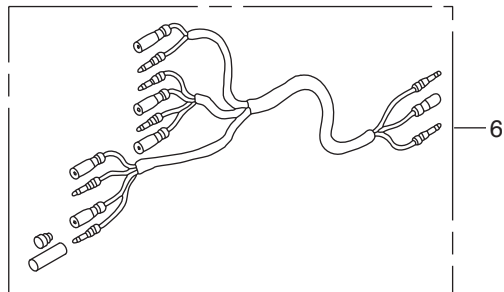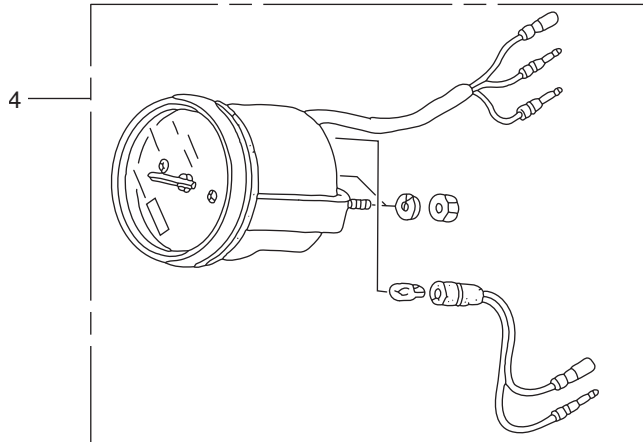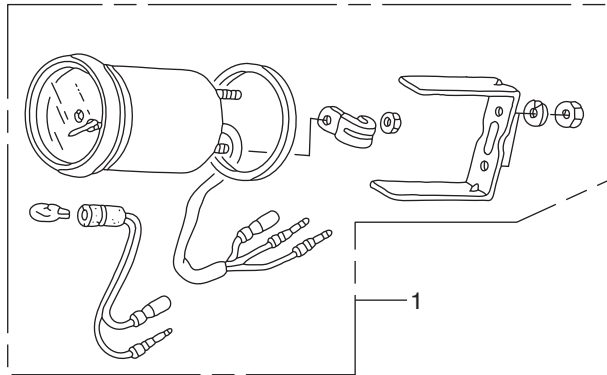


[illegible]

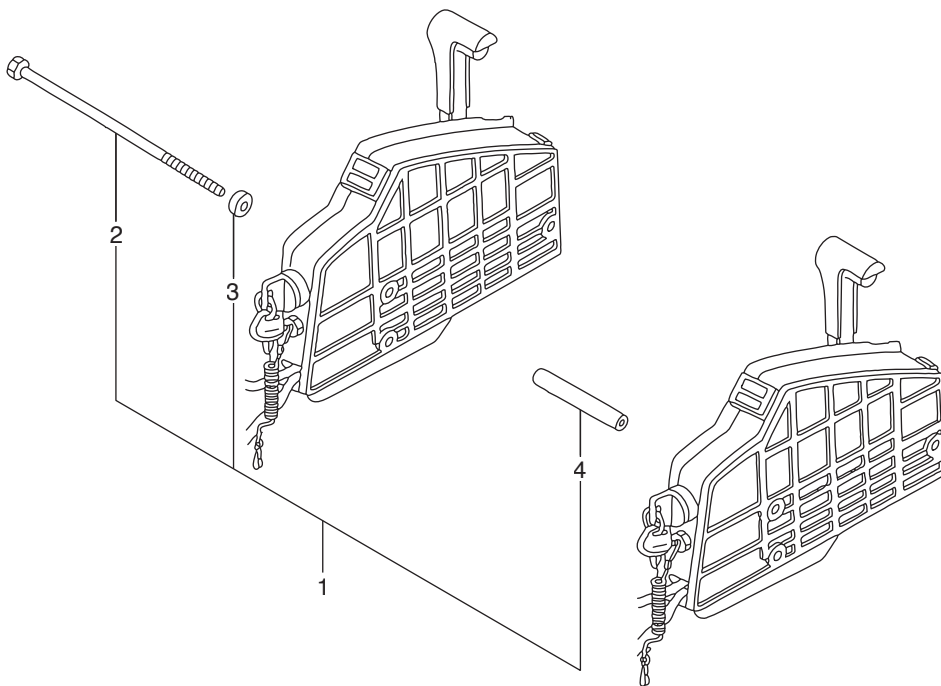



[illegible]

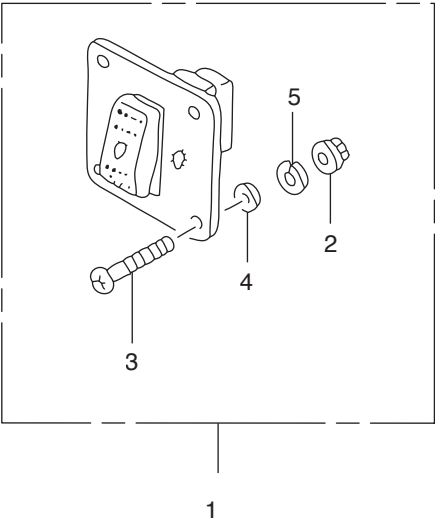


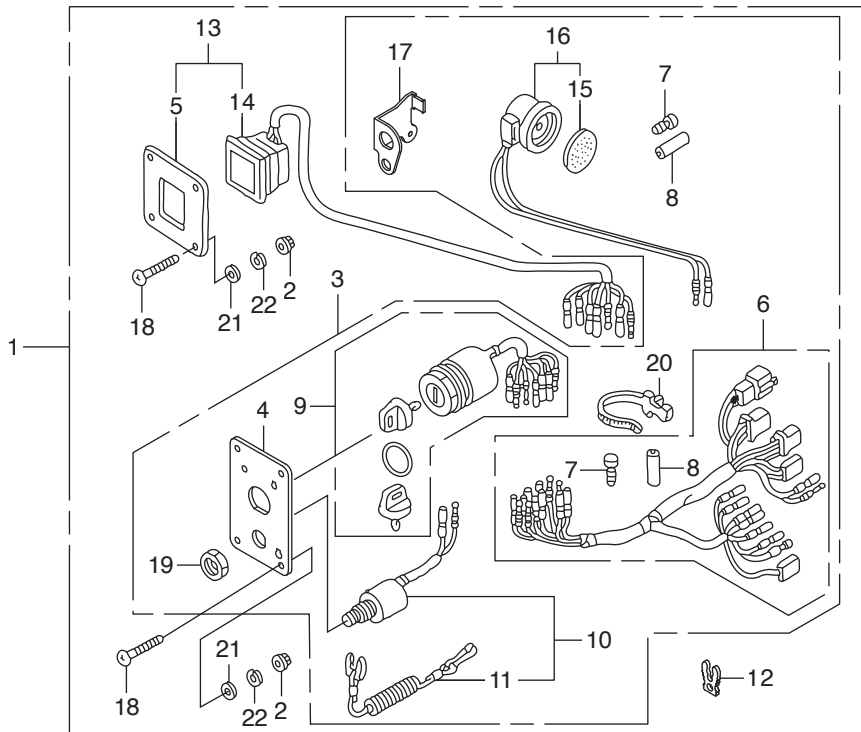



Ref.No.		Part No.	Description	Q' ty	Remarks
				BFT250A	
FOP-7	1	HZZ3-06323-R20	PANEL KIT, SWITCH(4-LED)	1	
FOP-7	2	HMT8-18334-770	NUT, FLANGE, 5MM	8	
FOP-7	3	HZZ3-32341-R31	PANEL ASSY., SWITCH	1	
FOP-7	4	HZZ3-32346-R21	PANEL, CONTROL	1	
FOP-7	5	HZZ3-32347-R01	PANEL, CONTROL	1	
FOP-7	6	HZZ5-32545-000	HARNESS ASSY., SWITCH PANEL	1	
FOP-7	7	HZV5-32823-003	PLUG, INNER CONNECTOR	8	
FOP-7	8	HZV5-32824-003	PLUG, OUTER CONNECTOR	3	
FOP-7	9	HZZ3-35100-R11	SWITCH ASSY., COMBINATION	1	
FOP-7	10	HZV5-36180-033	SWITCH ASSY., EMERGENCY STOP	1	
FOP-7	11	HZV4-36182-651	CORD COMP., EMERGENCY	1	
FOP-7	12	HZV4-36187-652	CLIP, EMERGENCY LOCK	1	
FOP-7	13	HZZ3-37205-R01	PANEL ASSY., INDICATOR(4-LED)	1	
FOP-7	14	HZZ5-37210-762	LAMP ASSY., INDICATION(4-LED)	1	
FOP-7	15	H341-38403-672	PLATE, WINKER BUZZER	1	
FOP-7	16	HZV5-38410-003	BUZZER COMP., WARNING	1	
FOP-7	17	HZZ5-38414-003	BRACKET, BUZZER	1	
FOP-7	18	HZW5-90109-000	SCREW, PAN, 5X40	8	
FOP-7	19	H921-90302-000	NUT, HEX., 16MM	1	
FOP-7	20	HSC2-90649-003	BAND, WIRE HARNESS(NATURAL)	1	(150MM)
FOP-7	21	HCO-94103-05400	WASHER, PLAIN, 5MM	8	
FOP-7	22	HCO-94111-05400	WASHER, SPRING, 5MM	8	

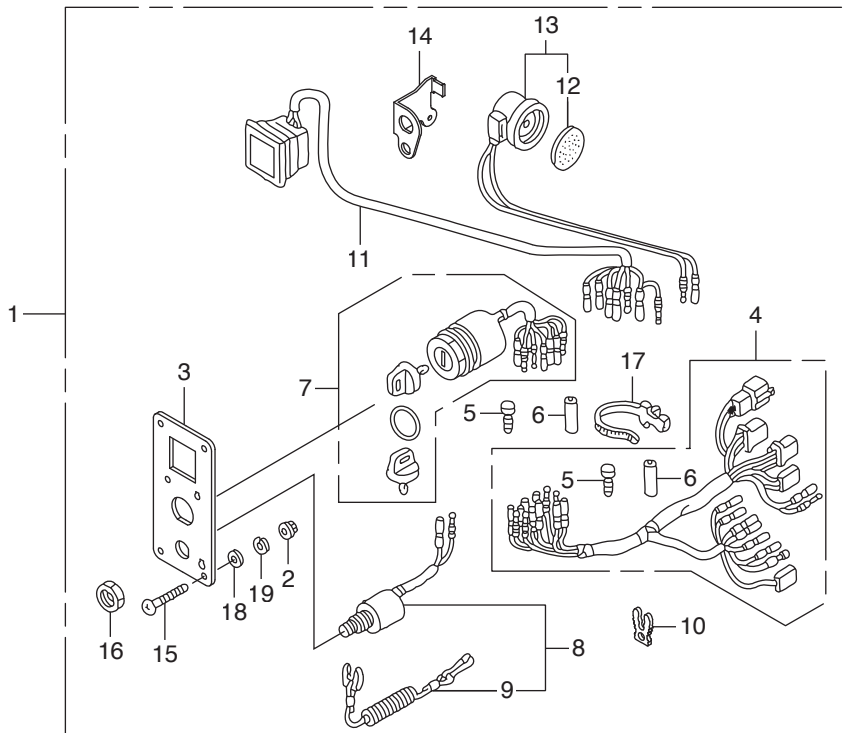


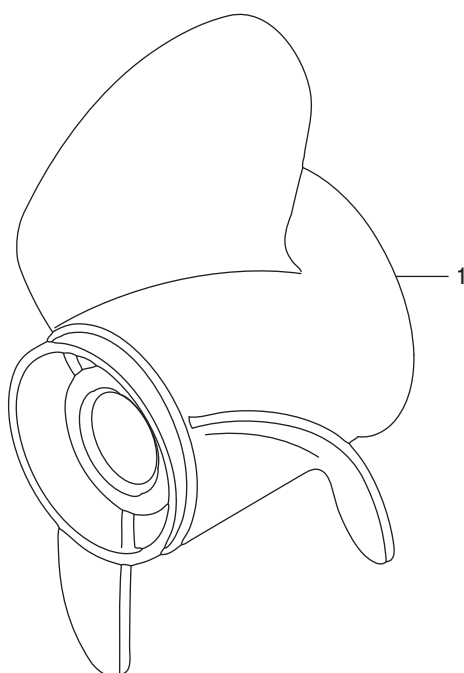


[illegible]

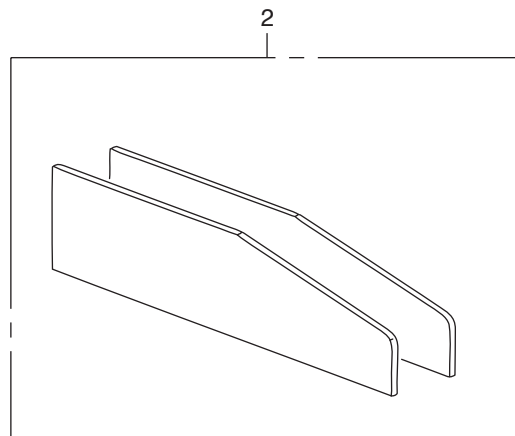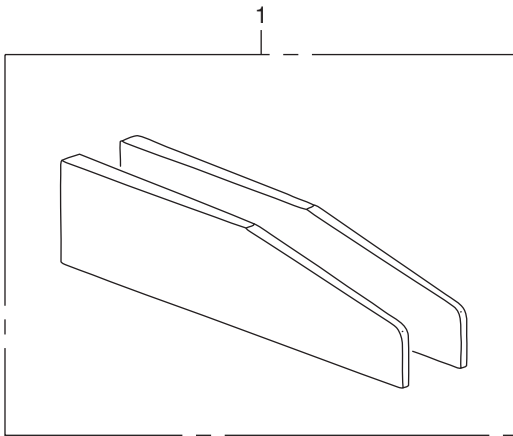

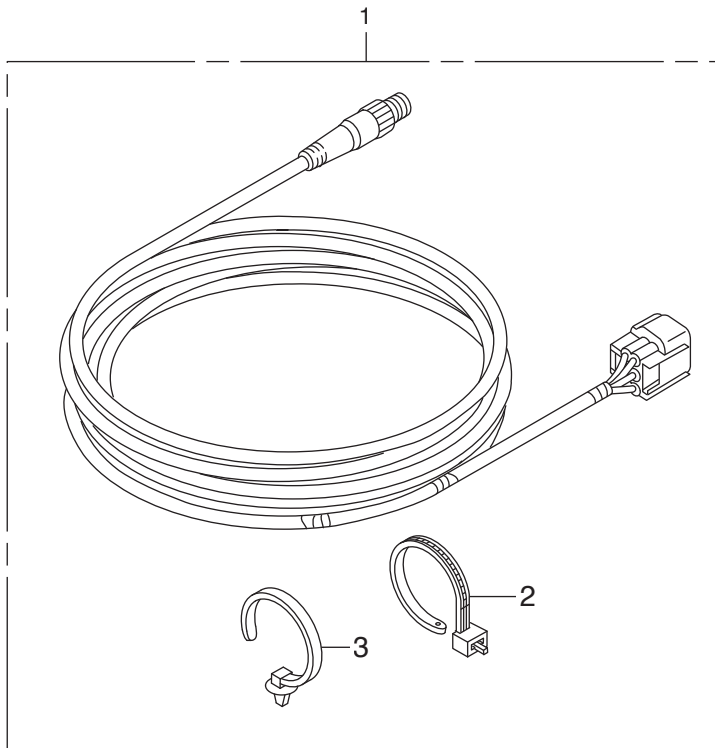

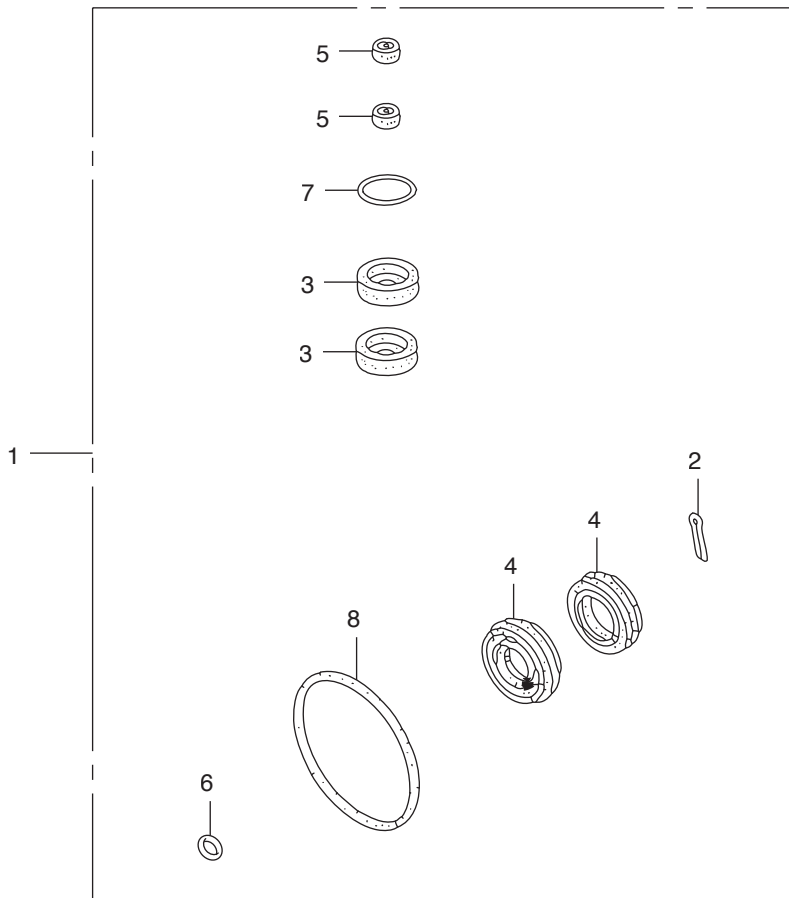

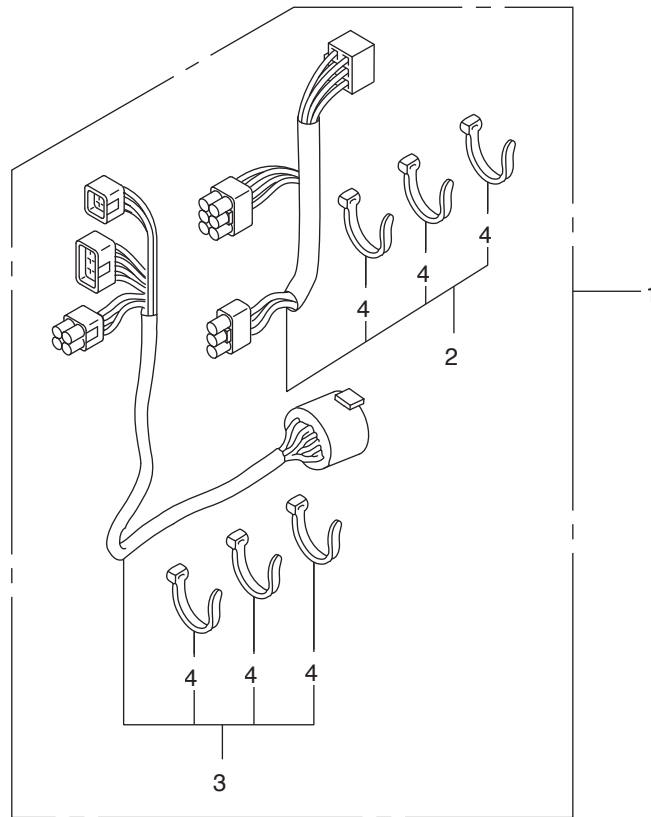

[illegible]

INDEX

<A>			
ARM ASSY., INTAKE ROCKER.....	E-9-10-4	BOLT, CONNECTING ROD	E-7-6
ARM COMP. A, EX. ROCKER.....	E-9-10-5	BOLT, COVER LOCK	F-8-12
ARM COMP. B, EX. ROCKER.....	E-9-10-6	BOLT, DRAIN PLUG	E-6-11
ARM COMP., LINK JOINT	FOP-1-6-18	BOLT, DRAIN PLUG	F-3-14
ARM COMP., SHIFT LINK.....	FOP-1-6-14	BOLT, FLANGE, 10X110	E-21-20
ARM, FUEL PUMP ROCKER	E-9-10-3	BOLT, FLANGE, 10X120(SATO).....	E-6-20-2
ARM, NEUTRAL LOCK	FOP-1-4-5	BOLT, FLANGE, 10X40.....	E-13-26
ARM, SHIFT.....	F-2-9	BOLT, FLANGE, 10X43.....	E-13-27
ARM, THROTTLE	F-2-3	BOLT, FLANGE, 10X55.....	E-3-10-10
ARMATURE COMP.....	F-11-7	BOLT, FLANGE, 10X70.....	E-6-20-11
		BOLT, FLANGE, 10X90.....	E-19-21
BAG, TOOL, 200MM.....	F-13-13	BOLT, FLANGE, 10X90.....	E-21-19
BALL, STEEL	E-21-6	BOLT, FLANGE, 12X120	E-6-20-12
BALL, STEEL, #12(3/8).....	F-5-33	BOLT, FLANGE, 12X95.....	E-3-28
BALL, STEEL, #12(3/8).....	F-5-1-36	BOLT, FLANGE, 5X10.....	E-14-10-17
BALL, STEEL, #7(7/32).....	F-5-32	BOLT, FLANGE, 5X14.....	E-13-10-9
BALL, STEEL, #7(7/32).....	F-5-1-35	BOLT, FLANGE, 6X10.....	E-14-22
BAND	E-18-42	BOLT, FLANGE, 6X10.....	E-18-1-25
BAND(BLACK 3.5X140).....	F-11-3	BOLT, FLANGE, 6X10.....	E-20-10-8
BAND(BLACK 3.5X140).....	FOP-1-6-40	BOLT, FLANGE, 6X10.....	F-7-10-15
BAND, AIR FLOW	E-15-8	BOLT, FLANGE, 6X11.....	F-2-24
BAND, TUBE CLIP, 12.5MM.....	F-8-20-4	BOLT, FLANGE, 6X12.....	E-18-51
BAND, UNDER CASE GROMMET	F-8-10-4	BOLT, FLANGE, 6X12.....	E-18-1-26
BAND, WIRE	F-10-6	BOLT, FLANGE, 6X12.....	F-2-26
BAND, WIRE	F-10-76	BOLT, FLANGE, 6X12.....	F-7-3
BAND, WIRE HARNESS	F-7-10-20	BOLT, FLANGE, 6X12.....	F-7-10-14
BAND, WIRE HARNESS(NATURAL)	FOP-7-20	BOLT, FLANGE, 6X12.....	F-8-10-29
BAND, WIRE HARNESS(NATURAL)	FOP-7-1-17	BOLT, FLANGE, 6X12.....	F-10-37
BASE	FOP-1-4-15	BOLT, FLANGE, 6X14.....	E-3-35
BASE COMP., TIMING BELT	E-13-10	BOLT, FLANGE, 6X14.....	E-5-21
BASE, L. INJECTOR	E-14-13	BOLT, FLANGE, 6X14.....	E-14-21
BASE, R. INJECTOR	E-14-11	BOLT, FLANGE, 6X14.....	E-18-50
BEARING A, CONNECTING ROD.....	E-7-8	BOLT, FLANGE, 6X14.....	F-8-10-27
BEARING A, MAIN LOWER(BLACK).....	E-7-12	BOLT, FLANGE, 6X14(CT200).....	E-1-16
BEARING A, MAIN UPPER(BLACK).....	E-7-10	BOLT, FLANGE, 6X14(CT200).....	E-13-20
BEARING B, CONNECTING ROD.....	E-7-	BOLT, FLANGE, 6X14(CT200).....	F-2-22
BEARING B, MAIN LOWER(BROWN).....	E-7-	BOLT, FLANGE, 6X16.....	E-3-33
BEARING B, MAIN UPPER(BROWN).....	E-7-	BOLT, FLANGE, 6X16.....	E-13-23
BEARING C, CONNECTING ROD.....	E-7-	BOLT, FLANGE, 6X16.....	E-18-49
BEARING C, MAIN LOWER(GREEN).....	E-7-	BOLT, FLANGE, 6X16.....	E-19-23
BEARING C, MAIN UPPER(GREEN).....	E-7-	BOLT, FLANGE, 6X16.....	F-2-23
BEARING D, CONNECTING ROD.....	E-7-	BOLT, FLANGE, 6X16.....	F-4-18
BEARING D, MAIN LOWER(YELLOW).....	E-7-	BOLT, FLANGE, 6X18.....	E-3-36
BEARING D, MAIN UPPER(YELLOW).....	E-7-	BOLT, FLANGE, 6X18.....	E-5-22
BEARING E, CONNECTING ROD.....	E-7-	BOLT, FLANGE, 6X20.....	E-20-10-9
BEARING E, MAIN LOWER(PINK).....	E-7-	BOLT, FLANGE, 6X20.....	F-7-20-7
BEARING E, MAIN UPPER(PINK).....	E-7-	BOLT, FLANGE, 6X20.....	F-8-11
BEARING F, MAIN LOWER(RED).....	E-7-	BOLT, FLANGE, 6X20.....	F-8-10-30
BEARING F, MAIN UPPER(RED).....	E-7-	BOLT, FLANGE, 6X20.....	F-10-34
BEARING, FR. GENERATOR.....	E-19-3	BOLT, FLANGE, 6X22.....	F-10-40
BEARING, NEEDLE, 20X28X13	E-6-10-34	BOLT, FLANGE, 6X22.....	E-3-37
BEARING, NEEDLE, 28X39X30	F-5-26	BOLT, FLANGE, 6X22.....	E-3-10-8
BEARING, NEEDLE, 28X39X30	F-5-1-29	BOLT, FLANGE, 6X22.....	E-6-10-24
BEARING, NEEDLE, 30.5X47X37.....	F-4-25	BOLT, FLANGE, 6X22.....	E-13-24
BEARING, NEEDLE, 32X42X30	F-5-27	BOLT, FLANGE, 6X22.....	E-14-10-14
BEARING, NEEDLE, 32X42X30	F-5-1-30	BOLT, FLANGE, 6X22.....	E-15-21
BEARING, NEEDLE, 50X72X4.5.....	F-5-1-25	BOLT, FLANGE, 6X23.....	F-10-35
BEARING, RADIAL BALL.....	F-5-25	BOLT, FLANGE, 6X25.....	E-14-19
BEARING, RADIAL BALL.....	F-5-1-28	BOLT, FLANGE, 6X25.....	E-18-48
BEARING, RR. GENERATOR	E-19-2	BOLT, FLANGE, 6X32.....	E-3-10-9
BEARING, TAPER ROLLER.....	F-4-26	BOLT, FLANGE, 6X32.....	E-6-10-25
BEARING, TAPER ROLLER.....	F-5-24	BOLT, FLANGE, 6X32.....	E-14-10-16
BEARING, THRUST NEEDLE.....	F-5-1-27	BOLT, FLANGE, 6X35.....	E-1-17
BEARING, THRUST(F).....	F-5-23	BOLT, FLANGE, 6X35.....	E-3-34
BEARING, THRUST(F).....	F-5-1-24	BOLT, FLANGE, 6X35.....	E-4-16
BELT, A.C. GENERATOR.....	E-13-17	BOLT, FLANGE, 6X35.....	E-14-20
BELT, TIMING(197YU26 B-333).....	E-13-6	BOLT, FLANGE, 6X37.....	E-3-10-11
BLOCK ASSY., CYLINDER	E-3-3	BOLT, FLANGE, 6X40.....	E-6-10-31
BLOCK, NEUTRAL LOCK	FOP-1-6-6	BOLT, FLANGE, 6X55.....	E-3-10-14
BLOCK, THROTTLE FRICTION	FOP-1-6-28	BOLT, FLANGE, 6X60.....	E-4-18
BODY	E-18-3	BOLT, FLANGE, 6X60.....	E-15-22
BODY, OIL JET	E-3-13	BOLT, FLANGE, 8X100.....	E-6-10-27
BOLT A, THROUGH.....	E-21-14	BOLT, FLANGE, 8X18.....	F-7-10-16
BOLT COMP., OIL JET.....	E-3-14	BOLT, FLANGE, 8X20.....	E-9-12
BOLT KIT, SIDE REMOTE CONTROL.....	FOP-5-1	BOLT, FLANGE, 8X22.....	F-8-10-31
BOLT, 1/4-28UNF.....	F-10-36	BOLT, FLANGE, 8X25.....	E-3-10-15
BOLT, 12MM.....	E-5-13	BOLT, FLANGE, 8X28.....	E-9-13
BOLT, 3/8-24UNF.....	F-10-43	BOLT, FLANGE, 8X30.....	E-5-23
		BOLT, FLANGE, 8X30.....	E-6-10-29
		BOLT, FLANGE, 8X30.....	E-9-10-18
		BOLT, FLANGE, 8X32.....	E-1-18
		BOLT, FLANGE, 8X35.....	E-18-52
		BOLT, FLANGE, 8X35.....	FOP-1-6-50
		BOLT, FLANGE, 8X40.....	E-4-19
		BOLT, FLANGE, 8X40.....	E-9-10-19
		BOLT, FLANGE, 8X45.....	E-1-19
		BOLT, FLANGE, 8X50.....	E-3-40
		BOLT, FLANGE, 8X50.....	E-14-10-18
		BOLT, FLANGE, 8X60.....	E-4-17
		BOLT, FLANGE, 8X65.....	E-15-23
		BOLT, FLANGE, 8X75.....	E-3-38
		BOLT, FRICTION.....	FOP-1-6-29
		BOLT, HEX.....	F-11-34
		BOLT, HEX., 10X235.....	F-10-41
		BOLT, HEX., 10X35.....	F-3-20-32
		BOLT, HEX., 10X60.....	E-6-20-6
		BOLT, HEX., 10X85.....	E-6-20-5
		BOLT, HEX., 12X120.....	E-6-20-3
		BOLT, HEX., 12X130.....	F-10-46
		BOLT, HEX., 12X200.....	F-10-39
		BOLT, HEX., 12X45.....	F-5-13
		BOLT, HEX., 12X45.....	F-5-1-13
		BOLT, HEX., 12X50.....	F-3-20-37
		BOLT, HEX., 12X65.....	E-6-20-4
		BOLT, HEX., 14X180.....	F-3-20-33
		BOLT, HEX., 5X16.....	FOP-1-6-69
		BOLT, HEX., 6X14.....	F-10-42
		BOLT, HEX., 6X16.....	E-6-10
		BOLT, HEX., 6X16.....	F-2-27
		BOLT, HEX., 6X55.....	F-3-26
		BOLT, HEX., 8X28.....	E-6-9
		BOLT, HEX., 8X35.....	E-6-8
		BOLT, HEX., 8X35.....	F-8-10-26
		BOLT, IDLER	E-13-13
		BOLT, OIL CHECK	F-3-10
		BOLT, RECESSED.....	F-11-31
		BOLT, SEALING, 18MM.....	E-5-10
		BOLT, SEALING, 22MM.....	E-3-6
		BOLT, SEALING, 22MM.....	E-3-39
		BOLT, SEALING, 22MM.....	E-3-10-12
		BOLT, SEALING, 22MM.....	E-5-25
		BOLT, SEALING, 6MM.....	E-18-46
		BOLT, SOCKET(A).....	F-11-32
		BOLT, SOCKET(B).....	F-11-33
		BOLT, SOCKET, 6X16.....	F-8-13
		BOLT, SPECIAL ADJUSTER	E-19-22
		BOLT, SPECIAL, 6X12.....	F-3-20-38
		BOLT, SPECIAL, 6X17.....	F-3-20-35
		BOLT, SPECIAL, 6X22.....	F-3-20-36
		BOLT, SPECIAL, 6X220.....	FOP-5-2
		BOLT, SPECIAL, 6X37.....	F-3-20-39
		BOLT, SPECIAL, 8MM.....	E-5-14
		BOLT, SPECIAL, 8X29.....	E-13-10-8
		BOLT, STUD, 10X45.....	E-6-10-26
		BOLT, STUD, 12X40.....	F-11-32
		BOLT, STUD, 6X68.....	E-19-8
		BOLT, STUD, 8X28.....	E-14-23
		BOLT, STUD, 8X45.....	E-14-24
		BOLT, TENSIONER.....	E-19-24
		BOLT, TIMING BELT ADJUSTING	E-13-21
		BOLT, TIMING BELT COVER	E-13-10-7
		BOLT, TIMING BELT IDLER A	E-13-14
		BOLT, WASHER, 6X121.....	E-6-10-28
		BOLT, WASHER, 8X60.....	F-4-17
		BOLT-WASHER, 10X109.....	E-3-29
		BOLT-WASHER, 10X32.....	F-3-12
		BOLT-WASHER, 10X32.....	F-10-38
		BOLT-WASHER, 10X47.....	F-3-13
		BOLT-WASHER, 10X60.....	E-3-30
		BOLT-WASHER, 10X80.....	E-3-31
		BOLT-WASHER, 11X105.....	E-3-32
		BOLT-WASHER, 12X163.....	E-9-11
		BOLT-WASHER, 12X35.....	E-13-25
		BOLT-WASHER, 16X49.....	E-13-22
		BOLT-WASHER, 5X18.....	E-14-10-15
		BOLT-WASHER, 5X30.....	E-15-20
		BOLT-WASHER, 6X16.....	F-2-25
		BOLT-WASHER, 6X25.....	E-15-19

BOLT-WASHER, 6X25	F-3-20-31	CAP, BOLT, 10MM	E-3-10-13	CLIP, WIRE	E-18-10-21
BOLT-WASHER, 6X25	F-7-10-13	CAP, GRIP	FOP-1-7	CLIP, WIRE HARNESS	E-18-1-32
BOLT-WASHER, 6X27	E-20-4	CAP, GRIP	FOP-1-2-9	CLIP, WIRE HARNESS	F-7-4
BOLT-WASHER, 6X27(CT200)	E-20-10-7	CAP, HANDLE	FOP-1-6-5	CLIP, WIRE HARNESS	F-7-10-21
BOLT-WASHER, 6X27(CT200)	F-7-10-12	CAP, L. SIDE COVER	F-8-10-24	CLIP, WIRE HARNESS	F-7-10-22
BOLT-WASHER, 6X29	E-6-10-30	CAP, OIL(YELLOW)	E-3-10-5	CLIP, WIRE HARNESS	F-10-67
BOLT-WASHER, 8X35	E-18-47	CAP, SWITCH	FOP-1-8	CLIP, WIRE HARNESS(6.3MM)	FOP-1-6-66
BOSS, FLYWHEEL	E-5-12	CAP, TIMING BELT TENSIONER	E-13-8	CLIP, WIRE HARNESS, 10MM	E-14-26
BOX ASSY., JUNCTION	F-7-20-1	CAP, UNDER COVER	F-3-20-24	CLIP, WIRE HARNESS, 25MM	E-18-1-31
BOX ASSY., REMOTE CONTROL(EU)	FOP-1-6-1	CAP, WATER JOINT	F-3-20-4	CLIP, WIRE HARNESS, 25MM	E-20-10-10
BOX KIT, REMOTE CONTROL	FOP-1-1	CARTRIDGE, OIL FILTER	E-3-10-4	CLIP, WIRE HARNESS, 25MM	F-3-20-49
BOX KIT, REMOTE CONTROL	FOP-1-2-1	CASE ASSY., GEAR(L)	F-3-10-1	CLUTCH COMP., OVERRUNNING	E-21-3
BOX KIT, REMOTE CONTROL	FOP-1-4-1	CASE ASSY., GEAR(XL)	F-3-10	COCK ASSY., FUEL DRAIN	E-18-1-24
BRACKET A, RR. COVER	F-8-10-8	CASE ASSY., GEAR(XL)	F-3-10	COIL COMP., PLUG HOLE	E-20-2
BRACKET ASSY.	F-11-6	CASE ASSY., OIL SEAL	E-3-2	COLLAR	E-18-23
BRACKET B, HARNESS CLIP	E-3-22	CASE COMP., GEAR	F-3-27	COLLAR	E-18-26
BRACKET B, RR. COVER	F-8-10-9	CASE COMP., MOUNT	E-6-10-22	COLLAR, 6.2X10X25.5	F-3-20-52
BRACKET C, COUPLER	F-7-10-2	CASE COMP., PUMP	E-18-27	COLLAR, 8.5X14.5	E-18-56
BRACKET C, HARNESS CLIP	E-1-12	CASE KIT, GEAR	FOP-12-1	COLLAR, 8.5X14.5	F-8-10-38
BRACKET, A.C. GENERATOR FUSE	E-20-10-3	CASE, ELECTRONIC PARTS	E-20-10-1	COLLAR, C.D.I. UNIT CASE	E-15-26
BRACKET, BUZZER	FOP-7-17	CASE, EXTENSION	F-3-20-10	COLLAR, C.D.I. UNIT CASE	E-20-5
BRACKET, BUZZER	FOP-7-1-14	CASE, EXTENSION	F-3-20	COLLAR, C.D.I. UNIT CASE	E-20-10-11
BRACKET, CABLE	F-8-10-1	CASE, FLUSH VALVE	E-6-10-7	COLLAR, C.D.I. UNIT CASE	F-7-10-25
BRACKET, CLIP B	E-1-11	CASE, GEAR	F-3-3	COLLAR, DISTANCE	F-4-33
BRACKET, CLIP B	E-3-21	CASE, POWER TILT RELAY	F-7-10-11	COLLAR, DISTANCE(A)	FOP-5-3
BRACKET, COUPLER D	E-13-18	CASE, SWIVEL	F-10-20	COLLAR, DISTANCE(B)	FOP-5-4
BRACKET, ECU	E-20-10-5	CASE, SWIVEL	F-10-	COLLAR, DISTANCE, 6.5X9X3	F-8-16
BRACKET, FR	E-21-10	CIRCLIP, EXTERNAL, 15MM	F-5-31	COLLAR, DISTANCE, 6.5X9X5	F-3-20-
BRACKET, FR. COVER	F-8-10-5	CIRCLIP, EXTERNAL, 15MM	F-5-1-34	COLLAR, DISTANCE, 6X10.5X25	F-3-20-53
BRACKET, HARNESS CLIP A	E-14-17	CIRCLIP, EXTERNAL, 39MM	F-10-66	COLLAR, DISTANCE, 6X10X43.5	FOP-1-6-68
BRACKET, HOOK	F-8-4	CIRCLIP, INTERNAL	F-11-38	COLLAR, LINK JOINT	FOP-1-6-67
BRACKET, L. SIDE COVER	F-8-10-7	CIRCLIP, INTERNAL, 43	F-3-20-48	COLLAR, LOWER CYLINDER	F-10-33
BRACKET, L. STERN	F-10-25	CIRCLIP, INTERNAL, 47MM	F-4-37	COLLAR, MOUNTING(6MM)	F-7-10-23
BRACKET, LINK JOINT	FOP-1-6-19	CLAMP	F-6-5	COLLAR, ORIFICE	F-11-50
BRACKET, NEUTRAL SWITCH	F-2-19	CLAMP	F-6-8	COLLAR, SHIFT SLIDER	F-2-11
BRACKET, R. SIDE COVER	F-8-10-6	CLAMP, CHECK VALVE	E-18-10-2	COLLAR, SLIDING PLATE	FOP-1-6-16
BRACKET, R. STERN	F-10-24	CLAMP, FUEL TUBE	E-18-10-22	COLLAR, STEERING ROD	F-10-71
BRACKET, REMOTE CONTROL	FOP-1-12	CLAMP, HARNESS	FOP-1-6-9	COLLAR, TIMING BELT COVER	E-13-10-10
BRACKET, REMOTE CONTROL	FOP-1-2-13	CLAMP, HOSE	E-18-10-10	CONTROL UNIT, ELECTRONIC	E-20-10-4
BRACKET, RR	E-21-11	CLAMP, POWER TILT CORD	FOP-1-6-31	CORD ASSY., INDICATOR(20FT)	FOP-13-2
BRACKET, SENSOR CORD	E-14-10-8	CLAMP, TUBE	F-10-21	CORD ASSY., INDICATOR(25FT)	FOP-13-
BRACKET, SHIFT LINK	F-2-16	CLAMP, TUBE(D10.5)	E-4-20	CORD ASSY., INDICATOR(30FT)	FOP-13-
BRACKET, SOLENOID VALVE	E-1-6	CLAMP, TUBE(D10.5)	E-18-10-25	CORD COMP., EMERGENCY	FOP-1-6-42
BRACKET, TILTING	F-10-28	CLAMP, TUBE(D10.7)	E-18-10-19	CORD COMP., EMERGENCY	FOP-7-11
BREAKER ASSY.	F-11-1	CLAMP, TUBE(D21)	E-4-22	CORD COMP., EMERGENCY	FOP-7-1-9
BRUSH ASSY.	F-11-2	CLAMP, TUBE(D29)	E-4-21	CORD, A.C. GENERATOR	F-7-10-8
BRUSH SET	E-21-7	CLAMP, TUBE(D32.5)	E-1-21	CORD, SWITCH	E-3-23
BUFFER, PLATE	E-18-1-6	CLAMP, WIRE, 8MM	E-18-1-30	COTTER, VALVE(FUJI VALVE)	E-9-10-17
BUSH A, COVER LOCK	F-8-10-15	CLAMPER, SENSOR TUBE	F-10-12	COVER ASSY.	FOP-1-4-11
BUSH A, THRUST RECEIVE	F-10-31	CLIP A, WIRE	E-1-13	COVER ASSY., COOLING FAN	E-15-29
BUSH B, COVER LOCK	F-8-10-16	CLIP D, SPEEDOMETER CABLE	E-14-18	COVER ASSY., CRANKCASE UPPER	E-3-1
BUSH B, THRUST RECEIVE	F-10-32	CLIP D, WASHER TUBE	E-1-28	COVER ASSY., ENGINE	F-8-2
BUSH COMP., VERTICAL SHAFT	F-3-20-12	CLIP, 10.7MM	F-11-37	COVER ASSY., L. TIMING BELT	E-13-10-3
BUSH, INSULATION	E-19-4	CLIP, BRAKE PIPE	F-2-21	COVER ASSY., R. TIMING BELT	E-13-10-2
BUSH, INSULATION	E-19-18	CLIP, EMERGENCY LOCK	FOP-1-6-43	COVER B, TERMINAL	F-7-10-6
BUSH, LOWER CYLINDER	F-11-27	CLIP, EMERGENCY LOCK	FOP-7-12	COVER B, TERMINAL(L)	F-7-10-5
BUSH, MOTOR CODE	F-11-21	CLIP, EMERGENCY LOCK	FOP-7-1-10	COVER COMP.	E-18-4
BUSH, SHIFT ARM	F-2-15	CLIP, HARNESS	E-1-23	COVER COMP., FUSE	F-7-20-2
BUSH, SWIVEL CASE	F-10-23	CLIP, HARNESS	E-18-54	COVER COMP., INTAKE MANIFOLD	E-14-10-5
BUSH, SWIVEL CASE	F-11-12	CLIP, HARNESS	F-8-10-36	COVER COMP., L. UNDER ENGINE	F-3-20-21
BUSH, TILT ARM	F-10-27	CLIP, HARNESS BAND(BLACK)	E-3-50	COVER COMP., R. UNDER ENGINE	F-3-20-20
BUTTON, THROTTLE	FOP-1-9	CLIP, HARNESS BAND(BLACK)	E-13-10-11	COVER, BEARING	E-19-5
BUTTON, THROTTLE	FOP-1-2-10	CLIP, HARNESS BAND(BLACK)	F-2-41	COVER, DRAIN PLUG(L)	F-3-20-13
BUTTON, THROTTLE	FOP-1-4-8	CLIP, HARNESS BAND(BLACK)	F-7-5	COVER, DRAIN PLUG(XL)	F-3-20-
BUZZER COMP., WARNING	FOP-1-6-46	CLIP, HARNESS BAND(BLACK)	F-7-10-24	COVER, DUAL GRIP	FOP-1-2-8
BUZZER COMP., WARNING	FOP-7-16	CLIP, HARNESS BAND(BLACK)	F-8-10-37	COVER, FLUSH VALVE	E-6-10-6
BUZZER COMP., WARNING	FOP-7-1-13	CLIP, HARNESS BAND(BLACK)	FOP-10-3	COVER, FR.	F-8-6
<C>		CLIP, INJECTOR	E-14-2	COVER, FR. SEPARATE	F-3-20-9
CABLE ASSY., POWER TILT RELAY	F-7-10-7	CLIP, PISTON PIN	E-7-4	COVER, GEAR CASE	F-3-5
CABLE ASSY., REMOTE CONTROL(B)	FOP-1-6-34	CLIP, SENSOR HOSE	E-1-14	COVER, GRIP	FOP-1-4-4
CABLE ASSY., STARTER	F-7-10-3	CLIP, SHIFT WIRE	E-1-15	COVER, IMPELLER	F-4-4
CABLE ASSY., SWITCH PANEL	FOP-13-3	CLIP, TUBE	E-6-10-1	COVER, L. CAMSHAFT THRUST	E-9-8
CABLE ASSY., SWITCH PANEL	FOP-13-	CLIP, TUBE	E-18-1-1	COVER, L. CYLINDER HEAD	E-1-3
CABLE ASSY., SWITCH PANEL	FOP-13-	CLIP, TUBE	E-18-10-11	COVER, L. GRIP	FOP-1-5
CABLE COMP. A, COVER LOCK	F-8-10-12	CLIP, TUBE(B10)	E-6-10-32	COVER, L. GRIP	FOP-1-2-6
CABLE COMP. B, COVER LOCK	F-8-10-13	CLIP, TUBE(B12)	E-1-22	COVER, L. LOWER MOUNTING	F-3-20-27
CABLE COMP., THROTTLE	E-15-10	CLIP, TUBE(B12)	E-18-1-28	COVER, L. RELIEF VALVE	E-6-10-17
CABLE SET, PANEL INDICATOR	FOP-13-1	CLIP, TUBE(B12)	E-18-10-20	COVER, L. WATER JACKET	E-6-10-21
CABLE SET, PANEL INDICATOR	FOP-13-	CLIP, TUBE(B12.5)	E-6-10-33	COVER, LOCK ARM	FOP-1-4-6
CABLE SET, PANEL INDICATOR	FOP-13-	CLIP, TUBE(B12.5)	E-18-1-29	COVER, NEUTRAL SWITCH	F-2-20
CAMSHAFT, L	E-9-10-2	CLIP, TUBE(B12.5)	F-3-20-47	COVER, OIL LEVEL GAUGE	E-3-16
CAMSHAFT, R	E-9-10-1	CLIP, TUBE(B8)	E-18-1-27	COVER, OIL PUMP	E-5-4
CAP COMP., OIL TANK	F-11-30	CLIP, TUBE(B8)	F-10-65	COVER, PLUG MAINTENANCE	F-3-20-19

COVER, PUMP	E-18-28	GEAR, BEVEL(REVERSE)(24T)	F-5-9	IMPELLER, PUMP	F-4-1
COVER, PUMP(A)	E-18-29	GEAR, PINION	F-4-16	INJECTOR ASSY., FUEL	E-14-1
COVER, R. CAMSHAFT THRUST	E-9-7	GEAR, PINION(COUNTER ROTATION) ..	F-4-	INSULATOR	E-18-31
COVER, R. CYLINDER HEAD	E-1-1	GENERATOR ASSY., A.C.	E-19-14	INSULATOR COMP.	E-18-30
COVER, R. LOWER MOUNTING	F-3-20-26	GRIP, REMOTE CONTROL HANDLE	FOP-1-6	<J>	
COVER, R. LOWER MOUNTING	F-3-20-	GRIP, REMOTE CONTROL HANDLE	FOP-1-2-7	JOINT A, VACUUM TUBE	E-14-10-7
COVER, R. LOWER MOUNTING	F-3-20-	GRIP, REMOTE CONTROL HANDLE	FOP-1-6-4	JOINT ASSY (INLET)	F-6-2
COVER, R. RELIEF VALVE	E-6-10-13	GRIP, SCREW DRIVER	F-13-16	JOINT ASSY (OUTLET)	F-6-3
COVER, R. WATER JACKET	E-6-10-19	GROMMET A, UNDER CASE	F-8-10-3	JOINT ASSY., OIL PIPE	E-3-12
COVER, STARTER TERMINAL	F-7-10-4	GROMMET, AIR CLEANER CASE	F-8-1	JOINT B, WASHER TUBE(MITSUBA)	F-10-8
COVER, THERMOSTAT	E-4-13	GROMMET, ELECTRONIC PARTS CASE ..	E-20-1	JOINT SET	E-18-6
COVER, UPPER MOUNT	F-10-18	GROMMET, ELECTRONIC PARTS CASE ..	E-20-10-2	JOINT, DRIVE	F-11-16
COVER, WATER JACKET	E-18-12	GROMMET, ELECTRONIC PARTS CASE ..	F-7-10-1	JOINT, FUEL PIPE	E-14-8
CRANKCASE COMP.	F-3-10-1	GROMMET, EXTENSION CASE	F-4-13	JOINT, FUEL PIPE	E-18-38
CRANKSHAFT COMP.	E-7-9	GROMMET, GEAR CASE	F-3-4	JOINT, FUEL RETURN	E-18-10-12
CUP	E-18-1-16	GROMMET, L. IDLE PORT	F-3-20-29	JOINT, WATER HOSE	F-3-20-2
CUP SET, WATER SEPARATOR	E-18-1-5	GROMMET, POWER TILT SWITCH	F-3-20-8	<K>	
<D>		GROMMET, R. IDLE PORT	F-3-20-28	KEY, 4.5X24	E-13-28
DAMPER, HOOK	F-8-5	GROMMET, RELAY	F-7-10-10	KEY, SPECIAL	E-13-29
DOWEL PIN, 10X12	E-14-30	GROMMET, RELAY BRACKET	E-20-10-6	KEY, WOODRUFF	F-4-23
DOWEL PIN, 13X37	E-3-41	GROMMET, SILENCER	E-15-9	KIT, CABLE(NMEA)(6FT)	FOP-10-1
DOWEL PIN, 14X15	E-5-15	GROMMET, TIMING BELT COVER	E-13-10-1	<L>	
DOWEL PIN, 14X15	E-6-20-9	GROMMET, UNDER CASE	E-15-18	LABEL, FUSE & OIL CAUTION	F-12-2
DOWEL PIN, 16X22	E-9-15	GROMMET, UNDER CASE(C)	F-3-20-7	LAMP ASSY., INDICATION	FOP-1-6-44
DOWEL PIN, 5X8	E-3-54	GROMMET, UNDER CASE(C)	F-11-10	LAMP ASSY., INDICATION(4-LED)	FOP-7-14
DOWEL PIN, 6X10	E-3-53	GROMMET, VAPOR SEPARATOR	E-18-34	LAMP ASSY., INDICATION(4-LED)	FOP-7-1-11
DOWEL PIN, 6X10	E-9-14	GROMMET, VAPOR SEPARATOR	E-18-35	LEVER SET	E-21-18
DOWEL PIN, 6X10	E-9-18	GROMMET, WATER CHECK	F-3-20-30	LEVER, COVER LOCK	F-8-10-14
DOWEL PIN, 6X10	E-13-30	GROMMET, WATER TUBE	E-6-6	LEVER, HANDLE LOCK	FOP-1-6-3
DOWEL PIN, 6X10	E-15-28	GUIDE COMP., ROD	F-11-18	LEVER, IDLE	FOP-1-6-22
DOWEL PIN, 6X10	F-3-24	GUIDE, EX. VALVE(OS)	E-9-3	LINER, PUMP	F-4-3
DOWEL PIN, 6X10	F-3-20-50	GUIDE, IN. VALVE(OS)	E-9-2	LINER, SWIVEL CASE	F-10-22
DOWEL PIN, 6X10	F-4-24	GUIDE, L. EX.	E-6-10-5	LOCK ASSY., FR.	F-8-10-22
DOWEL PIN, 8X14	E-3-10-18	GUIDE, R. EX.	E-6-10-2	LOCK COMP., SIDE	F-8-10-23
DRIVER 3, MINUS SCREW(NO.2)	F-13-15	<H>		LOW PERMEATION HOSE L=1600	F-6-7
<E>		HANDLE, REMOTE CONTROL	FOP-1-4	LOW PERMEATION HOSE L=700	F-6-6
END COVER, RR.	E-19-17	HANDLE, REMOTE CONTROL	FOP-1-2-5	<M>	
END, NIPPLE	F-10-10	HANDLE, REMOTE CONTROL	FOP-1-4-3	MANIFOLD COMP., INTAKE	E-14-10-3
E-RING, 10MM	F-4-34	HANDLE, REMOTE CONTROL	FOP-1-6-2	MANIFOLD COMP., L. EX.	E-4-4
E-RING, 12MM	F-2-43	HANGER, ENGINE	E-3-10-2	MANIFOLD COMP., R. EX.	E-4-2
E-RING, 15MM	F-11-51	HANGER, ENGINE	E-9-1	MARK, FAST IDLE	FOP-1-6-49
E-RING, 3MM	FOP-1-6-78	HARNESS ASSY., MAIN WIRE	F-7-1	MARK, FLUSH MOUNT	FOP-1-4-19
E-RING, 4MM	F-2-42	HARNESS ASSY., SWITCH PANEL	FOP-7-6	MARK, FR. EMBLEM(TOHATSU)	F-12-12
E-RING, 4MM	FOP-1-6-79	HARNESS ASSY., SWITCH PANEL	FOP-7-1-4	MARK, HANDLE FLUSH MOUNT	FOP-1-4-18
E-RING, 6MM	F-8-10-39	HARNESS COMP.	E-18-41	MARK, L. SIDE STRIPE	F-12-11
E-RING, 6MM	FOP-1-36	HEAD COMP., CYLINDER	E-9-5	MARK, R. SIDE STRIPE	F-12-4
E-RING, 6MM	FOP-1-2-41	HOLDER	E-18-11	MARK, REMOTE CONTROL(DUAL)	FOP-1-2-24
E-RING, 6MM	FOP-1-4-28	HOLDER ASSY., BEARING	F-5-1-37	MARK, REMOTE CONTROL(SINGLE)	FOP-1-21
E-RING, 7MM	FOP-1-6-80	HOLDER ASSY., BRUSH	E-19-1	MARK, RR.(BFT250)	F-12-3
EXTENSION, OIL FILLER	E-3-10-6	HOLDER COMP., BRUSH	E-21-9	MESH, FUEL FILTER	E-14-4
<F>		HOLDER, BEARING	F-5-12	METAL COMP., ANODE	F-3-9
FAN, COOLING	E-13-16	HOLDER, NEUTRAL LOCK	FOP-1-4-14	METAL KIT, ANODE	F-10-1
FILTER	E-18-1-12	HOLDER, OIL FILTER	E-3-10-7	METAL, ANODE	E-3-4
FILTER ASSY., SPOOL VALVE	E-3-19	HOLDER, PROPELLER SHAFT	F-5-11	METAL, ANODE	E-3-5
FILTER B.	F-11-19	HOLDER, PROPELLER SHAFT	F-5-1-11	METAL, ANODE	E-4-1
FLOAT	E-18-1-15	HOLDER, ROD(A)	F-8-20-3	METER LEAD WIRE	FOP-3-6
FLOAT SET	E-18-2	HOLDER, SEAL	F-2-17	MOTION COMP., LOST	E-9-10
FLYWHEEL COMP.	E-5-11	HOLDER, SHIFT ROD	F-4-12	MOTOR ASSY., POWER TILT	F-11-5
FRAME COMP., MOUNTING(L)	F-10-13	HOLDER, STRIKER	F-8-10-21	MOTOR ASSY., STARTER	E-21-1
FRAME COMP., MOUNTING(XL)	F-10-	HOSE A, PRESSURE REGULATOR	E-18-10-13	MOUNT COMP., LOWER RUBBER	F-3-20-17
FUSE, BLOCK(150A)	F-7-20-3	HOSE B, PRESSURE REGULATOR	E-18-10-14	MOUNT COMP., UPPER RUBBER	F-10-15
FUSE, MINI(10A)	F-7-20-9	HOSE COMP., FUEL	E-14-9	<N>	
FUSE, MINI(15A)	F-7-20-10	HOSE COMP., FUEL JOINT	E-14-10	NIPPLE, GREASE	F-10-68
FUSE, MINI(30A)	F-7-20-11	HOUSING ASSY., L. INNER	FOP-1-3	NIPPLE, SENSOR	F-10-11
<G>		HOUSING ASSY., L. INNER	FOP-1-2-3	NUT, CASTLE, 18MM	F-5-14
GASKET B, IMPELLER	F-4-5	HOUSING ASSY., R. INNER	FOP-1-2-4	NUT, CASTLE, 18MM	F-5-1-14
GASKET COMP., CYLINDER HEAD	E-9-9	HOUSING ASSY., R. INNER	FOP-1-4-2	NUT, FLANGE CAP, 10MM	E-3-10-16
GASKET, EAC VALVE	E-15-5	HOUSING COMP., REMOTE CONTROL ..	FOP-1-13	NUT, FLANGE, 10MM	F-10-51
GASKET, EX. PIPE	E-6-4	HOUSING COMP., REMOTE CONTROL ..	FOP-1-2-14	NUT, FLANGE, 12MM	F-10-48
GASKET, FR. INJECTOR BASE	E-14-12	HOUSING COMP., REMOTE CONTROL ..	FOP-1-6-10	NUT, FLANGE, 5MM	FOP-6-2
GASKET, INTAKE MANIFOLD	E-14-15	HOUSING COMP., REMOTE CONTROL ..	FOP-1-6-11	NUT, FLANGE, 5MM	FOP-7-2
GASKET, INTAKE MANIFOLD	E-14-10-1	HOUSING, IMPELLER	F-4-2	NUT, FLANGE, 5MM	FOP-7-1-2
GASKET, L. EX. MANIFOLD	E-4-5	HOUSING, LEAD	FOP-1-14	NUT, FLANGE, 8MM	E-14-25
GASKET, MOUNT CASE	E-6-20-1	HOUSING, LEAD	FOP-1-2-15	NUT, FLANGE, 8MM	E-14-10-19
GASKET, R. EX. MANIFOLD	E-4-3	HOUSING, LOWER CENTER MOUNTING ..	F-10-17	NUT, FLANGE, 8MM	E-19-25
GASKET, RR. INJECTOR BASE	E-14-14	HOUSING, LOWER CENTER MOUNTING ..	F-10-	NUT, HEX., 12MM	F-10-72
GASKET, THROTTLE BODY	E-15-2	HOUSING, LOWER MOUNTING	F-3-20-16	NUT, HEX., 16MM	F-3-20-41
GAUGE COMP., OIL LEVEL	E-3-15	HOUSING, REMOTE CONTROL BOX(C) ..	FOP-1-6-12	NUT, HEX., 16MM	FOP-1-6-54
GEAR ASSY., INTERNAL	E-21-16	HOUSING, UPPER MOUNTING	F-10-14	NUT, HEX., 16MM	FOP-7-19
GEAR ASSY., PLANETARY	E-21-4	HOUSING, WATER PUMP	F-4-6	NUT, HEX., 16MM	FOP-7-1-16
GEAR COMP., BEVEL(FORWARD)	F-5-8	<I>		NUT, HEX., 18MM	F-4-20
GEAR COMP., BEVEL(REVERSE)	F-5-1-9	IDLER B, TIMING BELT	E-13-15	NUT, HEX., 20MM	F-2-28
GEAR, BEVEL(FORWARD)(24T)	F-5-1-8	IDLER, TIMING BELT(KOVO SEIKO)	E-13-12	NUT, HEX., 5MM	FOP-1-29

NUT, HEX., 5MM	FOP-1-35	O-RING, 7.8X1.9(ARAI)	E-14-27	PLATE, TIMING BELT GUIDE	E-13-2
NUT, HEX., 5MM	FOP-1-2-33	O-RING, 7.8X1.9(ARAI)	E-18-55	PLATE, WATER TUBE	E-6-7
NUT, HEX., 5MM	FOP-1-2-34	O-RING, 8.8X2.4	E-3-11	PLATE, WINKER BUZZER	FOP-1-6-45
NUT, HEX., 5MM	FOP-1-2-40	O-RING, 9.5X1.9	E-3-44	PLATE, WINKER BUZZER	FOP-7-15
NUT, HEX., 5MM	FOP-1-6-77	O-RING, 9.5X1.9	E-4-24	PLATE, WINKER BUZZER	FOP-7-1-12
NUT, HEX., 6MM	E-19-27	O-RING, PRESSURE REGULATOR	E-14-7	PLUG, BLIND, 20MM	F-8-19
NUT, HEX., 6MM	F-8-18	O-RING, TIMING BELT TENSIONER	E-13-11	PLUG, FUEL TUBE	F-8-20-2
NUT, HEX., 6MM	FOP-1-4-25	O-RING, WATER PUMP	F-4-30	PLUG, HOLE, 5MM	F-3-20-54
NUT, HEX., 6MM	FOP-1-6-55	O-RING, WATER PUMP HOUSING	F-4-31	PLUG, INNER CONNECTOR	FOP-1-6-35
NUT, HEX., 6MM	FOP-1-6-76	<P>		PLUG, INNER CONNECTOR	FOP-7-7
NUT, LOCK, 68MM	F-4-19	PACKING	E-21-17	PLUG, INNER CONNECTOR	FOP-7-1-5
NUT, PULLEY LOCK	E-19-7	PACKING	F-11-49	PLUG, OUTER CONNECTOR	FOP-1-6-36
NUT, SELF-LOCK(25X2.0)	F-10-50	PACKING, DUAL	FOP-1-2-19	PLUG, OUTER CONNECTOR	FOP-7-8
NUT, SELF-LOCK(3/8-24UNF)	F-10-52	PACKING, FLASH VALVE	E-6-10-16	PLUG, OUTER CONNECTOR	FOP-7-1-6
NUT, SELF-LOCK(7/8-14UNF)	F-10-49	PACKING, HEAD COVER	E-1-2	PLUG, SPARK(IZFR6K-11E)	E-20-
NUT, SELF-LOCK, 12MM	F-3-21	PACKING, INTAKE MANIFOLD UP	E-14-10-6	PLUG, SPARK(ZFR6K-11E)	E-20-3
NUT, SELF-LOCK, 14MM	F-3-20-42	PACKING, OIL HOLE	E-3-9	PRIMER BULB	F-6-4
NUT, SELF-LOCK, 5MM	F-3-19	PACKING, OIL LEVEL GAUGE	E-3-17	PRIMER BULB ASSY	F-6-1
NUT, SELF-LOCK, 6MM	F-3-18	PACKING, OIL PAN	E-6-2	PROPELLER COMP., THREE BLADES	FOP-8-1
NUT, SELF-LOCK, 6MM	F-10-47	PACKING, OIL PUMP BODY	E-5-2	PROPELLER COMP., THREE BLADES	FOP-8-
NUT, TAPPET ADJUSTING	E-9-10-20	PACKING, RELIEF VALVE	E-6-10-15	PROPELLER COMP., THREE BLADES	FOP-8-
NUT, WATER MOUTH	F-3-20-1	PACKING, RELIEF VALVE COVER	E-6-10-14	PROPELLER COMP., THREE BLADES	FOP-8-
NUT-WASHER, 5MM	E-19-26	PACKING, SINGLE	FOP-1-18	PROPELLER COMP., THREE BLADES	FOP-8-
NUT-WASHER, 6MM	F-7-10-18	PACKING, THROTTLE BODY	E-14-10-2	PROPELLER COMP., THREE BLADES	FOP-8-
NUT-WASHER, 8MM	F-7-10-17	PACKING, WATER JACKET COVER	E-6-10-20	PROPELLER COMP., THREE BLADES	FOP-8-
<O>		PAN, OIL	E-6-1	PROPELLER COMP., THREE BLADES	FOP-8-
OIL SEAL	F-11-39	PANEL ASSY., INDICATOR(4-LED)	FOP-7-13	PROPELLER COMP., THREE BLADES	FOP-8-
OIL SEAL, 14X26X6	F-2-38	PANEL ASSY., SWITCH	FOP-7-3	PROPELLER COMP., THREE BLADES	FOP-8-
OIL SEAL, 31X46X7(NOK)	E-5-17	PANEL KIT, SWITCH(4-LED)	FOP-7-1	PROPELLER COMP., THREE BLADES	FOP-8-
OIL SEAL, 39.5X52X6(ARAI)	F-10-69	PANEL KIT, SWITCH(4-LED)	FOP-7-1-1	PROPELLER COMP., THREE BLADES	FOP-8-
OIL SEAL, 39X53X8(NOK)	E-9-16	PANEL, CONTROL	FOP-7-4	PROPELLER COMP., THREE BLADES	FOP-8-
OIL SEAL, 41X66X8	E-3-42	PANEL, CONTROL	FOP-7-5	PROPELLER COMP., THREE BLADES	FOP-8-
OIL SEAL, 46X60X9	E-5-16	PANEL, CONTROL	FOP-7-1-3	PULLER, MINI FUSE	F-7-20-4
OIL SEAL, 80X98X10(ARAI)	E-3-43	PIN B, DOWEL, 10X16	E-5-20	PULLEY	E-19-6
ORIFICE ASSY., OIL CONTROL	E-3-10	PIN B, DOWEL, 10X16	E-6-20-10	PULLEY COMP., L. TIMING BELT	E-13-5
O-RING	E-14-10-13	PIN, 6X6	FOP-1-6-64	PULLEY COMP., R. TIMING BELT	E-13-4
O-RING	E-15-25	PIN, LINK	F-2-36	PULLEY, CRANKSHAFT	E-13-3
O-RING	E-18-13	PIN, LOCK, 6MM	FOP-1-6-63	PULLEY, TIMING BELT DRIVE	E-13-1
O-RING	E-18-14	PIN, PISTON	E-7-3	PUMP ASSY.	F-11-14
O-RING	E-18-15	PIN, SHIFTER, 8X50	F-5-2	PUMP ASSY., FUEL	E-1-7
O-RING	E-18-16	PIN, SHIFTER, 8X50	F-5-1-2	PUMP ASSY., OIL	E-5-1
O-RING	E-18-17	PIN, SNAP, 6MM	F-2-35	PUMP KIT, IMPELLER	F-4-35
O-RING	E-18-18	PIN, SPLIT, 4.0	F-5-22	PUMP KIT, IMPELLER	F-4-36
O-RING	E-18-19	PIN, SPLIT, 4.0	F-5-1-23	PUMP UNIT SET A, FUEL	E-18-7
O-RING	E-18-1-20	PIN, SPLIT, 4.0	FOP-12-2	PUMP UNIT SET B, FUEL	E-18-9
O-RING	E-18-1-21	PIN, SPRING, 3X20	F-10-73	PUMP UNIT, FUEL	E-18-37
O-RING	E-18-1-23	PIN, UPPER CYLINDER	F-11-28	<R>	
O-RING	F-4-29	PIN, VERTICAL SHAFT	E-13-19	RECEIVER, THRUST	F-10-30
O-RING	FOP-12-7	PIPE COMP., L. EX.	E-6-5	RECTIFIER ASSY.	E-19-19
O-RING SET, 3.5X31.7	F-11-47	PIPE COMP., L. FUEL	E-14-5	REGULATOR ASSY.	E-19-20
O-RING, 1.8X69.6	F-11-41	PIPE COMP., R. EX.	E-6-3	REGULATOR ASSY., PRESSURE	E-14-6
O-RING, 1.8X7.7	F-11-43	PIPE, FUEL	E-18-10-7	RELAY ASSY., FUEL PUMP(DENSO)	F-7-20-5
O-RING, 1.9X11	F-11-44	PIPE, HARNESS GUIDE	FOP-1-6-32	RELAY ASSY., POWER TILT	F-7-10-9
O-RING, 121X3.1	F-5-30	PIPE, R. FUEL	E-14-3	RELAY ASSY., POWER(12V-20A)	F-7-20-6
O-RING, 121X3.1	F-5-1-33	PISTON	E-7-2	RETAINER, VALVE SPRING	E-9-10-15
O-RING, 121X3.1	FOP-12-8	PISTON COMP., FREE	F-11-24	RING	E-18-32
O-RING, 13X1.5(ARAI)	E-3-48	PIVOT, SHIFT	F-2-12	RING SET, PISTON(STD.)(RIKEN)	E-7-1
O-RING, 15.54X2.26	F-10-70	PIVOT, SHIFT	FOP-1-6-17	RING, BACK UP	F-11-20
O-RING, 16.3X3.5	E-3-47	PLATE	E-18-10	RING, CROSS PIN	F-5-3
O-RING, 16MM	E-6-10-36	PLATE	E-18-45	RING, CROSS PIN	F-5-1-3
O-RING, 18.3X3.5	E-3-45	PLATE	E-18-1-22	RING, INNER(15X20X23)	F-2-37
O-RING, 2.0X70.5	F-11-40	PLATE COMP., SLIDING	FOP-1-6-15	RING, SETTING(39)	F-5-21
O-RING, 20.6X2.6	E-5-18	PLATE SET, TRANSON(5.5MM FLAT)	FOP-9-2	RING, STOPPER	F-2-7
O-RING, 23.5X2	E-6-10-39	PLATE SET, TRIM ADJUST	FOP-9-1	RING, WATER TUBE SEAL	F-4-8
O-RING, 25X2.4(NOK)	E-3-49	PLATE, CABLE CLAMP	FOP-1-11	ROD COMP. A, SHIFT(L)	F-4-11
O-RING, 26.2X2.4(NOK)	E-3-46	PLATE, CABLE CLAMP	FOP-1-2-12	ROD COMP. A, SHIFT(XL)	F-4-
O-RING, 26.9X2.4(NOK)	F-2-40	PLATE, DWELL	FOP-1-15	ROD COMP., CONNECTING	E-7-7
O-RING, 26X2.7	E-3-10-17	PLATE, DWELL	FOP-1-2-16	ROD COMP., PISTON	F-11-22
O-RING, 3.5X35.7	F-11-45	PLATE, DWELL	FOP-1-4-10	ROD COMP., PISTON(B)	F-11-15
O-RING, 3.5X38.7	F-11-42	PLATE, HANDLE	FOP-1-10	ROD COMP., SHIFT	F-4-9
O-RING, 3.5X41.7	F-11-46	PLATE, HANDLE	FOP-1-2-11	ROD COMP., SHIFT	F-4-
O-RING, 31.5X2.4(ARAI)	E-4-25	PLATE, INTAKE MANIFOLD CENTER	E-14-10-4	ROD KIT, STEERING	F-10-3
O-RING, 33.5X2	E-6-10-38	PLATE, L. TIMING BELT COVER	E-13-10-4	ROD, LINK	F-2-10
O-RING, 37X2.4(ARAI)	E-1-24	PLATE, LEVER SETTING	FOP-1-6-8	ROLLER, 3X13.8	F-5-28
O-RING, 48.5X2.4	E-9-17	PLATE, LOCK	F-2-13	ROLLER, 3X13.8	F-5-1-31
O-RING, 49.4X3.1	E-6-10-37	PLATE, R. TIMING BELT COVER	E-13-10-5	ROLLER, 5X8	E-5-24
O-RING, 59.4X3.1	E-21-23	PLATE, REMOTE CONTROL	FOP-1-6-47	ROLLER, CLICK	FOP-1-6-65
O-RING, 6.9X1.45	F-3-25	PLATE, REMOTE CONTROL CABLE	F-2-2	ROTOR ASSY.	E-19-15
O-RING, 6.9X1.45	FOP-12-6	PLATE, RUBBER SETTING	F-3-1	ROTOR COMP.	E-21-2
O-RING, 65.4X2.4	F-4-32	PLATE, SHIFT	F-5-7	ROTOR, OIL PUMP INNER	E-5-5
O-RING, 66.4X3.1	E-4-23	PLATE, SHIFT	F-5-1-7	ROTOR, OIL PUMP OUTER	E-5-6
O-RING, 7.45X3.61(NOK)	E-14-29	PLATE, SPRING SETTING	FOP-1-6-23	RUBBER C, STAND STOPPER	F-3-20-55
O-RING, 7.47X3.6	E-14-28	PLATE, STARTER CABLE	F-8-10-2	RUBBER, DRAIN PLUG	F-3-20-11

RUBBER, FR. CARRIER CUSHION	F-8-10-11	SEAL, L. IDOL PORT	F-3-20-15	SPACER, CLICK SPRING.....	FOP-1-6-27
RUBBER, MOUNT CASE SEAL	E-6-10-23	SEAL, R. IDOL PORT	F-3-20-14	SPACER, INTAKE MANIFOLD.....	E-14-16
RUBBER, OIL PUMP	E-5-3	SEAL, SPARK PLUG TUBE(NOK)	E-1-4	SPACER, L. RELIEF VALVE.....	E-6-10-18
RUBBER, RING	E-4-11	SEAL, UPPER MOUNT COVER	F-10-19	SPACER, NEUTRAL SWITCH.....	FOP-1-6-30
RUBBER, STOPPER	F-8-10-10	SEAL, WATER	F-11-48	SPACER, R. RELIEF VALVE.....	E-6-10-12
RUBBER, UPPER MOUNT STOPPER.....	F-10-16	SEAL, WATER(14X26X8)	F-2-39	SPACER, REMOTE CONTROL BOX.....	FOP-1-6-26
<S>		SEAL, WATER, 12X21X6	F-4-28	SPACER, THERMOSTAT COVER	E-4-12
SCREEN COMP., FUEL STRAINER	E-18-39	SEAL, WATER, 12X21X6	FOP-12-5	SPACER, THROTTLE BODY	E-15-4
SCREEN, L. WATER	F-3-7	SEAL, WATER, 22X35X7	E-6-10-35	SPRING COMP., CLICK.....	F-2-5
SCREEN, R. WATER	F-3-6	SEAL, WATER, 26X42X7	F-4-27	SPRING COMP., CLICK.....	F-10-4
SCREW	E-19-9	SEAL, WATER, 26X42X7	FOP-12-3	SPRING COMP., TIMING BELT.....	E-13-9
SCREW	E-19-10	SEAL, WATER, 30X45X7	F-5-29	SPRING, ACCELERATOR WHEEL.....	FOP-1-6-21
SCREW SET	E-15-1	SEAL, WATER, 30X45X7	F-5-1-32	SPRING, AIR FLOW TUBE	E-15-7
SCREW SET, DRAIN	E-18-5	SEAL, WATER, 30X45X7	FOP-12-4	SPRING, CHOKE RETURN	FOP-1-6-25
SCREW SET, DRAIN	E-18-1-34	SEAT, VALVE SPRING.....	E-9-10-16	SPRING, CLICK ASSIST.....	F-2-6
SCREW, 6X95	FOP-1-6-53	SEAT, WATER MOUTH.....	F-3-20-3	SPRING, CLICK ASSIST.....	F-10-5
SCREW, FLAT, 5X12	FOP-1-6-52	SENSOR ASSY., AIR TEMP.....	E-15-16	SPRING, COVER LOCK HOOK	F-8-10-17
SCREW, FLAT, 5X55	F-3-11	SENSOR ASSY., CRANK	E-3-27	SPRING, EX. VALVE	E-9-10-14
SCREW, FLAT, 6X16	E-5-19	SENSOR ASSY., MAP	E-14-10-12	SPRING, FLUSH VALVE	E-6-10-8
SCREW, PAN	E-18-21	SENSOR ASSY., TRIM ANGLE.....	F-10-7	SPRING, LOCK ADJUSTER.....	F-8-7
SCREW, PAN, 4X10	FOP-1-26	SENSOR ASSY., WATER	E-3-26	SPRING, LOCK LEVER RETURN	F-8-10-18
SCREW, PAN, 4X10	FOP-1-2-29	SENSOR ASSY., WATER	E-4-15	SPRING, MOTOR	F-11-9
SCREW, PAN, 5X10	FOP-1-23	SENSOR COMP., KNOCK	E-3-20	SPRING, NEUTRAL LOCK ARM	FOP-1-4-7
SCREW, PAN, 5X10	FOP-1-2-26	SENSOR COMP., TDC1-TDC2	E-13-10-6	SPRING, RELIEF VALVE	E-5-9
SCREW, PAN, 5X10	FOP-1-6-70	SENSOR, OXYGEN	E-4-14	SPRING, RELIEF VALVE	E-6-10-11
SCREW, PAN, 5X12.....	E-18-1-14	SEPARATOR ASSY., VAPOR	E-18-33	SPRING, REMOTE CONTROL HANDLE	FOP-1-6-7
SCREW, PAN, 5X16	E-3-51	SEPARATOR ASSY., WATER	E-18-1-4	SPRING, ROCKER ARM	E-9-10-9
SCREW, PAN, 5X16	FOP-1-22	SHAFT ASSY., CLUTCH	E-21-13	SPRING, SET	E-18-40
SCREW, PAN, 5X16	FOP-1-2-25	SHAFT ASSY., GEAR	E-21-15	SPRING, SHIFT	F-5-6
SCREW, PAN, 5X16	FOP-1-4-20	SHAFT COMP., EX. ROCKER ARM	E-9-10-8	SPRING, SHIFT	F-5-1-6
SCREW, PAN, 5X18	FOP-1-25	SHAFT COMP., INTAKE ROCKER ARM	E-9-10-7	SPRING, SHIFT CLICK.....	FOP-1-6-24
SCREW, PAN, 5X18	FOP-1-2-28	SHAFT COMP., SHIFT(A)	F-2-8	SPRING, SHIFT ROD	F-4-10
SCREW, PAN, 5X20	E-3-52	SHAFT COMP., SHIFT(B)	F-2-14	SPRING, VALVE(PINK)	E-9-10-13
SCREW, PAN, 5X20	FOP-1-24	SHAFT, COVER OPEN	F-8-10-19	STAY, A.C. GENERATOR	E-19-16
SCREW, PAN, 5X20	FOP-1-2-27	SHAFT, FR. LOCK	F-8-10-20	STAY, FUEL PIPE A	E-18-1-2
SCREW, PAN, 5X30	FOP-1-4-22	SHAFT, PROPELLER	F-5-10	STAY, FUEL PIPE B	E-18-1-3
SCREW, PAN, 5X40	FOP-1-28	SHAFT, PROPELLER	F-5-1-10	STAY, FUEL STRAINER	E-18-1-17
SCREW, PAN, 5X40	FOP-1-2-31	SHAFT, THROTTLE BUTTON	FOP-1-4-9	STAY, PLATE.....	E-18-8
SCREW, PAN, 5X40	FOP-6-3	SHAFT, TILTING	F-10-26	STAY, PLATE.....	E-18-36
SCREW, PAN, 5X40	FOP-7-18	SHAFT, VERTICAL(L)	F-4-14	STAY, POWER TILT SWITCH.....	F-3-20-6
SCREW, PAN, 5X40	FOP-7-1-15	SHAFT, VERTICAL(XL)	F-4-	STAY, VACUUM TANK.....	E-18-44
SCREW, PAN, 5X55	FOP-1-2-32	SHIFTER, CLUTCH	F-5-1	STAY, WATER SEPARATOR	E-18-1-7
SCREW, PAN, 5X65	FOP-1-34	SHIFTER, CLUTCH	F-5-1-1	STOPPER SET, SLEEVE	E-21-8
SCREW, PAN, 5X65	FOP-1-2-39	SHIM A, BEVEL(0.10)	F-5-18	STOPPER, LOWER MOUNT.....	F-3-20-18
SCREW, PAN, 5X8	E-21-22	SHIM A, BEVEL(0.10)	F-5-1-18	STOPPER, TILT	F-10-29
SCREW, PAN, 6X10	FOP-1-6-51	SHIM A, BEVEL(0.10)	F-5-1-19	STRAINER ASSY., FUEL	E-18-1-11
SCREW, PAN, 6X18	E-4-26	SHIM A, GEAR(0.10)	F-4-22	STRAINER COMP., OIL.....	E-5-7
SCREW, PAN, 6X18	FOP-1-27	SHIM A, THRUST(2.75)	F-5-19	STRAINER, FUEL PUMP	E-18-10-8
SCREW, PAN, 6X18	FOP-1-2-30	SHIM B, BEVEL(0.15)	F-5-	SUB HARNESS ASSY., POWER.....	FOP-1-19
SCREW, PAN, 6X22(SPECIAL)	E-21-21	SHIM B, BEVEL(0.15)	F-5-1-	SUB HARNESS ASSY., POWER.....	FOP-1-2-20
SCREW, PAN, 6X25	F-3-20-	SHIM B, BEVEL(0.15)	F-5-1-	SUB HARNESS ASSY., POWER.....	FOP-1-2-21
SCREW, PAN, 6X35	FOP-1-4-23	SHIM B, GEAR(0.15)	F-4-	SUB HARNESS ASSY., POWER.....	FOP-1-4-16
SCREW, PAN, 6X8	F-10-44	SHIM B, THRUST(2.80)	F-5-	SUSPENSION, COUPLER.....	F-7-2
SCREW, PAN, 6X8	F-10-77	SHIM C, BEVEL(0.30)	F-5-	SUSPENSION, STRAINER	E-18-1-18
SCREW, PAN, 6X8	F-11-35	SHIM C, BEVEL(0.30)	F-5-1-	SUSPENSION, STRAINER	E-18-1-19
SCREW, RIVET, 5X10	F-10-45	SHIM C, BEVEL(0.30)	F-5-1-	SUSPENSION, STRAINER	E-18-10-9
SCREW, RIVET, 5X10	F-11-36	SHIM C, GEAR(0.30)	F-4-	SWITCH ASSY., COMBINATION	FOP-1-6-38
SCREW, SPECIAL, 6X35	F-3-20-34	SHIM C, THRUST(2.85)	F-5-	SWITCH ASSY., COMBINATION	FOP-7-9
SCREW, TAPPET ADJUSTING.....	E-9-10-12	SHIM D, BEVEL(0.50)	F-5-	SWITCH ASSY., COMBINATION	FOP-7-1-7
SCREW, TAPPING, 4X10	F-8-17	SHIM D, BEVEL(0.50)	F-5-1-	SWITCH ASSY., EMERGENCY STOP.....	FOP-1-6-41
SCREW, TAPPING, 5X10	FOP-1-6-72	SHIM D, BEVEL(0.50)	F-5-1-	SWITCH ASSY., EMERGENCY STOP	FOP-7-10
SCREW, TAPPING, 5X12	FOP-1-6-73	SHIM D, GEAR(0.50)	F-4-	SWITCH ASSY., EMERGENCY STOP	FOP-7-1-8
SCREW, TAPPING, 5X25	FOP-1-6-75	SHIM D, THRUST(2.90)	F-5-	SWITCH ASSY., MAGNET	E-21-12
SCREW, TAPPING, 5X8	FOP-1-6-71	SHIM E, THRUST(2.95)	F-5-	SWITCH ASSY., NEUTRAL.....	F-2-18
SCREW, TAPPING, 6X16	FOP-1-6-74	SHIM F, THRUST(3.00)	F-5-	SWITCH ASSY., OIL PRESSURE	E-3-24
SCREW, TAPPING, 6X30	FOP-1-4-24	SHIM G, THRUST(3.05)	F-5-	SWITCH ASSY., OIL PRESSURE	E-3-25
SCREW, TRUSS, 4X12	FOP-1-4-21	SHIM H, THRUST(3.10)	F-5-	SWITCH ASSY., POWER TILT	F-3-20-5
SCREW, WASHER	E-18-22	SHIM I, THRUST(2.70)	F-5-	SWITCH ASSY., POWER TRIM-TILT	FOP-1-20
SCREW, WAVE WASHER	E-19-12	SHIM J, THRUST(2.65)	F-5-	SWITCH ASSY., POWER TRIM-TILT	FOP-1-2-22
SCREW, WAVE WASHER	E-19-13	SHIM K, THRUST(2.60)	F-5-	SWITCH ASSY., POWER TRIM-TILT	FOP-1-2-23
SCREW-WASHER	E-18-20	SHIM L, THRUST(2.55)	F-5-	SWITCH ASSY., POWER TRIM-TILT	FOP-1-4-17
SCREW-WASHER	E-19-11	SHIM M, THRUST(2.50)	F-5-	SWITCH ASSY., POWER TRIM-TILT	FOP-1-6-39
SCREW-WASHER, 5X15	F-7-20-8	SLIDER COMP., SHIFT	F-5-4	SWITCH KIT, LIGHT	FOP-6-1
SCREW-WASHER, 6X40	F-3-20-40	SLIDER COMP., SHIFT	F-5-1-4	<T>	
SEAL A, COVER UNDER.....	F-3-20-22	SLIDER, SHIFT	F-5-5	TAB, TRIM	F-3-8
SEAL A, VALVE STEM(NOK)	E-9-4	SLIDER, SHIFT	F-5-1-5	TACHOMETER HOUR METER (BLACK)	FOP-3-4
SEAL B, COVER UNDER.....	F-3-20-23	SLINGER, OIL	F-4-15	TANK COMP., VACUUM	E-18-43
SEAL B, EX. GUIDE	E-6-10-4	SPACER KIT, REMOTE CONTROL BOX	FOP-1-2	TANK, OIL	F-11-29
SEAL B, VALVE STEM(NOK)	E-9-6	SPACER KIT, REMOTE CONTROL BOX	FOP-1-2-2	TENSIONER COMP., TIMING BELT	E-13-7
SEAL C, UNDER COVER.....	F-3-20-25	SPACER, CABLE CLAMP	FOP-1-17	TERMINAL, CABLE	FOP-1-16
SEAL D, UNDER COVER	F-8-10-25	SPACER, CABLE CLAMP	FOP-1-2-18	TERMINAL, CABLE	FOP-1-2-17
SEAL, ENGINE COVER	F-8-3	SPACER, CABLE CLAMP	FOP-1-4-13	TERMINAL, CABLE	FOP-1-4-12
SEAL, EXHAUST GUIDE.....	E-6-10-3	SPACER, CABLE CLAMP	FOP-1-6-33	THERMOSTAT ASSY.	E-4-10

THROTTLE BODY ASSY.	E-15-3	WASHER, PLAIN, 10MM	F-10-60
TIE, CABLE.....	FOP-10-2	WASHER, PLAIN, 12MM	E-6-20-7
TIE, CABLE(NATURAL)(2.4X92).....	FOP-1-6-37	WASHER, PLAIN, 12MM	F-3-22
TIE, CABLE(NATURAL)(2.4X92).....	FOP-13-4	WASHER, PLAIN, 12MM	F-3-20-45
T-JOINT	E-1-10	WASHER, PLAIN, 12MM	F-4-21
T-JOINT	E-18-10-17	WASHER, PLAIN, 12MM	F-5-20
TRIM METER ASSY (BLACK).....	FOP-3-1	WASHER, PLAIN, 12MM	F-5-1-22
TRIM-TILT ASSY., POWER.....	F-11-13	WASHER, PLAIN, 12MM	F-8-15
TUBE A, AIR VENT.....	E-18-10-4	WASHER, PLAIN, 12MM	F-10-63
TUBE B, AIR VENT.....	E-18-10-5	WASHER, PLAIN, 12MM	F-10-64
TUBE B, BREATHER.....	E-1-26	WASHER, PLAIN, 14MM	F-3-20-44
TUBE C, BREATHER.....	E-1-27	WASHER, PLAIN, 4MM	FOP-1-6-56
TUBE COMP. A, BREATHER	E-1-25	WASHER, PLAIN, 5MM	FOP-1-31
TUBE COMP. A, FUEL.....	F-8-20-1	WASHER, PLAIN, 5MM	FOP-1-33
TUBE COMP. B, FUEL.....	E-18-1-8	WASHER, PLAIN, 5MM	FOP-1-2-36
TUBE COMP. D, FUEL.....	E-18-1-9	WASHER, PLAIN, 5MM	FOP-1-2-38
TUBE COMP. E, FUEL.....	E-18-1-10	WASHER, PLAIN, 5MM	FOP-1-6-57
TUBE COMP. G, FUEL.....	E-1-9	WASHER, PLAIN, 5MM	FOP-1-6-58
TUBE COMP., AIR VENT.....	E-18-10-6	WASHER, PLAIN, 5MM	FOP-6-4
TUBE COMP., FUEL(C).....	E-1-8	WASHER, PLAIN, 5MM	FOP-7-21
TUBE KIT, SPEED SENSOR.....	F-10-2	WASHER, PLAIN, 5MM	FOP-7-1-18
TUBE, 5X200.....	F-10-74	WASHER, PLAIN, 6MM	E-15-24
TUBE, 5X950.....	F-10-75	WASHER, PLAIN, 6MM	F-2-31
TUBE, CHECK VALVE	E-18-10-3	WASHER, PLAIN, 6MM	F-2-33
TUBE, FLUSH VALVE	E-6-10-41	WASHER, PLAIN, 6MM	F-2-34
TUBE, FUEL, 3.5X130	E-14-10-21	WASHER, PLAIN, 6MM	F-8-14
TUBE, FUEL, 3.5X40	E-14-10-20	WASHER, PLAIN, 6MM	F-10-61
TUBE, FUEL, 3.5X50	E-14-31	WASHER, PLAIN, 6MM	FOP-1-4-27
TUBE, FUEL, 3.5X540	E-14-10-22	WASHER, PLAIN, 6MM	FOP-1-6-59
TUBE, FUEL, 3.5X55	E-18-10-23	WASHER, PLAIN, 8MM	E-1-20
TUBE, FUEL, 3.5X590	E-14-10-23	WASHER, PLAIN, 8MM	E-6-12
TUBE, FUEL, 3.5X600	E-14-10-24	WASHER, PLAIN, 8MM	F-7-10-19
TUBE, L. WATER RETURN	E-4-9	WASHER, PLAIN, 8MM	F-8-10-28
TUBE, OIL.....	E-1-5	WASHER, PLAIN, 8MM	F-8-10-35
TUBE, R. WATER RETURN	E-4-6	WASHER, PLAIN, 8MM	FOP-1-6-61
TUBE, SPIRAL(12X14.6).....	F-11-4	WASHER, PROPELLER	F-5-17
TUBE, VINYL, 3.5X6.5X350	E-18-1-33	WASHER, PROPELLER	F-5-1-17
TUBE, VINYL, 3.5X6.5X600	E-18-10-24	WASHER, PROPELLER THRUST.....	F-5-15
TUBE, WATER.....	E-4-8	WASHER, PROPELLER THRUST.....	F-5-1-15
TUBE, WATER CHECK.....	E-6-10-40	WASHER, SEALING(22MM)	E-3-8
TUBE, WATER IN.....	E-18-10-15	WASHER, SEALING(22MM)	E-3-10-3
TUBE, WATER JOINT	F-3-20-51	WASHER, SEALING, 22MM.....	E-3-7
TUBE, WATER OUTLET	E-18-10-16	WASHER, SEALING, 6MM.....	E-18-53
TUBE, WATER RELIEF.....	E-4-7	WASHER, SPRING, 5MM	FOP-6-5
TUBE, WATER(L).....	F-4-7	WASHER, SPRING, 5MM	FOP-7-22
TUBE, WATER(XL).....	F-4-	WASHER, SPRING, 5MM	FOP-7-1-19
<V>		WASHER, THRUST.....	E-7-11
VALVE ASSY., AIR BYPASS	E-14-10-10	WASHER, THRUST BEARING	F-5-16
VALVE ASSY., EAC.....	E-15-17	WASHER, THRUST BEARING	F-5-1-16
VALVE ASSY., SPOOL.....	E-3-18	WASHER, THRUST, 14MM	F-2-29
VALVE COMP., MANUAL	F-11-25	WASHER, THRUST, 34MM	F-10-56
VALVE COMP., RESERVOIR.....	F-11-26	WASHER, THRUST, 48X74X3.....	F-5-1-21
VALVE SET, FLOAT	E-18-1	WASHER, THRUST, 85X110X2	F-5-1-20
VALVE, CHECK.....	E-14-10-9	WASHER, UPPER MOUNTING STOPPER	F-10-57
VALVE, CHECK.....	E-18-10-18	WASHER, WAVE, 10MM	F-8-10-34
VALVE, EX.....	E-9-10-11	WASHER, WAVE, 12MM	F-10-54
VALVE, FLASH	E-6-10-10	WASHER, WAVE, 26MM	F-10-55
VALVE, IN.....	E-9-10-10	WASHER, WAVE, 40MM	F-10-53
VALVE, RELIEF	E-5-8	WASHER, WAVE, 8MM	F-8-10-33
VALVE, RELIEF	E-6-10-9	WHEEL, ACCELERATOR.....	FOP-1-6-20
<W>		WHEEL, CONTROL	FOP-1-6-13
WASHER	F-2-32	WIRE, LEAD(1.5X116MM).....	F-10-9
WASHER B, THRUST, 14MM	F-2-30	WIRE, LEAD(1.5X116MM).....	F-11-11
WASHER, 10MM	F-10-62	WRENCH, BOX(10MM)	F-13-14
WASHER, 25MM	F-10-59	WRENCH, EYE, 19MM	F-13-12
WASHER, 28MM	FOP-1-6-62	WRENCH, HEX., 6MM	F-13-7
WASHER, 30MM	F-3-20-43	WRENCH, PLUG.....	F-13-6
WASHER, 6MM	FOP-1-6-60	<Y>	
WASHER, 7/8INCH.....	F-10-58	YOKE ASSY.....	F-11-8
WASHER, AIR CLEANER COVER	F-2-1	YOKE COMP.	E-21-5
WASHER, CONICAL SPRING(S).....	E-14-10-11		
WASHER, DRAIN PLUG, 12MM.....	E-6-13		
WASHER, LOCK, 5MM.....	FOP-1-30		
WASHER, LOCK, 5MM.....	FOP-1-2-35		
WASHER, LOCK, 5MM.....	FOP-1-4-26		
WASHER, LOCK, 6MM.....	FOP-1-32		
WASHER, LOCK, 6MM.....	FOP-1-2-37		
WASHER, PIVOT	F-2-4		
WASHER, PLAIN	E-18-24		
WASHER, PLAIN	E-18-25		
WASHER, PLAIN, 10MM	E-6-20-8		
WASHER, PLAIN, 10MM	F-3-20-46		
WASHER, PLAIN, 10MM	F-8-10-32		

INDEX (Parts Number)

332-70201-0	F-6-8	HCO-94302-10160	E-5-20	HP08-12342-004.	E-1-4	HPY3-17249-000.	E-15-7
3C7-70217-0	F-6-5	HCO-94302-10160	E-6-20-10	HP0A-91303-A02	E-15-25	HPY3-31215-004.	E-21-4
3C7-70220-1	F-6-2	HCO-94303-05080	E-3-54	HP0X-91321-003.	E-3-49	HPY3-31218-004.	E-21-6
3C7-70224-1	F-6-3	HCO-94305-30203	F-10-73	HP13-31141-003.	E-19-6	HPZ1-12210-004.	E-9-4
3FF-70200-4	F-6-1	HCO-94510-15000	F-5-31	HP13-31147-003.	E-19-10	HPZ1-12211-004.	E-9-6
3GF-70211-1	F-6-4	HCO-94510-15000	F-5-1-34	HP13-31148-003.	E-19-12	HR70-15280-A00	E-3-13
3GF-70240-1	F-6-7	HCO-94520-47000	F-4-37	HP5A-13115-000	E-7-4	HRCA-14632-A00	E-9-10-8
3GF-70241-1	F-6-6	HCO-94540-03029	FOP-1-6-78	HP5A-31201-005	E-21-2	HRCA-17055-A01	E-14-12
3PU-72537-0	FOP-3-6	HCO-94540-04029	F-2-42	HP5A-31243-005	E-21-14	HRCA-17065-A01	E-14-14
3PV-72571-0	FOP-3-1	HCO-94540-04029	FOP-1-6-79	HP5G-16614-003	E-14-4	HRCA-90014-A01	E-3-32
3PV-72637-0	FOP-3-4	HCO-94540-06029	F-8-10-39	HP8A-11812-A00	E-13-10-1	HRCA-90704-A00	E-13-28
H121-51640-730.	F-8-10-11	HCO-94540-06029	FOP-1-36	HP8A-13204-A01	E-7-6	HRDV-14765-J00.	E-9-10-15
H196-47117-000.	F-8-10-10	HCO-94540-06029	FOP-1-2-41	HP8A-14400-A01	E-13-6	HRGM-14781-A01.	E-9-10-17
H341-38403-672.	FOP-1-6-45	HCO-94540-06029	FOP-1-4-28	HP8A-14551-A01	E-13-13	HRJA-14711-000.	E-9-10-10
H341-38403-672.	FOP-7-15	HCO-94540-07029	FOP-1-6-80	HP8A-14620-A01	E-9-10-4	HRJA-14721-E00.	E-9-10-11
H341-38403-672.	FOP-7-1-12	HCO-94540-10019	F-4-34	HP8A-14626-A00	E-9-10-5	HRJA-15290-000.	E-3-14
H355-89217-000.	F-13-14	HCO-94540-12029	F-2-43	HP8A-14627-A00	E-9-10-6	HRJA-90017-003.	E-13-22
H371-89221-000.	F-13-7	HCO-94540-15029	F-11-51	HP8A-14631-A00	E-9-10-7	HRKG-13210-000	E-7-7
H371-90009-015.	E-6-20-2	HCO-95001-35040-40	E-14-10-20	HP8A-14645-A01	E-9-10-9	HRKG-13310-000	E-7-9
H663-38562-920.	F-10-8	HCO-95001-35050-40	E-14-31	HP8A-15115-A01	E-3-9	HRKG-14761-003	E-9-10-13
H723-90472-000.	F-4-21	HCO-95001-35055-40	E-18-10-23	HP8A-15140-A00	E-3-10	HRKG-91213-003	E-9-16
H759-16911-003.	E-18-10-8	HCO-95001-35130-40	E-14-10-21	HP8A-15142-A00	E-3-11	HRNA-30530-A01	E-3-20
H763-90681-A01	F-7-10-21	HCO-95001-35540-40	E-14-10-22	HP8A-15150-A00	E-3-12	HRNA-37830-A01	E-14-10-12
H763-90681-A01	F-10-67	HCO-95001-35590-60	E-14-10-23	HP8A-90003-A00	E-9-10-18	HRTA-15400-004	E-3-10-4
H800-91303-000.	E-6-10-36	HCO-95001-35600-40	E-14-10-24	HP8A-90004-A00	E-9-10-19	HRYE-13211-A01	E-7-8
H805-91301-000.	E-3-10-17	HCO-95003-05035-31	E-18-1-33	HP8A-90017-A01	E-13-10-8	HRYE-13212-A01	E-7-7
H881-90110-000.	F-10-42	HCO-95003-05060-31	E-18-10-24	HP8A-90031-A01	E-13-25	HRYE-13213-A01	E-7-7
H921-15611-000.	E-3-10-5	HCO-95005-50200-30	F-10-74	HP8A-90701-A00	E-9-14	HRYE-13214-A01	E-7-7
H921-17936-000.	F-2-4	HCO-95005-50590-30	F-10-75	HP8A-91301-A00	E-9-17	HRYE-13215-A01	E-7-7
H921-90302-000.	F-3-20-41	HCO-95011-63000	F-3-20-55	HP8A-91308-A01	E-3-45	HS0A-91541-003.	E-3-50
H921-90302-000.	FOP-1-6-54	HCO-95551-20000	F-8-19	HP8A-91309-A01	E-3-47	HS0A-91541-003.	E-13-10-11
H921-90302-000.	FOP-7-19	HCO-95701-06014-09	E-5-21	HP8D-36165-J00.	E-14-10-11	HS0A-91541-003.	F-2-41
H921-90302-000.	FOP-7-1-16	HCO-95701-06018-09	E-5-22	HP8E-14762-A01	E-9-10-14	HS0A-91541-003.	F-7-5
H921-90504-010.	F-8-14	HCO-95701-08030-09	E-5-23	HP8E-17105-A01	E-14-15	HS0A-91541-003.	F-7-10-24
H921-90504-010.	FOP-1-6-59	HCO-95701-10070-09	E-6-20-11	HP8F-14820-A01.	E-9-10	HS0A-91541-003.	F-8-10-37
H921-90511-000.	F-10-60	HCO-95701-12120-09	E-6-20-12	HPC6-15233-000.	E-5-10	HS0X-46392-A01	F-2-21
H921-90512-010.	FOP-1-6-60	HCO-96211-07000	F-5-32	HPC6-91324-000	E-5-18	HS0A-90683-003.	E-18-1-31
H921-90518-000.	F-8-10-35	HCO-96211-07000	F-5-1-35	HPD1-31138-004	E-19-5	HS0A-90683-003.	E-20-10-10
H921-90518-000.	FOP-1-6-61	HCO-96211-12000	F-5-33	HPD1-31142-004	E-19-7	HS0A-90683-003.	F-3-20-49
H921-90602-000.	E-18-1-27	HCO-96211-12000	F-5-1-36	HPD1-31145-004	E-19-8	HSB0-90602-003.	F-11-37
H921-90602-000.	F-10-65	HCO-96220-50080	E-5-24	HPD1-90231-014	E-19-26	HSB2-90620-003.	F-7-10-20
H952-32901-770.	FOP-1-6-37	HCO-9807B-5617C	E-20-	HPD6-90430-003	E-18-53	HSB2-90650-003.	E-14-26
H952-32901-770.	FOP-13-4	HCO-98200-41000	F-7-20-9	HPD6-90430-003	E-18-53	HSB6-91475-000.	FOP-1-6-66
H958-90428-000.	F-2-30	HCO-98200-41500	F-7-20-10	HPEA-13111-000	E-7-3	HSC2-90649-003.	FOP-7-20
HCO-92101-05016-4J.	FOP-1-6-69	HCO-98200-43000	F-7-20-11	HPF0-91302-003.	F-2-40	HSC2-90649-003.	FOP-7-1-17
HCO-92101-06055-4J.	F-3-26	HCO-99003-30000	F-13-15	HPG4-91033-013	F-5-1-25	HSD2-90705-931	F-2-35
HCO-93500-05010-4J.	FOP-1-6-70	HCO-99003-50000	F-13-16	HPG6-15232-000	E-5-9	HSDA-91356-952	E-4-25
HCO-93500-05016-4J.	E-3-51	HCO-99006-19000	F-13-12	HPG7-16741-005	E-14-7	HSDA-91356-952	E-4-25
HCO-93500-05020-4J.	E-3-52	HCO-99008-02000	F-13-13	HPG7-16741-005	E-14-7	HSDA-91356-952	E-4-25
HCO-93500-05065-4J.	FOP-1-34	HGCF-80106-670	F-8-20-3	HPGK-37835-A01	E-14-10-13	HSDA-91356-952	E-4-25
HCO-93500-05065-4J.	FOP-1-2-39	HGHB-16163-600	E-18-1-1	HPH1-90015-013	E-3-10-7	HSD9-54316-013	E-1-15
HCO-93500-06018-4J.	E-4-26	HGHB-16163-610	E-6-10-1	HPH7-90715-000	E-3-41	HSF4-89216-000.	F-13-6
HCO-93500-06025-4J.	F-3-20-	HHA0-90402-000	F-2-29	HPJ7-12204-305	E-9-2	HSJ6-78419-003	E-14-18
HCO-93600-06016-0A	E-5-19	HHE0-50310-003	E-1-13	HPJ7-12205-305	E-9-3	HSK7-91566-003.	E-1-28
HCO-93901-250J0.	FOP-1-6-71	HHW1-90207-671	E-6-10-31	HPK1-91308-003.	E-3-46	HSLO-91592-A51.	E-18-10-22
HCO-93901-251J0.	FOP-1-6-72	HHW1-90215-671	F-4-18	HPKC-91301-000.	E-14-28	HSTK-91540-003.	FOP-10-3
HCO-93901-252J0.	FOP-1-6-73	HKE8-17251-690.	F-8-1	HPM3-14775-000	E-9-10-16	HVM0-16965-771	E-18-10-10
HCO-93903-262J0.	FOP-1-6-74	HKG4-90659-000	E-18-1-30	HPMA-36145-004	E-14-10-9	HZA0-90684-601	F-8-10-36
HCO-93905-255J0.	FOP-1-6-75	HKM3-32161-003	F-10-6	HPNA-91214-014	E-3-43	HZB7-90691-003.	E-1-23
HCO-93911-141J0.	F-8-17	HKM3-32161-003	F-10-76	HPNA-91302-003	E-14-29	HZB7-90691-003.	E-18-54
HCO-94001-05490-05	FOP-1-35	HKN5-17224-670	F-2-1	HPNA-91307-003	E-3-44	HZC0-63515-700	F-8-10-24
HCO-94001-05490-05	FOP-1-2-40	HKT7-91305-003.	E-1-24	HPNA-91307-003	E-4-24	HZE2-90601-000.	E-6-13
HCO-94001-06080-05	E-19-27	HKY7-17450-740.	E-18-10-11	HPPA-90009-E01.	E-18-46	HZV0-41122-000.	E-13-19
HCO-94001-06490-05	FOP-1-6-76	HMB1-90655-921	E-18-10-21	HPR3-91319-003.	E-3-48	HZV0-90604-000.	E-1-22
HCO-94001-12490-05	F-10-72	HMG9-17201-000	E-14-10-7	HPR7-31105-A01	E-19-1	HZV0-90604-000.	E-18-1-28
HCO-94002-05490-05	FOP-1-6-77	HMG9-35701-950	F-11-3	HPR7-36361-A01	E-18-43	HZV0-90604-000.	E-18-10-20
HCO-94002-06490-05	F-8-18	HMG9-35701-950	FOP-1-6-40	HPT0-14744-004.	E-9-10-12	HZV1-24210-010.	F-10-4
HCO-94103-05400	FOP-6-4	HMJ0-91301-003	E-14-27	HPT0-31111-003.	E-19-2	HZV4-12155-A00	E-3-4
HCO-94103-05400	FOP-7-21	HMJ0-91301-003	E-18-55	HPT0-31114-013.	E-19-3	HZV4-17704-010.	F-8-20-4
HCO-94103-05400	FOP-7-1-18	HMJ0-91308-003	F-4-29	HPT0-31118-003.	E-19-4	HZV4-24221-010.	F-10-5
HCO-94111-05400	FOP-6-5	HMJ0-91308-003	FOP-12-7	HPT0-31146-003.	E-19-9	HZV4-36182-651.	FOP-1-6-42
HCO-94111-05400	FOP-7-22	HML0-90101-720	F-8-10-28	HPT0-31147-003.	E-19-11	HZV4-36182-651.	FOP-7-11
HCO-94111-05400	FOP-7-1-19	HMM4-90105-000.	FOP-1-6-51	HPT0-31148-003.	E-19-13	HZV4-36182-651.	FOP-7-1-9
HCO-94301-06100	E-3-53	HMM8-90502-610.	F-8-10-32	HPT0-90005-003.	E-9-11	HZV4-36187-652.	FOP-1-6-43
HCO-94301-06100	E-13-30	HMT2-17193-000	E-1-10	HPT0-90206-004.	E-9-10-20	HZV4-36187-652.	FOP-7-12
HCO-94301-06100	E-15-28	HMT8-18334-770	FOP-6-2	HPT0-90705-000.	E-9-15	HZV4-36187-652.	FOP-7-1-10
HCO-94301-08140	E-3-10-18	HMT8-18334-770	FOP-7-2	HPT2-91005-N01	F-5-23	HZV4-90127-000.	E-6-10
HCO-94301-10120	E-14-30	HMT8-18334-770	FOP-7-1-2	HPT2-91005-N01	F-5-1-24	HZV4-90127-000.	F-2-27
HCO-94302-06100	E-9-18	HP01-91212-003.	E-5-17	HPW5-90701-000	E-5-15	HZV4-90302-000.	F-3-19
				HPW5-90701-000	E-6-20-9	HZV4-90304-000.	FOP-1-6-55

HZV4-90502-000.	FOP-1-31	HZV5-90302-003.	F-2-28	HZW1-91352-702.	F-11-43	HZW5-90101-U00.	FOP-1-22
HZV4-90502-000.	FOP-1-2-36	HZV5-90304-013.	F-10-49	HZW1-91353-703.	F-11-44	HZW5-90101-U00.	FOP-1-2-25
HZV4-90502-000.	FOP-1-6-58	HZV5-90307-003.	F-10-52	HZW1-91354-701.	F-11-45	HZW5-90101-U00.	FOP-1-4-20
HZV4-90506-000.	F-2-31	HZV5-90501-000.	F-10-53	HZW1-91355-701.	F-11-46	HZW5-90102-U00.	FOP-1-23
HZV4-90512-000.	F-2-34	HZV5-90502-000.	F-10-55	HZW1-91357-701.	F-11-47	HZW5-90102-U00.	FOP-1-2-26
HZV4-90512-000.	F-10-61	HZV5-90504-000.	F-10-56	HZW1-91358-701.	F-11-48	HZW5-90103-U01.	FOP-1-24
HZV4-90514-000.	F-10-62	HZV5-90552-000.	F-10-63	HZW1-91361-701.	F-11-49	HZW5-90103-U01.	FOP-1-2-27
HZV4-90603-000.	E-6-10-32	HZV5-90557-000.	FOP-1-6-62	HZW1-91554-000.	E-18-56	HZW5-90104-U00.	FOP-1-25
HZV4-90605-000.	E-6-10-33	HZV5-90559-000.	E-6-20-7	HZW1-91554-000.	F-8-10-38	HZW5-90104-U00.	FOP-1-2-28
HZV4-90605-000.	E-18-1-29	HZV5-90559-000.	F-3-22	HZW1-91557-701.	F-11-50	HZW5-90105-U01.	FOP-1-26
HZV4-90605-000.	F-3-20-47	HZV5-90559-000.	F-3-20-45	HZW2-90003-000.	E-20-10-7	HZW5-90105-U01.	FOP-1-2-29
HZV5-12155-000.	E-4-1	HZV5-90559-000.	F-5-20	HZW2-90003-000.	F-7-10-12	HZW5-90106-U00.	FOP-1-27
HZV5-12214-000.	E-3-8	HZV5-90559-000.	F-5-1-22	HZW4-90108-000.	FOP-1-6-52	HZW5-90106-U00.	FOP-1-2-30
HZV5-12214-000.	E-3-10-3	HZV5-90559-000.	F-10-64	HZW4-90126-000.	E-1-19	HZW5-90107-U00.	FOP-1-28
HZV5-24811-010.	FOP-1-6-2	HZV5-90563-000.	E-6-20-8	HZW4-90147-000.	E-3-10-14	HZW5-90107-U00.	FOP-1-2-31
HZV5-24812-000.	FOP-1-6-3	HZV5-90563-000.	F-3-20-46	HZW4-90151-000.	E-3-10-15	HZW5-90108-U00.	FOP-1-2-32
HZV5-24813-000.	FOP-1-6-4	HZV5-90651-000.	F-10-66	HZW4-90155-000.	E-4-19	HZW5-90109-000.	FOP-1-29
HZV5-24814-010.	FOP-1-6-5	HZV5-90751-000.	FOP-1-6-63	HZW4-90156-000.	E-3-40	HZW5-90109-000.	FOP-1-28
HZV5-24815-010.	FOP-1-6-6	HZV5-90756-000.	F-3-24	HZW4-90156-000.	E-14-10-18	HZW5-90109-000.	FOP-1-29
HZV5-24816-000.	FOP-1-6-7	HZV5-90756-000.	F-3-20-50	HZW4-90306-003.	F-10-51	HZW5-90109-000.	FOP-1-30
HZV5-24817-000.	FOP-1-6-8	HZV5-90756-000.	F-4-24	HZW4-90401-000.	FOP-1-6-56	HZW5-90109-000.	FOP-1-31
HZV5-24818-003.	FOP-1-6-9	HZV5-90772-000.	FOP-1-6-64	HZW4-90402-000.	FOP-1-6-57	HZW5-90301-U00.	FOP-1-29
HZV5-24820-010.	FOP-1-6-10	HZV5-91151-000.	FOP-1-6-65	HZW4-91301-003.	F-3-25	HZW5-90301-U00.	FOP-1-2-33
HZV5-24830-010.	FOP-1-6-11	HZV5-91203-821.	F-11-39	HZW4-91301-003.	FOP-12-6	HZW5-90302-003.	F-10-48
HZV5-24836-000.	FOP-1-6-12	HZV5-91256-003.	F-10-69	HZW5-06241-U00.	FOP-1-2	HZW5-90302-U21.	FOP-1-2-34
HZV5-24841-000.	FOP-1-6-13	HZV5-91302-821.	F-11-41	HZW5-06241-U10.	FOP-1-2-2	HZW5-90501-U00.	FOP-1-30
HZV5-24845-000.	FOP-1-6-14	HZV5-91316-821.	F-11-42	HZW5-06352-U01.	FOP-6-1	HZW5-90501-U00.	FOP-1-2-35
HZV5-24850-000.	FOP-1-6-15	HZV5-91352-000.	F-10-70	HZW5-06900-U00.	FOP-5-1	HZW5-90501-U00.	FOP-1-4-26
HZV5-24854-000.	FOP-1-6-16	HZV5-91553-010.	E-15-26	HZW5-16081-010.	E-18-20	HZW5-90502-U00.	FOP-1-32
HZV5-24855-000.	FOP-1-6-17	HZV5-91553-010.	E-20-5	HZW5-16086-000.	E-18-23	HZW5-90502-U00.	FOP-1-33
HZV5-24860-000.	FOP-1-6-18	HZV5-91553-010.	E-20-10-11	HZW5-16087-000.	E-18-24	HZW5-90503-U00.	FOP-1-33
HZV5-24865-000.	FOP-1-6-19	HZV5-91553-010.	F-7-10-25	HZW5-16715-023.	E-18-29	HZW5-90503-U00.	FOP-1-2-38
HZV5-24875-000.	FOP-1-6-20	HZV5-91563-000.	F-3-20-53	HZW5-16733-000.	E-18-34	HZW5-90509-711.	F-5-16
HZV5-24876-000.	FOP-1-6-21	HZV5-91567-000.	FOP-1-6-67	HZW5-16915-000.	E-18-10-9	HZW5-90509-711.	F-5-1-16
HZV5-24878-000.	FOP-1-6-22	HZV5-91570-000.	FOP-1-6-68	HZW5-19291-000.	E-6-10-9	HZW5-90511-U00.	FOP-5-3
HZV5-24881-000.	FOP-1-6-23	HZV7-90508-000.	F-2-32	HZW5-19292-000.	E-6-10-11	HZW5-90512-U00.	FOP-5-4
HZV5-24883-000.	FOP-1-6-24	HZV7-90951-010.	F-10-68	HZW5-19297-000.	E-6-10-15	HZW5-90601-030.	E-18-10-19
HZV5-24884-000.	FOP-1-6-25	HZW1-06411-020.	F-10-1	HZW5-24810-U01.	FOP-1-3	HZW5-91201-003.	E-5-16
HZV5-24885-000.	FOP-1-6-26	HZW1-15631-000.	E-3-10-6	HZW5-24810-U01.	FOP-1-2-3	HZW5-91202-003.	E-6-10-35
HZV5-24887-000.	FOP-1-6-27	HZW1-19286-800.	F-3-1	HZW5-24810-U11.	FOP-1-2-4	HZW5-91251-003.	F-2-38
HZV5-24891-000.	FOP-1-6-28	HZW1-24210-010.	F-2-5	HZW5-24811-U01.	FOP-1-4	HZW7-24810-U01.	FOP-1-4-2
HZV5-24892-000.	FOP-1-6-29	HZW1-24327-000.	F-2-7	HZW5-24811-U01.	FOP-1-2-5	HZW7-24811-U01.	FOP-1-4-3
HZV5-24894-000.	FOP-1-6-30	HZW1-24343-802.	F-4-12	HZW5-24812-U01.	FOP-1-5	HZW7-24812-U01.	FOP-1-4-4
HZV5-24895-000.	FOP-1-6-31	HZW1-24629-000.	F-2-17	HZW5-24812-U01.	FOP-1-2-6	HZW7-24813-U01.	FOP-1-4-5
HZV5-24897-000.	FOP-1-6-32	HZW1-31226-004.	E-21-7	HZW5-24813-U01.	FOP-1-6	HZW7-24814-U01.	FOP-1-4-6
HZV5-24898-000.	FOP-1-6-33	HZW1-31229-004.	E-21-8	HZW5-24813-U01.	FOP-1-2-7	HZW7-24815-U01.	FOP-1-4-7
HZV5-32823-003.	FOP-1-6-35	HZW1-31231-004.	E-21-9	HZW5-24813-U21.	FOP-1-2-8	HZW7-24817-U01.	FOP-1-4-9
HZV5-32823-003.	FOP-7-7	HZW1-36104-003.	F-11-4	HZW5-24814-U01.	FOP-1-7	HZW7-24832-U01.	FOP-1-4-14
HZV5-32823-003.	FOP-7-1-5	HZW1-38551-000.	F-7-10-10	HZW5-24814-U01.	FOP-1-2-9	HZW7-24833-U01.	FOP-1-4-15
HZV5-32824-003.	FOP-1-6-36	HZW1-40107-700.	F-11-10	HZW5-24815-U01.	FOP-1-8	HZW7-32530-U00.	FOP-1-19
HZV5-32824-003.	FOP-7-8	HZW1-40209-000.	F-3-20-11	HZW5-24816-U01.	FOP-1-9	HZW7-32530-U00.	FOP-1-2-20
HZV5-32824-003.	FOP-7-1-6	HZW1-41102-800.	F-3-4	HZW5-24816-U01.	FOP-1-2-10	HZW7-32530-U10.	FOP-1-2-21
HZV5-35370-823.	FOP-1-6-39	HZW1-41109-800.	F-3-9	HZW5-24816-U01.	FOP-1-4-8	HZW7-32530-U20.	FOP-1-4-16
HZV5-36136-821.	F-11-9	HZW1-56110-701.	F-11-15	HZW5-24817-U01.	FOP-1-10	HZW7-35370-U02.	FOP-1-4-17
HZV5-36180-033.	FOP-1-6-41	HZW1-56113-701.	F-11-16	HZW5-24817-U01.	FOP-1-2-11	HZW7-87703-U00.	FOP-1-4-19
HZV5-36180-033.	FOP-7-10	HZW1-56116-701.	F-11-19	HZW5-24818-U01.	FOP-1-11	HZW7-90101-U01.	FOP-1-4-21
HZV5-36180-033.	FOP-7-1-8	HZW1-56130-702.	F-11-24	HZW5-24818-U01.	FOP-1-12	HZW7-90102-U01.	FOP-1-4-22
HZV5-38410-003.	FOP-1-6-46	HZW1-56180-701.	F-11-26	HZW5-24818-U01.	FOP-1-12	HZW7-90103-U01.	FOP-1-4-23
HZV5-38410-003.	FOP-7-16	HZW1-56539-000.	F-10-33	HZW5-24819-U01.	FOP-1-2-13	HZW7-90104-U01.	FOP-1-4-24
HZV5-38410-003.	FOP-7-1-13	HZW1-56851-703.	F-11-29	HZW5-24819-U01.	FOP-1-2-13	HZW7-90301-U01.	FOP-1-4-25
HZV5-40102-000.	E-15-18	HZW1-56860-701.	F-11-30	HZW5-24825-U01.	FOP-1-14	HZW7-90502-U00.	FOP-1-4-27
HZV5-40107-000.	F-3-20-7	HZW1-90013-000.	E-15-19	HZW5-24825-U01.	FOP-1-2-15	HZW9-19279-000.	E-6-10-8
HZV5-41171-000.	F-10-10	HZW1-90013-000.	F-7-10-13	HZW5-24826-U01.	FOP-1-15	HZW9-19291-000.	E-6-10-10
HZV5-41172-000.	F-10-11	HZW1-90014-000.	E-18-47	HZW5-24826-U01.	FOP-1-2-16	HZW9-19297-000.	E-6-10-16
HZV5-50214-003.	F-11-12	HZW1-90102-000.	F-10-36	HZW5-24826-U01.	FOP-1-4-10	HZW9-32114-730.	E-1-11
HZV5-56117-821.	F-11-20	HZW1-90106-004.	E-21-21	HZW5-24831-U01.	FOP-1-16	HZW9-32114-730.	E-3-21
HZV5-56118-820.	F-11-21	HZW1-90107-004.	E-21-22	HZW5-24831-U01.	FOP-1-2-17	HZW9-35490-003.	E-3-24
HZV5-56513-000.	F-11-27	HZW1-90108-000.	F-10-41	HZW5-24831-U01.	FOP-1-4-12	HZW9-87702-800.	FOP-1-6-49
HZV5-82873-003.	F-3-20-30	HZW1-90113-702.	F-11-31	HZW5-24832-U01.	FOP-1-17	HZW9-90005-000.	F-10-34
HZV5-90009-000.	E-6-8	HZW1-90114-702.	F-11-32	HZW5-24832-U01.	FOP-1-2-18	HZW9-90008-000.	FOP-1-6-50
HZV5-90009-000.	F-8-10-26	HZW1-90115-702.	F-11-33	HZW5-24832-U01.	FOP-1-4-13	HZW9-90009-000.	F-10-35
HZV5-90012-013.	E-13-21	HZW1-90116-702.	F-11-34	HZW5-24834-U01.	FOP-1-18	HZW9-90010-000.	E-1-16
HZV5-90081-010.	E-3-39	HZW1-90203-000.	F-7-10-17	HZW5-24834-U21.	FOP-1-2-19	HZW9-90011-000.	E-13-20
HZV5-90081-010.	E-3-10-12	HZW1-90301-800.	F-5-14	HZW5-32168-003.	E-18-42	HZW9-90011-000.	F-2-22
HZV5-90081-010.	E-5-25	HZW1-90301-800.	F-5-1-14	HZW5-35370-U02.	FOP-1-20	HZW9-90013-000.	F-7-3
HZV5-90110-000.	F-3-20-34	HZW1-90304-013.	F-10-50	HZW5-35370-U12.	FOP-1-2-22	HZW9-90013-000.	F-7-10-14
HZV5-90119-000.	F-10-44	HZW1-90308-003.	F-3-21	HZW5-35665-003.	E-15-16	HZW9-90014-000.	E-18-1-25
HZV5-90119-000.	F-10-77	HZW1-90401-000.	E-6-12	HZW5-90002-013.	E-5-14	HZW9-90014-000.	E-20-10-8
HZV5-90119-000.	F-11-35	HZW1-90652-702.	F-11-38	HZW5-90011-010.	E-19-22	HZW9-90014-000.	F-7-10-15
HZV5-90125-000.	FOP-1-6-53	HZW1-90758-800.	F-5-22	HZW5-90018-000.	E-20-10-9	HZW9-90016-000.	E-14-19
HZV5-90127-003.	F-10-45	HZW1-90758-800.	F-5-1-23	HZW5-90018-000.	F-7-20-7	HZW9-90016-000.	E-18-48
HZV5-90127-003.	F-11-36	HZW1-90758-800.	FOP-12-2	HZW5-90021-U00.	FOP-5-2	HZW9-90019-000.	E-1-17
HZV5-90131-000.	E-6-11	HZW1-91207-013.	F-11-40	HZW5-90023-000.	F-2-24	HZW9-90019-000.	E-3-34
							E-4-16

HZW9-90019-000 E-14-20
HZW9-90101-003 F-3-10
HZW9-90102-000 F-2-26
HZW9-90102-000 F-8-10-29
HZW9-90103-010 F-10-37
HZW9-90105-000 F-8-11
HZW9-90105-000 F-8-10-30
HZW9-90105-000 F-10-40
HZW9-90506-000 F-8-10-34
HZX1-90133-R00 F-8-13
HZX2-06125-C00 FOP-12-1
HZX2-06192-C00 F-4-35
HZX2-06193-C00 F-4-36
HZX2-11381-003 E-6-2
HZX2-11911-000 E-3-10-2
HZX2-12000-405ZA E-3-3
HZX2-13010-000 E-7-1
HZX2-13101-000 E-7-2
HZX2-13321-003 E-7-10
HZX2-13322-003 E-7-
HZX2-13323-003 E-7-
HZX2-13324-003 E-7-
HZX2-13325-003 E-7-
HZX2-13326-003 E-7-
HZX2-13341-003 E-7-12
HZX2-13342-003 E-7-
HZX2-13343-003 E-7-
HZX2-13344-003 E-7-
HZX2-13345-003 E-7-
HZX2-13346-003 E-7-
HZX2-13811-000 E-13-3
HZX2-14111-000 E-9-10-1
HZX2-14211-000 E-9-10-2
HZX2-14526-405ZA E-13-10
HZX2-15655-000 E-3-15
HZX2-16020-003 E-18-4
HZX2-16024-003 E-18-1-34
HZX2-16030-003 E-18-7
HZX2-16404-000 E-15-4
HZX2-16700-003 E-1-7
HZX2-16701-003 E-18-27
HZX2-16730-003 E-18-33
HZX2-16800-003 E-18-1-4
HZX2-16805-003 E-18-1-5
HZX2-16814-000 E-18-1-7
HZX2-16850-C00 F-8-20-1
HZX2-16860-C00 E-18-1-8
HZX2-16870-C00 E-1-8
HZX2-16880-C00 E-18-1-9
HZX2-16890-C00 E-18-1-10
HZX2-16900-003 E-18-1-11
HZX2-16912-003 E-18-1-16
HZX2-16914-000 E-18-1-17
HZX2-16940-003 E-18-1-24
HZX2-17374-000 E-15-9
HZX2-19234-C00 F-4-5
HZX2-19241-C00 F-4-6
HZX2-19300-003 F-4-10
HZX2-19303-003 E-4-11
HZX2-19313-000ZA E-4-12
HZX2-19315-000ZA E-4-13
HZX2-19511-000 E-13-16
HZX2-19540-010 E-15-29
HZX2-24101-C00 F-5-1
HZX2-24101-C00 F-5-1-1
HZX2-30416-000 E-20-10-1
HZX2-30520-003 E-20-2
HZX2-31110-000ZA E-5-11
HZX2-31916-003 E-20-3
HZX2-32100-010 F-7-1
HZX2-32166-003 E-18-41
HZX2-32370-004 F-7-20-1
HZX2-32410-000 F-7-10-3
HZX2-32414-300 F-7-10-5
HZX2-32415-000 F-7-10-7
HZX2-32435-000 F-7-10-8
HZX2-34750-023 E-20-10-4
HZX2-35470-013 F-2-18
HZX2-36120-003 F-11-5
HZX2-36129-003 F-11-8
HZX2-38228-003 F-7-20-3
HZX2-38550-003 F-7-10-9
HZX2-38552-000 F-7-10-11

HZX2-41100-C01ZC F-3-10-1
HZX2-41100-C11ZC F-3-10-
HZX2-41100-E01ZC F-3-10-
HZX2-41101-C01ZC F-3-3
HZX2-41102-E00ZC F-3-5
HZX2-41107-C00ZC F-3-8
HZX2-41110-305ZB F-3-27
HZX2-41112-C00 F-4-14
HZX2-41112-C10 F-4-
HZX2-41131-C00 F-4-16
HZX2-41131-E00 F-4-
HZX2-41140-C00 F-5-8
HZX2-41141-E00 F-5-1-8
HZX2-41150-E00 F-5-1-9
HZX2-41151-C00 F-5-9
HZX2-41161-C00 F-5-10
HZX2-41161-E00 F-5-1-10
HZX2-41200-E00 F-5-1-37
HZX2-41201-C00ZC F-5-11
HZX2-41201-C00ZC F-5-1-11
HZX2-41202-C00 F-5-12
HZX2-56000-013 F-11-13
HZX2-58130-T01 FOP-8-1
HZX2-58130-T11 FOP-8-
HZX2-58130-T21 FOP-8-
HZX2-58130-T31 FOP-8-
HZX2-58130-T41 FOP-8-
HZX2-58130-T51 FOP-8-
HZX2-58130-T61 FOP-8-
HZX2-58180-T01 FOP-8-
HZX2-58180-T11 FOP-8-
HZX2-58180-T21 FOP-8-
HZX2-58180-T31 FOP-8-
HZX2-58180-T41 FOP-8-
HZX2-58180-T51 FOP-8-
HZX2-58180-T61 FOP-8-
HZX2-63100-R00ZA F-8-2
HZX2-63111-C00ZB F-8-6
HZX2-63119-C00 F-8-7
HZX2-63260-C00 F-8-10-23
HZX2-63710-C00ZB F-3-20-20
HZX2-63715-C00ZB F-3-20-21
HZX2-63719-C00 F-3-20-23
HZX2-87117-C00 F-12-2
HZX2-87121-R00 F-12-3
HZX2-90001-C00 E-5-13
HZX2-90002-000 E-19-21
HZX2-90101-C00 F-2-25
HZX2-90102-C00 F-3-20-31
HZX2-90105-C00 F-4-17
HZX2-90107-C00 F-3-13
HZX2-90129-000 F-10-46
HZX2-90301-C00 F-4-19
HZX2-90303-C00 F-4-20
HZX2-90502-003 F-8-10-33
HZX2-90518-C00 F-4-22
HZX2-90519-C00 F-4-
HZX2-90520-C00 F-4-
HZX2-90521-C00 F-4-
HZX2-90528-C00 F-5-18
HZX2-90528-C00 F-5-1-18
HZX2-90528-E00 F-5-1-19
HZX2-90529-C00 F-5-
HZX2-90529-C00 F-5-1-
HZX2-90529-E00 F-5-1-
HZX2-90530-C00 F-5-
HZX2-90530-C00 F-5-1-
HZX2-90530-E00 F-5-1-
HZX2-90531-C00 F-5-
HZX2-90531-E01 F-5-1-20
HZX2-90542-E01 F-5-1-21
HZX2-90651-C00 F-5-21
HZX2-90683-003 E-18-1-32
HZX2-90683-003 F-7-10-22
HZX2-91051-C01 F-5-24
HZX2-91053-C01 F-4-25
HZX2-91054-E01 F-5-1-27
HZX2-91055-C01 F-5-25
HZX2-91055-C01 F-5-1-28
HZX2-91056-C01 F-4-26
HZX2-91351-C00 F-5-30

HZX2-91351-C00 F-5-1-33
HZX2-91351-C00 FOP-12-8
HZX2-91358-C00 F-4-31
HZX2-91359-C00 F-4-32
HZY1-90205-000 F-3-18
HZY1-90205-000 F-10-47
HZY1-90650-003 FOP-10-2
HZY2-87132-R00 F-12-4
HZY2-87133-R00 F-12-11
HZY3-06412-000 F-10-2
HZY3-06532-U00 F-10-3
HZY3-11100-415 E-3-10-1
HZY3-11200-010ZA E-3-1
HZY3-11300-C00 E-3-2
HZY3-11311-010ZA E-6-1
HZY3-11820-000 E-13-10-2
HZY3-11840-010 E-13-10-3
HZY3-11861-000 E-13-10-4
HZY3-11871-000 E-13-10-5
HZY3-11911-010 E-9-1
HZY3-12155-000 E-3-5
HZY3-12164-000 E-3-6
HZY3-12171-305 E-3-7
HZY3-12210-010ZA E-9-5
HZY3-12231-000 E-9-7
HZY3-12241-000 E-9-8
HZY3-12251-A01 E-9-9
HZY3-12310-405ZA E-1-1
HZY3-12312-000 E-1-2
HZY3-12320-405ZA E-1-3
HZY3-13331-A03 E-7-11
HZY3-13621-C01 E-13-1
HZY3-13622-C00 E-13-2
HZY3-14261-C00 E-13-4
HZY3-14270-C00 E-13-5
HZY3-14436-000 E-9-10-3
HZY3-14510-003 E-13-7
HZY3-14515-000 E-13-8
HZY3-14520-000 E-13-9
HZY3-14529-000 E-13-11
HZY3-14550-003 E-13-12
HZY3-14553-003 E-13-14
HZY3-14555-003 E-13-15
HZY3-15100-000ZA E-5-1
HZY3-15112-013 E-5-2
HZY3-15113-000 E-5-3
HZY3-15121-000 E-5-4
HZY3-15131-405 E-5-5
HZY3-15132-405 E-5-6
HZY3-15220-020 E-5-7
HZY3-15425-010 E-1-5
HZY3-15656-000 E-3-16
HZY3-15657-000 E-3-17
HZY3-15810-003ZA E-3-18
HZY3-15825-003 E-3-19
HZY3-16011-A01 E-18-1
HZY3-16013-000 E-18-2
HZY3-16015-000 E-18-3
HZY3-16016-003 E-15-1
HZY3-16024-000 E-18-5
HZY3-16026-000 E-18-6
HZY3-16031-010 E-18-8
HZY3-16036-003 E-18-9
HZY3-16041-000 E-18-10
HZY3-16042-000 E-18-11
HZY3-16061-000 E-18-12
HZY3-16072-000 E-18-13
HZY3-16073-000 E-18-14
HZY3-16074-000 E-18-15
HZY3-16075-000 E-18-16
HZY3-16076-000 E-18-17
HZY3-16077-000 E-18-18
HZY3-16078-000 E-18-19
HZY3-16082-000 E-18-21
HZY3-16083-000 E-18-22
HZY3-16087-000 E-18-25
HZY3-16088-000 E-18-26
HZY3-16176-000 E-15-2
HZY3-16193-A00 E-18-10-2
HZY3-16196-A00 E-18-10-3
HZY3-16197-000 E-18-10-4
HZY3-16198-A00 E-18-10-5
HZY3-16199-A00 E-18-10-6

HZY3-16203-000 E-1-6
HZY3-16400-A01 E-15-3
HZY3-16405-000 E-15-5
HZY3-16451-000 E-14-2
HZY3-16611-A00 E-14-3
HZY3-16620-A00 E-14-5
HZY3-16708-000 E-18-28
HZY3-16721-000 E-18-31
HZY3-16733-000 E-18-35
HZY3-16734-000 E-18-36
HZY3-16735-004 E-18-37
HZY3-16740-A01 E-14-6
HZY3-16751-000 E-18-10-7
HZY3-16752-000 E-18-38
HZY3-16752-A00 E-14-8
HZY3-16753-000 E-18-1-2
HZY3-16754-000 E-18-1-3
HZY3-16755-003 E-14-9
HZY3-16757-003 E-14-10
HZY3-16807-003 E-18-1-6
HZY3-16895-C00 E-1-9
HZY3-16904-003 E-18-1-14
HZY3-16911-010 E-18-39
HZY3-16913-000 E-18-40
HZY3-16915-010 E-18-1-18
HZY3-16918-003 E-18-1-20
HZY3-16919-003 E-18-1-22
HZY3-17051-A00 E-14-11
HZY3-17061-A00 E-14-13
HZY3-17105-004 E-14-10-1
HZY3-17108-000 E-14-16
HZY3-17109-004 E-14-10-2
HZY3-17110-003 E-14-10-3
HZY3-17113-003 E-14-10-4
HZY3-17130-003ZA E-14-10-5
HZY3-17138-004 E-14-10-6
HZY3-17721-000 E-18-10-12
HZY3-17723-A01 E-18-10-13
HZY3-17724-010 E-18-10-14
HZY3-17738-000 F-8-20-2
HZY3-17877-000 F-2-2
HZY3-17910-013 E-15-10
HZY3-17931-000 F-2-3
HZY3-18110-010ZA E-4-2
HZY3-18115-003 E-4-3
HZY3-18120-C01ZA E-4-4
HZY3-18125-003 E-4-5
HZY3-18141-A00ZA E-6-10-2
HZY3-18148-003 E-6-10-3
HZY3-18149-A01 E-6-10-4
HZY3-18151-A00ZA E-6-10-5
HZY3-18330-020 E-6-3
HZY3-18333-003 E-6-4
HZY3-18340-020 E-6-5
HZY3-19210-003 F-4-1
HZY3-19221-010 F-4-2
HZY3-19223-000 F-4-3
HZY3-19231-000 F-4-4
HZY3-19251-000 F-4-7
HZY3-19251-611 F-4-
HZY3-19252-000 E-6-6
HZY3-19253-000 F-4-8
HZY3-19254-000 E-6-7
HZY3-19255-000 E-4-6
HZY3-19256-010 E-4-7
HZY3-19257-000 E-4-8
HZY3-19258-010 E-18-10-15
HZY3-19259-000 E-18-10-16
HZY3-19261-000 E-4-9
HZY3-19270-000 F-3-20-1
HZY3-19271-000 F-3-20-2
HZY3-19272-000 F-3-20-3
HZY3-19277-000ZA E-6-10-6
HZY3-19278-000 E-6-10-7
HZY3-19289-000 F-3-20-4
HZY3-19294-000ZB E-6-10-12
HZY3-19295-000 E-6-10-13
HZY3-19296-000 E-6-10-14
HZY3-19297-000 E-6-10-17
HZY3-19298-000ZB E-6-10-18
HZY3-19361-000 F-3-20-4
HZY3-19362-000 E-6-10-20
HZY3-19366-000 E-6-10-21

HZY3-23170-030ZA.	E-6-10-22	HZY3-40157-000.	F-8-10-7	HZY3-90013-000.	E-6-20-5	HZY3-90510-000.	F-10-59
HZY3-23172-003.	E-6-20-1	HZY3-40158-000.	F-8-10-8	HZY3-90015-000.	E-6-20-6	HZY3-90511-000.	F-3-20-44
HZY3-23173-010.	E-6-10-23	HZY3-40159-000.	F-8-10-9	HZY3-90017-000.	E-3-33	HZY3-90512-000.	F-5-17
HZY3-24102-000.	F-5-2	HZY3-40201-020ZC.	F-3-20-10	HZY3-90017-000.	E-13-23	HZY3-90512-000.	F-5-1-17
HZY3-24102-000.	F-5-1-2	HZY3-40201-612ZC.	F-3-20-	HZY3-90017-000.	E-18-49	HZY3-90548-000.	F-5-19
HZY3-24103-000.	F-5-3	HZY3-40204-000.	F-4-13	HZY3-90017-000.	E-19-23	HZY3-90549-000.	F-5-
HZY3-24103-000.	F-5-1-3	HZY3-40210-610.	F-3-20-12	HZY3-90017-000.	F-2-23	HZY3-90550-000.	F-5-
HZY3-24113-A01.	F-5-4	HZY3-40212-010ZC.	F-3-20-13	HZY3-90018-000.	E-13-10-9	HZY3-90551-000.	F-5-
HZY3-24113-A01.	F-5-1-4	HZY3-40212-611ZC.	F-3-20-	HZY3-90021-000.	E-3-35	HZY3-90552-000.	F-5-
HZY3-24122-A01.	F-5-5	HZY3-40219-013.	F-10-9	HZY3-90021-000.	E-14-21	HZY3-90553-000.	F-5-
HZY3-24122-A01.	F-5-1-5	HZY3-40219-013.	F-11-11	HZY3-90021-000.	E-18-50	HZY3-90554-000.	F-5-
HZY3-24123-000.	F-5-6	HZY3-40225-010.	F-3-20-14	HZY3-90021-000.	F-8-10-27	HZY3-90555-000.	F-5-
HZY3-24123-000.	F-5-1-6	HZY3-40226-010.	F-3-20-15	HZY3-90023-000.	E-14-10-14	HZY3-90556-000.	F-5-
HZY3-24124-310.	F-5-7	HZY3-41104-C01.	F-3-6	HZY3-90026-000.	E-9-12	HZY3-90557-000.	F-5-
HZY3-24124-310.	F-5-1-7	HZY3-41105-C01.	F-3-7	HZY3-90027-000.	E-4-17	HZY3-90558-000.	F-5-
HZY3-24221-000.	F-2-6	HZY3-41116-000.	F-4-15	HZY3-90028-000.	E-3-36	HZY3-90559-000.	F-5-
HZY3-24310-C00.	F-4-9	HZY3-41179-A00.	F-10-12	HZY3-90029-000.	E-14-10-15	HZY3-90560-000.	F-5-
HZY3-24310-E00.	F-4-	HZY3-50100-A01.	F-10-13	HZY3-90030-000.	E-3-37	HZY3-90601-030.	E-4-20
HZY3-24318-000.	F-4-10	HZY3-50100-A11.	F-10-	HZY3-90030-000.	E-3-10-8	HZY3-90601-030.	E-18-10-25
HZY3-24610-A00.	F-2-8	HZY3-50109-000.	F-10-14	HZY3-90030-000.	E-6-10-24	HZY3-90602-020.	E-1-21
HZY3-24612-010.	F-2-9	HZY3-50111-020.	F-3-20-16	HZY3-90030-000.	E-13-24	HZY3-90603-020.	E-4-21
HZY3-24613-000.	F-2-10	HZY3-50151-000.	F-10-15	HZY3-90030-000.	E-15-21	HZY3-90604-020.	E-4-22
HZY3-24617-000.	F-2-11	HZY3-50153-000.	F-10-16	HZY3-90031-000.	E-3-10-9	HZY3-90652-000.	F-3-20-48
HZY3-24618-000.	F-2-12	HZY3-50155-000.	F-3-20-17	HZY3-90031-000.	E-6-10-25	HZY3-90653-003.	F-7-4
HZY3-24619-000.	F-2-13	HZY3-50157-010.	F-3-20-18	HZY3-90031-000.	E-14-10-16	HZY3-90741-000.	E-13-29
HZY3-24620-000.	F-2-14	HZY3-50161-000ZD.	F-10-17	HZY3-90034-000.	E-4-18	HZY3-90751-000.	F-2-36
HZY3-24623-000.	F-2-15	HZY3-50161-610.	F-10-1-	HZY3-90034-000.	E-15-22	HZY3-90752-003.	F-4-23
HZY3-24628-000.	F-2-16	HZY3-50166-000.	F-10-18	HZY3-90035-000.	E-9-13	HZY3-91001-003.	E-6-10-34
HZY3-30280-003.	F-11-1	HZY3-50168-000.	F-10-19	HZY3-90036-000.	E-1-18	HZY3-91056-711.	F-5-26
HZY3-31106-003.	F-11-2	HZY3-50201-C012D.	F-10-20	HZY3-90037-000.	E-15-23	HZY3-91056-711.	F-5-1-29
HZY3-31116-000.	E-5-12	HZY3-50201-C11ZC.	F-10-	HZY3-90038-000.	E-3-38	HZY3-91057-003.	F-5-27
HZY3-31200-003.	E-21-1	HZY3-50209-A00.	F-10-21	HZY3-90039-000.	E-13-26	HZY3-91057-003.	F-5-1-30
HZY3-31207-003.	E-21-3	HZY3-50211-000.	F-10-22	HZY3-90040-000.	E-13-27	HZY3-91151-000.	F-5-28
HZY3-31216-003.	E-21-5	HZY3-50214-000.	F-10-23	HZY3-90041-000.	E-3-10-10	HZY3-91151-000.	F-5-1-31
HZY3-31235-003.	E-21-10	HZY3-50301-030ZC.	F-10-24	HZY3-90042-000.	E-14-22	HZY3-91152-003.	F-2-37
HZY3-31236-003.	E-21-11	HZY3-50311-020ZC.	F-10-25	HZY3-90043-000.	E-14-23	HZY3-91212-003.	E-3-42
HZY3-31240-003.	E-21-12	HZY3-50381-000.	F-10-26	HZY3-90044-000.	E-14-24	HZY3-91251-C01.	F-4-27
HZY3-31242-003.	E-21-13	HZY3-50388-U00.	FOP-9-1	HZY3-90045-000.	E-6-10-26	HZY3-91251-C01.	FOP-12-3
HZY3-31246-003.	E-21-15	HZY3-50388-U10.	FOP-9-2	HZY3-90046-000.	E-6-10-27	HZY3-91254-003.	F-4-28
HZY3-31247-003.	E-21-16	HZY3-50522-000.	F-10-27	HZY3-90047-000.	E-6-10-28	HZY3-91254-003.	FOP-12-5
HZY3-31249-003.	E-21-17	HZY3-50527-000.	F-10-28	HZY3-90049-000.	E-6-10-29	HZY3-91255-003.	F-2-39
HZY3-31250-003.	E-21-18	HZY3-50529-000.	F-10-29	HZY3-90050-000.	E-18-51	HZY3-91301-003.	E-4-23
HZY3-31630-003.	E-19-14	HZY3-56100-013.	F-11-14	HZY3-90053-010.	E-6-9	HZY3-91303-000.	E-21-23
HZY3-31631-003.	E-19-15	HZY3-56120-013.	F-11-22	HZY3-90054-000.	E-18-52	HZY3-91304-000.	E-6-10-37
HZY3-31637-000.	E-19-16	HZY3-56170-013.	F-11-25	HZY3-90055-000.	E-19-24	HZY3-91305-003.	E-6-10-38
HZY3-31638-003.	E-13-17	HZY3-56516-A00.	F-10-30	HZY3-90056-000.	E-18-1-26	HZY3-91306-003.	E-6-10-39
HZY3-31639-003.	E-19-17	HZY3-56518-A00.	F-10-31	HZY3-90058-000.	E-14-10-17	HZY3-91356-003.	F-4-30
HZY3-31694-003.	E-19-18	HZY3-56519-A00.	F-10-32	HZY3-90059-000.	E-6-10-30	HZY3-91401-A00.	E-1-25
HZY3-31710-003.	E-19-19	HZY3-56532-000.	F-11-28	HZY3-90063-000.	E-3-10-11	HZY3-91402-020.	E-1-26
HZY3-31750-003.	E-19-20	HZY3-60180-C01.	F-8-10-12	HZY3-90082-003.	E-3-10-13	HZY3-91403-000.	E-1-27
HZY3-32111-010.	E-13-18	HZY3-60185-C01.	F-8-10-13	HZY3-90102-A00.	F-3-20-32	HZY3-91404-000.	E-6-10-40
HZY3-32112-000.	E-14-17	HZY3-63102-010.	F-8-3	HZY3-90104-010.	F-10-39	HZY3-91405-000.	E-6-10-41
HZY3-32116-000.	E-3-22	HZY3-63107-000.	F-8-4	HZY3-90105-010.	F-3-20-33	HZY3-91451-000.	F-3-20-51
HZY3-32128-000.	E-14-10-8	HZY3-63108-000.	F-8-5	HZY3-90106-A00.	F-8-10-31	HZY3-91508-000.	E-13-10-10
HZY3-32129-000.	E-1-12	HZY3-63201-000ZC.	F-8-10-14	HZY3-90107-000.	F-7-10-16	HZY3-91551-000.	F-4-33
HZY3-32193-C00.	E-3-23	HZY3-63205-000.	F-8-10-15	HZY3-90109-010.	F-8-12	HZY3-91552-000.	F-3-20-52
HZY3-32411-003.	F-7-10-4	HZY3-63208-000.	F-8-10-16	HZY3-90111-000.	F-3-20-35	HZY3-91556-000.	F-8-16
HZY3-32419-A00.	F-8-10-1	HZY3-63212-000.	F-8-10-17	HZY3-90113-C00.	F-3-20-36	HZY3-91560-000.	F-10-71
HZY3-32421-000.	F-8-10-2	HZY3-63223-000.	F-8-10-18	HZY3-90117-000.	F-10-43	HZY3-91651-003.	F-3-20-54
HZY3-34754-C00.	F-20-10-5	HZY3-63224-000.	F-8-10-19	HZY3-90120-000.	F-3-14	HZY6-16450-003.	E-14-1
HZY3-35476-010.	F-2-19	HZY3-63225-000.	F-8-10-20	HZY3-90122-000.	F-3-20-37	HZY6-16718-013.	E-18-30
HZY3-35477-000.	F-2-20	HZY3-63226-000.	F-8-10-21	HZY3-90123-000.	F-5-13	HZY6-16723-003.	E-18-32
HZY3-35490-004.	E-3-25	HZY3-63230-C00.	F-8-10-22	HZY3-90123-000.	F-5-1-13	HZY6-19269-000.	E-18-10-17
HZY3-35640-013.	F-3-20-5	HZY3-63347-C00.	F-3-20-19	HZY3-90124-000.	F-3-15	HZY6-24320-000.	F-4-11
HZY3-35645-000.	F-3-20-6	HZY3-63718-000.	F-3-20-22	HZY3-90129-A00.	F-3-20-38	HZY6-24320-610.	F-4-
HZY3-35655-C01.	E-4-14	HZY3-63722-010ZC.	F-3-20-24	HZY3-90132-000.	F-3-20-39	HZY6-32371-004.	F-7-20-2
HZY3-35660-003.	F-10-7	HZY3-63728-000.	F-3-20-25	HZY3-90134-000.	F-3-20-40	HZY6-32414-640.	F-7-10-6
HZY3-35673-003.	E-3-26	HZY3-63729-003.	F-8-10-25	HZY3-90204-000.	E-3-10-16	HZY6-36135-003.	E-18-10-18
HZY3-35673-003.	E-4-15	HZY3-63731-A03ZC.	F-3-20-26	HZY3-90205-000.	E-14-25	HZY6-38235-004.	F-7-20-4
HZY3-35695-003.	E-13-10-6	HZY3-63731-A12ZC.	F-3-20-	HZY3-90205-000.	E-14-10-19	HZY6-39794-003.	F-7-20-6
HZY3-35700-003.	E-3-27	HZY3-63736-A03ZC.	F-3-20-27	HZY3-90302-000.	F-3-20-42	HZY6-90103-000.	F-3-12
HZY3-36122-013.	F-11-6	HZY3-63736-A12ZC.	F-3-20-	HZY3-90304-000.	F-7-10-18	HZY6-90103-000.	F-10-38
HZY3-36123-013.	F-11-7	HZY3-63751-C00.	F-3-20-28	HZY3-90405-000.	F-7-10-19	HZY6-90135-004.	F-7-20-8
HZY3-36163-003.	E-14-10-10	HZY3-63756-C00.	F-3-20-29	HZY3-90406-000.	E-1-20	HZY6-91553-000.	F-3-20-
HZY3-36362-000.	E-18-44	HZY3-90001-000.	E-3-28	HZY3-90501-A00.	F-10-54	HZY9-17315-000.	E-15-8
HZY3-36550-003.	E-15-17	HZY3-90002-000.	E-21-19	HZY3-90503-610.	F-3-20-43	HZY9-30419-003.	E-20-1
HZY3-36620-000.	E-18-45	HZY3-90003-000.	E-21-20	HZY3-90504-A00.	F-10-57	HZY9-30419-003.	E-20-10-2
HZY3-40105-C01.	F-8-10-3	HZY3-90006-003.	E-3-29	HZY3-90506-000.	F-5-15	HZY9-30419-003.	F-7-10-1
HZY3-40114-010.	F-3-20-8	HZY3-90007-000.	E-13-10-7	HZY3-90506-000.	F-5-1-15	HZY9-32103-000.	F-7-10-2
HZY3-40119-003.	F-8-10-4	HZY3-90008-003.	E-3-30	HZY3-90507-000.	F-8-15	HZY9-38553-003.	E-20-10-6
HZY3-40151-000ZC.	F-3-20-9	HZY3-90009-003.	E-3-31	HZY3-90508-000.	E-15-24	HZY9-56115-003.	F-11-18
HZY3-40154-000ZA.	F-8-10-5	HZY3-90010-000.	E-6-20-3	HZY3-90508-000.	F-2-33	HZY9-90017-000.	E-15-20
HZY3-40155-000.	F-8-10-6	HZY3-90011-000.	E-6-20-4	HZY3-90509-000.	F-10-58	HZY9-90105-000.	E-20-4

HZZ0-90101-000.F-3-11
 HZZ3-06240-R30FOP-1-1
 HZZ3-06240-R40FOP-1-4-1
 HZZ3-06240-R60FOP-1-2-1
 HZZ3-06323-R20FOP-7-1
 HZZ3-06323-R30FOP-7-1-1
 HZZ3-06328-762.FOP-10-1
 HZZ3-24800-R00FOP-1-6-1
 HZZ3-24820-R11FOP-1-13
 HZZ3-24820-R21FOP-1-2-14
 HZZ3-24830-R41FOP-1-4-11
 HZZ3-32101-000.E-20-10-3
 HZZ3-32127-000.F-7-2
 HZZ3-32341-R31FOP-7-3
 HZZ3-32346-R21FOP-7-4
 HZZ3-32346-R31FOP-7-1-3
 HZZ3-32347-R01FOP-7-5
 HZZ3-35100-R11FOP-1-6-38
 HZZ3-35100-R11FOP-7-9
 HZZ3-35100-R11FOP-7-1-7
 HZZ3-37205-R01FOP-7-13
 HZZ3-87301-R00F-12-12
 HZZ3-87701-R00FOP-1-6-47
 HZZ3-87701-R40FOP-1-4-18
 HZZ3-87703-R01FOP-1-2-24
 HZZ3-87703-R81FOP-1-21
 HZZ3-91252-003.F-5-29
 HZZ3-91252-003.F-5-1-32
 HZZ3-91252-003.FOP-12-4
 HZZ5-06325-600.FOP-13-1
 HZZ5-06325-700.FOP-13-
 HZZ5-06325-800.FOP-13-
 HZZ5-16901-003.E-18-1-12
 HZZ5-16906-003.E-18-1-15
 HZZ5-16915-000.E-18-1-19
 HZZ5-16918-003.E-18-1-21
 HZZ5-16919-003.E-18-1-23
 HZZ5-32185-600.FOP-13-2
 HZZ5-32185-700.FOP-13-
 HZZ5-32185-800.FOP-13-
 HZZ5-32530-000.FOP-1-6-34
 HZZ5-32545-000.FOP-7-6
 HZZ5-32545-000.FOP-7-1-4
 HZZ5-32580-600.FOP-13-3
 HZZ5-32580-700.FOP-13-
 HZZ5-32580-800.FOP-13-
 HZZ5-37210-013.FOP-1-6-44
 HZZ5-37210-712.FOP-7-1-11
 HZZ5-37210-762.FOP-7-14
 HZZ5-38414-003.FOP-7-17
 HZZ5-38414-003.FOP-7-1-14
 HZZ5-91501-000.F-7-10-23

Note

Note

TOHATSU CORPORATION

**Address : 5-4,3-chome,Azusawa,Itabashi-ku,
TOKYO,174-0051 JAPAN**

Phone : TOKYO (03)3966-3117

FAX : TOKYO (03)3966-0090

Website : www.tohatsu.co.jp

